

INSTRUCTION  
MANUAL

平面印刷品基本技术要求			
深圳市云视机器人有限公司			
设计：	日期:2024.02.26	物料名称	M310说明书（国际版）
尺寸:140*105mm	材质:100g双铜纸	产品型号	M310
页数：24p	印刷颜色：单色印刷	物料编号	902-1090-0001
比例：1:1	装订方式：骑马钉装	版本号	V01（02.26）
变更记录：			

注意：

- 此页不用印刷。
- 来料标签请列明物料名称、物料编码、版本号等信息。



# User manual

Lefant M310 Robot Vacuum Cleaner



Scannen Sie den QR-Code, um das Online-Handbuch auf Deutsch zu erhalten.

Scannez le QR code pour obtenir le manuel en ligne en français.

Scansiona il codice QR per ottenere il manuale online in italiano.

Escanee el código QR para obtener el manual en línea en español.

コードをスキャンして、日本語のオンラインマニュアルを取得します。



**Congratulations on your purchase of Lefant ROBOTS!**

We hope they bring you satisfaction and trust that they will keep your home clean, providing you with a high-quality life.

If you encounter situations that have not been properly addressed in this User Manual, please contact our Customer Service Center, we will solve your specific problem. For more information, please visit the Lefant ROBOTICS official website: **www.lefant.com** or send email to the following email address:

**NA: support.us@lefant.com**

**EU: support.eu@lefant.com**

**JP: support.jp@lefant.com**

The Company reserves the right to make technological and/or design changes to this product for continuous improvement.

# IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, or serious injury.

**READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.**

**For Household use only**

**When using an electrical appliance, always follow basic precautions, including the following:**

1. The robot must be used in accordance with the directions in this User Manual. Our company cannot be held liable or responsible for any damages or injuries caused by improper use.
2. Do not allow the robot to be used as a toy. Close attention is necessary when used by or near children. Do not allow children to sit on the vacuum.
3. Clear the area to be cleaned. Remove power cords and small objects from the floor that could entangle the robot. Tuck rug fringe under the rug base and lift items such as curtains and tablecloths off the floor.
4. If there is a drop off in the cleaning area due to a step or stairs, you should operate the Robot to ensure that it can detect the step necessary to place a physical barrier at the edge to keep the unit from falling. Make sure the physical barrier is not a trip hazard.
5. Only use the robot as described in this manual. Only use attachments recommended or sold by the manufacturer.
6. Please make sure your power supply voltage matches the power voltage marked on the Docking Station.
7. Do not handle or plug in the appliance with wet hands.
8. Non-rechargeable batteries are prohibited.
9. Do not use it without the dust bin and/or filters in place.
10. Do not operate the robot in an area where there are lit candles or fragile objects on the floor to be cleaned.
11. Do not use and store in extremely hot or cold environments (below  $-5^{\circ}\text{C}$  /  $23^{\circ}\text{F}$  or above  $40^{\circ}\text{C}$  /  $104^{\circ}\text{F}$ ). Please charge the robot in temperature above  $0^{\circ}\text{C}$  /  $32^{\circ}\text{F}$  and below  $40^{\circ}\text{C}$  /  $104^{\circ}\text{F}$ . Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
12. Keep hair, loose clothing, fingers, and all parts of body away from any openings and moving parts.
13. Do not operate the robot in a room where an infant or child is sleeping.
14. For INDOOR use ONLY. Do not use the robot in outdoor, commercial or industrial environments. Do not use Appliance on wet surfaces or surfaces with standing water.
15. Do not allow the robot to pick up large objects like

stones, large pieces of paper, or any item that may clog the robot.

16. Do not use the robot to pick up flammable or combustible materials such as gasoline, printer or copier toner, or use in areas where they may be present.

17. Do not use the robot to pick up anything that is burning or smoking, such as cigarettes, matches, hot ashes, or anything that could cause a fire.

18. Do not insert any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

19. Take care not to damage the power cord. Do not pull or carry the robot or the Docking Station by the power cord, use the power cord as a handle, close a door on the power cord, or pull the power cord around sharp edges or corners. Do not run the robot over the power cord. Keep the power cord away from hot surfaces. Do not unplug by pulling on the cord; to unplug, grasp the plug, not the cord.

20. If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.

21. Do not use the Docking Station if it is damaged.

22. Do not use the robot or the Docking Station if it is not working properly, has been dropped, damaged, left outdoors, or come in contact with water. It must be repaired by the manufacturer or its service agent to avoid a hazard.

23. Turn OFF the power switch before cleaning or maintaining the robot. Turn off all controls

24. The plug must be removed from the receptacle before cleaning or maintaining the Docking Station.

25. Remove the robot from the Docking Station, and turn OFF the power switch to the Appliance before removing the battery for disposal.

26. The battery must be removed and discarded according to local laws and regulations before disposal of the robot.

27. Please dispose of used batteries according to local laws and regulations.

28. Do not incinerate the robot even if it is severely damaged. The batteries can explode in a fire.

29. When not using the Docking Station for a long period of time, please unplug it.

30. Prevent unintentional starting. Ensure the switch is in the off position before connecting the battery pack, picking up, or carrying the appliance. Carrying the robot with your finger on the switch or energizing the robot that has the switch on invites accidents.

31. When the battery pack is not in use, keep it away from other metal objects, such as paper clips, coins, keys, nails, screws, etc., that can create a connection between terminals. Shorting the battery terminals together may cause burns or a fire.

32. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause

irritation or burns.

33. Do not use a battery pack that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

34. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C/265°F may cause an explosion.

35. Have servicing performed by a qualified repair person using only identical replacement parts.

36. Do not modify or attempt to repair the robot or the battery pack (as applicable) except as indicated in the instructions.

37. Do not operate the robot in a room that has lit candles on furniture that the vacuum may accidentally hit or bump into.

38. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may pose a risk of fire when used with another battery pack.

39. Use the robot only with specifically designated battery packs. The use of any other battery packs may pose a risk of injury and fire.

40. The robot contains batteries that are only replaceable by skilled persons. To replace the robot's battery, please contact Customer Service.

41. If the robot is not going to be used for a long time, fully charge the robot, power it OFF, and unplug the







Docking Station.

42. Please remove any fragile and miscellaneous items from the floor (such as vases, plastic bags, etc.) to prevent the robot from being obstructed or causing damage to valuable items in the home due to minor collisions.

## SAVE THESE INSTRUCTIONS

To satisfy RF exposure requirements, a separation distance of 20 cm or more should be maintained between this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.

	Short-circuit-proof safety isolating transformer
	Switch mode power supply
	For indoor use only
	Direct current
	Alternating current
	detachable supply unit

## Correct Disposal of this Product

This marking indicates that this product should not be disposed of with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To recycle your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can safely recycle this product.



## Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to take corrective measures, such as:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or seek assistance from an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) it must accept any interference received, including interference that may cause undesired operation.

### FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.


### RF exposure warning

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.


# Contents

<b>1. Product introduction</b>	<b>7</b>
1.1 Packing List	
1.2 Part Names	
<b>2. Preparation</b>	<b>10</b>
2.1 Assemble and charge	
2.2 Using environment preparation	
<b>3. Using the product</b>	<b>12</b>
3.1 How to use buttons	
3.2 App download and configuration	
3.3 Maintenance	
<b>4. Abnormal symptoms</b>	<b>16</b>
4.1 Symptom prompts	
4.2 Troubleshooting	
<b>5. Technical parameters</b>	<b>18</b>


# 1. Product introduction / 1.1 Packing List

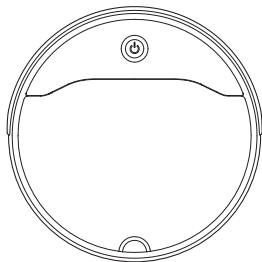

Robot vacuum cleaner

 


Docking Station  
& AC Adapter

 

Dust bin



 High Efficient Particulate  
Air (HEPA) Filter



Side brush



Cleaning tool




User manual


Note: Figures and illustrations are for reference only and may differ from the actual product appearance. Product design and specifications are subject to change without notice.

# 1. Product introduction / 1.2 Part Names



**Front view**

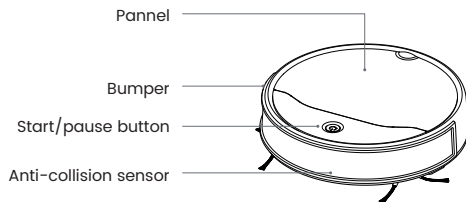

**Internal view**

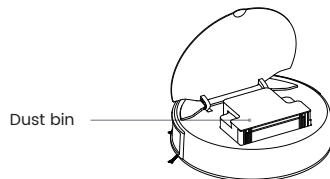


**Bottom view**

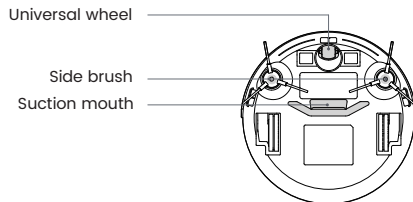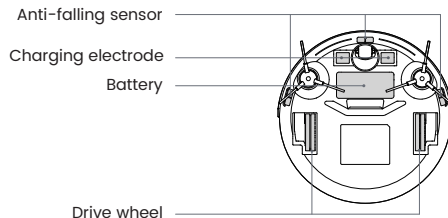


# 1. Product introduction / 1.2 Part Names

## Docking Station

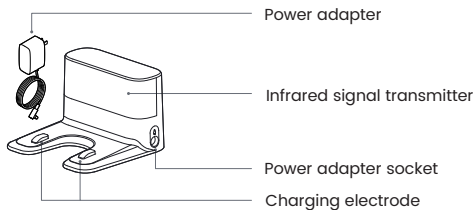


## Dust bin

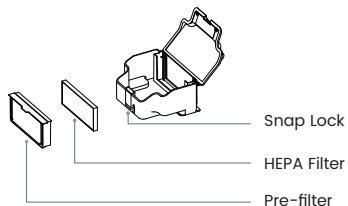


## 2. Preparation / 2.1 Assemble and charge

 - 1 Remove the protective film on the robot and docking station**




- 2 Install the side brushes**

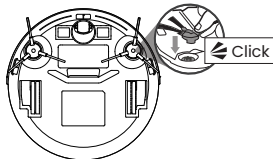

- 3 Placement of the docking station / connection of power supply**

Place the docking station against the wall on a flat surface. Ensure there are no items within 0.5m to the left or right and 1.5m in front to avoid blocking the charging signal.

Avoid having reflective objects, such as floor mirrors, near the docking station to prevent signal reflection.

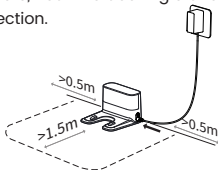


- 4 Charging**

Place the robot with its button side facing the docking station. When the button light starts to blink, it indicates the correct placement. (As shown below)

- ☹ A purple blinking light indicates the battery is below 50%.
- 😊 A blue blinking light indicates the battery is above 50%.
- 😊 No light means the battery is fully charged.


Charging time is approximately 4 hours.

- ⚡ The robot will turn on automatically if charging while powered off.**

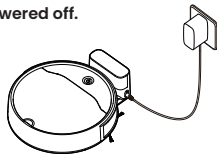


## 2. Preparation / 2.2 Using environment preparation


### Tidy up the room

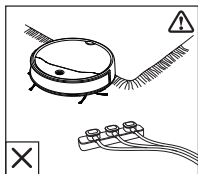


Please clear any scattered wires and debris from the floor before starting. If your carpet has tassels, tuck them under. Remove any items that are fragile, valuable, or potentially dangerous to avoid entanglement, jamming, dragging, or knocking over by the robot.

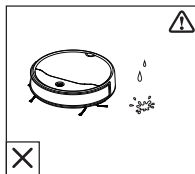

Do not let the robot operate on wet floors.

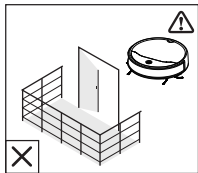

Do not use the robot in areas without protective barriers (like duplex floors, open balconies, tops of furniture). Ensure balcony doors are closed, or use a sturdy physical barrier to prevent accidental falls that could cause injury or property damage.

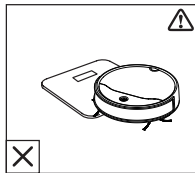

The robot can climb to the top of objects with a height of less than 12mm. If you don't want the robot to climb on them, please take them away.

## 3. Using the product / 3.1 How to use buttons

Hold for 3 seconds:

**Turn on**

Fast press:

**Start/Pause (planned cleaning)**

Fast press twice:

**Auto-recharge**

Hold for 6 seconds:

**Enter network pairing mode**


(Networking operation: Press and hold for 6 seconds, release when you hear two beeps, and the light will blink.

The robot enters networking mode. Open the App for networking and pairing).

Hold for 12 seconds:

**Turn off (a long "beep" indicates power off)**

(a long "beep" indicates power off)

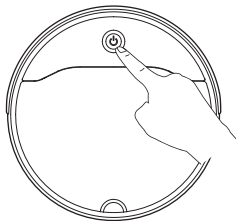

### Indicator Meaning

Robot status	Indicator status
Cleaning	Blue light on
Pause/standby	Blue light on
Charging	Purple/Blue Breathing
Low battery-automatic return and charge	Red light on
Cleaning complete-automatic return and charge	Purple light on
Enter network pairing mode	Blue light flash
Distribution Network Success	Blue light on
Error	Red light on/flash


## 3. Using the product / 3.2 App download and configuration

### Downloading and installation of the “Lefant” app


Method I : Scan the following QR code, and then download and install App as prompted.



Method II : Search "Lefant" in the App store, download and install the Lefant app.

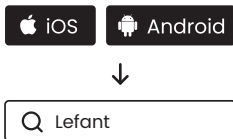

**Note: The robot works with 2.4GHz Wi-Fi networks only.**

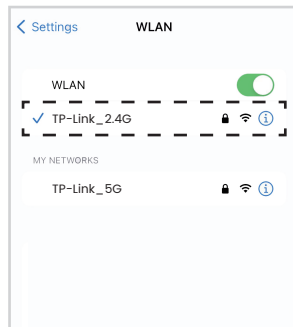

### Tips:

- \* Follow the guidance in the Lefant app to register, login, and pair the robot.
- \* Please make sure that the mobile phone is connected to your Wi-Fi network before pairing the robot vacuum cleaner.

## 3. Using the product / 3.3 Maintenance-Dust bin


\* When cleaning and maintaining the robot and its accessories, please unplug the charging stand.

### **Warning**

The HEPA Filter should not touch the water.




- 1 Open the faceplate and take out the dust bin

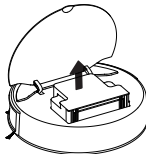


- 2 Open the dust bin latch and dump the garbage




- 3 Remove the filter assembly

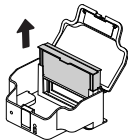

- 4 Remove the HEPA-filter

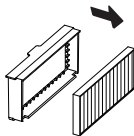

- 5 Clean Clean the Pre-filter and the HEPA-filter

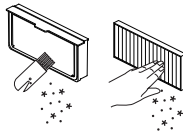

## 3. Using the product / 3.3 Maintenance-Others

**\* When cleaning and maintaining the robot and its accessories, please unplug the charging stand.**


1. Clean the anti-drop sensor to ensure the sensitivity of the sensor.

2. Clean the universal wheel to prevent hair from tangling.

3. Clean the charging electrode for successful charging.

4. Clean the suction mouth to avoid dust clogging.

5. Clean the driving wheel for smooth operation.

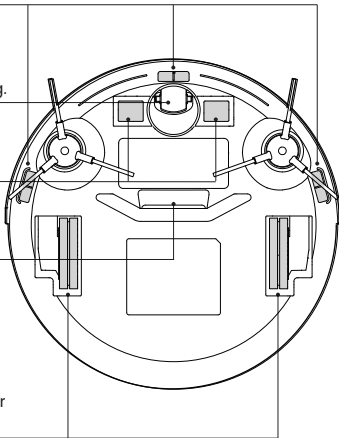

6. Clean the Anti-collision sensors to ensure sensitive obstacle avoidance.



7. Clean the side brush to prevent hair tangling.



8. ① Clean the charging pins on the charging base to ensure smooth charging.

② Clean the infrared sensor lens on the charging base to prevent signal interference.



## 4. Abnormal symptoms / 4.1 Symptoms prompts

When the robot encounters issues, its red indicator light will either turn on or flash, and beep with varying durations and intervals. The following table provides a summary of the corresponding causes:

No.	Fault cause	Prompt sound	Solutions
<b>The red light is on</b>			
1	Abnormal driving wheel	1 beep for three times	Please check whether the driving wheel is tangled , and clean up it.
2	Abnormal side brush	2 beeps for three times	Please check whether the side brush is tangled , and clean up the side brush.
3	Abnormal fan	3 beeps for three times	Please check the waste in the dust bin and the air duct.
4	Undetected dust bin	5 beeps for three times	Please install the dust bin in the robot.
5	Abnormal recharge	6 beeps for three times	Abnormal charging, please manually move the main unit to the charging cradle for charging.

<b>The red light is flashing</b>			
1	Ground-detection alarm	2 beeps for three times	The robot hangs in the air. Please move it to the ground.
2	Dilemma elimination alarm	3 beeps for three times	Fail to get rid of a dilemma; please move to an open place.
3	Low Battery	4 beeps for three times	Please move the robot to the docking station for charging.
4	Abnormal adapter	5 beeps for three times	Clean the electrode and ensure the original adapter.

If the above methods don't resolve the problem, try the following: Hold the start/pause button on the robot for 12 seconds. After hearing a long "beep", turn off, then long press for 3 seconds to restart.

## 4. Abnormal symptoms / 4.2 Troubleshooting

If the following problems occur in the application process of the product, users can resolve them independently by comparison and inquiry.

\* If the fault cannot be eliminated according to the operation in the table, contact our customer service representative.

S/N	Fault	Possible causes	Solutions
1	Abnormal cleaning	Cleaning components blockage	It is recommended to replace consumables regularly, such as high-efficiency filters (HEPA), pre-filter, side brushes, etc.
		Dust on sensors and other components	Please refer to the chapter <b>[Maintenance]</b> of the manual to clean the robot.
2	Unable to connect to App	Not entered Wi-Fi pairing mode	Keep pressing the Start/pause button for 6 seconds: Entering Wi-Fi pairing mode. Please refer to the manual's chapter <b>[App download and configuration]</b> .
		2.4G Hz network isn't used.	Please refer to the manual's chapter <b>[App download and configuration]</b> .
3	Difficult to return and charge	Incorrect placement of charging base	Please place the charging stand in an open and flat area.
		The charging stand is powered off or moved manually	Please check whether the charging base is connected to the power supply. Do not move the position of the charging base when the robot is working.
		The home is too large, and the environment is complex	Please refer to the chapter <b>[Using environment preparation]</b> of the manual.
		The robot didn't clean from the docking station	Let the robot clean from the docking station.
4	Unable to charge	The power supply is not connected, or the plug is loose	Check if both ends of the power cord are connected and if the charging base indicator light is on.
		Poor contact between the robot and the charging electrode of the docking station	Ensure that the charging electrode of the robot and the charging base are fully connected, and clean the charging electrode of the robot and the docking station regularly.
		Battery deterioration caused by non-long-term use	It's recommended to use this product regularly. If not used for an extended period, charge fully, turn off the robot, and ensure it's charged once a month. If the battery can't be charged, please contact after-sales service.

## 5. Technical parameters

Product model	M310		
Rated input of machine	19V $\equiv$ 0.6A, 11.4W		
Docking Station Model	C3		
Rated Output Voltage	19V $\equiv$	Rated Output Current	0.6A
Power Adapter Model	AD-0121900060US		
Power Adapter Input	100-240V~ 50-60Hz 0.5A		
Power Adapter Output	DC 19V, 0.6A, CLASS II		
Off/Standby Mode Power	Less than 0.5W		
Networked Standby Power	Less than 2.00W		

Note: Since the product needs continuous improvement, the actual product shall prevail.  
Our company reserves the right to update the product.

# Warranty

This warranty covers the repair or replacement of the malfunctioning device at our company's discretion for a period of 1 year. In addition this certificate is void if altered. The serial number must be provided as well as all accessories to be eligible for warranty coverage. Please kindly fill in below form accurately and completely.

**Order Number:** \_\_\_\_\_

**Serial Number:** \_\_\_\_\_

**Date of Purchase:** \_\_\_\_\_

## **Important:**

When returning this device, carefully pack the product to avoid damage in shipping. Damage in shipping is not covered by the Warranty and shall be the sole responsibility of Buyer. Damage or loss not covered by this Warranty or occurring outside the Warranty Period will require a fee to cover the cost of handling and shipping. All such fees and costs shall be the sole responsibility of Buyer.

## **Exclusion**

Unless agreed in writing, the warranty will not apply if the defects relate to:

- Consumable parts such as filters, or brushes etc, that are subject to normal wear and tear, and require regular maintenance and/or replacement to ensure the proper functioning of your unit.
- Defects caused by rough or inappropriate handling, damage caused by accident, misuse, neglect, fire, water, lightning, or other acts of nature, external sources such as weather, electrical outages, or power surges.
- Improper operation or maintenance, use not in accordance with the product instructions or connection to improper voltage supply.
- Accident, abuse, misapplication, or any unauthorized repair, modification, or disassembly of the product.
- Any failure to adequately package the Product for transportation.
- Use of parts not in accordance with the product instructions.
- Use of parts and accessories other than those produced or recommended by our company.
- Use in a commercial environment as the Product is designed for residential use only.
- Consequential and incidental damages.
- Any product(s) purchased from unauthorized dealers/resellers.
- Products used outside the country of purchase.
- Lost and/or stolen products.







Official website

🌐 Website: [www.lefant.com](http://www.lefant.com)

✉ Email: NA: [support.us@lefant.com](mailto:support.us@lefant.com)

EU: [support.eu@lefant.com](mailto:support.eu@lefant.com)

JP: [support.jp@lefant.com](mailto:support.jp@lefant.com)

📘 Facebook: [@LEFANTOFFICIAL](https://www.facebook.com/LEFANTOFFICIAL)

🐾 Community: [facebook.com/groups/Lefantofficialcommunity](https://facebook.com/groups/Lefantofficialcommunity)

Shenzhen Iohas Technology Co., LTD.

Building 2, Fashion Brand Industrial Park, E'bu Town,  
Shenzhen-Shanwei Special Cooperation Zone, Shenzhen, Guangdong, China.

M310-LH20240226-V01