 




OPERATOR'S MANUAL

72" HEAVY-DUTY ADJUSTABLE WORKBENCH WITH SINGLE DRAWER

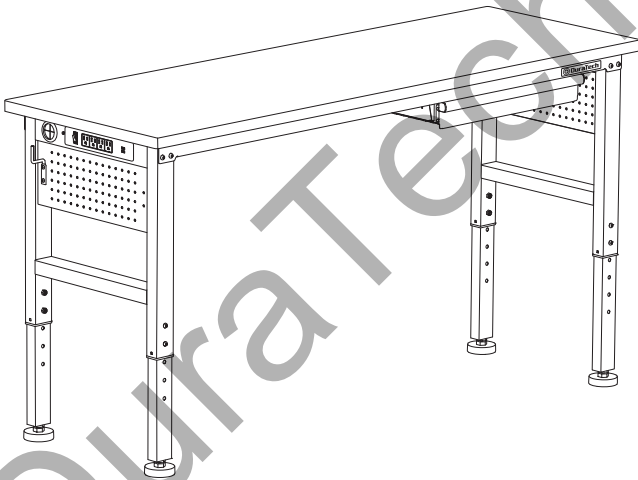

USE PRECAUTION
For your safety



INSTRUCTION
MANUAL
Read and understand



EYE PROTECTION
Must be worn



PROTECTIVE GLOVES
Must be worn when
assembly



CAUTION: Read and follow all Safety Rules and Operating instructions before first use of this product.

NOTE: Ensure all components are present. If any components are missing, do not proceed with assembly. Please send an email to service@greatstartools.com or call 877-876-7562.

SAVE THIS MANUAL FOR FUTURE REFERENCE



Distributed by:
GREATSTAR INDUSTRIAL USA, LLC
9836 Northcross Center Court, Suite A,
Huntersville NC 28078, USA
MADE IN CAMBODIA
www.greatstartools.com

TABLE OF CONTENTS

Table of contents ----- 2

Safety Information ----- 3

Specifications ----- 4

Package Contents ----- 4

Assembly ----- 6

Operation ----- 10

Drawer / Power strip removal ----- 12

Maintenance ----- 12

Care and cleaning ----- 12

Customer service ----- 12

FOR YOUR SAFETY: CAREFULLY READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE USE.

DuraTech

SAFETY INFORMATION

To reduce the risk of serious injury, read and follow the safety instructions below before assembling and using this product.

1. This product is intended for indoor use only.

2. This product is not designed for commercial nor industrial usage.



Check all nuts and bolts periodically for tightness. When required, tighten them.



DO NOT leave children unattended near this product.



Keep the product on level surfaces. The product could become unstable and it may tip over if stored or moved on an uneven surface, which may cause personal injury, death or product damage.



DO NOT alter this product in any manner. For example, do not weld external bar locks or attach electrical equipment. This may cause product damage or personal injury.



Any assembly or maintenance of the product must be carried out by adults only.



Use at least two people to move, assemble or install this workbench. Failure to do so can result in personal injury or product damage.



DO NOT stand on the product and do not use it as scaffold.

3. Extension cord:

- Only use a three-wire extension cord with all three prongs intact. Never remove the round grounding prong.
- Extension cord must be connected to a 125Volt GFCI protected outlet with proper ground. If GFCI outlet is not available, use an extension cord with GFCI protection built in.
- Check the insulation and plugs of extension cord before using. Do NOT use cord if it is worn or damaged.
- Do NOT overload extension cord.
- Remove extension cord from the hole before

moving or transporting storage cabinet.

- Do NOT connect extension cord to outlet that also supplies critical safety equipment with power.
- Make sure the power supply cord is unplugged before any servicing or cleaning.

4. Electrical shock hazard:

- Do not plug cord into outlet with wet hands.
- Do not use this tool cabinet near a bathtub, a shower, or a swimming pool.
- Workbench plugs must match the outlet.
- Never modify the plug in any way.
- Do not use any adapter plugs with earth (grounded) chest power strips.
- Unmodified plugs and matching outlets will reduce the risk of electric shock.
- Avoid body contact with earthed or grounded surfaces. There is an increased risk of electric shock if your body is earthed or grounded.

5. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

GREATSTAR Industrial USA, LLC
9836 Northcross Center Court, Suite A, Huntersville
NC 28078, USA
877-876-7562

"Please note that changes or modifications of this product are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SPECIFICATIONS







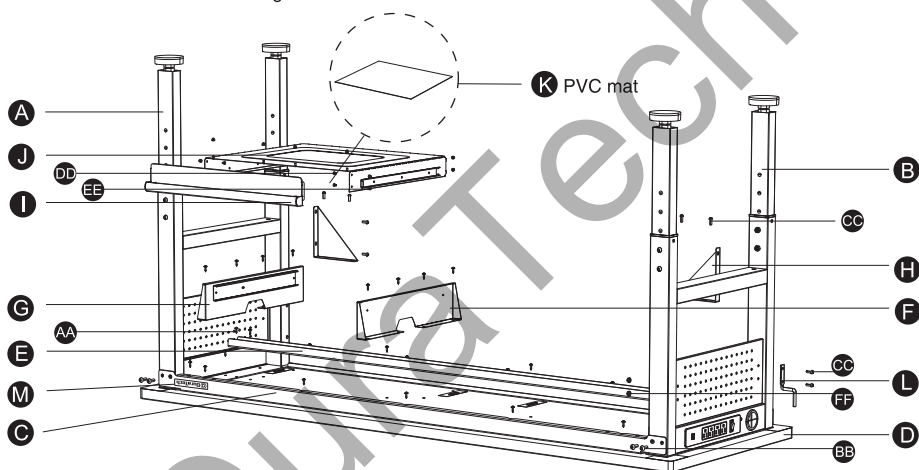



 



 




Maximum load of table	2000 lbs.
Maximum load of draw	50 lbs.
Adjust height of table	30.94" to 38.82"
The length x width of table	72" x 24"

PACKAGE CONTENTS

Ensure all components are present. If any components are missing, do not proceed with assembly.
Please send an email to service@greatstartools.com or call 877-876-7562.




PACKAGE CONTENTS

PART	PIC	DESCRIPTION	QTY
A		Leg	1
B		Leg with power strip	1
C		Beam	2
D		Rubber wood top	1
E		Table stiffener	1
F		Guide rail (Left)	1
G		Guide rail (Right)	1
H		Triangular support	2
I		Drawer front with handle	1
J		Drawer plate	1
K		PVC mat	1
L		Hook	1
M		Badge	1
AA		M5x15 Phillips head tapping screw	36
BB		M8x20 Inner hexagonal at head bolt	10
CC		M6x16 Inner hexagonal at head bolt	12
DD		M4x6 Phillips head screw	15
EE		M4 Cap nut	15
FF		M6 Hexagon nut	3

TOOLS REQUIRED (NOT INCLUDED):



 PH2
Screwdriver



Electric Drill



7mm&10mm
Spanner



13mm&19mm
Spanner



5mm
Hex Key



4mm
Hex Key

ASSEMBLY



 
 
NOTE: Do not tighten all the screws before the step 6.



NOTE: Assemble on a flat surface. A piece of cardboard is recommended to keep the product from being scratched during assembly.

Step 1 Attach the beams




- Attach the leg (A) and leg (B) to beams (C) with 8 pcs M8 x 20 Inner hexagonal at head bolts (BB).

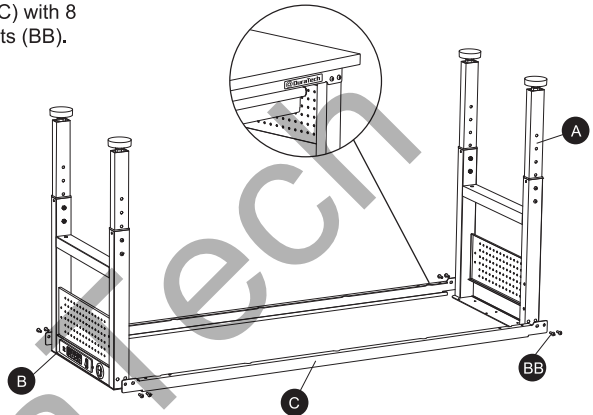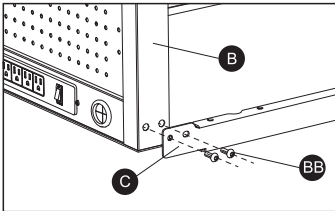

PART	A	B	C	BB
DESCRIPTION	Leg	Leg with power charge strip	Beam	M8x20 Inner hexagonal at head bolt
QTY	1	1	2	8

Step 2 Attach the wood top

   - Place table top (D) facing down on a flat surface with corner labels facing upward. Use soft moving blanket or packaging material to protect the top during assembly.
- Align the legs with the corresponding positioning labels and install the legs (A&B) & beams (C) on the rubber wood top using 20 pcs M5 x 15 phillips head tapping screws (AA).

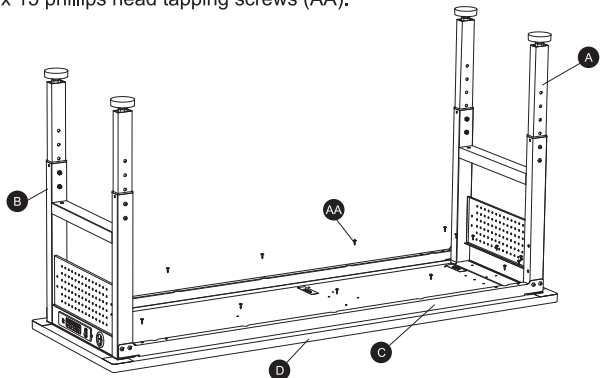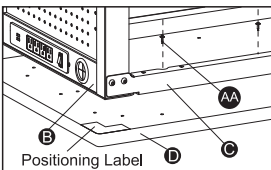
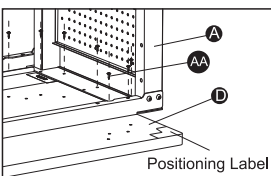


ASSEMBLY

PART	A	B	C	D	AA
DESCRIPTION	Leg	Leg with power charge strip	Beam	Rubber wood top	M5x15 Phillips head tapping screw
QTY	1	1	2	1	20

Step 3 Attach the table stiffener

  - Attach the table stiffener (E) to rubber wood top (D) with 6 pcs M5 x 15 phillips head tapping screws (AA).

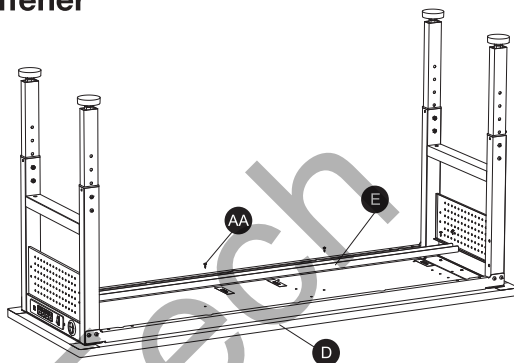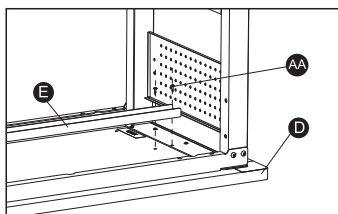

PART	D	E	AA
DESCRIPTION	Rubber wood top	Table stiffener	M5X15 Phillips head tapping screw
QTY	1	1	6

Step 4 Install the guide rails



 
 
NOTE: There are 8 pcs positioning labels for assembling the draw on the top board, you can assemble the guide rail and the draw on the left or right of the table according your available.



NOTE: Pay attention to the direction of drawer extend when assemble.

- Align the positioning labels, attach the guide rails (F) & (G) to rubber wood top with 8 pcs M5 x 15 phillips head tapping screws (AA). "L" mark on the guide rail (Left) (F) and "R" mark on the guide rail (Right) (G).



ASSEMBLY

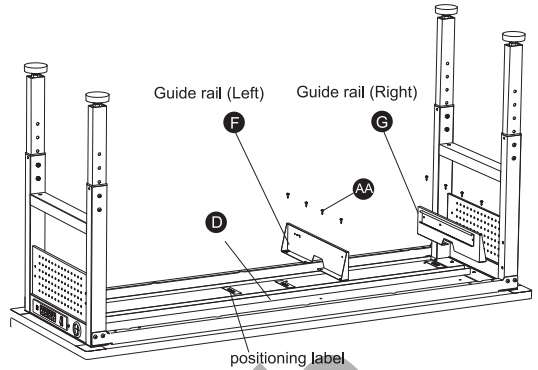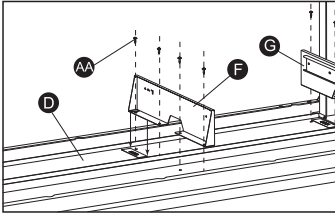

PART	D	F	G	AA
DESCRIPTION	Rubber wood top	Guide rail (Left)	Guide rail (Right)	M5X15 Phillips head tapping screw
QTY	1	1	1	8

Step 5 Install the triangular supports

  - On the back of channel / guide rail, attach the triangular supports (H) to legs (A)(B) and beams (C) with 8 pcs M6 x 16 Inner hexagonal at head bolts (CC).

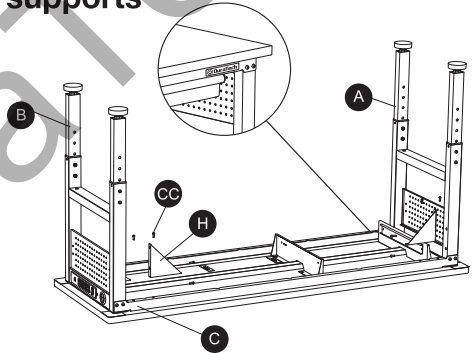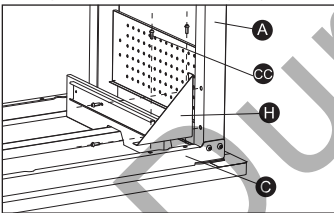

PART	A	B	C	H	CC
DESCRIPTION	Leg	Leg with power charge strip	Beam	Triangular support	M6X16 Inner hexagonal at head bolt
QTY	1	1	2	2	8

 
Step 6 Assemble the drawer

- Fold up the three sides of the drawer plate(J) along the dotted line(referred to the following fig).
- Attach the drawer front with handle (I) to the drawer plate (J) with 12 pcs M4 cap nuts (EE) (cap nuts point outwards) and 12 pcs M4 x 6 phillips head screws (DD).



NOTE: Pay attention to the direction of folding.



ASSEMBLY

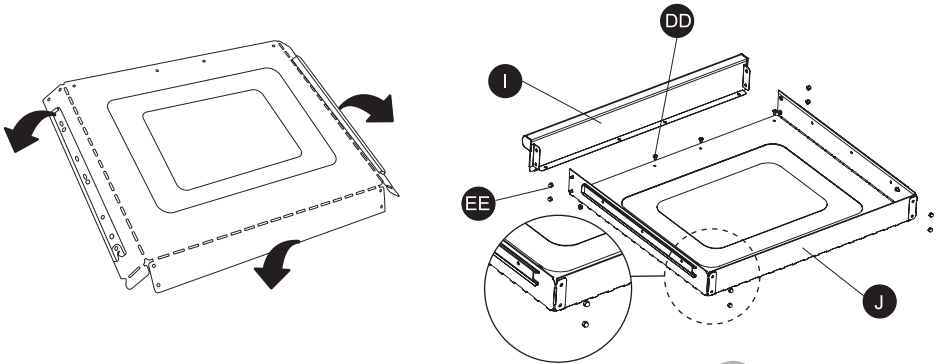

PART	I	J	DD	EE
DESCRIPTION	Drawer front with handle	Drawer plate	M4X6 Phillips head screw	M4 cap nut
QTY	1	1	12	12

Step 7 Attach the hook

  - Attach the hook (L) to leg (B) with 2 pcs M6x16 Inner hexagonal at head bolts (CC) and M6 hexagon nuts (FF).

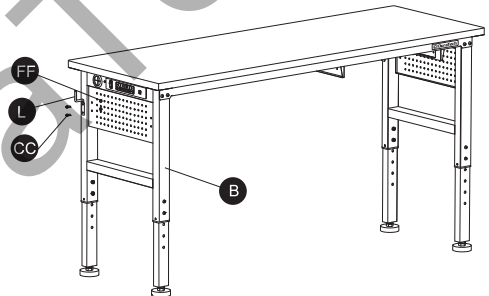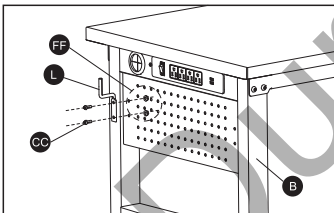


PART	B	L	CC	FF
DESCRIPTION	Leg with power charge strip	Hook	M6X16 Inner hexagonal at head bolt	M6 Hexagon nut
QTY	1	1	2	2

ASSEMBLY

Step 8 Insert the drawer

 - Pull the slides and slide carrier out until fully extended. Put the PVC mat (K) in the drawer. Hold the slide on the drawer while aligning it with the slide on the plate. Slightly insert one side and repeat for the other side. Slowly push the drawer until it is fully closed to engage slide.

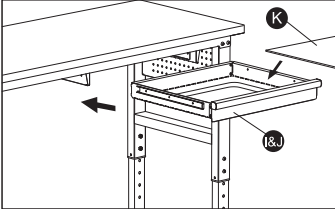


NOTE: The MAX. bearing of draw is 50 pounds, please don't exceed of the weight loaded.

PART	I&J	K
DESCRIPTION	Drawer	PVC mat
QTY	1	1

OPERATION

Step 9 Adjust the level of table

 - Easily leveled with its height-adjustable leg pads. Rotate the pad to the suitable position and lock with the corresponding nuts (M12) by the 19mm spanner.

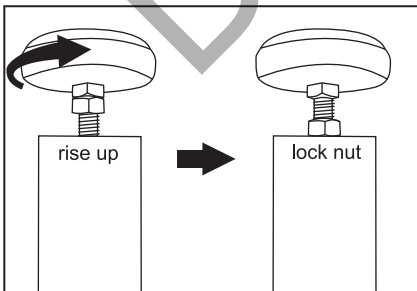



OPERATION

Step 10 Adjust the height of table

- Adjust the position of screws by the 13mm spanner to acquire Suitable height.




  NOTE: Adjust height of table range is from 30.94 in. to 38.82 in.

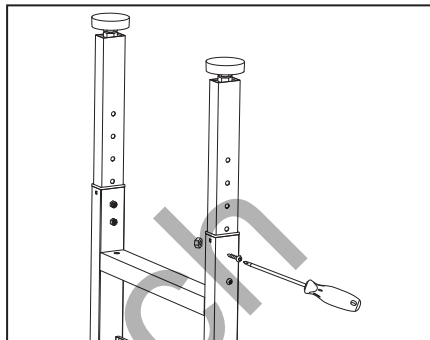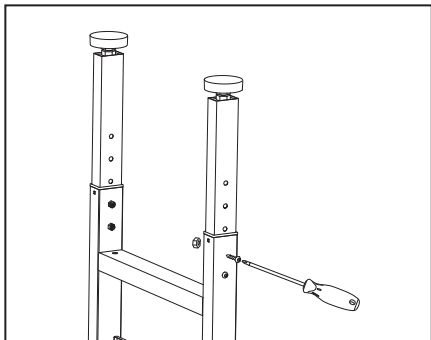




Step 11 Placement of power plug

 - The power plug is hung on the hook through the rubber grommet.

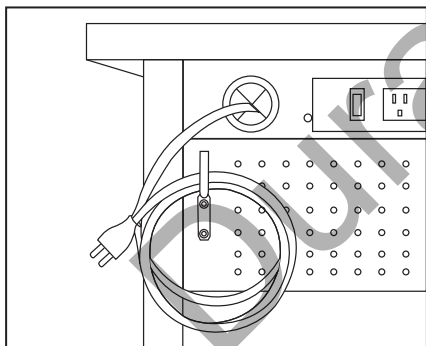


DRAWER / POWER STRIP REMOVAL

   1. Removing the drawer: Fully empty and extend the drawer. Push up the release lever on the left drawer slide while pulling down the other release lever. Pull the drawer outward until it is released from the slides.

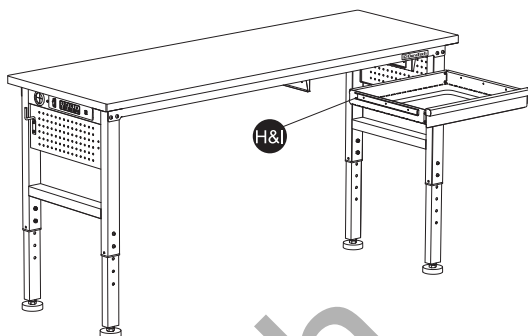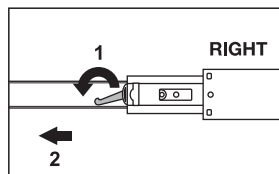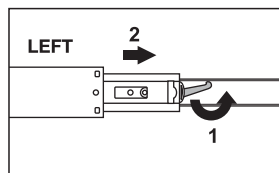

 2. Remove the power strip (①): Unscrew 1 pcs M4*10 cross flange bolt (②), 1 pcs M4 flat washer (③), and 1 pcs M4 hexagon nut (④), push the power strip (①) in the left direction and take it out.

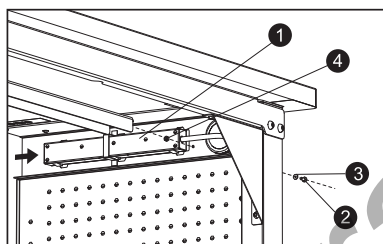

PART	①	②	③	④
DESCRIPTION	Power strip	M4*10 Phillips flange bolt	M4 flat washer	M4 hexagon nut
QTY	1	1	1	1

MAINTENANCE

- Check all nuts and bolts periodically for tightness. When required tighten them.

CARE AND CLEANING

- Periodically clean the workbench surfaces with a soft rag and water. Grease and oil can be removed with most standard cleaning fluids. For safety, use a nonflammable cleaning fluid.

CUSTOMER SERVICE

- If you are having difficulty using this product and require support, please send an email to service@greatstartools.com or call 877-876-7562.