



键盘用户手册

3087 V3

User Manual
Benutzerhandbuch

 
快速开始指南 ▶
Quick Start Guide

感谢您购买及使用本产品



为了给您带来更好的使用体验，在使用产品前请仔细阅读本说明书，并请妥善保管，以便日后参观。

产品概览

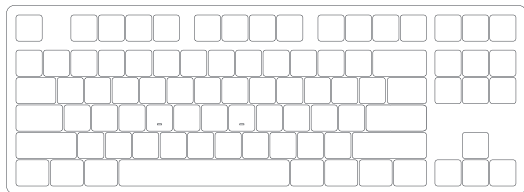

LED 指示灯

指示灯1	Caps	白光常亮
指示灯2	系统模式灯	MAC系统白光常亮
指示灯3	锁WIN	白光常亮

包装内容



 
系统需求

Windows®XP / Vista / 7 / 8 / 10或更高版本

安装步骤


将键盘USB连接线插入电脑的USB接口即可开始使用。

3087 V3 组合键功能

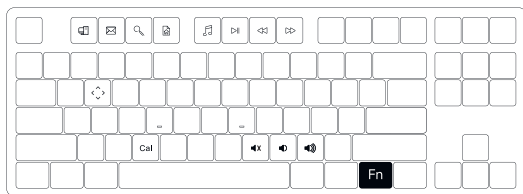


Fn+F1	我的电脑	Fn+F5	多媒体播放器	Fn+C	计算器
Fn+F2	电子邮件	Fn+F6	播放/暂停	Fn+M	静音
Fn+F3	Windows搜索	Fn+F7	上一首	Fn+<	音量减
Fn+F4	浏览器主页	Fn+F8	下一首	Fn+>	音量加
Fn+W	将 W A S D 与 ↑ ↓ ← → 键对调				

 3087 V3 系统功能 (Windows)

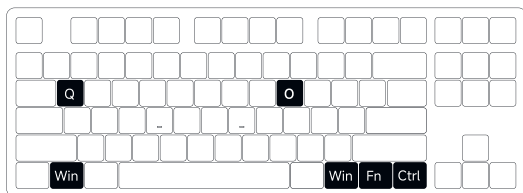


Fn+左WIN	锁 Windows	Fn+Q 长按3秒	切换到 Win系统
左Win + 右Win 长按5秒	恢复出厂设置	Fn+O 长按3秒	切换到 Mac系统
Fn + 右Ctrl 长按3秒	切换成菜单键		

 3087 V3 系统功能 (Mac)

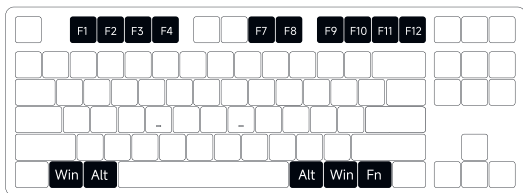

F1	降低显示屏亮度	F7	上一曲	F11	调低音量
F2	增加显示屏亮度	F8	暂停/播放(音频)	F12	调高音量
F3	开放任务控制	F9	下一曲	左Win	Option
F4	呼出Siri	F10	静音	左Alt	Command
右Alt	Command	Fn + (F1 ~ F12)	F1 ~ F12		
右Win	Option				

 3087 V3 灯光调节 (带背光机型使用)

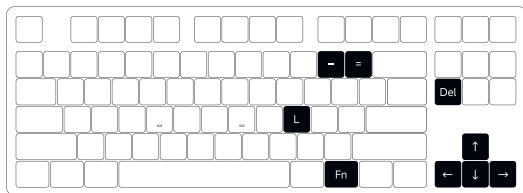

Fn+-	灯光速度变慢	Fn+↑	灯光变亮	Fn+←	灯光方向向左
Fn+=	灯光速度变快	Fn+↓	灯光变暗	Fn+→	灯光方向向右
Fn+L	灯光关闭/开启				
Fn+Del	常亮(默认)、流星、呼吸、涟漪、如影随形、川流不息、繁星点点、光波、层出不穷、彩泉涌动、峰回路转、百花争艳、极光、正弦波、雨滴、斜风细雨、踏雪无痕、聚合、一石二鸟				

按键/灯光自定义说明和调用说明

- 1. 1.键盘按键/灯光自定义可配合驱动进行
- 2. 键盘灯光可搭配驱动实现音乐律动
- 3. 请在我司官网下载“Akko Cloud”驱动
- 4. 驱动下载地址www.akkogear.com

Akko保修和服务声明

- 1. Akko为中国大陆的客户提供一年保修。对于其他地区，请联系您的卖家（Akko分销商）以了解具体的保修政策。
- 2. 如果保修期到期，客户需要支付维修费用。如果用户喜欢自己修理键盘，Akko也会提供说明。用户应对自行修复过程中发生的任何损失承担全部责任。
- 3. 在未经制造商/卖方指示的情况下拆开键盘将立即导致保修无效
- 4. 官方售后服务时间为每周一至周五上午10：00至下午18：00
节假日以国家法定节假日休息为准。
- 5. 退货和保修政策在不同的平台上可能有所不同，并在购买时取决于具体的经销商。

公司：深圳银宸科技有限公司

地址：深圳市宝安区松岗街道碧头第一工业区朗碧路33号

电话：0755-23216420

网址：www.akkogear.com

产地：中国 • 深圳

Company: Shenzhen Yinchen Technology Co., Ltd

Address: 33 Langbi Rd, Bitou First Industrial Zone, Bao'an District, Shenzhen, China




中国制造/Made in China

注意 事项	人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等，键盘为电子产品 请按照电子产品保护方式爱惜使用。
----------	---

To provide you with a better user experience, please read this manual carefully before using the product.

 Product Overview

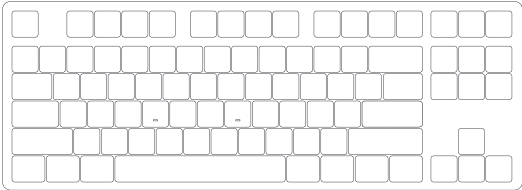

LED Indicator

LED Indicator 1	Caps	Steady White
LED Indicator 2	System Indicator	Mac OSX (Steady White)
LED Indicator 3	Lock Win	Steady White

Packing List



 
System Requirement

Windows®XP / Vista / 7 / 8 / 10 or higher version

Connectivity Method


Connect the keyboard to your computer by plugging in the USB cable into an available USB port to start using it.

3087 V3 HotKeys

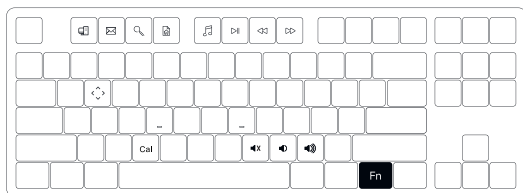

Fn+F1	File Explorer	Fn+F5	Multimedia Player	Fn+C	Calculator
Fn+F2	E-mail	Fn+F6	Play/Pause	Fn+M	Mute
Fn+F3	Windows Search	Fn+F7	Previous Song	Fn+<	Decrease Volume
Fn+F4	Browser Homepage	Fn+F8	Next Song	Fn+>	Increase Volume
Fn+W	Swap W A S D with ↑ ↓ ← →				

 3087 V3 System Commands (Windows)

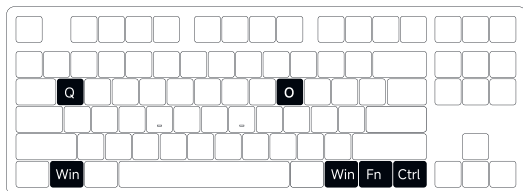

Press Fn and left Win Key

Lock Win key

Hold down Fn and press Q key for 3S

Enter Windows system

Hold down left Win and press right Winkey for 5S

Restore factory settings

 
Hold down Fn and press O key for 3S

Enter Mac system

Hold down Fn and press right Ctrl for 3S


Revert Ctrl into Menu (APP) key

3087 V3 System Commands (Mac)

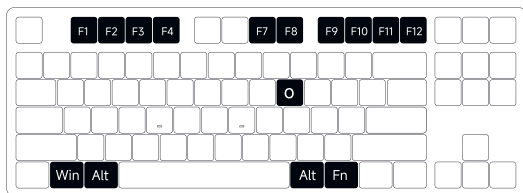

F1	Decrease display brightness	F7	Skip back (Audio)	F11	Volume down
F2	Increase display brightness	F8	Pause/Play (Audio)	F12	Volume up
F3	Open mission control	F9	Skip forward (Audio)	Left Win	Option
F4	Activate Siri	F10	Mute	Left Alt	Command
Right Alt	Command	Fn + (F1 ~ F12)	F1 ~ F12		
Right Win	Option				

 3087 V3 Backlight Settings (for models with backlight)

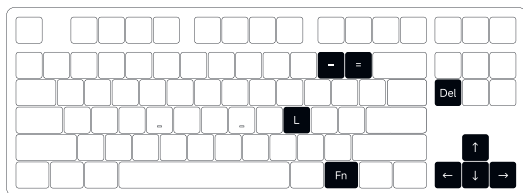

<u>Fn+-</u>	<u>Slower Animation</u>	<u>Fn+ ↑</u>	<u>Bright</u>	<u>Fn+ ↓</u>	<u>Dim</u>
<u>Fn+=</u>	<u>Faster Animation</u>	<u>Fn+←</u>	<u>Set animation direction to left</u>		
<u>Fn+L</u>	<u>Light On / Off</u>	<u>Fn+→</u>	<u>Set animation direction to right</u>		
<u>Fn+Del</u>	Steady (default), Effect 2, Effect 3, Effect 4, Effect 5, Effect 6, Effect 7, Effect 8, Effect 9, Effect 10, Effect 11, Effect 12, Effect 13, Effect 14, Effect 15, Effect 16, Effect 17, Effect 18, Effect 19				

Akko Warranty and Service Statement

- 1. Akko provides One-Year warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.
- 2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
- 3. Defects resulting from disassembly of our product, improper usage and incorrect installation are not covered by warranty.
- 4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

Company: Shenzhen Yinchon Technology Co., Ltd
Address: 33 Langbi Rd, Bitou Community 1st Industrial Zone,
Bao'an District, Shenzhen, China
Tel: 0755-23216420
Website: www.akkogear.com
Origin: Shenzhen, China



WARNING:
Water and Beverages can't be poured into the Keyboard.



中国制造/Made in China

Precautions	Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.
-------------	---

