



For the best experience

Charge your camera before setup

To charge camera:

Plug the included USB cable into the micro USB port on the back of your camera and connect the other end to a standard USB port.

What's included

- A** Roku Outdoor Camera* with removable magnetic mounting base
- B** Camera charging USB cable
- C** 24mm M3 screws (x2)
- D** Drywall anchors (x2)



What you'll need

- Phillips screwdriver
- Your smartphone


NOTE: You'll need to have a Roku Outdoor Camera base station set up before you set up your camera. Your base station can support multiple outdoor cameras.

Visit go.roku.com/cameras for more information.


* For outdoor use only.

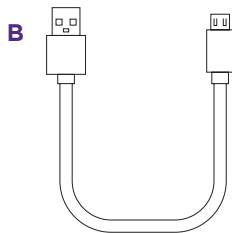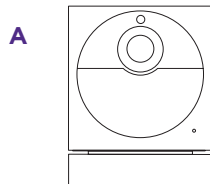


- 1** Light sensor
- 2** Lens
- 3** Microphone
- 4** Removable magnetic mounting base
- 5** On/off switch and USB charging port
- 6** Status light
- 7** Sync button
- 8** MicroSD slot
(Card sold separately)

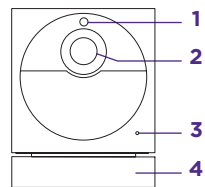

FRONT

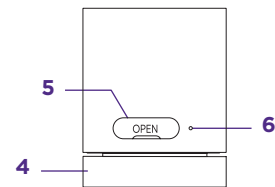

BACK

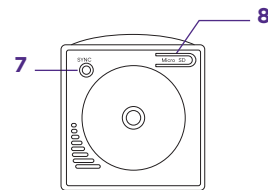

BOTTOM

Let's get started

STEP 1: Open the Roku Smart Home app

Sign in with your Roku account.





Messaging & data rates may apply.

STEP 2: Install your camera



In the Roku Smart Home app, tap the "+" button, then **"Add Device"** to find **"Outdoor Camera."** Follow the instructions to finish setup.

Continue on back ➡

WALL MOUNT

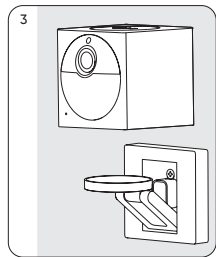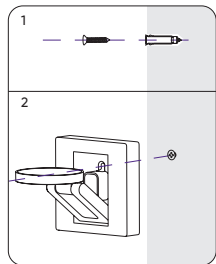

CEILING MOUNT

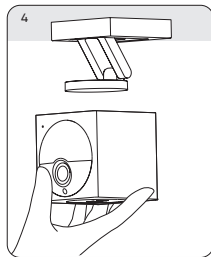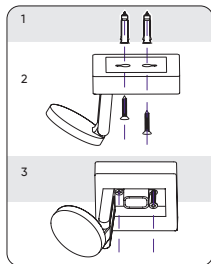

What's that light mean?

Status Light	Status
YELLOW - Solid	Powered on and beginning setup
YELLOW and BLUE - Flashing	Pairing to base station
BLUE - Flashing	Connecting to Wi-Fi®
BLUE - Solid	Connected and working
RED - Flashing	Charging
RED - Solid	Fully charged
NO LIGHT	Powered off or sleeping

Status lights are located on the camera and base station.



More features are waiting

Unlock the full potential of your camera with a **Roku Smart Home Subscription.**

Learn more at
go.roku.com/rokusmarthome

Need help?



Setup videos



Common questions



Tips and tricks

Visit

go.roku.com/cameras

Roku

© 2023 Roku, Inc. All rights reserved. Roku, the Roku logo, and the Roku Smart Home logo are the trademarks or registered trademarks of Roku, Inc.



4100000973_01

Roku™ Outdoor Camera

Quick Start Guide

