


2. Operating and Programming/2.3 yeedi App

To enjoy all available features, it is recommended to control your Robot via the yeedi App.

Before you start, make sure that:

- Your mobile phone is connected to a Wi-Fi network.
- The 2.4GHz band wireless signal is enabled on your router.
- The Wi-Fi indicator light on Robot is slowly flashing.

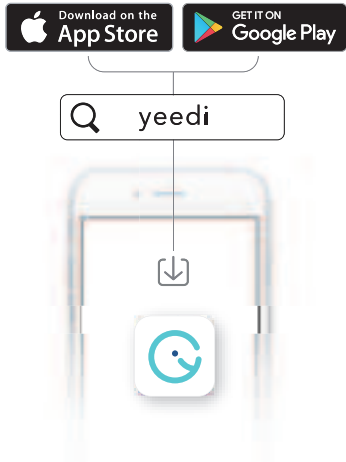

Wi-Fi Indicator Light


	Slowly flashing	Disconnected to Wi-Fi or waiting for Wi-Fi connection
	Rapidly flashing	Connecting to Wi-Fi
	Solid	Connected to Wi-Fi

Tips:

If you have any problems during the Wi-Fi setup process, refer to the Troubleshooting > Wi-Fi Connection section in this manual.

2. Operating and Programming/2.4 Start, Pause, Wake Up, Power Off

1 Start

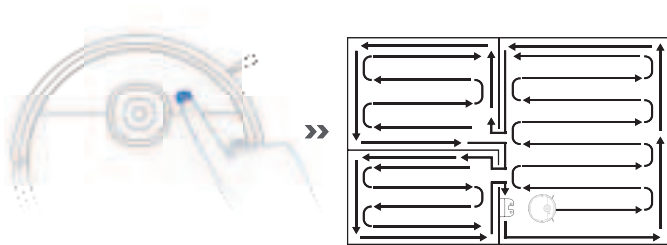

3 Wake Up




Press the AUTO button on Robot to wake it up

2 Pause



4 Power OFF

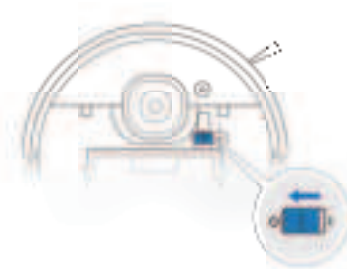


Note: The robot's Control Panel stops glowing after the robot is paused for a few minutes. Press the AUTO Mode Button on Robot to wake up the robot.

Note: When Robot is not working, it is recommended to keep it switched ON and charging.

2. Operating and Programming/2.5 Mopping System


Note:

1. To prolong the service life of the reservoir, it is recommended to use purified water or softened water for the mopping system.
2. If you need to clean the carpet, please uninstall the Mopping Pad Plate first.
3. Empty the reservoir after Robot finishes mopping.

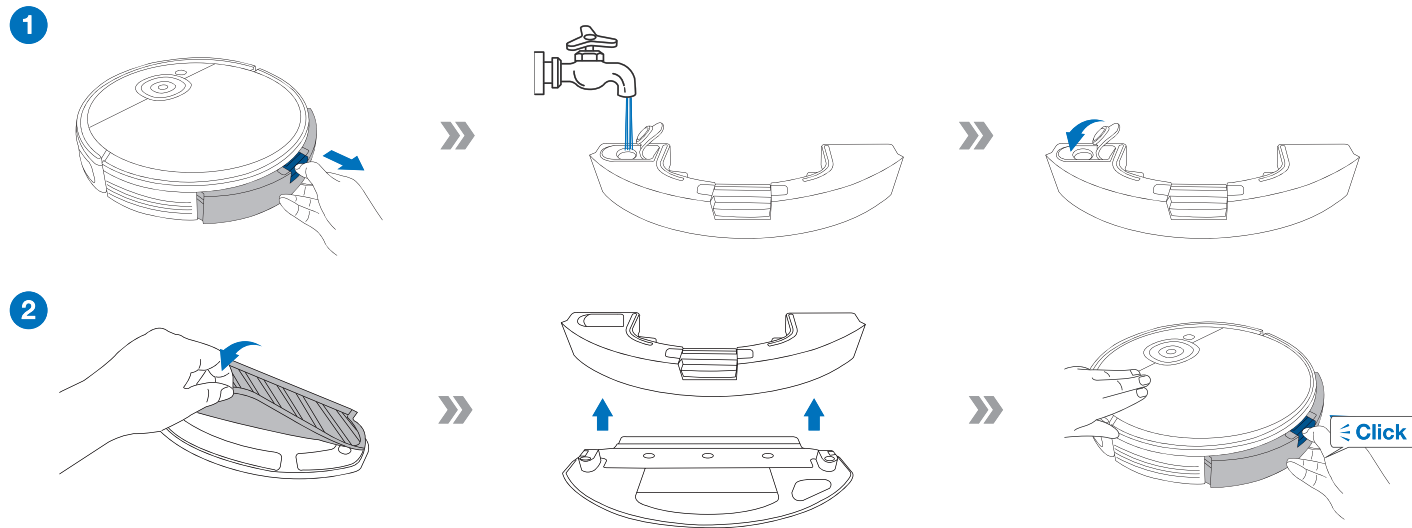

3. Maintenance/3.1 Mopping System


Before performing cleaning and maintenance tasks on Robot, turn the robot OFF and unplug the Docking Station.

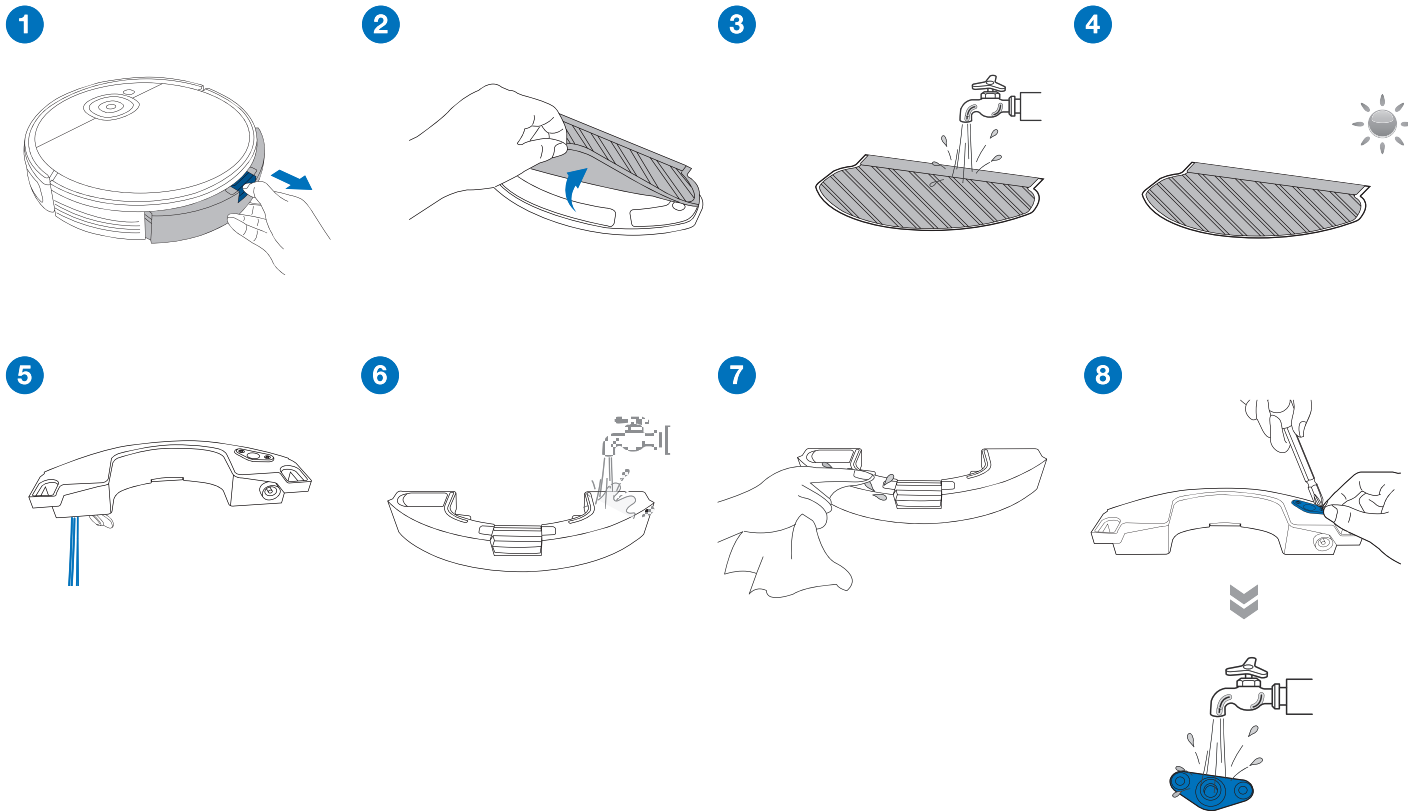


3. Maintenance/3.2 Dust Bin and Filters

Dust Bin


1

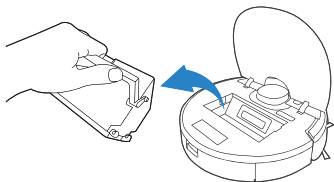


2

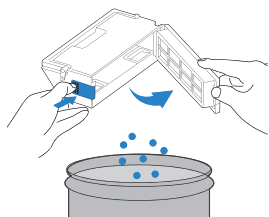


3

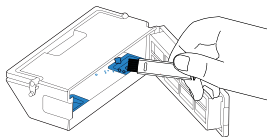


4

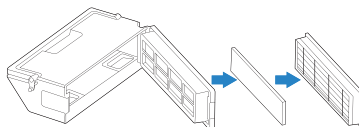


5

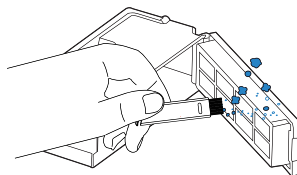


6

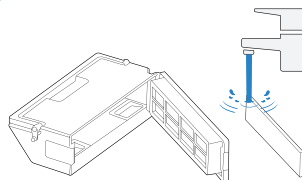

7

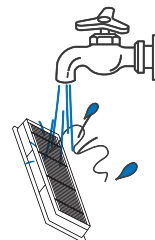

8

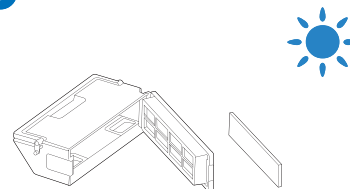

Note: 1. Please rinse the filter with water as shown above. 2. Do not use finger or brush to clean the filter. 3. Be sure to dry out the filter for at least 24 hours after washing.

3. Maintenance/3.3 Main Brush, Edge Brush and Mapping Sensor

Note: A Multi-Function Cleaning Tool is provided for easy maintenance. Handle with care, this cleaning tool has sharp edges.

Main Brush


1




2




3

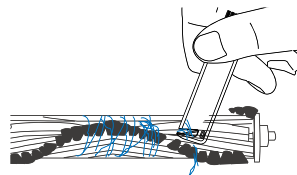


Edge Brush

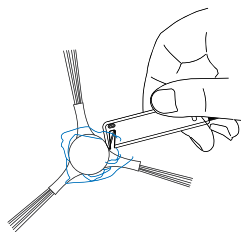

Mapping Sensor

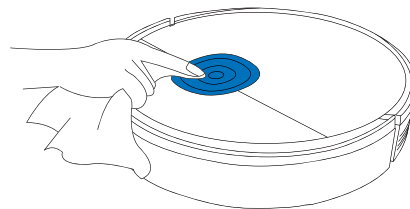

3. Maintenance/3.4 Other Components

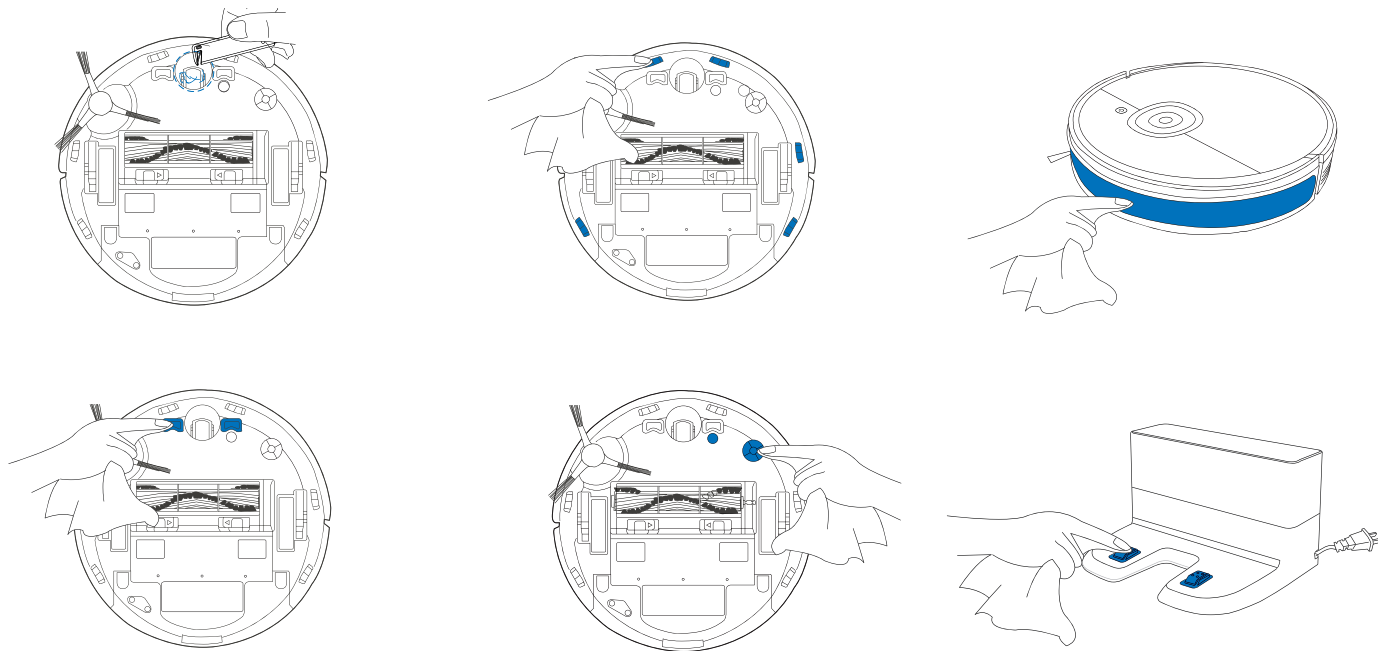

Note: Before cleaning the robot's Charging Contacts and Docking Station Pins, turn the robot OFF and unplug the Docking Station.

3. Maintenance/3.5 Regular Maintenance

To keep Robot running at peak performance, perform maintenance tasks and replace parts with the following frequencies:

Robot Part	Maintenance Frequency	Replacement Frequency
Washable Mopping Pad	After each use	Every 50 washings
Reservoir/Mopping Pad Plate	After each use	/
Edge Brush	Once every 2 weeks	Every 3-6 months
Main Brush	Once per week	Every 6-12 months
Sponge Filter/ High Efficiency Filter	Once per week	Every 3-6 months
Universal Wheel Anti-Drop Sensors Bumper Mapping Sensor Charging Contacts Docking Station Pins	Once per week	/

A multi-function Cleaning Tool is provided for easy maintenance. Handle with care, this cleaning tool has sharp edges.

Note: yeedi manufactures various replacement parts and fittings. Please contact Customer Service for more information on replacement parts.

4. Indicator Light

Robot

Robot will tell you something is wrong with an indicator light and voice report. More detailed support is available through the yeedi app and online website.

Indicator Light	Scenario
AUTO Mode Button glows a solid WHITE.	The robot is cleaning.
	The robot is paused while cleaning.
AUTO Mode Button flashes WHITE.	The robot is charging.
	The robot is starting.
	The robot is relocating.
AUTO Mode Button glows a solid RED.	The robot has low battery.
AUTO Mode Button flashes RED.	The robot has a problem.

5. Troubleshooting/5.1 Troubleshooting

No.	Malfunction	Possible Causes	Solutions
1	Robot is not able to connect to the home Wi-Fi network.	Incorrect home Wi-Fi username or password entered.	Enter the correct home Wi-Fi username and password.
		Robot is not within range of your home Wi-Fi signal.	Make sure Robot is within range of your home Wi-Fi signal.
		Network setup started before Robot was ready.	Turn ON Power Switch. Press the RESET Button for 3 seconds. Robot is ready for network setup when it plays a musical tune and its Wi-Fi Indicator light flashes slowly.
2	Robot is not charging.	Robot is not switched ON.	Switch ON Robot.
		Robot has not connected to the Docking Station.	Be sure that the robot's Charging Contacts have connected to the Docking Station Pins.
		The Power Cord is not connected to the Docking Station.	Make sure the Power Cord is firmly connected to the Docking Station.
		The battery is completely discharged.	Re-activate the battery. Switch ON. Place Robot on the Docking Station by hand, remove after charging for 3 minutes, repeat 3 times; then charge normally.
		Make sure the Docking Station is connected to the power supply.	The Docking Station is not connected to the power supply.

No.	Malfunction	Possible Causes	Solutions
3	Robot cannot return to the Docking Station.	The Docking Station is not correctly placed.	Refer to section 2.2 to correctly place the Docking Station.
		The Docking Station is disconnected or moved.	Please check if the Docking Station is connected to power. Do not move the Docking Station manually.
		Robot is working in a dark environment.	Make sure to use Robot in a well illuminated environment.
		Robot is paused for more than 60 minutes.	Avoid pausing Robot for over 60 minutes.
		Robot did not start cleaning from the Docking Station.	Make sure Robot starts cleaning from the Docking Station.
4	Robot returns to the Docking Station before it has finished cleaning.	Robot is working in a dark environment.	Make sure to use Robot in a well illuminated environment.
		When the battery gets low, Robot automatically switches to Return to Charger Mode and returns to the Docking Station to recharge itself.	This is normal. No solution necessary.
		Working time varies according to floor surface, room complexity and the Cleaning Mode selected.	This is normal. No solution necessary.
		The cleaning area is not tidy.	Remove small objects from the floor and tidy up the cleaning area before Robot starts cleaning.
5	Robot gets stuck while working and stops.	Robot is tangled with something on the floor (electrical wires, curtains, Carpet fringing, etc.).	Robot will try various ways to free itself. If it is unsuccessful, manually remove the obstacles and restart.
6	Robot makes much noise when cleaning.	The brushes are tangled, or the dust bin is stuck.	Clear the debris stuck regularly.

No.	Malfunction	Possible Causes	Solutions
7	The water is not coming out of the Reservoir when Robot is mopping.	The water inlet filter on the bottom of Reservoir is clogged.	Unscrew the water inlet on the bottom of Reservoir and clean the filter.
		The Reservoir runs out of water.	Add water into the Reservoir.
		The water outlets on the bottom of Robot are clogged.	Check the water outlets on the bottom and clean.
8	The reservoir drops out of place during cleaning.	The reservoir is not properly installed.	The reservoir is properly installed when it clicks into place.

5. Troubleshooting/5.2 Wi-Fi Connection

Before Wi-Fi setup, make sure Robot, mobile phone, and Wi-Fi network meet the following requirements.

Robot and Mobile Phone Requirements

- Robot is fully charged and the power switch of Robot is turned on.
- Wi-Fi status light slowly flashes.
- Turn off mobile phone's cellular data (you can turn it back on after setup).

Wi-Fi Network Requirements

- You are using a 2.4GHz or 2.4/5 GHz mixed network.
- Your router supports 802.11b/g/n and IPv4 protocol.
- Do not use a VPN (Virtual Private Network) or Proxy Server.
- Do not use a hidden network.
- WPA and WPA2 using TKIP, PSK, AES/CCMP encryption.
- WEP EAP (Enterprise Authentication Protocol) is not supported.
- Use Wi-Fi channels 1-11 in North America and channels 1-13 outside North America (refer to local regulatory agency).
- If you are using a network extender/repeater, the network name (SSID) and password are the same as your primary network.

6. Product Specifications

Model	DVX34			
Rated Input	20V === 1A			
Docking Station Model	CH1822		CH1918*	
	Rated Input	100-240V ~ 50-60Hz 0.5A	Rated Input	120V ~ 50-60Hz 8A
	Rated Output	20V === 1A	Rated Output (Charging)	20V === 1A

Note: Technical and design specifications may be changed for continuous product improvement.

* CH1918 is an Self-empty Station sold separately that automatically empties your Robot's dustbin.

Explore more accessories at <https://www.yeedi.com>.

Contenu

1. Contenu de l'emballage	35
2. Utilisation et programmation	38
3. Entretien	43
4. Témoin lumineux.....	48
5. Dépannage.....	49
6. Spécifications du produit.....	53

Consignes de sécurité importantes

INSTRUCTIONS IMPORTANTES EN MATIÈRE DE SÉCURITÉ

LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER CET APPAREIL. CONSERVER CES INSTRUCTIONS

Pour usage domestique seulement

Lors de l'utilisation d'un appareil électrique, il faut toujours suivre les précautions de base, notamment :

AVERTISSEMENT : Assurez-vous de lire tous les avertissements et toutes les instructions de sécurité. Le non-respect des avertissements et des instructions peut provoquer une décharge électrique, un incendie ou entraîner des blessures graves.

1. Ne doit pas être utilisé comme un jouet. Une attention particulière est nécessaire lorsqu'il est utilisé par ou près des enfants.
2. Dégagez la zone à nettoyer. Retirez les cordons d'alimentation et les petits objets du sol qui pourraient se coincer dans l'appareil. Placez la frange du tapis sous la base du tapis et soulevez les objets tels que les rideaux et les nappes du sol.
3. S'il y a du relief dans la zone de nettoyage en raison d'une marche ou d'un escalier, vous devriez faire fonctionner l'appareil de manière à vous assurer qu'il peut détecter la marche sans tomber par-dessus le bord. Il pourrait s'avérer nécessaire de placer une barrière physique au bord pour empêcher l'unité de tomber. Assurez-vous que la barrière physique n'occasionne pas des risques de trébuchement.
4. Utiliser uniquement comme décrit dans ce manuel. Utiliser uniquement les accessoires recommandés ou vendus par le fabricant.
5. Veuillez vous assurer que la tension d'alimentation correspond à celle indiquée sur la station d'accueil.
6. Ne manipulez pas la prise ou l'appareil avec les mains mouillées.
7. Les piles non rechargeables sont interdites.
8. N'utilisez pas l'appareil si le récipient à poussière ou les fils ne sont pas en place.
9. N'utilisez pas l'aspirateur dans un endroit où il y a des bougies allumées ou des objets fragiles sur le plancher que vous voulez nettoyer.
10. Ne pas utiliser et entreposer dans des environnements très extrêmement chauds ou froids (inférieurs à -5 °C / 23 °F ou supérieurs à 40 °C / 104 °F). Veuillez charger le robot à