



Make: Subaru
Model: Legacy/Outback
Year: 2010-11

STANDARD/ OPTIONAL

- AM/FM/SAT/MP3/WMA/Single/Multi CD Player
- 3.5mm Aux/mp3
- 9 Speaker Harmon Kardon amplified system

SCOSCHE®

SPEAKER NOTES

Front Speakers

Side Dash:	2 1/2"
Lower Door:	6 1/2"
Speaker Adapter:	TBA
Speaker Harness:	TBA
Speaker Assembly:	(2) 10mm / (3) Phillips

Dimensions:

Dash	Door
L: 2.87"	L: 6.24"
W: 2.87"	W: 6.24"
D: 1.59"	D: 2.88"

Rear Speakers

Lower Door:	6 1/2"
Subwoofer:	8"
Speaker Adapter:	TBA
Speaker Harness:	TBA
Speaker Assembly:	(3) Phillips / (5) 10mm

Dimensions:

Door	Sub
L: 6.24"	L: 9.07"
W: 6.24"	W: 9.07"
D: 2.51"	D: 4.08"

APPLICATIONS

Dash Type:	New Custom Dash
Aftermarket Type:	Single/Double Din
Aftermarket Kit:	SU2028B
Harness:	NN04B/NN04RB
Antenna Adapter:	NAA2B/NAAR2B
BlueFusion/Bluetooth:	BT1000/BT1200
AUX Interface:	Not required
Auxiliary/USB Input:	Center Console
Amplifier location:	Under pass seat

FACTORY COLOR CODES

(+)12v Battery:	Green/White
(+)12v Accessory:	Yellow/Red
(-) 12v Ground:	Black
(+)12v Amp Turn On:	Yellow/Black
Left Front Speaker (+):	Green
Left Front Speaker (-):	Brown/White
Right Front Speaker (+):	White/Black
Right Front Speaker (-):	Red/Yellow
Left Rear Speaker (+):	White/Red
Left Rear Speaker (-):	Yellow
Right Rear Speaker (+):	Red
Right Rear Speaker (-):	Blue

2010-11 Subaru Legacy/Outback

VEHICLE DISASSEMBLY

PRELIMINARY:

Disconnect the negative battery cable.

Make: Subaru

Model: Legacy/Outback

Year: 2010-11

RADIO



1. With Panel Removal Tool, Unclip Panel Surrounding Radio and Remove.
2. Extract (4) Phillips Head Screws Securing Radio, Unplug and Remove Radio.

AUX/3.5mm



DASH SPEAKERS



1. With Panel Removal Tool, unclip Tweeter Panel and remove.
2. Extract (2) 10mm screws securing Speaker, unplug and remove.

FRONT DOOR SPEAKERS



1. With Panel Removal Tool, Unclip Side Mirror Panel.
2. With Flat Head Screw Driver, unclip Screw Cover Inside Door Handle and Extract (1) Phillips Head Screw.
3. With Flat Head Screw Driver, unclip Screw Cover Inside Door Grip and Extract (1) Phillips Head Screw.
4. With Flat Head Screw Driver, unclip light located on the bottom of the Door panel, unplug and Remove.
5. With Panel Removal Tool, unclip Door Panel, unplug and remove.
6. Extract (3) Phillips Head Screws Securing Speaker, unplug and Remove.

PRELIMINARY:

Disconnect the negative battery cable.

Make: Subaru

Model: Legacy/Outback

Year: 2010-11

REAR DOOR SPEAKERS




1. With Flat Head Screw Driver, unclip Screw Cover Inside Door Handle and Extract (1) Phillips Head Screw.
2. With Flat Head Screw Driver, unclip Screw Cover Inside Door Grip and Extract (1) Phillips Head Screw.
3. With Panel Removal Tool, unclip Door panel, Unplug and Remove.
4. Extract (3) Phillips Head Screws Securing Speaker, unplug and Remove.

SUBWOOFER



1. With Panel Removal Tool, unclip (2) plastic screws securing plastic moldings covering back seats locking mechanism, unclip plastic moldings and remove.
2. Remove door seal from rear doors, just enough to clear side panels.
3. With Panel Removal Tool, unclip top portion of the lower side panels, just enough to clear the top side panels.
4. With Panel Removal Tool, unclip upper side panels and remove. Be careful, theres an airbag below these panels.
5. With Panel Removal Tool, unclip Rear Deck Panel, unplug and remove.
6. Extract (5) 10mm screws securing Subwoofer, unplug and remove.

AMPLIFIER

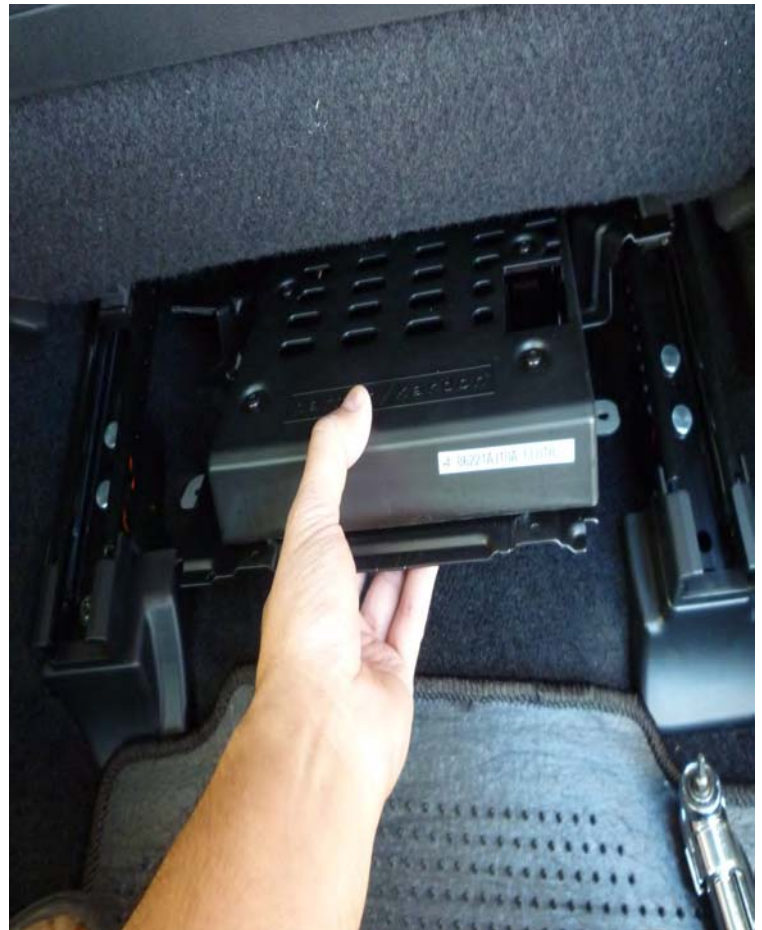

1. Pull Front Passengers seat forward, lift carpet to reveal (2) screws and extract (2) 10mm screws securing Amplifier.
2. With Panel Removal Tool, unclip (2) plastic clips securing harness onto the Amplifiers bracket.
3. Unplug Amplifier, lift and remove.