


Smart Projector

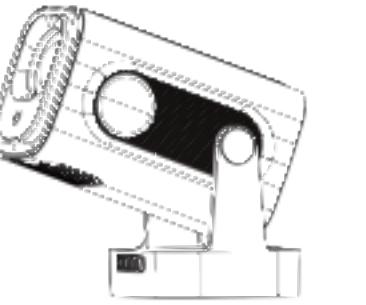


HY310

Quick Installation Guide


Attention

- Please read this manual carefully before use and keep it for future reference.
- The projector is non-dustproof or waterproof.
 - In order to reduce the risk of fire and electric shock, do not expose the projector to rain and fog.
 - Please use the original power adapter. The projector should work under specified rated power supply.
 - When projector is working, please do not touch directly near the lens, the strong light will flush your eyes and cause slight pain. Children should use the projector under the supervision of adults.
 - Do not cover the vents of projector. Heating will reduce the life of projector and cause damage.
 - Regularly clean projector vents, or dust may cause cooling malfunction.
 - Do not use the projector in greasy, damp, dusty or smoky environment. Oil or chemicals will cause malfunction.
 - Please handle with care during daily use.
 - Please cut off the power if the projector is out of use for long time.
 - Non-professionals are forbidden to disassemble the projector for testing and maintenance.

Structure description

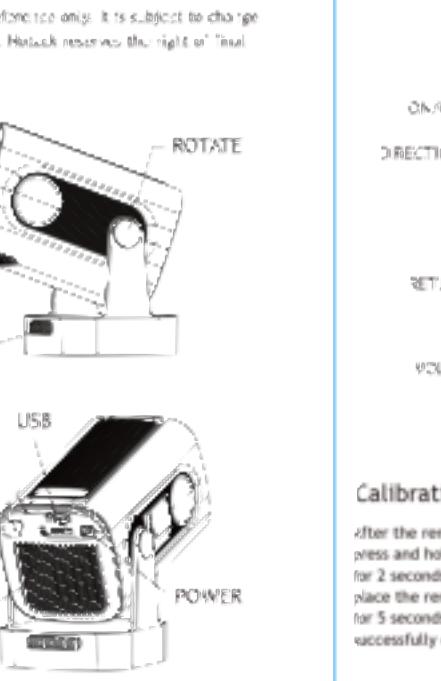

Air Remote

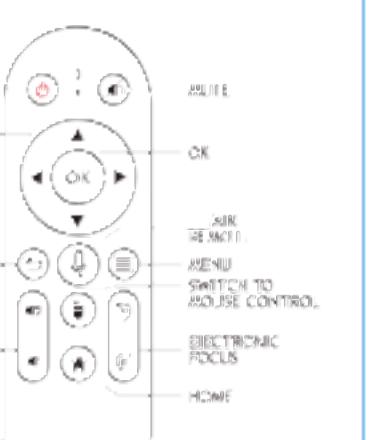

Calibration of the flying squirrel micro-drift:

After the remote control is connected to the projector simultaneously press and hold the "OK" and "HOME" buttons on the remote control for 2 seconds. At this time, the indicator light will stay on. Then place the remote control flat on the desktop. After keeping it still for 5 seconds, the light will go off, and the flying squirrel will be successfully calibrated.

remote controller pairing



Select the matching interface of the remote control, press "Enter" button according to the matching guide.

Select your Language



App Store

In the App Store, applications can be installed with one click, and they can be used directly after installation. Our company also brings the applications to the market, enabling users to obtain and use them easily and conveniently.




Projection Setting

Setting -> Projector settings, enter to setup projection mode, Display settings, Individual mode, Digital scaling, Auto Trap, Trig, Trig, Auto Focus, Manual Focus, Auto.



Networking Setting

Setting -> Network settings -> WiFi setting, WiFi 2.4G/5G, select objective WiFi ID and input & password to connect. WiFi 2.4G, System -> WiFi.

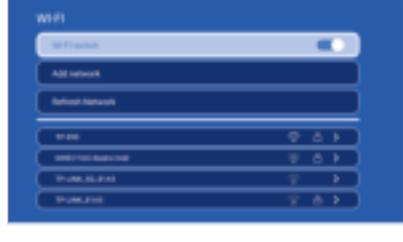


Date And Time Setting

Setting -> Date And Time Setting, enter to Date, Time and Use 24-hour format.




Other Setting

Setting -> Other Setting, enter to Button sound, Screen saver, Power shutdown and restore factory settings.

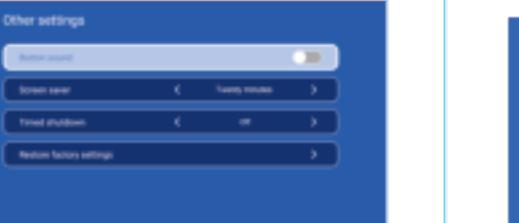


Language Setting

Setting -> Language Setting, enter to setup language and select input method.

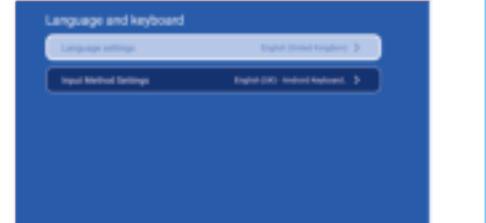


Screen saver

Setting -> Other Setting -> Screen saver, Screen saver time setting. The projector will enter sleep mode at the set time without any operation or plug/unplug. Screen saver mode can be released by pressing the power button.

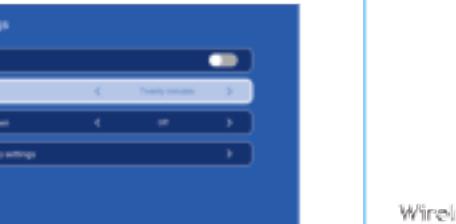

System information

Setting -> System information, enter to CPU version, Resolution, Running memory and Storage space.

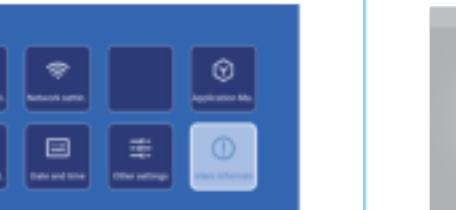

Safety instructions

Please pay attention to important information related to the operation and maintenance of the projector. You should read this information carefully to avoid problems. Following safety instructions will increase the life of projector.

Please consult the qualified personnel for installation and repair services, and do not use damaged wires, accessories and other components.

Projector should be kept away from flammable, explosive, strong electromagnetic interference (near mobile phones, power stations, substations, etc.), Strong ambient light (near direct sunlight), etc.

Do not cover projector lens.

Please use the original power adapter.

Keep adequate ventilation and make sure vents are not covered by any objects.

When projector is working, please do not look directly into the lens. The strong light will flush your eyes and cause slight pain.

Do not bend or drop the power cord.

Do not put power cord under projector or any heavy objects.

Avoid cover other soft materials on power cord.

Avoid heat the power cord.

Avoid touching power adapter with wet hands.

Disclaimer

This manual is general instructions. The pictures and functions in this manual should subject to the actual product. Our company is strives to improve product performance, we reserve the right to modify product functions and interface based on this manual without notice.

Please keep your device proper. We are not responsible for any loss caused by misuse, vibration or software/hardware or repairing or any other reasons. We are not responsible for any loss of any third party claims.

Please keep your device properly cleaned by professional engineer, please understand for any removable components.

Do not stand tall children near the lens, safety -> prevent from prevent the strong light causing harm to children. Kids should use the projector under the supervision of adults.



Attention:

Please stand tall children near the lens, safety -> prevent from prevent the strong light causing harm to children. Kids should use the projector under the supervision of adults.

Thanks for purchasing Hikvision Projector! Please contact our customer service team: cs_peap@mappublic.com or <https://www.mappublic.com> for further assistance.