

85* 90mm

anko

K: 43499816 | T: 70363746 (Model: JLR-79598)

Alarm Clock Speaker with Wireless Charger Instruction Manual



Please read all safety instruction warnings carefully before using this product. Improper use of this product may result in damage to this product. To ensure the production works well, please never use this in the following conditions.

Packing contents:



1. Alarm clock x 1
2. Instruction Manual x 1
3. USB-C cable x 1

Specification:

Input: 5V/3A (5W wireless charging only), 12V/3A, 9V/3A
Wireless charging output: 15W (MAX)
Battery: 1200mAh

Functional description:

General function:

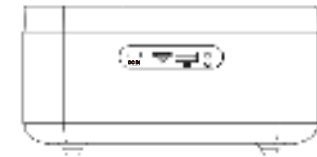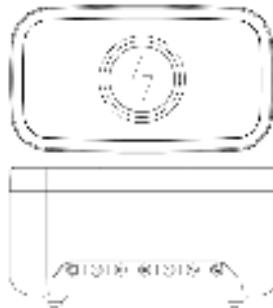

Wireless charging function:

Plug into the Type-C cable and connected the power adapter, then the wireless charging function will be enabled.

Remark: When using the wireless charging function, please do not play music with the device powered on, as it may affect the charging efficiency

Bluetooth function

1. Bluetooth connection: Long press  button 2seconds to turn on the product, automatically enter the Bluetooth waiting for pairing state, open the mobile phone Bluetooth search device model is "anko43499818", click pair, and the speaker will have a prompt sound after successful connection.

2. When playing music: short press the  button to play /pause, Short press the  button is next song, long press  button to add the volume.

Short press the  button is last song, long press the  button to reduce the volume.

LED Light function

Short press the  button to switch the LED light mode.

FM radio function

1. Long press  to switch to the FM function, and press the  button enter the automatic radio automatic search, The first channel will play automatically after the search.

2. Press   to switch channel.

TF card /U disk function for use:

1. Insert the TF card / U disk into the card slot, the corresponding voice prompt will appear. The product will automatically read the audio file in the card and play it, support 32G max.

2. Long press  button to switch the TF/ USB Mode.

3. TF card /U disk not included.

Clock Setting

1. Press the  button to choose the hour/minute, short press   to adjust hour /minute, and press  the button to save the setting.

2. Long press  button to switch the 12/24time format.

Alarm clock setting

Press the alarm button  to enter the clock / minute setting, press   to adjust the hour/ minute, press the alarm key and then press  select your favorite alarm, there are 7 groups of alarm bells, and finally press

the alarm key to open the alarm clock (the alarm mark appears on the screen after successful setting). When the alarm rings, press any key to close the alarm. When no one turns off, the alarm will automatically ring for 3 minutes, after 5 minutes, the alarm will ring again for 3 minutes, then the alarm will stop. Please cancel the alarm clock without the need.

Cancel alarm setting: long press the alarm key (the alarm sign disappears on the screen after successful cancellation)

Auto Shut-off Function

Press the  button to choose timing 15/ 30/60 mins, if set to 15 mins, the product will shut off after 15 minutes.

White noise Function:

Press the  button to switch to white noise mode, press   to choose your favorite sleep music.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us