

新到貨~ 14天機(定稿)

看貨時間：11am
截標時間：4pm
交貨時間: 5pm

投標前請仔細閱讀本司關於各級別及相關退貨定義
參與投標者則代表已閱讀及同意該規則及退貨定義

清單摘要：

任何數量, 均可以出價！

*无锁- 只指电信网络锁是无锁，插入電話卡有信號， 不包含任何其他锁

- 一. 週一競標日(2024-11-25)14天機競標總數 265226台（蘋果手機64149台、三星高檔手機 18674台）。
- 二. 其中, 蘋果I-phone 13/14/15 合計16978台、I-phone 11/12 合計9070台、I-phone XS/XS Max 合計1116台、iPhone X/XR 合計5053台、iPhone 8/7 合計7734台、iPhone 6s/6s Plus/ 6/ 6 plus 合計11872台、I-pad 合計2443台、。

三. 以下是重要型號分佈

品牌	型號	數量	級別
Lot 7	Mobiphone 3G 合計	1000	匯總
Lot 1	Apple Watch 合計	25	匯總
Lot 6	XT2095 合計	107	匯總
Oneplus單投-	Oneplus單投-合計	160	匯總
二維碼ID原箱單投-	二維碼ID原箱單投- 合計	3916	匯總
歐版單投-	歐版單投- 合計	115	匯總
美版單投-	美版單投- 合計	1182	匯總
Samsung單投-	Samsung單投- 合計(大部份是雙卡)	4755	匯總
Demo單投-	Demo單投- 合計	8	匯總
Apple	I-Phone 16 Pro 合計(大部份是雙卡)	2	匯總
Apple	I-Phone 15 Pro Max 合計(大部份是雙卡)	153	匯總
Apple	I-Phone 15 Pro 合計(大部份是雙卡)	125	匯總
Apple	I-Phone 15 Plus 合計(大部份是雙卡)	84	匯總
Apple	I-Phone 15 合計(大部份是雙卡)	96	匯總
Apple	I-Phone 14 Pro Max 合計(大部份是雙卡)	947	匯總
Apple	I-Phone 14 Pro 合計(大部份是雙卡)	554	匯總
Apple	I-Phone 14 Plus 合計(大部份是雙卡)	230	匯總
Apple	I-Phone 14 合計(大部份是雙卡)	545	匯總
Apple	I-Phone 13 Pro Max 合計	10463	匯總
Apple	I-Phone 13 Pro 合計	437	匯總
Apple	I-Phone 13 合計	1614	匯總
Apple	I-Phone 13 Mini 合計	406	匯總
Apple	I-Phone 12 Pro Max 合計	1169	匯總
Apple	I-Phone 12 Pro 合計	990	匯總
Apple	I-Phone 12 合計	1317	匯總
Apple	I-Phone 12 Mini 合計	1063	匯總
Apple	I-Phone 11 Pro Max 合計	1112	匯總
Apple	I-Phone 11 Pro 合計	751	匯總
Apple	I-Phone 11 合計	1532	匯總
Apple	I-Phone XS Max 合計	445	匯總
Apple	I-Phone XS 合計	223	匯總
Apple	I-Phone XR 合計	623	匯總
Apple	I-Phone X 合計	489	匯總
Apple	I-Phone 8 Plus 合計	445	匯總
Apple	I-Phone 8 合計	62	匯總
Apple	I-Phone 7 Plus 合計	431	匯總
Apple	I-Phone 7 合計	3213	匯總
Apple	I-Phone 6S Plus 合計	680	匯總
Apple	I-Phone 6S 合計	1046	匯總
Apple	I-Phone 6 Plus 合計	708	匯總
Apple	I-Phone 6 合計	4012	匯總

Apple	I-Phone SE3 合計	123	匯總
Apple	I-Phone SE2 合計	61	匯總
Apple	I-Phone SE 合計	288	匯總
Apple	I-Phone 5S 合計	3231	匯總
Apple	I-Phone 5C 合計	1514	匯總
Apple	I-Phone 5 合計	1348	匯總
Apple	I-Phone 4S 合計	440	匯總
Apple	I-Phone 4 合計	469	匯總
Apple	雲 合計	13099	匯總
Apple	IPad 合計	1218	匯總

四. 以下是詳細資料

大量歐版供應				
品牌	型號	數量	級別	行數
Lot 7	Mobiphone 3G 合計	1000	匯總	3
Other	Mobiphone 3G(無鎖)	1000	Lot 7New	4
Lot 1	Apple Watch 合計	25	匯總	5
手錶	Apple Watch Series 6 44mm	25	Lot 1New	6
Lot 6	XT2095 合計	107	匯總	7
Motorola	XT2095	107	Lot 6New	8
Oneplus單投-	Oneplus單投-合計	160	匯總	9
Other	One Plus Open	160	Oneplus單投-N.New	10
二維碼ID原箱單投-	二維碼ID原箱單投- 合計	3916	匯總	11
Apple	I-Phone 7 (128GB)雲	264	二維碼ID原箱單投-	12
Apple	I-Phone 7 (256GB)雲	24	二維碼ID原箱單投-	13
Apple	I-Phone 7 (32GB)雲	1242	二維碼ID原箱單投-	14
Apple	I-Phone SE3 (128GB)雲	17	二維碼ID原箱單投-	15
Apple	I-Phone SE3 (256GB)雲	6	二維碼ID原箱單投-	16
Apple	I-Phone SE3 (64GB)雲	368	二維碼ID原箱單投-	17
Apple	I-Phone SE2 (128GB)雲	112	二維碼ID原箱單投-	18
Apple	I-Phone SE2 (256GB)雲	17	二維碼ID原箱單投-	19
Apple	I-Phone SE2 (64GB)雲	1180	二維碼ID原箱單投-	20
Apple	I-Phone 5C (16GB)雲	192	二維碼ID原箱單投-	21
Apple	I-Phone 5C (32GB)雲	5	二維碼ID原箱單投-	22
Apple	I-Phone 5C (8GB)雲	39	二維碼ID原箱單投-	23
Apple	I-Phone 5 (16GB)雲	144	二維碼ID原箱單投-	24
Apple	I-Phone 5 (32GB)雲	6	二維碼ID原箱單投-	25
Apple	I-Phone 5 (64GB)雲	1	二維碼ID原箱單投-	26
Apple	I-Phone 4S (16GB)雲	67	二維碼ID原箱單投-	27
Apple	I-Phone 4S (32GB)雲	4	二維碼ID原箱單投-	28
Apple	I-Phone 4S (64GB)雲	1	二維碼ID原箱單投-	29
Apple	I-Phone 4S (8GB)雲	151	二維碼ID原箱單投-	30
Apple	I-Phone 4 (16GB)雲	22	二維碼ID原箱單投-	31
Apple	I-Phone 4 (32GB)雲	9	二維碼ID原箱單投-	32
Apple	I-Phone 4 (8GB)雲	45	二維碼ID原箱單投-	33
歐版單投-	歐版單投- 合計	115	匯總	34
Apple	I-Phone 14 Pro Max (128GB)無鎖	3	歐版單投-A單(靚)(後爆)(全功能)	35
Apple	I-Phone 14 Pro Max (128GB)無鎖	8	歐版單投-在保-14A(靚1)(全功能)	36
Apple	I-Phone 14 Pro Max (128GB)無鎖	99	歐版單投-14A(靚1)(全功能)	37
Apple	I-Phone 14 Pro Max (128GB)無鎖	3	歐版單投-A單(靚1)(全功能)	38
Apple	I-Phone 14 Pro Max (128GB)無鎖	2	歐版單投-A單(靚1)(後爆)(全功能)	39
美版單投-	美版單投- 合計	1234	匯總	40
Apple	I-Phone 15 Pro Max (256GB)無鎖	10	美版單投-A單(靚)(後爆)(全功能)	41
Apple	I-Phone 15 Pro Max (512GB)無鎖	5	美版單投-A單(靚)(後爆)(全功能)	42
Apple	I-Phone 15 Pro Max (1TB)無鎖	1	美版單投-A單(靚)	43
Apple	I-Phone 15 Pro Max (256GB)無鎖	26	美版單投-A單(靚1)(全功能)	44
Apple	I-Phone 15 Pro Max (512GB)無鎖	4	美版單投-A單(靚1)(全功能)	45
Apple	I-Phone 15 Pro Max (256GB)無鎖	7	美版單投-A單(靚1)(後鏡框爆)(全功能)	46
Apple	I-Phone 15 Pro Max (512GB)無鎖	1	美版單投-A單(靚1)(後鏡框爆)(全功能)	47
Apple	I-Phone 15 Pro Max (256GB)無鎖	44	美版單投-A單(靚1)(後爆)(全功能)	48
Apple	I-Phone 15 Pro Max (512GB)無鎖	4	美版單投-A單(靚1)(後爆)(全功能)	49
Apple	I-Phone 15 Pro Max (256GB)無鎖	1	美版單投-A單(後爆)(全功能)(彈窗)	50
Apple	I-Phone 15 Pro Max (256GB)無鎖	1	美版單投-B單開好(全功能)(彈窗)	51
Apple	I-Phone 15 Pro Max (1TB)無鎖	5	美版單投-B單開壞	52
Apple	I-Phone 15 Pro Max (256GB)無鎖	44	美版單投-B單開壞	53
Apple	I-Phone 15 Pro Max (512GB)無鎖	7	美版單投-B單開壞	54
Apple	I-Phone 15 Pro Max (256GB)無鎖	8	美版單投-B單有電流	55
Apple	I-Phone 15 Pro Max (512GB)無鎖	1	美版單投-B單有電流	56
Apple	I-Phone 15 Pro Max (256GB)無鎖	2	美版單投-特別供應-B單不開換電即可(僅供參考)	57
Apple	I-Phone 15 Pro Max (256GB)(無鎖有問題)	4	美版單投-A單	58

Apple	I-Phone 15 Pro Max (512GB)(無鎖有問題)	1	美版單投-B單開好	59
Apple	I-Phone 15 Pro Max (1TB)(無鎖有問題)	1	美版單投-B單開壞	60
Apple	I-Phone 15 Pro Max (256GB)(無鎖有問題)	16	美版單投-B單開壞	61
Apple	I-Phone 15 Pro Max (512GB)(無鎖有問題)	1	美版單投-B單開壞	62
Apple	I-Phone 15 Pro Max (256GB)(無鎖FID)	1	美版單投-A單	63
Apple	I-Phone 15 Pro Max (256GB)(無鎖FID)	3	美版單投-B單開好	64
Apple	I-Phone 15 Pro Max (256GB)	1	美版單投-B單開壞	65
Apple	I-Phone 15 Pro Max (256GB)	1	美版單投-B單有電流	66
Apple	I-Phone 15 Pro Max (256GB)(有問題)	1	美版單投-B單開壞	67
Apple	I-Phone 15 Pro (128GB)無鎖	1	美版單投-A單(靚1)(後爆)(全功能)	68
Apple	I-Phone 15 Pro (128GB)無鎖	1	美版單投-A單(全功能)	69
Apple	I-Phone 15 Pro (256GB)無鎖	1	美版單投-A單(後爆)(全功能)	70
Apple	I-Phone 15 Pro (128GB)無鎖	2	美版單投-B單開好(全功能)	71
Apple	I-Phone 15 Pro (128GB)無鎖	2	美版單投-B單開壞(FID功能好)	72
Apple	I-Phone 15 Pro (128GB)無鎖	6	美版單投-B單開壞	73
Apple	I-Phone 15 Pro (1TB)無鎖	1	美版單投-B單開壞	74
Apple	I-Phone 15 Pro (256GB)無鎖	5	美版單投-B單開壞	75
Apple	I-Phone 15 Pro (128GB)無鎖	4	美版單投-B單有電流	76
Apple	I-Phone 15 Pro (128GB)無鎖	1	美版單投-特別供應-B單不開換電即可(僅供參考)	77
Apple	I-Phone 15 Pro (256GB)無鎖	1	美版單投-特別供應-B單不開換電即可(僅供參考)	78
Apple	I-Phone 15 Pro (128GB)(無鎖有問題)	1	美版單投-A單	79
Apple	I-Phone 15 Pro (128GB)(無鎖有問題)	4	美版單投-B單開壞	80
Apple	I-Phone 15 Pro (256GB)(無鎖有問題)	2	美版單投-B單開壞	81
Apple	I-Phone 15 Plus (128GB)無鎖	1	美版單投-A單(後爆)(全功能)	82
Apple	I-Phone 15 Plus (128GB)無鎖	1	美版單投-B單開好(全功能)	83
Apple	I-Phone 15 Plus (128GB)無鎖	2	美版單投-B單開壞(FID功能好)	84
Apple	I-Phone 15 Plus (128GB)無鎖	4	美版單投-B單開壞	85
Apple	I-Phone 15 Plus (256GB)無鎖	3	美版單投-B單開壞	86
Apple	I-Phone 15 Plus (128GB)無鎖	2	美版單投-B單有電流	87
Apple	I-Phone 15 Plus (256GB)無鎖	1	美版單投-B單有電流	88
Apple	I-Phone 15 Plus (128GB)無鎖	1	美版單投-特別供應-B單不開換電即可(僅供參考)	89
Apple	I-Phone 15 Plus (128GB)(無鎖有問題)	2	美版單投-A單	90
Apple	I-Phone 15 Plus (128GB)(無鎖有問題)	1	美版單投-B單開好	91
Apple	I-Phone 15 Plus (128GB)(無鎖有問題)	1	美版單投-B單開壞	92
Apple	I-Phone 15 (128GB)無鎖	2	美版單投-A單(靚)(全功能)	93
Apple	I-Phone 15 (256GB)無鎖	1	美版單投-A單(靚)(全功能)	94
Apple	I-Phone 15 (128GB)無鎖	3	美版單投-A單(靚1)(全功能)	95
Apple	I-Phone 15 (128GB)無鎖	1	美版單投-A單(靚1)(後爆)(全功能)	96
Apple	I-Phone 15 (128GB)無鎖	1	美版單投-A單(靚1)(全功能)(彈窗)	97
Apple	I-Phone 15 (128GB)無鎖	1	美版單投-A單(後爆)(全功能)	98
Apple	I-Phone 15 (128GB)無鎖	2	美版單投-B單開好(全功能)	99
Apple	I-Phone 15 (128GB)無鎖	2	美版單投-B單開壞(FID功能好)	100
Apple	I-Phone 15 (128GB)無鎖	11	美版單投-B單開壞	101
Apple	I-Phone 15 (256GB)無鎖	1	美版單投-B單開壞	102
Apple	I-Phone 15 (128GB)無鎖	6	美版單投-B單有電流	103
Apple	I-Phone 15 (128GB)無鎖	2	美版單投-特別供應-B單不開換電即可(僅供參考)	104
Apple	I-Phone 15 (128GB)(無鎖有問題)	2	美版單投-A單	105
Apple	I-Phone 15 (128GB)(無鎖有問題)	6	美版單投-B單開壞	106
Apple	I-Phone 15 (512GB)(無鎖FID)	1	美版單投-A單	107
Apple	I-Phone 15 (128GB)(有問題)	1	美版單投-B單開壞	108
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	美版單投-A單(靚1)(後鏡框爆)(全功能)	109
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	美版單投-A單(靚1)(全功能)(彈窗)	110
Apple	I-Phone 14 Pro Max (128GB)無鎖	2	美版單投-A單(靚1)(後爆)(全功能)(彈窗)	111
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	美版單投-A單(後爆)(全功能)	112
Apple	I-Phone 14 Pro Max (256GB)無鎖	1	美版單投-A單(後爆)(全功能)	113
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	美版單投-A單	114
Apple	I-Phone 14 Pro Max (256GB)無鎖	1	美版單投-A單(後鏡框爆)	115
Apple	I-Phone 14 Pro Max (128GB)無鎖	5	美版單投-A單(後爆)	116
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	美版單投-A單(全功能)(彈窗)	117
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	美版單投-A單(後爆)(全功能)(彈窗)	118
Apple	I-Phone 14 Pro Max (256GB)無鎖	2	美版單投-A單(後爆)(全功能)(彈窗)	119
Apple	I-Phone 14 Pro Max (128GB)無鎖	3	美版單投-A單(彈窗)	120
Apple	I-Phone 14 Pro Max (256GB)無鎖	2	美版單投-A單(彈窗)	121
Apple	I-Phone 14 Pro Max (128GB)無鎖	7	美版單投-A單(後爆)(彈窗)	122
Apple	I-Phone 14 Pro Max (1TB)無鎖	2	美版單投-A單(後爆)(彈窗)	123
Apple	I-Phone 14 Pro Max (256GB)無鎖	1	美版單投-A單(後爆)(彈窗)	124
Apple	I-Phone 14 Pro Max (256GB)無鎖	1	美版單投-B單開好(全功能)	125
Apple	I-Phone 14 Pro Max (256GB)無鎖	3	美版單投-B單開好	126
Apple	I-Phone 14 Pro Max (128GB)無鎖	3	美版單投-B單開好(全功能)(彈窗)	127
Apple	I-Phone 14 Pro Max (256GB)無鎖	2	美版單投-B單開好(全功能)(彈窗)	128
Apple	I-Phone 14 Pro Max (128GB)無鎖	2	美版單投-B單開好(彈窗)	129

Apple	I-Phone 14 Pro Max (128GB)無鎖	17	美版單投-B單開壞(全功能)	130
Apple	I-Phone 14 Pro Max (256GB)無鎖	2	美版單投-B單開壞(全功能)	131
Apple	I-Phone 14 Pro Max (512GB)無鎖	1	美版單投-B單開壞(FID功能好)	132
Apple	I-Phone 14 Pro Max (128GB)無鎖	5	美版單投-B單開壞	133
Apple	I-Phone 14 Pro Max (1TB)無鎖	8	美版單投-B單開壞	134
Apple	I-Phone 14 Pro Max (256GB)無鎖	10	美版單投-B單開壞	135
Apple	I-Phone 14 Pro Max (512GB)無鎖	1	美版單投-B單開壞	136
Apple	I-Phone 14 Pro Max (128GB)無鎖	7	美版單投-B單有電流	137
Apple	I-Phone 14 Pro Max (256GB)無鎖	1	美版單投-B單有電流	138
Apple	I-Phone 14 Pro Max (128GB)無鎖	13	美版單投-特別供應-B單不開換電即可(僅供參考)	139
Apple	I-Phone 14 Pro Max (256GB)無鎖	2	美版單投-特別供應-B單不開換電即可(僅供參考)	140
Apple	I-Phone 14 Pro Max (128GB)(無鎖有問題)	19	美版單投-A單	141
Apple	I-Phone 14 Pro Max (256GB)(無鎖有問題)	3	美版單投-A單	142
Apple	I-Phone 14 Pro Max (128GB)(無鎖有問題)	5	美版單投-B單開好	143
Apple	I-Phone 14 Pro Max (256GB)(無鎖有問題)	1	美版單投-B單開好	144
Apple	I-Phone 14 Pro Max (128GB)(無鎖有問題)	3	美版單投-B單開壞	145
Apple	I-Phone 14 Pro Max (256GB)(無鎖有問題)	1	美版單投-B單有電流	146
Apple	I-Phone 14 Pro Max (128GB)(無鎖FID)	6	美版單投-A單	147
Apple	I-Phone 14 Pro Max (1TB)(無鎖FID)	1	美版單投-A單	148
Apple	I-Phone 14 Pro Max (256GB)(無鎖FID)	6	美版單投-A單	149
Apple	I-Phone 14 Pro Max (128GB)(無鎖FID)	4	美版單投-B單開好	150
Apple	I-Phone 14 Pro Max (256GB)(無鎖FID)	1	美版單投-B單開好	151
Apple	I-Phone 14 Pro Max (128GB)	10	美版單投-B單開壞	152
Apple	I-Phone 14 Pro Max (256GB)	1	美版單投-B單開壞	153
Apple	I-Phone 14 Pro Max (256GB)	2	美版單投-B單有電流	154
Apple	I-Phone 14 Pro Max (128GB)(有問題)	1	美版單投-B單開壞	155
Apple	I-Phone 14 Pro Max (256GB)(有問題)	2	美版單投-B單開壞	156
Apple	I-Phone 14 Pro Max (512GB)(有問題)	1	美版單投-B單開壞	157
Apple	I-Phone 14 Pro (128GB)無鎖	1	美版單投-A單(靚)(後爆)(全功能)	158
Apple	I-Phone 14 Pro (128GB)無鎖	3	美版單投-A單(靚1)(全功能)	159
Apple	I-Phone 14 Pro (128GB)無鎖	1	美版單投-A單(靚1)(後爆)(全功能)	160
Apple	I-Phone 14 Pro (256GB)無鎖	1	美版單投-A單(靚1)(後爆)(全功能)	161
Apple	I-Phone 14 Pro (128GB)無鎖	1	美版單投-A單(靚1)(全功能)(彈窗)	162
Apple	I-Phone 14 Pro (128GB)無鎖	1	美版單投-A單(全功能)	163
Apple	I-Phone 14 Pro (128GB)無鎖	2	美版單投-A單(後爆)(全功能)	164
Apple	I-Phone 14 Pro (256GB)無鎖	1	美版單投-A單(後爆)(全功能)	165
Apple	I-Phone 14 Pro (128GB)無鎖	5	美版單投-A單	166
Apple	I-Phone 14 Pro (128GB)無鎖	7	美版單投-A單(後爆)	167
Apple	I-Phone 14 Pro (256GB)無鎖	1	美版單投-A單(後爆)(全功能)(彈窗)	168
Apple	I-Phone 14 Pro (128GB)無鎖	6	美版單投-A單(後爆)(彈窗)	169
Apple	I-Phone 14 Pro (256GB)無鎖	7	美版單投-A單(後爆)(彈窗)	170
Apple	I-Phone 14 Pro (128GB)無鎖	13	美版單投-B單開好(全功能)	171
Apple	I-Phone 14 Pro (256GB)無鎖	3	美版單投-B單開好(全功能)	172
Apple	I-Phone 14 Pro (128GB)無鎖	5	美版單投-B單開好	173
Apple	I-Phone 14 Pro (256GB)無鎖	1	美版單投-B單開好	174
Apple	I-Phone 14 Pro (128GB)無鎖	4	美版單投-B單開好(全功能)(彈窗)	175
Apple	I-Phone 14 Pro (256GB)無鎖	3	美版單投-B單開好(全功能)(彈窗)	176
Apple	I-Phone 14 Pro (128GB)無鎖	1	美版單投-B單開好(彈窗)	177
Apple	I-Phone 14 Pro (256GB)無鎖	2	美版單投-B單開好(彈窗)	178
Apple	I-Phone 14 Pro (128GB)無鎖	22	美版單投-B單開壞(全功能)	179
Apple	I-Phone 14 Pro (256GB)無鎖	7	美版單投-B單開壞(全功能)	180
Apple	I-Phone 14 Pro (128GB)無鎖	3	美版單投-B單開壞(FID功能好)	181
Apple	I-Phone 14 Pro (256GB)無鎖	4	美版單投-B單開壞(FID功能好)	182
Apple	I-Phone 14 Pro (128GB)無鎖	30	美版單投-B單開壞	183
Apple	I-Phone 14 Pro (256GB)無鎖	5	美版單投-B單開壞	184
Apple	I-Phone 14 Pro (512GB)無鎖	1	美版單投-B單開壞	185
Apple	I-Phone 14 Pro (128GB)無鎖	14	美版單投-B單有電流	186
Apple	I-Phone 14 Pro (256GB)無鎖	5	美版單投-B單有電流	187
Apple	I-Phone 14 Pro (512GB)無鎖	1	美版單投-B單有電流	188
Apple	I-Phone 14 Pro (128GB)無鎖	9	美版單投-特別供應-B單不開換電即可(僅供參考)	189
Apple	I-Phone 14 Pro (256GB)無鎖	1	美版單投-特別供應-B單不開換電即可(僅供參考)	190
Apple	I-Phone 14 Pro (512GB)無鎖	1	美版單投-特別供應-B單不開換電即可(僅供參考)	191
Apple	I-Phone 14 Pro (128GB)(無鎖有問題)	7	美版單投-A單	192
Apple	I-Phone 14 Pro (256GB)(無鎖有問題)	5	美版單投-A單	193
Apple	I-Phone 14 Pro (128GB)(無鎖有問題)	2	美版單投-B單開好	194
Apple	I-Phone 14 Pro (256GB)(無鎖有問題)	1	美版單投-B單開好	195
Apple	I-Phone 14 Pro (256GB)(無鎖有問題)	14	美版單投-B單開壞	196
Apple	I-Phone 14 Pro (128GB)(無鎖FID)	17	美版單投-A單	197
Apple	I-Phone 14 Pro (256GB)(無鎖FID)	1	美版單投-A單	198
Apple	I-Phone 14 Pro (128GB)(無鎖FID)	2	美版單投-B單開好	199
Apple	I-Phone 14 Pro (256GB)(無鎖FID)	1	美版單投-B單開好	200

Apple	I-Phone 14 Pro (128GB)	3	美版單投-B單開壞	201
Apple	I-Phone 14 Pro (256GB)(有問題)	1	美版單投-A單	202
Apple	I-Phone 14 Pro (128GB)(有問題)	1	美版單投-B單開好	203
Apple	I-Phone 14 Plus (128GB)無鎖	3	美版單投-A單(靚1)(全功能)	204
Apple	I-Phone 14 Plus (128GB)無鎖	3	美版單投-A單(靚1)(全功能)(彈窗)	205
Apple	I-Phone 14 Plus (128GB)無鎖	4	美版單投-A單(靚1)(後爆)(全功能)(彈窗)	206
Apple	I-Phone 14 Plus (128GB)無鎖	3	美版單投-A單(後爆)(全功能)	207
Apple	I-Phone 14 Plus (128GB)無鎖	1	美版單投-A單(全功能)(彈窗)	208
Apple	I-Phone 14 Plus (128GB)無鎖	1	美版單投-A單(後爆)(全功能)(彈窗)	209
Apple	I-Phone 14 Plus (128GB)無鎖	5	美版單投-A單(彈窗)	210
Apple	I-Phone 14 Plus (128GB)無鎖	2	美版單投-A單(後爆)(彈窗)	211
Apple	I-Phone 14 Plus (128GB)無鎖	1	美版單投-B單開好(全功能)	212
Apple	I-Phone 14 Plus (128GB)無鎖	3	美版單投-B單開好(全功能)(彈窗)	213
Apple	I-Phone 14 Plus (128GB)無鎖	3	美版單投-B單開好(彈窗)	214
Apple	I-Phone 14 Plus (128GB)無鎖	9	美版單投-B單開壞(FID功能好)	215
Apple	I-Phone 14 Plus (256GB)無鎖	2	美版單投-B單開壞(FID功能好)	216
Apple	I-Phone 14 Plus (128GB)無鎖	12	美版單投-B單開壞	217
Apple	I-Phone 14 Plus (256GB)無鎖	6	美版單投-B單開壞	218
Apple	I-Phone 14 Plus (128GB)無鎖	62	美版單投-B單有電流	219
Apple	I-Phone 14 Plus (128GB)無鎖	31	美版單投-特別供應-B單不開換電即可(僅供參考)	220
Apple	I-Phone 14 Plus (128GB)(無鎖有問題)	1	美版單投-A單	221
Apple	I-Phone 14 Plus (128GB)(無鎖有問題)	6	美版單投-B單開好	222
Apple	I-Phone 14 Plus (128GB)(無鎖有問題)	43	美版單投-B單開壞	223
Apple	I-Phone 14 Plus (256GB)(無鎖有問題)	1	美版單投-B單開壞	224
Apple	I-Phone 14 Plus (128GB)(無鎖FID)	1	美版單投-A單	225
Apple	I-Phone 14 Plus (128GB)(無鎖FID)	1	美版單投-B單開好	226
Apple	I-Phone 14 Plus (128GB)	1	美版單投-A單	227
Apple	I-Phone 14 Plus (128GB)	5	美版單投-B單開壞	228
Apple	I-Phone 14 Plus (128GB)(有問題)	4	美版單投-B單開壞	229
Apple	I-Phone 14 (128GB)無鎖	1	美版單投-A單(靚)(全功能)	230
Apple	I-Phone 14 (128GB)無鎖	1	美版單投-A單(靚)(後鏡框爆)	231
Apple	I-Phone 14 (128GB)無鎖	1	美版單投-A單(靚)(後爆)	232
Apple	I-Phone 14 (128GB)無鎖	1	美版單投-A單(靚)(後爆)(全功能)(彈窗)	233
Apple	I-Phone 14 (128GB)無鎖	3	美版單投-A單(靚1)(全功能)	234
Apple	I-Phone 14 (128GB)無鎖	2	美版單投-A單(靚1)(後爆)(全功能)	235
Apple	I-Phone 14 (128GB)無鎖	5	美版單投-A單(靚1)	236
Apple	I-Phone 14 (128GB)無鎖	1	美版單投-A單(靚1)(後爆)	237
Apple	I-Phone 14 (128GB)無鎖	3	美版單投-A單(靚1)(後爆)(全功能)(彈窗)	238
Apple	I-Phone 14 (128GB)無鎖	2	美版單投-A單(全功能)	239
Apple	I-Phone 14 (128GB)無鎖	1	美版單投-A單(後爆)(全功能)	240
Apple	I-Phone 14 (128GB)無鎖	5	美版單投-A單	241
Apple	I-Phone 14 (128GB)無鎖	4	美版單投-A單(後爆)	242
Apple	I-Phone 14 (128GB)無鎖	7	美版單投-A單(全功能)(彈窗)	243
Apple	I-Phone 14 (128GB)無鎖	32	美版單投-A單(後爆)(全功能)(彈窗)	244
Apple	I-Phone 14 (256GB)無鎖	2	美版單投-A單(後爆)(全功能)(彈窗)	245
Apple	I-Phone 14 (128GB)無鎖	9	美版單投-A單(彈窗)	246
Apple	I-Phone 14 (128GB)無鎖	2	美版單投-A單(後鏡框爆)(彈窗)	247
Apple	I-Phone 14 (128GB)無鎖	14	美版單投-A單(後爆)(彈窗)	248
Apple	I-Phone 14 (128GB)無鎖	2	美版單投-B單開好(全功能)	249
Apple	I-Phone 14 (128GB)無鎖	3	美版單投-B單開好	250
Apple	I-Phone 14 (128GB)無鎖	28	美版單投-B單開好(全功能)(彈窗)	251
Apple	I-Phone 14 (128GB)無鎖	20	美版單投-B單開好(彈窗)	252
Apple	I-Phone 14 (128GB)無鎖	5	美版單投-B單開壞(全功能)	253
Apple	I-Phone 14 (128GB)無鎖	6	美版單投-B單開壞(FID功能好)	254
Apple	I-Phone 14 (128GB)無鎖	28	美版單投-B單開壞	255
Apple	I-Phone 14 (512GB)無鎖	1	美版單投-B單開壞	256
Apple	I-Phone 14 (128GB)無鎖	51	美版單投-B單有電流	257
Apple	I-Phone 14 (256GB)無鎖	3	美版單投-B單有電流	258
Apple	I-Phone 14 (512GB)無鎖	1	美版單投-B單有電流	259
Apple	I-Phone 14 (128GB)無鎖	40	美版單投-特別供應-B單不開換電即可(僅供參考)	260
Apple	I-Phone 14 (128GB)(無鎖有問題)	10	美版單投-A單	261
Apple	I-Phone 14 (128GB)(無鎖有問題)	1	美版單投-B單開好	262
Apple	I-Phone 14 (128GB)(無鎖有問題)	1	美版單投-B單開壞	263
Apple	I-Phone 14 (128GB)(無鎖FID)	12	美版單投-A單	264
Apple	I-Phone 14 (128GB)(無鎖FID)	2	美版單投-B單開好	265
Apple	I-Phone 14 (128GB)	1	美版單投-B單開好	266
Apple	I-Phone 14 (128GB)	5	美版單投-B單開壞	267
Apple	I-Phone 14 (128GB)(有問題)	2	美版單投-A單	268
Apple	I-Phone 14 (128GB)(有問題)	1	美版單投-B單開好	269
Apple	I-Phone 14 (128GB)(有問題)	2	美版單投-B單開壞	270
Samsung單投-	Samsung單投- 合計(大部份是雙卡)	4696	匯總	271

Samsung	S5310	1	Samsung單投-New	272
Samsung	A155(無鎖)	11	Samsung單投-N.New	273
Samsung	A546(無鎖)	2	Samsung單投-N.New	274
Samsung	A556(無鎖)	1	Samsung單投-N.New	275
Samsung	F946B(無鎖)	2	Samsung單投-N.New	276
Samsung	S901B(無鎖)	1	Samsung單投-N.New	277
Samsung	S926B(無鎖)	1	Samsung單投-N.New	278
Samsung	S928B(無鎖)	4	Samsung單投-N.New	279
Samsung	A057	31	Samsung單投-14A(靚)	280
Samsung	A146	1	Samsung單投-14A(靚)	281
Samsung	F946B	1	Samsung單投-14A(靚)	282
Samsung	G781B	1	Samsung單投-14A(靚)	283
Samsung	S711B	1	Samsung單投-14A(靚)	284
Samsung	A013	1	Samsung單投-A單(靚)	285
Samsung	A037F	1	Samsung單投-A單(靚)	286
Samsung	A042(無鎖)	1	Samsung單投-A單(靚)	287
Samsung	A057F	1	Samsung單投-A單(靚)	288
Samsung	A125F	2	Samsung單投-A單(靚)	289
Samsung	A145F	1	Samsung單投-A單(靚)	290
Samsung	A202F	1	Samsung單投-A單(靚)	291
Samsung	A217F	2	Samsung單投-A單(靚)	292
Samsung	A305	1	Samsung單投-A單(靚)	293
Samsung	A315	1	Samsung單投-A單(靚)	294
Samsung	A415F	2	Samsung單投-A單(靚)	295
Samsung	A500F	53	Samsung單投-A單(靚)	296
Samsung	A515F	1	Samsung單投-A單(靚)	297
Samsung	A520F	1	Samsung單投-A單(靚)	298
Samsung	A528B	1	Samsung單投-A單(靚)	299
Samsung	A536B	2	Samsung單投-A單(靚)	300
Samsung	F711B(無鎖)	7	Samsung單投-A單(靚)	301
Samsung	F721B(無鎖)	1	Samsung單投-A單(靚)	302
Samsung	F731B(無鎖)	1	Samsung單投-A單(靚)	303
Samsung	F741B(無鎖)	1	Samsung單投-A單(靚)	304
Samsung	F926B(無鎖)	4	Samsung單投-A單(靚)	305
Samsung	F936B(無鎖)	1	Samsung單投-A單(靚)	306
Samsung	F946B(無鎖)	1	Samsung單投-A單(靚)	307
Samsung	G355	1	Samsung單投-A單(靚)	308
Samsung	G770F(無鎖)	1	Samsung單投-A單(靚)	309
Samsung	G975F(無鎖)	1	Samsung單投-A單(靚)	310
Samsung	G991B(無鎖)	1	Samsung單投-A單(靚)	311
Samsung	I9305	1	Samsung單投-A單(靚)	312
Samsung	M315F	1	Samsung單投-A單(靚)	313
Samsung	S711B	1	Samsung單投-A單(靚)	314
Samsung	S711B(無鎖)	1	Samsung單投-A單(靚)	315
Samsung	S901B(無鎖)	1	Samsung單投-A單(靚)	316
Samsung	S908B(無鎖)	1	Samsung單投-A單(靚)	317
Samsung	G715F(劃標)(無鎖)	2	Samsung單投-14A	318
Samsung	S711B(劃標)(無鎖)	97	Samsung單投-14A	319
Samsung	S901(劃標)(無鎖)	23	Samsung單投-14A	320
Samsung	S921B(劃標)(無鎖)	20	Samsung單投-14A	321
Samsung	X210(劃標)(無鎖)	59	Samsung單投-14A	322
Samsung	X510(劃標)(無鎖)	6	Samsung單投-14A	323
Samsung	X610(劃標)(無鎖)	7	Samsung單投-14A	324
Samsung	A015	1	Samsung單投-A單	325
Samsung	A037	1	Samsung單投-A單	326
Samsung	A045F	1	Samsung單投-A單	327
Samsung	A047F	2	Samsung單投-A單	328
Samsung	A055F	3	Samsung單投-A單	329
Samsung	A135F	1	Samsung單投-A單	330
Samsung	A137F	1	Samsung單投-A單	331
Samsung	A145F	3	Samsung單投-A單	332
Samsung	A155F	1	Samsung單投-A單	333
Samsung	A205	1	Samsung單投-A單	334
Samsung	A225F	1	Samsung單投-A單	335
Samsung	A500F	29	Samsung單投-A單	336
Samsung	A510F	11	Samsung單投-A單	337
Samsung	A515F	2	Samsung單投-A單	338
Samsung	A516B	2	Samsung單投-A單	339
Samsung	A525F	1	Samsung單投-A單	340
Samsung	A526B	2	Samsung單投-A單	341
Samsung	A528B	7	Samsung單投-A單	342

Samsung	A528B(劃標)	2	Samsung單投-A單	343
Samsung	A536	2	Samsung單投-A單	344
Samsung	A536B	6	Samsung單投-A單	345
Samsung	A715F	4	Samsung單投-A單	346
Samsung	A805F	1	Samsung單投-A單	347
Samsung	F711B(無鎖)	1	Samsung單投-A單	348
Samsung	F936B	1	Samsung單投-A單	349
Samsung	G130	1	Samsung單投-A單	350
Samsung	G310	1	Samsung單投-A單	351
Samsung	G350	112	Samsung單投-A單	352
Samsung	G357F	1	Samsung單投-A單	353
Samsung	G531F	19	Samsung單投-A單	354
Samsung	G715F	3	Samsung單投-A單	355
Samsung	G736B	1	Samsung單投-A單	356
Samsung	G770F	1	Samsung單投-A單	357
Samsung	G780F	1	Samsung單投-A單	358
Samsung	G781B	2	Samsung單投-A單	359
Samsung	G850F	20	Samsung單投-A單	360
Samsung	G970F(無鎖)	1	Samsung單投-A單	361
Samsung	I705	1	Samsung單投-A單	362
Samsung	I8160	97	Samsung單投-A單	363
Samsung	I8700	2	Samsung單投-A單	364
Samsung	I8750	2	Samsung單投-A單	365
Samsung	I9001	1	Samsung單投-A單	366
Samsung	I9003	5	Samsung單投-A單	367
Samsung	I9070	49	Samsung單投-A單	368
Samsung	I9082	1	Samsung單投-A單	369
Samsung	I9100	43	Samsung單投-A單	370
Samsung	I9103	1	Samsung單投-A單	371
Samsung	I9105	12	Samsung單投-A單	372
Samsung	I925	1	Samsung單投-A單	373
Samsung	I9305	1	Samsung單投-A單	374
Samsung	J100	75	Samsung單投-A單	375
Samsung	J105	3	Samsung單投-A單	376
Samsung	J106	2	Samsung單投-A單	377
Samsung	M315F	1	Samsung單投-A單	378
Samsung	N7000	2	Samsung單投-A單	379
Samsung	N7100	1	Samsung單投-A單	380
Samsung	N9005	1	Samsung單投-A單	381
Samsung	N910(Demo)	1	Samsung單投-A單	382
Samsung	S5830	143	Samsung單投-A單	383
Samsung	S6310	2	Samsung單投-A單	384
Samsung	S7275	5	Samsung單投-A單	385
Samsung	S7500	1	Samsung單投-A單	386
Samsung	S7562	28	Samsung單投-A單	387
Samsung	S7580	23	Samsung單投-A單	388
Samsung	S767	1	Samsung單投-A單	389
Samsung	S7710	59	Samsung單投-A單	390
Samsung	S901B(無鎖)	1	Samsung單投-A單	391
Samsung	S906B(無鎖)	1	Samsung單投-A單	392
Samsung	S908B(無鎖)	1	Samsung單投-A單	393
Samsung	S918B(無鎖)	1	Samsung單投-A單	394
Samsung	T225	1	Samsung單投-A單	395
Samsung	T515	9	Samsung單投-A單	396
Samsung	T733	1	Samsung單投-A單	397
Samsung	X205	1	Samsung單投-A單	398
Samsung	T220(劃標)(無鎖)	1	Samsung單投-14B	399
Samsung	A013	25	Samsung單投-B單開好	400
Samsung	A013-1	1	Samsung單投-B單開好	401
Samsung	A013F	4	Samsung單投-B單開好	402
Samsung	A015-1	2	Samsung單投-B單開好	403
Samsung	A022	1	Samsung單投-B單開好	404
Samsung	A032F	3	Samsung單投-B單開好	405
Samsung	A032F-1	2	Samsung單投-B單開好	406
Samsung	A035	3	Samsung單投-B單開好	407
Samsung	A035F-1	1	Samsung單投-B單開好	408
Samsung	A042F-1	22	Samsung單投-B單開好	409
Samsung	A105	1	Samsung單投-B單開好	410
Samsung	A105-1	4	Samsung單投-B單開好	411
Samsung	A107-1	1	Samsung單投-B單開好	412
Samsung	A125F-1	1	Samsung單投-B單開好	413

Samsung	A145	3	Samsung單投-B單開好	414
Samsung	A202F	1	Samsung單投-B單開好	415
Samsung	A205F	1	Samsung單投-B單開好	416
Samsung	A207F	1	Samsung單投-B單開好	417
Samsung	A226B-1	1	Samsung單投-B單開好	418
Samsung	A260	3	Samsung單投-B單開好	419
Samsung	A260F	1	Samsung單投-B單開好	420
Samsung	A260F-1	1	Samsung單投-B單開好	421
Samsung	A315F	1	Samsung單投-B單開好	422
Samsung	A325F-1	1	Samsung單投-B單開好	423
Samsung	A336B-1	1	Samsung單投-B單開好	424
Samsung	A405F-1	1	Samsung單投-B單開好	425
Samsung	A415F	2	Samsung單投-B單開好	426
Samsung	A500-1	4	Samsung單投-B單開好	427
Samsung	A500F	5	Samsung單投-B單開好	428
Samsung	A500F-1	5	Samsung單投-B單開好	429
Samsung	A505F-1	2	Samsung單投-B單開好	430
Samsung	A510-1	1	Samsung單投-B單開好	431
Samsung	A510F	228	Samsung單投-B單開好	432
Samsung	A510F-1	7	Samsung單投-B單開好	433
Samsung	A515F	1	Samsung單投-B單開好	434
Samsung	A515F-1	1	Samsung單投-B單開好	435
Samsung	A520F	1	Samsung單投-B單開好	436
Samsung	A526B	1	Samsung單投-B單開好	437
Samsung	A526B-1	1	Samsung單投-B單開好	438
Samsung	A528B-1	2	Samsung單投-B單開好	439
Samsung	A530F	1	Samsung單投-B單開好	440
Samsung	A530F-1	1	Samsung單投-B單開好	441
Samsung	A700F	1	Samsung單投-B單開好	442
Samsung	A710F	1	Samsung單投-B單開好	443
Samsung	A710F-1	2	Samsung單投-B單開好	444
Samsung	A715F	1	Samsung單投-B單開好	445
Samsung	A720F	1	Samsung單投-B單開好	446
Samsung	A750F	1	Samsung單投-B單開好	447
Samsung	A920F	1	Samsung單投-B單開好	448
Samsung	B350	1	Samsung單投-B單開好	449
Samsung	E1205	1	Samsung單投-B單開好	450
Samsung	E1272	1	Samsung單投-B單開好	451
Samsung	F711B-1	1	Samsung單投-B單開好	452
Samsung	F721B-1	2	Samsung單投-B單開好	453
Samsung	F926-1	1	Samsung單投-B單開好	454
Samsung	F936B(無鎖)	1	Samsung單投-B單開好	455
Samsung	F936B-1	1	Samsung單投-B單開好	456
Samsung	G130	1	Samsung單投-B單開好	457
Samsung	G386F	2	Samsung單投-B單開好	458
Samsung	G715F	1	Samsung單投-B單開好	459
Samsung	G780F(無鎖)	1	Samsung單投-B單開好	460
Samsung	G780F-1	1	Samsung單投-B單開好	461
Samsung	G781B(無鎖)	1	Samsung單投-B單開好	462
Samsung	G850F	1	Samsung單投-B單開好	463
Samsung	G925F	2	Samsung單投-B單開好	464
Samsung	G925F-1	1	Samsung單投-B單開好	465
Samsung	G928-1	3	Samsung單投-B單開好	466
Samsung	G928F-1	2	Samsung單投-B單開好	467
Samsung	G930F-1	3	Samsung單投-B單開好	468
Samsung	G935	1	Samsung單投-B單開好	469
Samsung	G935F	3	Samsung單投-B單開好	470
Samsung	G935F-1	1	Samsung單投-B單開好	471
Samsung	G950F(無鎖)	1	Samsung單投-B單開好	472
Samsung	G955F-1	1	Samsung單投-B單開好	473
Samsung	G991B(無鎖)	1	Samsung單投-B單開好	474
Samsung	I8160	1	Samsung單投-B單開好	475
Samsung	I9000	1	Samsung單投-B單開好	476
Samsung	J100	1	Samsung單投-B單開好	477
Samsung	M315F	1	Samsung單投-B單開好	478
Samsung	M515-1	3	Samsung單投-B單開好	479
Samsung	N920F-1	1	Samsung單投-B單開好	480
Samsung	N930(Demo)-1	1	Samsung單投-B單開好	481
Samsung	N930F-1	1	Samsung單投-B單開好	482
Samsung	S5570	2	Samsung單投-B單開好	483
Samsung	S908B(無鎖)	1	Samsung單投-B單開好	484

Samsung	S908B-1	1	Samsung單投-B單開好	485
Samsung	S911B-1	1	Samsung單投-B單開好	486
Samsung	T307	7	Samsung單投-B單開好	487
Samsung	T500	4	Samsung單投-B單開好	488
Samsung	T590	1	Samsung單投-B單開好	489
Samsung	T835	1	Samsung單投-B單開好	490
Samsung	T837(劃標)	1	Samsung單投-B單開好	491
Samsung	A500F	2	Samsung單投-A單屏一	492
Samsung	A505F	1	Samsung單投-A單屏一	493
Samsung	A520F	1	Samsung單投-A單屏一	494
Samsung	A528B	1	Samsung單投-A單屏一	495
Samsung	A715F	2	Samsung單投-A單屏一	496
Samsung	A805F	1	Samsung單投-A單屏一	497
Samsung	G781B(無鎖)	1	Samsung單投-A單屏一	498
Samsung	G930F	1	Samsung單投-A單屏一	499
Samsung	G955F(無鎖)	1	Samsung單投-A單屏一	500
Samsung	N960F(無鎖)	1	Samsung單投-A單屏一	501
Samsung	A107	1	Samsung單投-B單開好屏一	502
Samsung	A107F	1	Samsung單投-B單開好屏一	503
Samsung	A205	5	Samsung單投-B單開好屏一	504
Samsung	A405F	1	Samsung單投-B單開好屏一	505
Samsung	A500	1	Samsung單投-B單開好屏一	506
Samsung	A510	1	Samsung單投-B單開好屏一	507
Samsung	A510F	3	Samsung單投-B單開好屏一	508
Samsung	A520F	1	Samsung單投-B單開好屏一	509
Samsung	A530F	2	Samsung單投-B單開好屏一	510
Samsung	A715F	4	Samsung單投-B單開好屏一	511
Samsung	A750F	2	Samsung單投-B單開好屏一	512
Samsung	A800F	1	Samsung單投-B單開好屏一	513
Samsung	G770F(無鎖)	1	Samsung單投-B單開好屏一	514
Samsung	G925F	3	Samsung單投-B單開好屏一	515
Samsung	G930F	19	Samsung單投-B單開好屏一	516
Samsung	G935F	4	Samsung單投-B單開好屏一	517
Samsung	N975F(無鎖)	1	Samsung單投-B單開好屏一	518
Samsung	A013	27	Samsung單投-B單開壞	519
Samsung	A013F	1	Samsung單投-B單開壞	520
Samsung	A015	34	Samsung單投-B單開壞	521
Samsung	A015F	21	Samsung單投-B單開壞	522
Samsung	A032F	1	Samsung單投-B單開壞	523
Samsung	A037F	1	Samsung單投-B單開壞	524
Samsung	A042	1	Samsung單投-B單開壞	525
Samsung	A115F	1	Samsung單投-B單開壞	526
Samsung	A125F	3	Samsung單投-B單開壞	527
Samsung	A127F	1	Samsung單投-B單開壞	528
Samsung	A135F	2	Samsung單投-B單開壞	529
Samsung	A137F	7	Samsung單投-B單開壞	530
Samsung	A145F	8	Samsung單投-B單開壞	531
Samsung	A202F	2	Samsung單投-B單開壞	532
Samsung	A207	1	Samsung單投-B單開壞	533
Samsung	A207F	3	Samsung單投-B單開壞	534
Samsung	A217F	1	Samsung單投-B單開壞	535
Samsung	A225F	1	Samsung單投-B單開壞	536
Samsung	A260	3	Samsung單投-B單開壞	537
Samsung	A260F	12	Samsung單投-B單開壞	538
Samsung	A307F	2	Samsung單投-B單開壞	539
Samsung	A320F	1	Samsung單投-B單開壞	540
Samsung	A325F	2	Samsung單投-B單開壞	541
Samsung	A326B	1	Samsung單投-B單開壞	542
Samsung	A336B	2	Samsung單投-B單開壞	543
Samsung	A405F	144	Samsung單投-B單開壞	544
Samsung	A500	6	Samsung單投-B單開壞	545
Samsung	A500F	83	Samsung單投-B單開壞	546
Samsung	A505F	1	Samsung單投-B單開壞	547
Samsung	A510	30	Samsung單投-B單開壞	548
Samsung	A510(Demo)	4	Samsung單投-B單開壞	549
Samsung	A510F	173	Samsung單投-B單開壞	550
Samsung	A516B	2	Samsung單投-B單開壞	551
Samsung	A520	1	Samsung單投-B單開壞	552
Samsung	A520F	16	Samsung單投-B單開壞	553
Samsung	A526B	1	Samsung單投-B單開壞	554
Samsung	A528B	4	Samsung單投-B單開壞	555

Samsung	A530	2	Samsung單投-B單開壞	556
Samsung	A530F	272	Samsung單投-B單開壞	557
Samsung	A536B	4	Samsung單投-B單開壞	558
Samsung	A546B	1	Samsung單投-B單開壞	559
Samsung	A600F	1	Samsung單投-B單開壞	560
Samsung	A605F	6	Samsung單投-B單開壞	561
Samsung	A700	1	Samsung單投-B單開壞	562
Samsung	A700F	19	Samsung單投-B單開壞	563
Samsung	A705F	7	Samsung單投-B單開壞	564
Samsung	A710	24	Samsung單投-B單開壞	565
Samsung	A710F	4	Samsung單投-B單開壞	566
Samsung	A715F	6	Samsung單投-B單開壞	567
Samsung	A720F	43	Samsung單投-B單開壞	568
Samsung	A750	10	Samsung單投-B單開壞	569
Samsung	A750F	85	Samsung單投-B單開壞	570
Samsung	A805	1	Samsung單投-B單開壞	571
Samsung	A908B	1	Samsung單投-B單開壞	572
Samsung	A920F	2	Samsung單投-B單開壞	573
Samsung	F711B	3	Samsung單投-B單開壞	574
Samsung	F721(無鎖)	525	Samsung單投-B單開壞	575
Samsung	F721B	6	Samsung單投-B單開壞	576
Samsung	F731B	3	Samsung單投-B單開壞	577
Samsung	F900F	3	Samsung單投-B單開壞	578
Samsung	F907B	1	Samsung單投-B單開壞	579
Samsung	F916B	12	Samsung單投-B單開壞	580
Samsung	F926(無鎖)	343	Samsung單投-B單開壞	581
Samsung	F926B	4	Samsung單投-B單開壞	582
Samsung	F936B	3	Samsung單投-B單開壞	583
Samsung	F946B	1	Samsung單投-B單開壞	584
Samsung	G390	1	Samsung單投-B單開壞	585
Samsung	G715	1	Samsung單投-B單開壞	586
Samsung	G715F	4	Samsung單投-B單開壞	587
Samsung	G780F	1	Samsung單投-B單開壞	588
Samsung	G920	1	Samsung單投-B單開壞	589
Samsung	G925	26	Samsung單投-B單開壞	590
Samsung	G925F	70	Samsung單投-B單開壞	591
Samsung	G928	8	Samsung單投-B單開壞	592
Samsung	G928F	38	Samsung單投-B單開壞	593
Samsung	G930	17	Samsung單投-B單開壞	594
Samsung	G930F	109	Samsung單投-B單開壞	595
Samsung	G935	4	Samsung單投-B單開壞	596
Samsung	G935F	146	Samsung單投-B單開壞	597
Samsung	G950	7	Samsung單投-B單開壞	598
Samsung	G950F	3	Samsung單投-B單開壞	599
Samsung	G955F	2	Samsung單投-B單開壞	600
Samsung	G960F	6	Samsung單投-B單開壞	601
Samsung	G965	3	Samsung單投-B單開壞	602
Samsung	G965(Demo)	1	Samsung單投-B單開壞	603
Samsung	G9650	1	Samsung單投-B單開壞	604
Samsung	G965F	1	Samsung單投-B單開壞	605
Samsung	G970F	1	Samsung單投-B單開壞	606
Samsung	G973F	2	Samsung單投-B單開壞	607
Samsung	G975	6	Samsung單投-B單開壞	608
Samsung	G975F	1	Samsung單投-B單開壞	609
Samsung	G977B	1	Samsung單投-B單開壞	610
Samsung	G980F	1	Samsung單投-B單開壞	611
Samsung	G981B	1	Samsung單投-B單開壞	612
Samsung	G990B	2	Samsung單投-B單開壞	613
Samsung	G991B	3	Samsung單投-B單開壞	614
Samsung	G998B	6	Samsung單投-B單開壞	615
Samsung	J106	3	Samsung單投-B單開壞	616
Samsung	J810	1	Samsung單投-B單開壞	617
Samsung	M115F	5	Samsung單投-B單開壞	618
Samsung	M205F	3	Samsung單投-B單開壞	619
Samsung	M215F	13	Samsung單投-B單開壞	620
Samsung	N920F	2	Samsung單投-B單開壞	621
Samsung	N960F	2	Samsung單投-B單開壞	622
Samsung	P580	1	Samsung單投-B單開壞	623
Samsung	S767	1	Samsung單投-B單開壞	624
Samsung	S901B	2	Samsung單投-B單開壞	625
Samsung	S906B	1	Samsung單投-B單開壞	626

Samsung	S908B	3	Samsung單投-B單開壞	627
Samsung	S911B	2	Samsung單投-B單開壞	628
Samsung	T220	2	Samsung單投-B單開壞	629
Samsung	T227	3	Samsung單投-B單開壞	630
Samsung	T290	1	Samsung單投-B單開壞	631
Samsung	T297	1	Samsung單投-B單開壞	632
Samsung	T307	1	Samsung單投-B單開壞	633
Samsung	T510	4	Samsung單投-B單開壞	634
Samsung	T515	6	Samsung單投-B單開壞	635
Samsung	T560	3	Samsung單投-B單開壞	636
Samsung	T590	1	Samsung單投-B單開壞	637
Samsung	T710	1	Samsung單投-B單開壞	638
Samsung	T715	1	Samsung單投-B單開壞	639
Samsung	T720	23	Samsung單投-B單開壞	640
Samsung	T725	7	Samsung單投-B單開壞	641
Samsung	T727	1	Samsung單投-B單開壞	642
Samsung	T810	3	Samsung單投-B單開壞	643
Samsung	T820	1	Samsung單投-B單開壞	644
Samsung	T825	27	Samsung單投-B單開壞	645
Samsung	T830	2	Samsung單投-B單開壞	646
Samsung	T835	5	Samsung單投-B單開壞	647
Samsung	T837	1	Samsung單投-B單開壞	648
Samsung	T860	2	Samsung單投-B單開壞	649
Samsung	T865	3	Samsung單投-B單開壞	650
Samsung	T867	2	Samsung單投-B單開壞	651
Samsung	T970	2	Samsung單投-B單開壞	652
Samsung	W700	1	Samsung單投-B單開壞	653
Samsung	X200	1	Samsung單投-B單開壞	654
Samsung	X205	1	Samsung單投-B單開壞	655
Samsung	X706B	1	Samsung單投-B單開壞	656
Samsung	A013	10	Samsung單投-B單不開	657
Samsung	A013F	1	Samsung單投-B單不開	658
Samsung	A015	4	Samsung單投-B單不開	659
Samsung	A015F	5	Samsung單投-B單不開	660
Samsung	A032F	1	Samsung單投-B單不開	661
Samsung	A037	1	Samsung單投-B單不開	662
Samsung	A057F	1	Samsung單投-B單不開	663
Samsung	A105F	13	Samsung單投-B單不開	664
Samsung	A107F	2	Samsung單投-B單不開	665
Samsung	A127F	2	Samsung單投-B單不開	666
Samsung	A135F	1	Samsung單投-B單不開	667
Samsung	A136	2	Samsung單投-B單不開	668
Samsung	A136B	4	Samsung單投-B單不開	669
Samsung	A137F	4	Samsung單投-B單不開	670
Samsung	A145	17	Samsung單投-B單不開	671
Samsung	A145F	3	Samsung單投-B單不開	672
Samsung	A155F	4	Samsung單投-B單不開	673
Samsung	A202F	1	Samsung單投-B單不開	674
Samsung	A205	23	Samsung單投-B單不開	675
Samsung	A205F	2	Samsung單投-B單不開	676
Samsung	A236B	1	Samsung單投-B單不開	677
Samsung	A260	2	Samsung單投-B單不開	678
Samsung	A260F	17	Samsung單投-B單不開	679
Samsung	A325F	1	Samsung單投-B單不開	680
Samsung	A336	14	Samsung單投-B單不開	681
Samsung	A405F	18	Samsung單投-B單不開	682
Samsung	A500	3	Samsung單投-B單不開	683
Samsung	A500F	12	Samsung單投-B單不開	684
Samsung	A505F	4	Samsung單投-B單不開	685
Samsung	A515F	6	Samsung單投-B單不開	686
Samsung	A520F	18	Samsung單投-B單不開	687
Samsung	A526B	1	Samsung單投-B單不開	688
Samsung	A528B	1	Samsung單投-B單不開	689
Samsung	A536	2	Samsung單投-B單不開	690
Samsung	A536B	2	Samsung單投-B單不開	691
Samsung	A546B	1	Samsung單投-B單不開	692
Samsung	A600F	1	Samsung單投-B單不開	693
Samsung	A7000	1	Samsung單投-B單不開	694
Samsung	A700F	6	Samsung單投-B單不開	695
Samsung	A710	7	Samsung單投-B單不開	696
Samsung	A710F	2	Samsung單投-B單不開	697

Samsung	A715F	9	Samsung單投-B單不開	698
Samsung	A750	5	Samsung單投-B單不開	699
Samsung	A750F	1	Samsung單投-B單不開	700
Samsung	A800	1	Samsung單投-B單不開	701
Samsung	A910F	1	Samsung單投-B單不開	702
Samsung	F721	13	Samsung單投-B單不開	703
Samsung	F721B	1	Samsung單投-B單不開	704
Samsung	F926B	6	Samsung單投-B單不開	705
Samsung	G750	1	Samsung單投-B單不開	706
Samsung	G925(Demo)	1	Samsung單投-B單不開	707
Samsung	G925F	46	Samsung單投-B單不開	708
Samsung	G928(Demo)	1	Samsung單投-B單不開	709
Samsung	G930F	6	Samsung單投-B單不開	710
Samsung	G935F	10	Samsung單投-B單不開	711
Samsung	G950F	2	Samsung單投-B單不開	712
Samsung	G955	2	Samsung單投-B單不開	713
Samsung	G955F	5	Samsung單投-B單不開	714
Samsung	G960	1	Samsung單投-B單不開	715
Samsung	G9600	1	Samsung單投-B單不開	716
Samsung	G960F	3	Samsung單投-B單不開	717
Samsung	G965F	1	Samsung單投-B單不開	718
Samsung	G970F	2	Samsung單投-B單不開	719
Samsung	G973F	2	Samsung單投-B單不開	720
Samsung	G975F	6	Samsung單投-B單不開	721
Samsung	G981	1	Samsung單投-B單不開	722
Samsung	G986B	1	Samsung單投-B單不開	723
Samsung	G988B	1	Samsung單投-B單不開	724
Samsung	G998B	2	Samsung單投-B單不開	725
Samsung	M105	1	Samsung單投-B單不開	726
Samsung	M115F	4	Samsung單投-B單不開	727
Samsung	M205	1	Samsung單投-B單不開	728
Samsung	M305	2	Samsung單投-B單不開	729
Samsung	M307	1	Samsung單投-B單不開	730
Samsung	N920	1	Samsung單投-B單不開	731
Samsung	N950F	1	Samsung單投-B單不開	732
Samsung	N960F	7	Samsung單投-B單不開	733
Samsung	N970F	1	Samsung單投-B單不開	734
Samsung	N975F	3	Samsung單投-B單不開	735
Samsung	N981B	1	Samsung單投-B單不開	736
Samsung	N985F	2	Samsung單投-B單不開	737
Samsung	P613	1	Samsung單投-B單不開	738
Samsung	S906B	1	Samsung單投-B單不開	739
Samsung	S908	4	Samsung單投-B單不開	740
Samsung	T220	2	Samsung單投-B單不開	741
Samsung	T515	1	Samsung單投-B單不開	742
Samsung	T719	2	Samsung單投-B單不開	743
Samsung	T720	1	Samsung單投-B單不開	744
Samsung	T725	1	Samsung單投-B單不開	745
Samsung	T810	1	Samsung單投-B單不開	746
Demo單投-	Demo單投- 合計	8	匯總	747
Samsung	A528B	1	DEMO單投-A單	748
Samsung	A035-1	1	DEMO單投-B單開好	749
Samsung	A405F	1	DEMO單投-B單開好	750
Samsung	A715F	5	DEMO單投-B單開好	751
Apple	I-Phone 15 Pro Max 合計(大部份是雙卡)	73	匯總	752
Apple	I-Phone 15 Pro Max (256GB)無鎖	1	A單(後爆)(全功能)(彈窗)	753
Apple	I-Phone 15 Pro Max (1TB)無鎖	2	B單開壞	754
Apple	I-Phone 15 Pro Max (256GB)無鎖	1	B單開壞	755
Apple	I-Phone 15 Pro Max (512GB)無鎖	9	B單開壞	756
Apple	I-Phone 15 Pro Max (256GB)無鎖	21	B單有電流	757
Apple	I-Phone 15 Pro Max (512GB)無鎖	1	B單有電流	758
Apple	I-Phone 15 Pro Max (256GB)無鎖	5	特別供應-B單不開換電即可(僅供參考)	759
Apple	I-Phone 15 Pro Max (512GB)(無鎖有問題)	2	Part 2 A單	760
Apple	I-Phone 15 Pro Max (256GB)(無鎖有問題)	28	Part 2 B單開壞	761
Apple	I-Phone 15 Pro Max (512GB)(無鎖FID)	1	Part 2 A單	762
Apple	I-Phone 15 Pro Max (256GB)(無鎖FID)	1	Part 2 B單開好	763
Apple	I-Phone 15 Pro Max (256GB)	1	主板	764
Apple	I-Phone 15 Pro 合計(大部份是雙卡)	67	匯總	765
Apple	I-Phone 15 Pro (256GB)無鎖	1	A單(靚)(全功能)	766
Apple	I-Phone 15 Pro (128GB)無鎖	1	A單(靚1)(後爆)	767
Apple	I-Phone 15 Pro (128GB)無鎖	25	B單開壞	768

Apple	I-Phone 15 Pro (128GB)無鎖	10	B單有電流	769
Apple	I-Phone 15 Pro (256GB)無鎖	1	B單有電流	770
Apple	I-Phone 15 Pro (128GB)無鎖	6	特別供應-B單不開換電即可(僅供參考)	771
Apple	I-Phone 15 Pro (128GB)(無鎖有問題)	1	Part 2 A單	772
Apple	I-Phone 15 Pro (128GB)(無鎖有問題)	14	Part 2 B單開壞	773
Apple	I-Phone 15 Pro (256GB)(無鎖有問題)	5	Part 2 B單開壞	774
Apple	I-Phone 15 Pro (256GB)(無鎖有問題)	1	Part 2 B單有電流	775
Apple	I-Phone 15 Pro (128GB)	2	Part 2 B單開壞	776
Apple	I-Phone 15 Plus 合計(大部份是雙卡)	73	匯總	777
Apple	I-Phone 15 Plus (128GB)無鎖	3	A單(靚1)(後爆)(全功能)	778
Apple	I-Phone 15 Plus (512GB)無鎖	1	A單(靚1)(後爆)(全功能)	779
Apple	I-Phone 15 Plus (128GB)無鎖	1	A單(靚1)(全功能)(彈窗)	780
Apple	I-Phone 15 Plus (128GB)無鎖	1	A單(後鏡框爆)	781
Apple	I-Phone 15 Plus (128GB)無鎖	4	B單開好(全功能)	782
Apple	I-Phone 15 Plus (256GB)無鎖	1	B單開好	783
Apple	I-Phone 15 Plus (128GB)無鎖	1	B單開好(全功能)(彈窗)	784
Apple	I-Phone 15 Plus (128GB)無鎖	5	B單開壞(FID功能好)	785
Apple	I-Phone 15 Plus (256GB)無鎖	2	B單開壞(FID功能好)	786
Apple	I-Phone 15 Plus (128GB)無鎖	20	B單開壞	787
Apple	I-Phone 15 Plus (256GB)無鎖	4	B單開壞	788
Apple	I-Phone 15 Plus (512GB)無鎖	1	B單開壞	789
Apple	I-Phone 15 Plus (128GB)無鎖	9	B單有電流	790
Apple	I-Phone 15 Plus (256GB)無鎖	1	B單有電流	791
Apple	I-Phone 15 Plus (128GB)無鎖	1	特別供應-B單不開換電即可(僅供參考)	792
Apple	I-Phone 15 Plus (128GB)(無鎖有問題)	4	Part 2 A單	793
Apple	I-Phone 15 Plus (128GB)(無鎖有問題)	1	Part 2 B單開好	794
Apple	I-Phone 15 Plus (128GB)(無鎖有問題)	12	Part 2 B單開壞	795
Apple	I-Phone 15 Plus (128GB)(無鎖FID)	1	Part 2 A單	796
Apple	I-Phone 15 合計(大部份是雙卡)	61	匯總	797
Apple	I-Phone 15 (128GB)無鎖	1	A單(靚)(全功能)	798
Apple	I-Phone 15 (128GB)無鎖	1	A單(靚)(後爆)	799
Apple	I-Phone 15 (128GB)無鎖	2	A單(靚1)(全功能)	800
Apple	I-Phone 15 (128GB)無鎖	1	A單(靚1)(全功能)(彈窗)	801
Apple	I-Phone 15 (256GB)無鎖	1	B單開壞	802
Apple	I-Phone 15 (128GB)無鎖	18	B單有電流	803
Apple	I-Phone 15 (128GB)無鎖	6	特別供應-B單不開換電即可(僅供參考)	804
Apple	I-Phone 15 (128GB)(無鎖有問題)	1	Part 2 未激活-A單	805
Apple	I-Phone 15 (128GB)(無鎖有問題)	3	Part 2 B單開好	806
Apple	I-Phone 15 (128GB)(無鎖有問題)	17	Part 2 B單開壞	807
Apple	I-Phone 15 (256GB)(無鎖有問題)	1	Part 2 B單開壞	808
Apple	I-Phone 15 (128GB)(無鎖FID)	2	Part 2 A單	809
Apple	I-Phone 15 (128GB)(無鎖FID)	3	Part 2 B單開好	810
Apple	I-Phone 15 (128GB)	1	Part 2 B單開壞	811
Apple	I-Phone 15 (128GB)(有問題)	3	Part 2 B單開壞	812
Apple	I-Phone 14 Pro Max 合計(大部份是雙卡)	640	匯總	813
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	A單(靚)(全功能)	814
Apple	I-Phone 14 Pro Max (128GB)無鎖	2	A單(靚)(後爆)(全功能)	815
Apple	I-Phone 14 Pro Max (128GB)無鎖	2	A單(靚)	816
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	A單(靚)(彈窗)	817
Apple	I-Phone 14 Pro Max (512GB)無鎖	1	A單(靚1)(全功能)	818
Apple	I-Phone 14 Pro Max (128GB)無鎖	3	A單(靚1)(後鏡框爆)(全功能)	819
Apple	I-Phone 14 Pro Max (256GB)無鎖	2	A單(靚1)(後鏡框爆)(全功能)	820
Apple	I-Phone 14 Pro Max (128GB)無鎖	2	A單(靚1)(後爆)(全功能)	821
Apple	I-Phone 14 Pro Max (256GB)無鎖	3	A單(靚1)(後爆)(全功能)	822
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	A單(靚1)	823
Apple	I-Phone 14 Pro Max (128GB)無鎖	3	A單(靚1)(後爆)	824
Apple	I-Phone 14 Pro Max (256GB)無鎖	1	A單(靚1)(後爆)	825
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	A單(靚1)(全功能)(彈窗)	826
Apple	I-Phone 14 Pro Max (256GB)無鎖	4	A單(靚1)(全功能)(彈窗)	827
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	A單(靚1)(後爆)(全功能)(彈窗)	828
Apple	I-Phone 14 Pro Max (256GB)無鎖	2	A單(靚1)(後爆)(彈窗)	829
Apple	I-Phone 14 Pro Max (256GB)無鎖	1	A單(全功能)	830
Apple	I-Phone 14 Pro Max (128GB)無鎖	2	A單(後鏡框爆)(全功能)	831
Apple	I-Phone 14 Pro Max (512GB)無鎖	1	A單(後鏡框爆)(全功能)	832
Apple	I-Phone 14 Pro Max (128GB)無鎖	3	A單(後爆)(全功能)	833
Apple	I-Phone 14 Pro Max (256GB)無鎖	3	A單(後爆)(全功能)	834
Apple	I-Phone 14 Pro Max (128GB)無鎖	12	A單	835
Apple	I-Phone 14 Pro Max (256GB)無鎖	3	A單	836
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	A單(後鏡框爆)	837
Apple	I-Phone 14 Pro Max (256GB)無鎖	2	A單(後鏡框爆)	838
Apple	I-Phone 14 Pro Max (128GB)無鎖	3	A單(後爆)	839

Apple	I-Phone 14 Pro Max (1TB)無鎖	1	A單(後爆)	840
Apple	I-Phone 14 Pro Max (256GB)無鎖	10	A單(後爆)	841
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	A單(全功能)(彈窗)	842
Apple	I-Phone 14 Pro Max (512GB)無鎖	1	A單(全功能)(彈窗)	843
Apple	I-Phone 14 Pro Max (128GB)無鎖	4	A單(後爆)(全功能)(彈窗)	844
Apple	I-Phone 14 Pro Max (256GB)無鎖	4	A單(後爆)(全功能)(彈窗)	845
Apple	I-Phone 14 Pro Max (512GB)無鎖	1	A單(後爆)(全功能)(彈窗)	846
Apple	I-Phone 14 Pro Max (128GB)無鎖	3	A單(彈窗)	847
Apple	I-Phone 14 Pro Max (256GB)無鎖	5	A單(彈窗)	848
Apple	I-Phone 14 Pro Max (128GB)無鎖	3	A單(後爆)(彈窗)	849
Apple	I-Phone 14 Pro Max (256GB)無鎖	3	A單(後爆)(彈窗)	850
Apple	I-Phone 14 Pro Max (512GB)無鎖	2	A單(後爆)(彈窗)	851
Apple	I-Phone 14 Pro Max (128GB)無鎖	1	B單開好(全功能)	852
Apple	I-Phone 14 Pro Max (1TB)無鎖	1	B單開好(全功能)	853
Apple	I-Phone 14 Pro Max (512GB)無鎖	6	B單開好(全功能)	854
Apple	I-Phone 14 Pro Max (128GB)無鎖	16	B單開好	855
Apple	I-Phone 14 Pro Max (256GB)無鎖	6	B單開好	856
Apple	I-Phone 14 Pro Max (512GB)無鎖	2	B單開好	857
Apple	I-Phone 14 Pro Max (128GB)無鎖	5	B單開好(全功能)(彈窗)	858
Apple	I-Phone 14 Pro Max (256GB)無鎖	2	B單開好(彈窗)	859
Apple	I-Phone 14 Pro Max (128GB)無鎖	18	B單開壞(全功能)	860
Apple	I-Phone 14 Pro Max (256GB)無鎖	7	B單開壞(全功能)	861
Apple	I-Phone 14 Pro Max (128GB)無鎖	128	B單開壞	862
Apple	I-Phone 14 Pro Max (1TB)無鎖	5	B單開壞	863
Apple	I-Phone 14 Pro Max (256GB)無鎖	79	B單開壞	864
Apple	I-Phone 14 Pro Max (512GB)無鎖	8	B單開壞	865
Apple	I-Phone 14 Pro Max (128GB)無鎖	47	B單有電流	866
Apple	I-Phone 14 Pro Max (256GB)無鎖	6	B單有電流	867
Apple	I-Phone 14 Pro Max (512GB)無鎖	1	B單有電流	868
Apple	I-Phone 14 Pro Max (128GB)無鎖	65	特別供應-B單不開換電即可(僅供參考)	869
Apple	I-Phone 14 Pro Max (256GB)無鎖	1	特別供應-B單不開換電即可(僅供參考)	870
Apple	I-Phone 14 Pro Max (256GB)(無鎖有問題)	1	Part 2 A單	871
Apple	I-Phone 14 Pro Max (128GB)(無鎖有問題)	9	Part 2 B單開好	872
Apple	I-Phone 14 Pro Max (256GB)(無鎖有問題)	4	Part 2 B單開好	873
Apple	I-Phone 14 Pro Max (128GB)(無鎖有問題)	70	Part 2 B單開壞	874
Apple	I-Phone 14 Pro Max (256GB)(無鎖有問題)	2	Part 2 B單開壞	875
Apple	I-Phone 14 Pro Max (128GB)(無鎖有問題)	1	Part 2 B單有電流	876
Apple	I-Phone 14 Pro Max (128GB)(無鎖FID)	12	Part 2 A單	877
Apple	I-Phone 14 Pro Max (256GB)(無鎖FID)	6	Part 2 A單	878
Apple	I-Phone 14 Pro Max (128GB)(無鎖FID)	1	Part 2 A單(彈窗)	879
Apple	I-Phone 14 Pro Max (128GB)(無鎖FID)	4	Part 2 B單開好	880
Apple	I-Phone 14 Pro Max (1TB)(無鎖FID)	1	Part 2 B單開好	881
Apple	I-Phone 14 Pro Max (256GB)(無鎖FID)	8	Part 2 B單開好	882
Apple	I-Phone 14 Pro Max (128GB)	3	Part 2 B單開壞	883
Apple	I-Phone 14 Pro Max (256GB)	2	Part 2 B單開壞	884
Apple	I-Phone 14 Pro Max (128GB)	2	Part 2 B單有電流	885
Apple	I-Phone 14 Pro Max (128GB)	1	Part 2 特別供應-B單不開換電即可(僅供參考)	886
Apple	I-Phone 14 Pro Max (128GB)	6	主板	887
Apple	I-Phone 14 Pro Max (128GB)(有問題)	2	Part 2 B單開壞	888
Apple	I-Phone 14 Pro Max (256GB)(有問題)	2	Part 2 B單開壞	889
Apple	I-Phone 14 Pro 合計(大部份是雙卡)	371	匯總	890
Apple	I-Phone 14 Pro (128GB)無鎖	1	A單(靚)(全功能)	891
Apple	I-Phone 14 Pro (128GB)無鎖	5	A單(靚)(後爆)(全功能)	892
Apple	I-Phone 14 Pro (256GB)無鎖	3	A單(靚)(後爆)(全功能)	893
Apple	I-Phone 14 Pro (128GB)無鎖	1	A單(靚1)(全功能)	894
Apple	I-Phone 14 Pro (128GB)無鎖	16	A單(靚1)(後爆)(全功能)	895
Apple	I-Phone 14 Pro (256GB)無鎖	8	A單(靚1)(後爆)(全功能)	896
Apple	I-Phone 14 Pro (512GB)無鎖	2	A單(靚1)(後爆)(全功能)	897
Apple	I-Phone 14 Pro (128GB)無鎖	1	A單(靚1)(全功能)(彈窗)	898
Apple	I-Phone 14 Pro (256GB)無鎖	4	A單(全功能)	899
Apple	I-Phone 14 Pro (512GB)無鎖	3	A單(全功能)	900
Apple	I-Phone 14 Pro (128GB)無鎖	2	A單(後鏡框爆)(全功能)	901
Apple	I-Phone 14 Pro (256GB)無鎖	1	A單(後鏡框爆)(全功能)	902
Apple	I-Phone 14 Pro (128GB)無鎖	14	A單(後爆)(全功能)	903
Apple	I-Phone 14 Pro (256GB)無鎖	9	A單(後爆)(全功能)	904
Apple	I-Phone 14 Pro (512GB)無鎖	3	A單(後爆)(全功能)	905
Apple	I-Phone 14 Pro (128GB)無鎖	2	A單	906
Apple	I-Phone 14 Pro (256GB)無鎖	4	A單	907
Apple	I-Phone 14 Pro (512GB)無鎖	1	A單	908
Apple	I-Phone 14 Pro (128GB)無鎖	2	A單(後鏡框爆)	909
Apple	I-Phone 14 Pro (256GB)無鎖	2	A單(後鏡框爆)	910

Apple	I-Phone 14 Pro (128GB)無鎖	6	A單(後爆)	911
Apple	I-Phone 14 Pro (256GB)無鎖	1	A單(後爆)	912
Apple	I-Phone 14 Pro (512GB)無鎖	2	A單(後爆)	913
Apple	I-Phone 14 Pro (256GB)無鎖	2	A單(全功能)(彈窗)	914
Apple	I-Phone 14 Pro (256GB)無鎖	2	A單(後爆)(全功能)(彈窗)	915
Apple	I-Phone 14 Pro (128GB)無鎖	8	A單(彈窗)	916
Apple	I-Phone 14 Pro (512GB)無鎖	2	B單開好(全功能)	917
Apple	I-Phone 14 Pro (128GB)無鎖	7	B單開好	918
Apple	I-Phone 14 Pro (256GB)無鎖	3	B單開好	919
Apple	I-Phone 14 Pro (128GB)無鎖	1	B單開好(全功能)(彈窗)	920
Apple	I-Phone 14 Pro (256GB)無鎖	2	B單開好(全功能)(彈窗)	921
Apple	I-Phone 14 Pro (128GB)無鎖	2	B單開好(彈窗)	922
Apple	I-Phone 14 Pro (512GB)無鎖	1	B單開好(彈窗)	923
Apple	I-Phone 14 Pro (128GB)無鎖	2	B單開壞(全功能)	924
Apple	I-Phone 14 Pro (256GB)無鎖	1	B單開壞(全功能)	925
Apple	I-Phone 14 Pro (1TB)無鎖	1	B單開壞(FID功能好)	926
Apple	I-Phone 14 Pro (256GB)無鎖	7	B單開壞(FID功能好)	927
Apple	I-Phone 14 Pro (128GB)無鎖	96	B單開壞	928
Apple	I-Phone 14 Pro (1TB)無鎖	2	B單開壞	929
Apple	I-Phone 14 Pro (256GB)無鎖	23	B單開壞	930
Apple	I-Phone 14 Pro (512GB)無鎖	6	B單開壞	931
Apple	I-Phone 14 Pro (128GB)無鎖	23	B單有電流	932
Apple	I-Phone 14 Pro (256GB)無鎖	4	B單有電流	933
Apple	I-Phone 14 Pro (512GB)無鎖	3	B單有電流	934
Apple	I-Phone 14 Pro (128GB)無鎖	31	特別供應-B單不開換電即可(僅供參考)	935
Apple	I-Phone 14 Pro (256GB)無鎖	5	特別供應-B單不開換電即可(僅供參考)	936
Apple	I-Phone 14 Pro (128GB)(無鎖有問題)	1	Part 2 A單	937
Apple	I-Phone 14 Pro (256GB)(無鎖有問題)	1	Part 2 A單	938
Apple	I-Phone 14 Pro (512GB)(無鎖有問題)	1	Part 2 A單	939
Apple	I-Phone 14 Pro (256GB)(無鎖有問題)	2	Part 2 B單開好	940
Apple	I-Phone 14 Pro (128GB)(無鎖有問題)	10	Part 2 B單開壞	941
Apple	I-Phone 14 Pro (256GB)(無鎖有問題)	1	Part 2 B單開壞	942
Apple	I-Phone 14 Pro (128GB)(無鎖有問題)	2	Part 2 B單有電流	943
Apple	I-Phone 14 Pro (128GB)(無鎖FID)	11	Part 2 A單	944
Apple	I-Phone 14 Pro (128GB)(無鎖FID)	5	Part 2 B單開好	945
Apple	I-Phone 14 Pro (256GB)(無鎖FID)	2	Part 2 B單開好	946
Apple	I-Phone 14 Pro (128GB)	2	Part 2 B單開壞	947
Apple	I-Phone 14 Pro (512GB)	1	Part 2 B單開壞	948
Apple	I-Phone 14 Pro (128GB)	4	主板	949
Apple	I-Phone 14 Pro (128GB)(有問題)	1	Part 2 B單開壞	950
Apple	I-Phone 14 Plus 合計(大部份是雙卡)	176	匯總	951
Apple	I-Phone 14 Plus (128GB)無鎖	1	A單(靚)(全功能)	952
Apple	I-Phone 14 Plus (128GB)無鎖	1	A單(靚)(彈窗)	953
Apple	I-Phone 14 Plus (128GB)無鎖	1	A單(靚1)(全功能)	954
Apple	I-Phone 14 Plus (256GB)無鎖	1	A單(靚1)(全功能)	955
Apple	I-Phone 14 Plus (128GB)無鎖	1	A單(靚1)(後爆)(全功能)	956
Apple	I-Phone 14 Plus (128GB)無鎖	2	A單(靚1)(全功能)(彈窗)	957
Apple	I-Phone 14 Plus (128GB)無鎖	1	A單(全功能)	958
Apple	I-Phone 14 Plus (128GB)無鎖	1	A單(後鏡框爆)(全功能)	959
Apple	I-Phone 14 Plus (128GB)無鎖	3	A單	960
Apple	I-Phone 14 Plus (128GB)無鎖	2	A單(後鏡框爆)	961
Apple	I-Phone 14 Plus (128GB)無鎖	2	A單(後爆)	962
Apple	I-Phone 14 Plus (128GB)無鎖	1	A單(後爆)(全功能)(彈窗)	963
Apple	I-Phone 14 Plus (128GB)無鎖	5	A單(彈窗)	964
Apple	I-Phone 14 Plus (128GB)無鎖	2	A單(後爆)(彈窗)	965
Apple	I-Phone 14 Plus (128GB)無鎖	3	B單開好	966
Apple	I-Phone 14 Plus (128GB)無鎖	2	B單開好(全功能)(彈窗)	967
Apple	I-Phone 14 Plus (256GB)無鎖	1	B單開好(全功能)(彈窗)	968
Apple	I-Phone 14 Plus (128GB)無鎖	2	B單開好(彈窗)	969
Apple	I-Phone 14 Plus (128GB)無鎖	46	B單開壞	970
Apple	I-Phone 14 Plus (256GB)無鎖	3	B單開壞	971
Apple	I-Phone 14 Plus (512GB)無鎖	1	B單開壞	972
Apple	I-Phone 14 Plus (128GB)無鎖	24	B單有電流	973
Apple	I-Phone 14 Plus (256GB)無鎖	2	B單有電流	974
Apple	I-Phone 14 Plus (128GB)無鎖	17	特別供應-B單不開換電即可(僅供參考)	975
Apple	I-Phone 14 Plus (256GB)無鎖	3	特別供應-B單不開換電即可(僅供參考)	976
Apple	I-Phone 14 Plus (128GB)(無鎖有問題)	5	Part 2 A單	977
Apple	I-Phone 14 Plus (256GB)(無鎖有問題)	1	Part 2 B單開好	978
Apple	I-Phone 14 Plus (128GB)(無鎖有問題)	20	Part 2 B單開壞	979
Apple	I-Phone 14 Plus (256GB)(無鎖有問題)	2	Part 2 B單開壞	980
Apple	I-Phone 14 Plus (128GB)(無鎖FID)	2	Part 2 A單	981

Apple	I-Phone 14 Plus (256GB)(無鎖FID)	1	Part 2 B單開好	982
Apple	I-Phone 14 Plus (128GB)	2	Part 2 B單開好	983
Apple	I-Phone 14 Plus (128GB)	10	Part 2 B單開壞	984
Apple	I-Phone 14 Plus (128GB)	3	Part 2 B單有電流	985
Apple	I-Phone 14 Plus (128GB)	1	主板	986
Apple	I-Phone 14 Plus (128GB)(有問題)	1	Part 2 B單開好	987
Apple	I-Phone 14 合計(大部份是雙卡)	313	匯總	988
Apple	I-Phone 14 (128GB)無鎖	2	A單(靚)(全功能)	989
Apple	I-Phone 14 (128GB)無鎖	5	A單(靚)(後爆)(全功能)	990
Apple	I-Phone 14 (256GB)無鎖	1	A單(靚)(後爆)(全功能)	991
Apple	I-Phone 14 (128GB)無鎖	1	A單(靚)(全功能)(彈窗)	992
Apple	I-Phone 14 (256GB)無鎖	1	A單(靚1)(全功能)	993
Apple	I-Phone 14 (128GB)無鎖	3	A單(靚1)(後鏡框爆)(全功能)	994
Apple	I-Phone 14 (128GB)無鎖	7	A單(靚1)(後爆)(全功能)	995
Apple	I-Phone 14 (256GB)無鎖	2	A單(靚1)(後爆)(全功能)	996
Apple	I-Phone 14 (512GB)無鎖	1	A單(靚1)(後爆)(全功能)	997
Apple	I-Phone 14 (128GB)無鎖	1	A單(靚1)(全功能)(彈窗)	998
Apple	I-Phone 14 (256GB)無鎖	1	A單(靚1)(全功能)(彈窗)	999
Apple	I-Phone 14 (128GB)無鎖	2	A單(靚1)(後爆)(全功能)(彈窗)	1000
Apple	I-Phone 14 (128GB)無鎖	6	A單(全功能)	1001
Apple	I-Phone 14 (256GB)無鎖	1	A單(全功能)	1002
Apple	I-Phone 14 (128GB)無鎖	1	A單(後鏡框爆)(全功能)	1003
Apple	I-Phone 14 (512GB)無鎖	1	A單(後鏡框爆)(全功能)	1004
Apple	I-Phone 14 (128GB)無鎖	2	A單(後爆)(全功能)	1005
Apple	I-Phone 14 (256GB)無鎖	2	A單(後爆)(全功能)	1006
Apple	I-Phone 14 (512GB)無鎖	1	A單(後爆)(全功能)	1007
Apple	I-Phone 14 (128GB)無鎖	4	A單	1008
Apple	I-Phone 14 (256GB)無鎖	2	A單	1009
Apple	I-Phone 14 (128GB)無鎖	1	A單(後鏡框爆)	1010
Apple	I-Phone 14 (256GB)無鎖	1	A單(後鏡框爆)	1011
Apple	I-Phone 14 (128GB)無鎖	2	A單(後爆)	1012
Apple	I-Phone 14 (256GB)無鎖	1	A單(後爆)	1013
Apple	I-Phone 14 (128GB)無鎖	1	A單(全功能)(彈窗)	1014
Apple	I-Phone 14 (128GB)無鎖	4	A單(後爆)(全功能)(彈窗)	1015
Apple	I-Phone 14 (256GB)無鎖	1	A單(彈窗)	1016
Apple	I-Phone 14 (128GB)無鎖	1	A單(後鏡框爆)(彈窗)	1017
Apple	I-Phone 14 (256GB)無鎖	1	A單(後爆)(彈窗)	1018
Apple	I-Phone 14 (128GB)無鎖	1	B單開好	1019
Apple	I-Phone 14 (128GB)無鎖	8	B單開好(全功能)(彈窗)	1020
Apple	I-Phone 14 (256GB)無鎖	1	B單開好(全功能)(彈窗)	1021
Apple	I-Phone 14 (256GB)無鎖	1	B單開好(彈窗)	1022
Apple	I-Phone 14 (128GB)無鎖	88	B單開壞	1023
Apple	I-Phone 14 (256GB)無鎖	15	B單開壞	1024
Apple	I-Phone 14 (512GB)無鎖	1	B單開壞	1025
Apple	I-Phone 14 (128GB)無鎖	28	B單有電流	1026
Apple	I-Phone 14 (256GB)無鎖	2	B單有電流	1027
Apple	I-Phone 14 (128GB)無鎖	37	特別供應-B單不開換電即可(僅供參考)	1028
Apple	I-Phone 14 (256GB)無鎖	2	特別供應-B單不開換電即可(僅供參考)	1029
Apple	I-Phone 14 (512GB)無鎖	1	特別供應-B單不開換電即可(僅供參考)	1030
Apple	I-Phone 14 (128GB)(無鎖有問題)	14	Part 2 A單	1031
Apple	I-Phone 14 (256GB)(無鎖有問題)	1	Part 2 A單	1032
Apple	I-Phone 14 (128GB)(無鎖有問題)	10	Part 2 B單開好	1033
Apple	I-Phone 14 (256GB)(無鎖有問題)	2	Part 2 B單開好	1034
Apple	I-Phone 14 (128GB)(無鎖有問題)	13	Part 2 B單開壞	1035
Apple	I-Phone 14 (256GB)(無鎖有問題)	1	Part 2 B單開壞	1036
Apple	I-Phone 14 (128GB)(無鎖有問題)	3	Part 2 B單有電流	1037
Apple	I-Phone 14 (128GB)(無鎖FID)	5	Part 2 A單	1038
Apple	I-Phone 14 (128GB)(無鎖FID)	5	Part 2 B單開好	1039
Apple	I-Phone 14 (128GB)	2	Part 2 B單開壞	1040
Apple	I-Phone 14 (128GB)	4	Part 2 B單有電流	1041
Apple	I-Phone 14 (128GB)	5	主板	1042
Apple	I-Phone 14 (128GB)(有問題)	1	Part 2 A單	1043
Apple	I-Phone 14 (128GB)(有問題)	2	Part 2 B單有電流	1044
Apple	I-Phone 13 Pro Max 合計	11157	匯總	1045
Apple	I-Phone 13 Pro Max (128GB)無鎖	102	A單(靚)(全功能)	1046
Apple	I-Phone 13 Pro Max (256GB)無鎖	201	A單(靚)(全功能)	1047
Apple	I-Phone 13 Pro Max (512GB)無鎖	2	A單(靚)(全功能)	1048
Apple	I-Phone 13 Pro Max (128GB)無鎖	22	A單(靚)(後鏡框爆)(全功能)	1049
Apple	I-Phone 13 Pro Max (256GB)無鎖	4	A單(靚)(後鏡框爆)(全功能)	1050
Apple	I-Phone 13 Pro Max (128GB)無鎖	56	A單(靚)(後爆)(全功能)	1051
Apple	I-Phone 13 Pro Max (1TB)無鎖	9	A單(靚)(後爆)(全功能)	1052

Apple	I-Phone 13 Pro Max (256GB)無鎖	33	A單(靚)(後爆)(全功能)	1053
Apple	I-Phone 13 Pro Max (512GB)無鎖	2	A單(靚)(後爆)(全功能)	1054
Apple	I-Phone 13 Pro Max (128GB)無鎖	5	A單(靚)(後爆)	1055
Apple	I-Phone 13 Pro Max (128GB)無鎖	6	A單(靚)(全功能)(彈窗)	1056
Apple	I-Phone 13 Pro Max (256GB)無鎖	4	A單(靚)(全功能)(彈窗)	1057
Apple	I-Phone 13 Pro Max (128GB)無鎖	1	A單(靚)(後爆)(全功能)(彈窗)	1058
Apple	I-Phone 13 Pro Max (256GB)無鎖	6	A單(靚)(後爆)(全功能)(彈窗)	1059
Apple	I-Phone 13 Pro Max (128GB)無鎖	223	A單(靚1)(全功能)	1060
Apple	I-Phone 13 Pro Max (1TB)無鎖	13	A單(靚1)(全功能)	1061
Apple	I-Phone 13 Pro Max (256GB)無鎖	286	A單(靚1)(全功能)	1062
Apple	I-Phone 13 Pro Max (512GB)無鎖	52	A單(靚1)(全功能)	1063
Apple	I-Phone 13 Pro Max (128GB)無鎖	39	A單(靚1)(後鏡框爆)(全功能)	1064
Apple	I-Phone 13 Pro Max (1TB)無鎖	13	A單(靚1)(後鏡框爆)(全功能)	1065
Apple	I-Phone 13 Pro Max (256GB)無鎖	121	A單(靚1)(後鏡框爆)(全功能)	1066
Apple	I-Phone 13 Pro Max (512GB)無鎖	30	A單(靚1)(後鏡框爆)(全功能)	1067
Apple	I-Phone 13 Pro Max (128GB)無鎖	794	A單(靚1)(後爆)(全功能)	1068
Apple	I-Phone 13 Pro Max (1TB)無鎖	48	A單(靚1)(後爆)(全功能)	1069
Apple	I-Phone 13 Pro Max (256GB)無鎖	920	A單(靚1)(後爆)(全功能)	1070
Apple	I-Phone 13 Pro Max (512GB)無鎖	74	A單(靚1)(後爆)(全功能)	1071
Apple	I-Phone 13 Pro Max (256GB)無鎖	10	A單(靚1)(後爆)	1072
Apple	I-Phone 13 Pro Max (128GB)無鎖	87	A單(靚1)(全功能)(彈窗)	1073
Apple	I-Phone 13 Pro Max (1TB)無鎖	2	A單(靚1)(全功能)(彈窗)	1074
Apple	I-Phone 13 Pro Max (256GB)無鎖	57	A單(靚1)(全功能)(彈窗)	1075
Apple	I-Phone 13 Pro Max (512GB)無鎖	4	A單(靚1)(全功能)(彈窗)	1076
Apple	I-Phone 13 Pro Max (256GB)無鎖	5	A單(靚1)(後鏡框爆)(全功能)(彈窗)	1077
Apple	I-Phone 13 Pro Max (512GB)無鎖	1	A單(靚1)(後鏡框爆)(全功能)(彈窗)	1078
Apple	I-Phone 13 Pro Max (128GB)無鎖	211	A單(靚1)(後爆)(全功能)(彈窗)	1079
Apple	I-Phone 13 Pro Max (1TB)無鎖	1	A單(靚1)(後爆)(全功能)(彈窗)	1080
Apple	I-Phone 13 Pro Max (256GB)無鎖	58	A單(靚1)(後爆)(全功能)(彈窗)	1081
Apple	I-Phone 13 Pro Max (512GB)無鎖	5	A單(靚1)(後爆)(全功能)(彈窗)	1082
Apple	I-Phone 13 Pro Max (128GB)無鎖	8	A單(靚1)(彈窗)	1083
Apple	I-Phone 13 Pro Max (128GB)無鎖	46	A單(全功能)	1084
Apple	I-Phone 13 Pro Max (1TB)無鎖	16	A單(全功能)	1085
Apple	I-Phone 13 Pro Max (256GB)無鎖	283	A單(全功能)	1086
Apple	I-Phone 13 Pro Max (512GB)無鎖	22	A單(全功能)	1087
Apple	I-Phone 13 Pro Max (128GB)無鎖	21	A單(後鏡框爆)(全功能)	1088
Apple	I-Phone 13 Pro Max (1TB)無鎖	9	A單(後鏡框爆)(全功能)	1089
Apple	I-Phone 13 Pro Max (256GB)無鎖	102	A單(後鏡框爆)(全功能)	1090
Apple	I-Phone 13 Pro Max (512GB)無鎖	22	A單(後鏡框爆)(全功能)	1091
Apple	I-Phone 13 Pro Max (128GB)無鎖	654	A單(後爆)(全功能)	1092
Apple	I-Phone 13 Pro Max (1TB)無鎖	79	A單(後爆)(全功能)	1093
Apple	I-Phone 13 Pro Max (256GB)無鎖	874	A單(後爆)(全功能)	1094
Apple	I-Phone 13 Pro Max (512GB)無鎖	153	A單(後爆)(全功能)	1095
Apple	I-Phone 13 Pro Max (128GB)無鎖	5	A單	1096
Apple	I-Phone 13 Pro Max (256GB)無鎖	8	A單	1097
Apple	I-Phone 13 Pro Max (128GB)無鎖	46	A單(後鏡框爆)	1098
Apple	I-Phone 13 Pro Max (1TB)無鎖	2	A單(後鏡框爆)	1099
Apple	I-Phone 13 Pro Max (256GB)無鎖	17	A單(後鏡框爆)	1100
Apple	I-Phone 13 Pro Max (512GB)無鎖	2	A單(後鏡框爆)	1101
Apple	I-Phone 13 Pro Max (128GB)無鎖	19	A單(後爆)	1102
Apple	I-Phone 13 Pro Max (256GB)無鎖	5	A單(後爆)	1103
Apple	I-Phone 13 Pro Max (128GB)無鎖	23	A單(全功能)(彈窗)	1104
Apple	I-Phone 13 Pro Max (1TB)無鎖	1	A單(全功能)(彈窗)	1105
Apple	I-Phone 13 Pro Max (256GB)無鎖	27	A單(全功能)(彈窗)	1106
Apple	I-Phone 13 Pro Max (512GB)無鎖	7	A單(全功能)(彈窗)	1107
Apple	I-Phone 13 Pro Max (128GB)無鎖	3	A單(後鏡框爆)(全功能)(彈窗)	1108
Apple	I-Phone 13 Pro Max (256GB)無鎖	1	A單(後鏡框爆)(全功能)(彈窗)	1109
Apple	I-Phone 13 Pro Max (128GB)無鎖	292	A單(後爆)(全功能)(彈窗)	1110
Apple	I-Phone 13 Pro Max (1TB)無鎖	4	A單(後爆)(全功能)(彈窗)	1111
Apple	I-Phone 13 Pro Max (256GB)無鎖	135	A單(後爆)(全功能)(彈窗)	1112
Apple	I-Phone 13 Pro Max (512GB)無鎖	8	A單(後爆)(全功能)(彈窗)	1113
Apple	I-Phone 13 Pro Max (128GB)無鎖	46	A單(彈窗)	1114
Apple	I-Phone 13 Pro Max (1TB)無鎖	2	A單(彈窗)	1115
Apple	I-Phone 13 Pro Max (256GB)無鎖	35	A單(彈窗)	1116
Apple	I-Phone 13 Pro Max (512GB)無鎖	3	A單(彈窗)	1117
Apple	I-Phone 13 Pro Max (128GB)無鎖	21	A單(後鏡框爆)(彈窗)	1118
Apple	I-Phone 13 Pro Max (1TB)無鎖	1	A單(後鏡框爆)(彈窗)	1119
Apple	I-Phone 13 Pro Max (256GB)無鎖	17	A單(後鏡框爆)(彈窗)	1120
Apple	I-Phone 13 Pro Max (512GB)無鎖	1	A單(後鏡框爆)(彈窗)	1121
Apple	I-Phone 13 Pro Max (128GB)無鎖	404	A單(後爆)(彈窗)	1122
Apple	I-Phone 13 Pro Max (1TB)無鎖	8	A單(後爆)(彈窗)	1123

Apple	I-Phone 13 Pro Max (256GB)無鎖	79	A單(後爆)(彈窗)	1124
Apple	I-Phone 13 Pro Max (512GB)無鎖	23	A單(後爆)(彈窗)	1125
Apple	I-Phone 13 Pro Max (128GB)無鎖	220	B單開好(全功能)	1126
Apple	I-Phone 13 Pro Max (1TB)無鎖	66	B單開好(全功能)	1127
Apple	I-Phone 13 Pro Max (256GB)無鎖	611	B單開好(全功能)	1128
Apple	I-Phone 13 Pro Max (512GB)無鎖	172	B單開好(全功能)	1129
Apple	I-Phone 13 Pro Max (128GB)無鎖	11	B單開好	1130
Apple	I-Phone 13 Pro Max (256GB)無鎖	8	B單開好	1131
Apple	I-Phone 13 Pro Max (128GB)無鎖	170	B單開好(全功能)(彈窗)	1132
Apple	I-Phone 13 Pro Max (256GB)無鎖	64	B單開好(全功能)(彈窗)	1133
Apple	I-Phone 13 Pro Max (512GB)無鎖	9	B單開好(全功能)(彈窗)	1134
Apple	I-Phone 13 Pro Max (128GB)無鎖	198	B單開好(彈窗)	1135
Apple	I-Phone 13 Pro Max (1TB)無鎖	4	B單開好(彈窗)	1136
Apple	I-Phone 13 Pro Max (256GB)無鎖	122	B單開好(彈窗)	1137
Apple	I-Phone 13 Pro Max (512GB)無鎖	9	B單開好(彈窗)	1138
Apple	I-Phone 13 Pro Max (1TB)無鎖	2	B單開壞(全功能)	1139
Apple	I-Phone 13 Pro Max (256GB)無鎖	21	B單開壞(全功能)	1140
Apple	I-Phone 13 Pro Max (512GB)無鎖	12	B單開壞(全功能)	1141
Apple	I-Phone 13 Pro Max (128GB)無鎖	57	B單開壞(FID功能好)	1142
Apple	I-Phone 13 Pro Max (1TB)無鎖	20	B單開壞(FID功能好)	1143
Apple	I-Phone 13 Pro Max (256GB)無鎖	206	B單開壞(FID功能好)	1144
Apple	I-Phone 13 Pro Max (512GB)無鎖	50	B單開壞(FID功能好)	1145
Apple	I-Phone 13 Pro Max (128GB)無鎖	181	B單開壞	1146
Apple	I-Phone 13 Pro Max (1TB)無鎖	54	B單開壞	1147
Apple	I-Phone 13 Pro Max (256GB)無鎖	89	B單開壞	1148
Apple	I-Phone 13 Pro Max (512GB)無鎖	1	B單開壞	1149
Apple	I-Phone 13 Pro Max (128GB)無鎖	1	B單開壞(彈窗)	1150
Apple	I-Phone 13 Pro Max (128GB)無鎖	317	B單有電流	1151
Apple	I-Phone 13 Pro Max (256GB)無鎖	79	B單有電流	1152
Apple	I-Phone 13 Pro Max (512GB)無鎖	7	B單有電流	1153
Apple	I-Phone 13 Pro Max (128GB)無鎖	83	特別供應-B單不開換電即可(僅供參考)	1154
Apple	I-Phone 13 Pro Max (256GB)無鎖	10	特別供應-B單不開換電即可(僅供參考)	1155
Apple	I-Phone 13 Pro Max (512GB)無鎖	2	特別供應-B單不開換電即可(僅供參考)	1156
Apple	I-Phone 13 Pro Max (1TB)	2	Part 2 特別供應-B單不開換電即可(僅供參考)	1157
Apple	I-Phone 13 Pro Max (128GB)(無鎖有問題)	372	Part 2 A單	1158
Apple	I-Phone 13 Pro Max (1TB)(無鎖有問題)	3	Part 2 A單	1159
Apple	I-Phone 13 Pro Max (256GB)(無鎖有問題)	242	Part 2 A單	1160
Apple	I-Phone 13 Pro Max (512GB)(無鎖有問題)	33	Part 2 A單	1161
Apple	I-Phone 13 Pro Max (128GB)(無鎖有問題)	149	Part 2 B單開好	1162
Apple	I-Phone 13 Pro Max (1TB)(無鎖有問題)	3	Part 2 B單開好	1163
Apple	I-Phone 13 Pro Max (256GB)(無鎖有問題)	165	Part 2 B單開好	1164
Apple	I-Phone 13 Pro Max (512GB)(無鎖有問題)	8	Part 2 B單開好	1165
Apple	I-Phone 13 Pro Max (128GB)(無鎖有問題)	30	Part 2 B單開壞	1166
Apple	I-Phone 13 Pro Max (1TB)(無鎖有問題)	9	Part 2 B單開壞	1167
Apple	I-Phone 13 Pro Max (256GB)(無鎖有問題)	2	Part 2 B單開壞	1168
Apple	I-Phone 13 Pro Max (512GB)(無鎖有問題)	27	Part 2 B單開壞	1169
Apple	I-Phone 13 Pro Max (128GB)(無鎖有問題)	2	Part 2 B單有電流	1170
Apple	I-Phone 13 Pro Max (256GB)(無鎖有問題)	2	Part 2 B單有電流	1171
Apple	I-Phone 13 Pro Max (128GB)(無鎖FID)	5	Part 2 A單	1172
Apple	I-Phone 13 Pro Max (256GB)(無鎖FID)	6	Part 2 A單	1173
Apple	I-Phone 13 Pro Max (512GB)(無鎖FID)	3	Part 2 A單	1174
Apple	I-Phone 13 Pro Max (128GB)(無鎖FID)	56	Part 2 A單(彈窗)	1175
Apple	I-Phone 13 Pro Max (256GB)(無鎖FID)	16	Part 2 A單(彈窗)	1176
Apple	I-Phone 13 Pro Max (128GB)(無鎖FID)	3	Part 2 B單開好	1177
Apple	I-Phone 13 Pro Max (256GB)(無鎖FID)	7	Part 2 B單開好	1178
Apple	I-Phone 13 Pro Max (512GB)(無鎖FID)	2	Part 2 B單開好	1179
Apple	I-Phone 13 Pro Max (128GB)	2	Part 2 A單	1180
Apple	I-Phone 13 Pro Max (128GB)	3	Part 2 B單開好	1181
Apple	I-Phone 13 Pro Max (256GB)	2	Part 2 B單開好	1182
Apple	I-Phone 13 Pro Max (512GB)	1	Part 2 B單開好	1183
Apple	I-Phone 13 Pro Max (128GB)	24	Part 2 B單開壞	1184
Apple	I-Phone 13 Pro Max (256GB)	6	Part 2 B單開壞	1185
Apple	I-Phone 13 Pro Max (128GB)	2	Part 2 B單有電流	1186
Apple	I-Phone 13 Pro Max (256GB)	4	Part 2 B單有電流	1187
Apple	I-Phone 13 Pro Max (128GB)	17	Part 2 特別供應-B單不開換電即可(僅供參考)	1188
Apple	I-Phone 13 Pro Max (256GB)	6	Part 2 特別供應-B單不開換電即可(僅供參考)	1189
Apple	I-Phone 13 Pro Max (128GB)	21	主板	1190
Apple	I-Phone 13 Pro Max (256GB)	7	主板	1191
Apple	I-Phone 13 Pro Max (128GB)(有問題)	5	Part 2 A單	1192
Apple	I-Phone 13 Pro Max (128GB)(有問題)	1	Part 2 B單開好	1193
Apple	I-Phone 13 Pro Max (128GB)(有問題)	3	Part 2 B單開壞	1194

Apple	I-Phone 13 Pro Max (128GB)無鎖	6	主板	1195
Apple	I-Phone 13 Pro Max (256GB)無鎖	3	主板	1196
Apple	I-Phone 13 Pro 合計	470	匯總	1197
Apple	I-Phone 13 Pro (128GB)無鎖	1	A單(靚)(全功能)	1198
Apple	I-Phone 13 Pro (256GB)無鎖	1	A單(靚)(後鏡框爆)(全功能)	1199
Apple	I-Phone 13 Pro (256GB)無鎖	3	A單(靚)(後爆)(全功能)	1200
Apple	I-Phone 13 Pro (128GB)無鎖	2	A單(靚)(全功能)(彈窗)	1201
Apple	I-Phone 13 Pro (128GB)無鎖	2	A單(靚1)(全功能)	1202
Apple	I-Phone 13 Pro (256GB)無鎖	1	A單(靚1)(全功能)	1203
Apple	I-Phone 13 Pro (128GB)無鎖	1	A單(靚1)(後爆)(全功能)	1204
Apple	I-Phone 13 Pro (1TB)無鎖	1	A單(靚1)(後爆)(全功能)	1205
Apple	I-Phone 13 Pro (256GB)無鎖	7	A單(靚1)(後爆)(全功能)	1206
Apple	I-Phone 13 Pro (128GB)無鎖	1	A單(靚1)(後鏡框爆)	1207
Apple	I-Phone 13 Pro (256GB)無鎖	2	A單(靚1)(後鏡框爆)	1208
Apple	I-Phone 13 Pro (128GB)無鎖	1	A單(靚1)(全功能)(彈窗)	1209
Apple	I-Phone 13 Pro (256GB)無鎖	3	A單(靚1)(全功能)(彈窗)	1210
Apple	I-Phone 13 Pro (128GB)無鎖	8	A單(靚1)(後爆)(全功能)(彈窗)	1211
Apple	I-Phone 13 Pro (256GB)無鎖	3	A單(全功能)	1212
Apple	I-Phone 13 Pro (512GB)無鎖	1	A單(後鏡框爆)(全功能)	1213
Apple	I-Phone 13 Pro (128GB)無鎖	5	A單(後爆)(全功能)	1214
Apple	I-Phone 13 Pro (1TB)無鎖	2	A單(後爆)(全功能)	1215
Apple	I-Phone 13 Pro (256GB)無鎖	8	A單(後爆)(全功能)	1216
Apple	I-Phone 13 Pro (128GB)無鎖	1	A單	1217
Apple	I-Phone 13 Pro (256GB)無鎖	1	A單	1218
Apple	I-Phone 13 Pro (128GB)無鎖	1	A單(後爆)	1219
Apple	I-Phone 13 Pro (128GB)無鎖	2	A單(全功能)(彈窗)	1220
Apple	I-Phone 13 Pro (128GB)無鎖	6	A單(後爆)(全功能)(彈窗)	1221
Apple	I-Phone 13 Pro (256GB)無鎖	2	A單(後爆)(全功能)(彈窗)	1222
Apple	I-Phone 13 Pro (128GB)無鎖	13	A單(彈窗)	1223
Apple	I-Phone 13 Pro (1TB)無鎖	1	A單(彈窗)	1224
Apple	I-Phone 13 Pro (256GB)無鎖	4	A單(彈窗)	1225
Apple	I-Phone 13 Pro (512GB)無鎖	2	A單(彈窗)	1226
Apple	I-Phone 13 Pro (256GB)無鎖	1	A單(後鏡框爆)(彈窗)	1227
Apple	I-Phone 13 Pro (128GB)無鎖	13	A單(後爆)(彈窗)	1228
Apple	I-Phone 13 Pro (256GB)無鎖	5	A單(後爆)(彈窗)	1229
Apple	I-Phone 13 Pro (128GB)無鎖	4	B單開好(全功能)	1230
Apple	I-Phone 13 Pro (256GB)無鎖	6	B單開好(全功能)	1231
Apple	I-Phone 13 Pro (512GB)無鎖	3	B單開好(全功能)	1232
Apple	I-Phone 13 Pro (128GB)無鎖	3	B單開好	1233
Apple	I-Phone 13 Pro (256GB)無鎖	1	B單開好	1234
Apple	I-Phone 13 Pro (128GB)無鎖	7	B單開好(全功能)(彈窗)	1235
Apple	I-Phone 13 Pro (256GB)無鎖	2	B單開好(全功能)(彈窗)	1236
Apple	I-Phone 13 Pro (128GB)無鎖	3	B單開好(彈窗)	1237
Apple	I-Phone 13 Pro (256GB)無鎖	5	B單開好(彈窗)	1238
Apple	I-Phone 13 Pro (128GB)無鎖	1	B單開壞(全功能)	1239
Apple	I-Phone 13 Pro (128GB)無鎖	8	B單開壞(FID功能好)	1240
Apple	I-Phone 13 Pro (256GB)無鎖	2	B單開壞(FID功能好)	1241
Apple	I-Phone 13 Pro (512GB)無鎖	1	B單開壞(FID功能好)	1242
Apple	I-Phone 13 Pro (128GB)無鎖	23	B單開壞	1243
Apple	I-Phone 13 Pro (1TB)無鎖	1	B單開壞	1244
Apple	I-Phone 13 Pro (256GB)無鎖	6	B單開壞	1245
Apple	I-Phone 13 Pro (512GB)無鎖	1	B單開壞	1246
Apple	I-Phone 13 Pro (128GB)無鎖	2	B單開壞(FID功能好)(彈窗)	1247
Apple	I-Phone 13 Pro (512GB)無鎖	1	B單開壞(彈窗)	1248
Apple	I-Phone 13 Pro (128GB)無鎖	85	B單有電流	1249
Apple	I-Phone 13 Pro (256GB)無鎖	8	B單有電流	1250
Apple	I-Phone 13 Pro (128GB)無鎖	83	特別供應-B單不開換電即可(僅供參考)	1251
Apple	I-Phone 13 Pro (1TB)無鎖	1	特別供應-B單不開換電即可(僅供參考)	1252
Apple	I-Phone 13 Pro (256GB)無鎖	17	特別供應-B單不開換電即可(僅供參考)	1253
Apple	I-Phone 13 Pro (512GB)無鎖	1	特別供應-B單不開換電即可(僅供參考)	1254
Apple	I-Phone 13 Pro (128GB)(無鎖有問題)	12	Part 2 A單	1255
Apple	I-Phone 13 Pro (1TB)(無鎖有問題)	1	Part 2 A單	1256
Apple	I-Phone 13 Pro (256GB)(無鎖有問題)	1	Part 2 A單	1257
Apple	I-Phone 13 Pro (128GB)(無鎖有問題)	11	Part 2 B單開好	1258
Apple	I-Phone 13 Pro (128GB)(無鎖有問題)	1	Part 2 B單開壞	1259
Apple	I-Phone 13 Pro (256GB)(無鎖有問題)	1	Part 2 B單開壞	1260
Apple	I-Phone 13 Pro (128GB)(無鎖有問題)	3	Part 2 B單有電流	1261
Apple	I-Phone 13 Pro (128GB)(無鎖FID)	11	Part 2 A單	1262
Apple	I-Phone 13 Pro (256GB)(無鎖FID)	2	Part 2 A單	1263
Apple	I-Phone 13 Pro (128GB)(無鎖FID)	3	Part 2 B單開好	1264
Apple	I-Phone 13 Pro (128GB)	16	Part 2 B單開壞	1265

Apple	I-Phone 13 Pro (256GB)	9	Part 2 B單開壞	1266
Apple	I-Phone 13 Pro (512GB)	1	Part 2 B單開壞	1267
Apple	I-Phone 13 Pro (128GB)	4	Part 2 B單有電流	1268
Apple	I-Phone 13 Pro (256GB)	1	Part 2 B單有電流	1269
Apple	I-Phone 13 Pro (128GB)	2	Part 2 特別供應-B單不開換電即可(僅供參考)	1270
Apple	I-Phone 13 Pro (256GB)	2	Part 2 特別供應-B單不開換電即可(僅供參考)	1271
Apple	I-Phone 13 Pro (128GB)	5	主板	1272
Apple	I-Phone 13 Pro (256GB)	2	主板	1273
Apple	I-Phone 13 Pro (256GB)(有問題)	1	Part 2 A單	1274
Apple	I-Phone 13 Pro (128GB)(有問題)	1	Part 2 B單開壞	1275
Apple	I-Phone 13 合計	1705	匯總	1276
Apple	I-Phone 13 (128GB)無鎖	2	A單(靚)(全功能)	1277
Apple	I-Phone 13 (256GB)無鎖	1	A單(靚)(全功能)	1278
Apple	I-Phone 13 (128GB)無鎖	1	A單(靚)(後鏡框爆)(全功能)	1279
Apple	I-Phone 13 (128GB)無鎖	16	A單(靚)(後爆)(全功能)	1280
Apple	I-Phone 13 (128GB)無鎖	1	A單(靚)	1281
Apple	I-Phone 13 (128GB)無鎖	12	A單(靚1)(全功能)	1282
Apple	I-Phone 13 (256GB)無鎖	2	A單(靚1)(全功能)	1283
Apple	I-Phone 13 (512GB)無鎖	1	A單(靚1)(全功能)	1284
Apple	I-Phone 13 (128GB)無鎖	5	A單(靚1)(後鏡框爆)(全功能)	1285
Apple	I-Phone 13 (128GB)無鎖	63	A單(靚1)(後爆)(全功能)	1286
Apple	I-Phone 13 (256GB)無鎖	13	A單(靚1)(後爆)(全功能)	1287
Apple	I-Phone 13 (128GB)無鎖	3	A單(靚1)	1288
Apple	I-Phone 13 (128GB)無鎖	62	A單(靚1)(全功能)(彈窗)	1289
Apple	I-Phone 13 (256GB)無鎖	5	A單(靚1)(全功能)(彈窗)	1290
Apple	I-Phone 13 (128GB)無鎖	10	A單(靚1)(後爆)(全功能)(彈窗)	1291
Apple	I-Phone 13 (256GB)無鎖	2	A單(靚1)(後爆)(全功能)(彈窗)	1292
Apple	I-Phone 13 (128GB)無鎖	22	A單(全功能)	1293
Apple	I-Phone 13 (256GB)無鎖	5	A單(全功能)	1294
Apple	I-Phone 13 (512GB)無鎖	1	A單(全功能)	1295
Apple	I-Phone 13 (128GB)無鎖	9	A單(後鏡框爆)(全功能)	1296
Apple	I-Phone 13 (256GB)無鎖	1	A單(後鏡框爆)(全功能)	1297
Apple	I-Phone 13 (512GB)無鎖	1	A單(後鏡框爆)(全功能)	1298
Apple	I-Phone 13 (128GB)無鎖	39	A單(後爆)(全功能)	1299
Apple	I-Phone 13 (256GB)無鎖	7	A單(後爆)(全功能)	1300
Apple	I-Phone 13 (128GB)無鎖	8	A單	1301
Apple	I-Phone 13 (128GB)無鎖	13	A單(後爆)	1302
Apple	I-Phone 13 (128GB)無鎖	5	A單(全功能)(彈窗)	1303
Apple	I-Phone 13 (256GB)無鎖	3	A單(全功能)(彈窗)	1304
Apple	I-Phone 13 (512GB)無鎖	1	A單(全功能)(彈窗)	1305
Apple	I-Phone 13 (128GB)無鎖	2	A單(後鏡框爆)(全功能)(彈窗)	1306
Apple	I-Phone 13 (128GB)無鎖	26	A單(後爆)(全功能)(彈窗)	1307
Apple	I-Phone 13 (256GB)無鎖	8	A單(後爆)(全功能)(彈窗)	1308
Apple	I-Phone 13 (128GB)無鎖	10	A單(彈窗)	1309
Apple	I-Phone 13 (256GB)無鎖	13	A單(彈窗)	1310
Apple	I-Phone 13 (128GB)無鎖	8	A單(後鏡框爆)(彈窗)	1311
Apple	I-Phone 13 (128GB)無鎖	10	A單(後爆)(彈窗)	1312
Apple	I-Phone 13 (256GB)無鎖	2	A單(後爆)(彈窗)	1313
Apple	I-Phone 13 (128GB)無鎖	90	B單開好(全功能)	1314
Apple	I-Phone 13 (256GB)無鎖	9	B單開好(全功能)	1315
Apple	I-Phone 13 (128GB)無鎖	2	B單開好	1316
Apple	I-Phone 13 (128GB)無鎖	75	B單開好(全功能)(彈窗)	1317
Apple	I-Phone 13 (256GB)無鎖	6	B單開好(全功能)(彈窗)	1318
Apple	I-Phone 13 (128GB)無鎖	85	B單開好(彈窗)	1319
Apple	I-Phone 13 (256GB)無鎖	5	B單開好(彈窗)	1320
Apple	I-Phone 13 (128GB)無鎖	142	B單開壞(FID功能好)	1321
Apple	I-Phone 13 (256GB)無鎖	6	B單開壞(FID功能好)	1322
Apple	I-Phone 13 (512GB)無鎖	4	B單開壞(FID功能好)	1323
Apple	I-Phone 13 (128GB)無鎖	218	B單開壞	1324
Apple	I-Phone 13 (256GB)無鎖	18	B單開壞	1325
Apple	I-Phone 13 (512GB)無鎖	3	B單開壞	1326
Apple	I-Phone 13 (128GB)無鎖	5	B單有電流	1327
Apple	I-Phone 13 (128GB)無鎖	345	特別供應-B單不開換電即可(僅供參考)	1328
Apple	I-Phone 13 (256GB)無鎖	25	特別供應-B單不開換電即可(僅供參考)	1329
Apple	I-Phone 13 (512GB)無鎖	1	特別供應-B單不開換電即可(僅供參考)	1330
Apple	I-Phone 13 (128GB)(無鎖有問題)	17	Part 2 A單	1331
Apple	I-Phone 13 (256GB)(無鎖有問題)	3	Part 2 A單	1332
Apple	I-Phone 13 (128GB)(無鎖有問題)	13	Part 2 B單開好	1333
Apple	I-Phone 13 (256GB)(無鎖有問題)	1	Part 2 B單開好	1334
Apple	I-Phone 13 (128GB)(無鎖有問題)	122	Part 2 B單開壞	1335
Apple	I-Phone 13 (256GB)(無鎖有問題)	1	Part 2 B單開壞	1336

Apple	I-Phone 13 (128GB)(無鎖有問題)	4	Part 2 B單有電流	1337
Apple	I-Phone 13 (128GB)(無鎖FID)	10	Part 2 A單	1338
Apple	I-Phone 13 (128GB)(無鎖FID)	29	Part 2 B單開好	1339
Apple	I-Phone 13 (128GB)(無鎖FID)	7	Part 2 B單開好(彈窗)	1340
Apple	I-Phone 13 (256GB)(無鎖FID)	1	Part 2 B單開好(彈窗)	1341
Apple	I-Phone 13 (128GB)	2	Part 2 B單開好	1342
Apple	I-Phone 13 (128GB)	23	Part 2 B單開壞	1343
Apple	I-Phone 13 (256GB)	1	Part 2 B單開壞	1344
Apple	I-Phone 13 (128GB)	15	Part 2 B單有電流	1345
Apple	I-Phone 13 (512GB)	1	Part 2 B單有電流	1346
Apple	I-Phone 13 (128GB)	3	Part 2 特別供應-B單不開換電即可(僅供參考)	1347
Apple	I-Phone 13 (128GB)	13	主板	1348
Apple	I-Phone 13 (256GB)	1	主板	1349
Apple	I-Phone 13 (128GB)(有問題)	2	Part 2 A單	1350
Apple	I-Phone 13 (128GB)(有問題)	2	Part 2 B單開好	1351
Apple	I-Phone 13 (256GB)(有問題)	1	Part 2 B單開好	1352
Apple	I-Phone 13 (256GB)(有問題)	1	Part 2 B單開壞	1353
Apple	I-Phone 13 Mini 合計	409	匯總	1354
Apple	I-Phone 13 Mini (128GB)無鎖	1	A單(靚)	1355
Apple	I-Phone 13 Mini (128GB)無鎖	1	A單(靚)(全功能)(彈窗)	1356
Apple	I-Phone 13 Mini (128GB)無鎖	1	A單(靚)(彈窗)	1357
Apple	I-Phone 13 Mini (128GB)無鎖	8	A單(靚1)(全功能)	1358
Apple	I-Phone 13 Mini (128GB)無鎖	1	A單(靚1)(後爆)(全功能)	1359
Apple	I-Phone 13 Mini (128GB)無鎖	14	A單(靚1)(全功能)(彈窗)	1360
Apple	I-Phone 13 Mini (128GB)無鎖	3	A單(全功能)	1361
Apple	I-Phone 13 Mini (256GB)無鎖	1	A單(全功能)	1362
Apple	I-Phone 13 Mini (128GB)無鎖	1	A單(後鏡框爆)(全功能)	1363
Apple	I-Phone 13 Mini (128GB)無鎖	2	A單(後爆)(全功能)	1364
Apple	I-Phone 13 Mini (128GB)無鎖	7	A單(後鏡框爆)	1365
Apple	I-Phone 13 Mini (128GB)無鎖	7	A單(全功能)(彈窗)	1366
Apple	I-Phone 13 Mini (128GB)無鎖	3	A單(後鏡框爆)(全功能)(彈窗)	1367
Apple	I-Phone 13 Mini (128GB)無鎖	5	A單(彈窗)	1368
Apple	I-Phone 13 Mini (256GB)無鎖	2	A單(彈窗)	1369
Apple	I-Phone 13 Mini (128GB)無鎖	3	A單(後鏡框爆)(彈窗)	1370
Apple	I-Phone 13 Mini (128GB)無鎖	2	A單(後爆)(彈窗)	1371
Apple	I-Phone 13 Mini (128GB)無鎖	5	B單開好(全功能)(彈窗)	1372
Apple	I-Phone 13 Mini (128GB)無鎖	3	B單開好(彈窗)	1373
Apple	I-Phone 13 Mini (256GB)無鎖	1	B單開好(彈窗)	1374
Apple	I-Phone 13 Mini (128GB)無鎖	8	B單開壞(全功能)	1375
Apple	I-Phone 13 Mini (128GB)無鎖	79	B單開壞(FID功能好)	1376
Apple	I-Phone 13 Mini (256GB)無鎖	7	B單開壞(FID功能好)	1377
Apple	I-Phone 13 Mini (128GB)無鎖	110	B單開壞	1378
Apple	I-Phone 13 Mini (256GB)無鎖	20	B單開壞	1379
Apple	I-Phone 13 Mini (512GB)無鎖	2	B單開壞	1380
Apple	I-Phone 13 Mini (128GB)無鎖	40	B單有電流	1381
Apple	I-Phone 13 Mini (256GB)無鎖	1	B單有電流	1382
Apple	I-Phone 13 Mini (512GB)無鎖	1	B單有電流	1383
Apple	I-Phone 13 Mini (128GB)無鎖	16	特別供應-B單不開換電即可(僅供參考)	1384
Apple	I-Phone 13 Mini (256GB)無鎖	1	特別供應-B單不開換電即可(僅供參考)	1385
Apple	I-Phone 13 Mini (128GB)(無鎖有問題)	9	Part 2 A單	1386
Apple	I-Phone 13 Mini (256GB)(無鎖有問題)	4	Part 2 A單	1387
Apple	I-Phone 13 Mini (256GB)(無鎖有問題)	1	Part 2 B單開好	1388
Apple	I-Phone 13 Mini (128GB)(無鎖有問題)	11	Part 2 B單開壞	1389
Apple	I-Phone 13 Mini (256GB)(無鎖有問題)	3	Part 2 B單開壞	1390
Apple	I-Phone 13 Mini (128GB)(無鎖FID)	5	Part 2 B單開好	1391
Apple	I-Phone 13 Mini (128GB)	5	Part 2 B單開壞	1392
Apple	I-Phone 13 Mini (128GB)	5	Part 2 B單有電流	1393
Apple	I-Phone 13 Mini (128GB)	5	Part 2 特別供應-B單不開換電即可(僅供參考)	1394
Apple	I-Phone 13 Mini (128GB)	4	主板	1395
Apple	I-Phone 13 Mini (128GB)(有問題)	1	Part 2 A單	1396
Apple	I-Phone 12 Pro Max 合計	1204	匯總	1397
Apple	I-Phone 12 Pro Max (128GB)無鎖	1	N.New單	1398
Apple	I-Phone 12 Pro Max (128GB)無鎖	5	A單(靚)(全功能)	1399
Apple	I-Phone 12 Pro Max (128GB)無鎖	1	A單(靚)(後鏡框爆)(全功能)	1400
Apple	I-Phone 12 Pro Max (128GB)無鎖	3	A單(靚)(後爆)(全功能)	1401
Apple	I-Phone 12 Pro Max (256GB)無鎖	1	A單(靚)(後爆)(全功能)	1402
Apple	I-Phone 12 Pro Max (128GB)無鎖	1	A單(靚)(全功能)(彈窗)	1403
Apple	I-Phone 12 Pro Max (256GB)無鎖	6	A單(靚)(彈窗)	1404
Apple	I-Phone 12 Pro Max (128GB)無鎖	4	A單(靚1)(全功能)	1405
Apple	I-Phone 12 Pro Max (256GB)無鎖	2	A單(靚1)(全功能)	1406
Apple	I-Phone 12 Pro Max (128GB)無鎖	1	A單(靚1)(後鏡框爆)(全功能)	1407

Apple	I-Phone 12 Pro Max (128GB)無鎖	1	A單(靚1)(後爆)(全功能)	1408
Apple	I-Phone 12 Pro Max (256GB)無鎖	1	A單(靚1)(後爆)(全功能)	1409
Apple	I-Phone 12 Pro Max (128GB)無鎖	1	A單(靚1)	1410
Apple	I-Phone 12 Pro Max (128GB)無鎖	7	A單(靚1)(後爆)	1411
Apple	I-Phone 12 Pro Max (256GB)無鎖	1	A單(靚1)(後爆)	1412
Apple	I-Phone 12 Pro Max (128GB)無鎖	16	A單(靚1)(全功能)(彈窗)	1413
Apple	I-Phone 12 Pro Max (256GB)無鎖	5	A單(靚1)(全功能)(彈窗)	1414
Apple	I-Phone 12 Pro Max (128GB)無鎖	20	A單(靚1)(後爆)(全功能)(彈窗)	1415
Apple	I-Phone 12 Pro Max (256GB)無鎖	4	A單(靚1)(後爆)(全功能)(彈窗)	1416
Apple	I-Phone 12 Pro Max (128GB)無鎖	9	A單(靚1)(彈窗)	1417
Apple	I-Phone 12 Pro Max (256GB)無鎖	14	A單(靚1)(彈窗)	1418
Apple	I-Phone 12 Pro Max (256GB)無鎖	3	A單(全功能)	1419
Apple	I-Phone 12 Pro Max (512GB)無鎖	1	A單(全功能)	1420
Apple	I-Phone 12 Pro Max (128GB)無鎖	4	A單(後爆)(全功能)	1421
Apple	I-Phone 12 Pro Max (256GB)無鎖	2	A單(後爆)(全功能)	1422
Apple	I-Phone 12 Pro Max (128GB)無鎖	6	A單	1423
Apple	I-Phone 12 Pro Max (256GB)無鎖	2	A單	1424
Apple	I-Phone 12 Pro Max (512GB)無鎖	1	A單	1425
Apple	I-Phone 12 Pro Max (128GB)無鎖	4	A單(後鏡框爆)	1426
Apple	I-Phone 12 Pro Max (256GB)無鎖	1	A單(後鏡框爆)	1427
Apple	I-Phone 12 Pro Max (512GB)無鎖	1	A單(後鏡框爆)	1428
Apple	I-Phone 12 Pro Max (128GB)無鎖	1	A單(後爆)	1429
Apple	I-Phone 12 Pro Max (256GB)無鎖	1	A單(後爆)	1430
Apple	I-Phone 12 Pro Max (128GB)無鎖	5	A單(全功能)(彈窗)	1431
Apple	I-Phone 12 Pro Max (256GB)無鎖	1	A單(全功能)(彈窗)	1432
Apple	I-Phone 12 Pro Max (512GB)無鎖	1	A單(全功能)(彈窗)	1433
Apple	I-Phone 12 Pro Max (128GB)無鎖	6	A單(後鏡框爆)(全功能)(彈窗)	1434
Apple	I-Phone 12 Pro Max (128GB)無鎖	22	A單(後爆)(全功能)(彈窗)	1435
Apple	I-Phone 12 Pro Max (256GB)無鎖	2	A單(後爆)(全功能)(彈窗)	1436
Apple	I-Phone 12 Pro Max (512GB)無鎖	1	A單(後爆)(全功能)(彈窗)	1437
Apple	I-Phone 12 Pro Max (128GB)無鎖	14	A單(彈窗)	1438
Apple	I-Phone 12 Pro Max (256GB)無鎖	7	A單(彈窗)	1439
Apple	I-Phone 12 Pro Max (512GB)無鎖	3	A單(彈窗)	1440
Apple	I-Phone 12 Pro Max (128GB)無鎖	2	A單(後鏡框爆)(彈窗)	1441
Apple	I-Phone 12 Pro Max (256GB)無鎖	1	A單(後鏡框爆)(彈窗)	1442
Apple	I-Phone 12 Pro Max (128GB)無鎖	43	A單(後爆)(彈窗)	1443
Apple	I-Phone 12 Pro Max (256GB)無鎖	14	A單(後爆)(彈窗)	1444
Apple	I-Phone 12 Pro Max (128GB)無鎖	1	B單開好(全功能)	1445
Apple	I-Phone 12 Pro Max (256GB)無鎖	1	B單開好(全功能)	1446
Apple	I-Phone 12 Pro Max (512GB)無鎖	1	B單開好	1447
Apple	I-Phone 12 Pro Max (128GB)無鎖	37	B單開好(全功能)(彈窗)	1448
Apple	I-Phone 12 Pro Max (256GB)無鎖	3	B單開好(全功能)(彈窗)	1449
Apple	I-Phone 12 Pro Max (128GB)無鎖	34	B單開好(彈窗)	1450
Apple	I-Phone 12 Pro Max (256GB)無鎖	13	B單開好(彈窗)	1451
Apple	I-Phone 12 Pro Max (512GB)無鎖	2	B單開好(彈窗)	1452
Apple	I-Phone 12 Pro Max (128GB)無鎖	14	B單開壞(全功能)	1453
Apple	I-Phone 12 Pro Max (256GB)無鎖	18	B單開壞(全功能)	1454
Apple	I-Phone 12 Pro Max (128GB)無鎖	17	B單開壞(FID功能好)	1455
Apple	I-Phone 12 Pro Max (256GB)無鎖	2	B單開壞(FID功能好)	1456
Apple	I-Phone 12 Pro Max (512GB)無鎖	1	B單開壞(FID功能好)	1457
Apple	I-Phone 12 Pro Max (128GB)無鎖	119	B單開壞	1458
Apple	I-Phone 12 Pro Max (256GB)無鎖	44	B單開壞	1459
Apple	I-Phone 12 Pro Max (512GB)無鎖	8	B單開壞	1460
Apple	I-Phone 12 Pro Max (128GB)無鎖	19	B單開壞(FID功能好)(彈窗)	1461
Apple	I-Phone 12 Pro Max (128GB)無鎖	16	B單開壞(彈窗)	1462
Apple	I-Phone 12 Pro Max (256GB)無鎖	3	B單開壞(彈窗)	1463
Apple	I-Phone 12 Pro Max (128GB)無鎖	145	B單有電流	1464
Apple	I-Phone 12 Pro Max (256GB)無鎖	35	B單有電流	1465
Apple	I-Phone 12 Pro Max (512GB)無鎖	3	B單有電流	1466
Apple	I-Phone 12 Pro Max (128GB)無鎖	202	特別供應-B單不開換電即可(僅供參考)	1467
Apple	I-Phone 12 Pro Max (256GB)無鎖	24	特別供應-B單不開換電即可(僅供參考)	1468
Apple	I-Phone 12 Pro Max (512GB)無鎖	4	特別供應-B單不開換電即可(僅供參考)	1469
Apple	I-Phone 12 Pro Max (128GB)(無鎖有問題)	20	Part 2 A單	1470
Apple	I-Phone 12 Pro Max (256GB)(無鎖有問題)	3	Part 2 A單	1471
Apple	I-Phone 12 Pro Max (512GB)(無鎖有問題)	4	Part 2 A單	1472
Apple	I-Phone 12 Pro Max (128GB)(無鎖有問題)	6	Part 2 A單(彈窗)	1473
Apple	I-Phone 12 Pro Max (256GB)(無鎖有問題)	4	Part 2 A單(彈窗)	1474
Apple	I-Phone 12 Pro Max (128GB)(無鎖有問題)	13	Part 2 B單開好	1475
Apple	I-Phone 12 Pro Max (256GB)(無鎖有問題)	5	Part 2 B單開好	1476
Apple	I-Phone 12 Pro Max (128GB)(無鎖有問題)	19	Part 2 B單開壞	1477
Apple	I-Phone 12 Pro Max (256GB)(無鎖有問題)	7	Part 2 B單開壞	1478

Apple	I-Phone 12 Pro Max (512GB)(無鎖有問題)	2	Part 2 B單開壞	1479
Apple	I-Phone 12 Pro Max (128GB)(無鎖有問題)	2	Part 2 B單有電流	1480
Apple	I-Phone 12 Pro Max (256GB)(無鎖有問題)	1	Part 2 B單有電流	1481
Apple	I-Phone 12 Pro Max (128GB)(無鎖FID)	4	Part 2 A單	1482
Apple	I-Phone 12 Pro Max (256GB)(無鎖FID)	1	Part 2 A單	1483
Apple	I-Phone 12 Pro Max (512GB)(無鎖FID)	1	Part 2 A單	1484
Apple	I-Phone 12 Pro Max (128GB)(無鎖FID)	27	Part 2 A單(彈窗)	1485
Apple	I-Phone 12 Pro Max (512GB)(無鎖FID)	1	Part 2 A單(彈窗)	1486
Apple	I-Phone 12 Pro Max (128GB)(無鎖FID)	3	Part 2 B單開好	1487
Apple	I-Phone 12 Pro Max (256GB)(無鎖FID)	2	Part 2 B單開好	1488
Apple	I-Phone 12 Pro Max (128GB)(無鎖FID)	3	Part 2 B單開好(彈窗)	1489
Apple	I-Phone 12 Pro Max (512GB)(無鎖FID)	2	Part 2 B單開好(彈窗)	1490
Apple	I-Phone 12 Pro Max (128GB)	3	Part 2 A單	1491
Apple	I-Phone 12 Pro Max (256GB)	3	Part 2 A單	1492
Apple	I-Phone 12 Pro Max (128GB)	5	Part 2 B單開好	1493
Apple	I-Phone 12 Pro Max (128GB)	10	Part 2 B單開壞	1494
Apple	I-Phone 12 Pro Max (256GB)	2	Part 2 B單開壞	1495
Apple	I-Phone 12 Pro Max (128GB)	6	Part 2 B單有電流	1496
Apple	I-Phone 12 Pro Max (256GB)	2	Part 2 B單有電流	1497
Apple	I-Phone 12 Pro Max (128GB)	6	Part 2 特別供應-B單不開換電即可(僅供參考)	1498
Apple	I-Phone 12 Pro Max (256GB)	4	Part 2 特別供應-B單不開換電即可(僅供參考)	1499
Apple	I-Phone 12 Pro Max (128GB)	3	主板	1500
Apple	I-Phone 12 Pro Max (256GB)	1	主板	1501
Apple	I-Phone 12 Pro Max (128GB)(有問題)	4	Part 2 A單	1502
Apple	I-Phone 12 Pro Max (256GB)(有問題)	3	Part 2 A單	1503
Apple	I-Phone 12 Pro Max (128GB)(有問題)	1	Part 2 B單開好	1504
Apple	I-Phone 12 Pro Max (128GB)(有問題)	1	Part 2 B單開壞	1505
Apple	I-Phone 12 Pro Max (256GB)(有問題)	1	Part 2 B單開壞	1506
Apple	I-Phone 12 Pro 合計	1007	匯總	1507
Apple	I-Phone 12 Pro (128GB)無鎖	1	N.New單	1508
Apple	I-Phone 12 Pro (128GB)無鎖	5	A單(靚)(全功能)	1509
Apple	I-Phone 12 Pro (256GB)無鎖	1	A單(靚)(全功能)	1510
Apple	I-Phone 12 Pro (128GB)無鎖	2	A單(靚)	1511
Apple	I-Phone 12 Pro (256GB)無鎖	1	A單(靚)	1512
Apple	I-Phone 12 Pro (128GB)無鎖	6	A單(靚)(全功能)(彈窗)	1513
Apple	I-Phone 12 Pro (128GB)無鎖	1	A單(靚)(後爆)(全功能)(彈窗)	1514
Apple	I-Phone 12 Pro (256GB)無鎖	1	A單(靚1)(全功能)	1515
Apple	I-Phone 12 Pro (512GB)無鎖	1	A單(靚1)(全功能)	1516
Apple	I-Phone 12 Pro (128GB)無鎖	2	A單(靚1)(後鏡框爆)(全功能)	1517
Apple	I-Phone 12 Pro (128GB)無鎖	7	A單(靚1)(後爆)(全功能)	1518
Apple	I-Phone 12 Pro (256GB)無鎖	3	A單(靚1)(後爆)(全功能)	1519
Apple	I-Phone 12 Pro (512GB)無鎖	2	A單(靚1)(後爆)(全功能)	1520
Apple	I-Phone 12 Pro (256GB)無鎖	1	A單(靚1)	1521
Apple	I-Phone 12 Pro (128GB)無鎖	1	A單(靚1)(後爆)	1522
Apple	I-Phone 12 Pro (128GB)無鎖	4	A單(靚1)(全功能)(彈窗)	1523
Apple	I-Phone 12 Pro (256GB)無鎖	2	A單(靚1)(全功能)(彈窗)	1524
Apple	I-Phone 12 Pro (512GB)無鎖	5	A單(靚1)(全功能)(彈窗)	1525
Apple	I-Phone 12 Pro (128GB)無鎖	2	A單(靚1)(後爆)(全功能)(彈窗)	1526
Apple	I-Phone 12 Pro (256GB)無鎖	5	A單(靚1)(後爆)(全功能)(彈窗)	1527
Apple	I-Phone 12 Pro (512GB)無鎖	1	A單(靚1)(後爆)(全功能)(彈窗)	1528
Apple	I-Phone 12 Pro (128GB)無鎖	13	A單(靚1)(彈窗)	1529
Apple	I-Phone 12 Pro (128GB)無鎖	1	A單(全功能)	1530
Apple	I-Phone 12 Pro (256GB)無鎖	4	A單(全功能)	1531
Apple	I-Phone 12 Pro (512GB)無鎖	2	A單(全功能)	1532
Apple	I-Phone 12 Pro (128GB)無鎖	5	A單(後爆)(全功能)	1533
Apple	I-Phone 12 Pro (256GB)無鎖	6	A單(後爆)(全功能)	1534
Apple	I-Phone 12 Pro (512GB)無鎖	1	A單(後爆)(全功能)	1535
Apple	I-Phone 12 Pro (128GB)無鎖	15	A單	1536
Apple	I-Phone 12 Pro (256GB)無鎖	5	A單	1537
Apple	I-Phone 12 Pro (512GB)無鎖	1	A單	1538
Apple	I-Phone 12 Pro (128GB)無鎖	5	A單(後鏡框爆)	1539
Apple	I-Phone 12 Pro (256GB)無鎖	1	A單(後鏡框爆)	1540
Apple	I-Phone 12 Pro (512GB)無鎖	7	A單(後鏡框爆)	1541
Apple	I-Phone 12 Pro (128GB)無鎖	3	A單(後爆)	1542
Apple	I-Phone 12 Pro (512GB)無鎖	1	A單(後爆)	1543
Apple	I-Phone 12 Pro (128GB)無鎖	16	A單(全功能)(彈窗)	1544
Apple	I-Phone 12 Pro (256GB)無鎖	1	A單(全功能)(彈窗)	1545
Apple	I-Phone 12 Pro (128GB)無鎖	1	A單(後鏡框爆)(全功能)(彈窗)	1546
Apple	I-Phone 12 Pro (128GB)無鎖	4	A單(後爆)(全功能)(彈窗)	1547
Apple	I-Phone 12 Pro (256GB)無鎖	1	A單(後爆)(全功能)(彈窗)	1548
Apple	I-Phone 12 Pro (128GB)無鎖	42	A單(彈窗)	1549

Apple	I-Phone 12 Pro (256GB)無鎖	14	A單(彈窗)	1550
Apple	I-Phone 12 Pro (512GB)無鎖	2	A單(彈窗)	1551
Apple	I-Phone 12 Pro (128GB)無鎖	5	A單(後鏡框爆)(彈窗)	1552
Apple	I-Phone 12 Pro (256GB)無鎖	1	A單(後鏡框爆)(彈窗)	1553
Apple	I-Phone 12 Pro (128GB)無鎖	16	A單(後爆)(彈窗)	1554
Apple	I-Phone 12 Pro (256GB)無鎖	1	A單(後爆)(彈窗)	1555
Apple	I-Phone 12 Pro (512GB)無鎖	1	A單(後爆)(彈窗)	1556
Apple	I-Phone 12 Pro (128GB)無鎖	11	B單開好(全功能)	1557
Apple	I-Phone 12 Pro (256GB)無鎖	2	B單開好(全功能)	1558
Apple	I-Phone 12 Pro (512GB)無鎖	1	B單開好(全功能)	1559
Apple	I-Phone 12 Pro (128GB)無鎖	12	B單開好	1560
Apple	I-Phone 12 Pro (256GB)無鎖	2	B單開好	1561
Apple	I-Phone 12 Pro (128GB)無鎖	30	B單開好(全功能)(彈窗)	1562
Apple	I-Phone 12 Pro (256GB)無鎖	6	B單開好(全功能)(彈窗)	1563
Apple	I-Phone 12 Pro (128GB)無鎖	9	B單開好(彈窗)	1564
Apple	I-Phone 12 Pro (256GB)無鎖	2	B單開好(彈窗)	1565
Apple	I-Phone 12 Pro (512GB)無鎖	1	B單開好(彈窗)	1566
Apple	I-Phone 12 Pro (128GB)無鎖	2	B單開壞(全功能)	1567
Apple	I-Phone 12 Pro (128GB)無鎖	13	B單開壞(FID功能好)	1568
Apple	I-Phone 12 Pro (256GB)無鎖	2	B單開壞(FID功能好)	1569
Apple	I-Phone 12 Pro (512GB)無鎖	1	B單開壞(FID功能好)	1570
Apple	I-Phone 12 Pro (128GB)無鎖	232	B單開壞	1571
Apple	I-Phone 12 Pro (256GB)無鎖	25	B單開壞	1572
Apple	I-Phone 12 Pro (512GB)無鎖	13	B單開壞	1573
Apple	I-Phone 12 Pro (128GB)無鎖	111	B單有電流	1574
Apple	I-Phone 12 Pro (256GB)無鎖	20	B單有電流	1575
Apple	I-Phone 12 Pro (512GB)無鎖	3	B單有電流	1576
Apple	I-Phone 12 Pro (128GB)無鎖	126	特別供應-B單不開換電即可(僅供參考)	1577
Apple	I-Phone 12 Pro (256GB)無鎖	30	特別供應-B單不開換電即可(僅供參考)	1578
Apple	I-Phone 12 Pro (512GB)無鎖	3	特別供應-B單不開換電即可(僅供參考)	1579
Apple	I-Phone 12 Pro (128GB)(無鎖有問題)	11	Part 2 A單	1580
Apple	I-Phone 12 Pro (256GB)(無鎖有問題)	3	Part 2 A單	1581
Apple	I-Phone 12 Pro (512GB)(無鎖有問題)	1	Part 2 A單	1582
Apple	I-Phone 12 Pro (128GB)(無鎖有問題)	6	Part 2 B單開好	1583
Apple	I-Phone 12 Pro (256GB)(無鎖有問題)	4	Part 2 B單開好	1584
Apple	I-Phone 12 Pro (128GB)(無鎖有問題)	21	Part 2 B單開壞	1585
Apple	I-Phone 12 Pro (256GB)(無鎖有問題)	2	Part 2 B單開壞	1586
Apple	I-Phone 12 Pro (512GB)(無鎖有問題)	1	Part 2 B單開壞	1587
Apple	I-Phone 12 Pro (128GB)(無鎖有問題)	1	Part 2 B單有電流	1588
Apple	I-Phone 12 Pro (128GB)(無鎖FID)	4	Part 2 A單	1589
Apple	I-Phone 12 Pro (256GB)(無鎖FID)	2	Part 2 A單	1590
Apple	I-Phone 12 Pro (256GB)(無鎖FID)	1	Part 2 A單(彈窗)	1591
Apple	I-Phone 12 Pro (128GB)(無鎖FID)	4	Part 2 B單開好	1592
Apple	I-Phone 12 Pro (256GB)(無鎖FID)	4	Part 2 B單開好	1593
Apple	I-Phone 12 Pro (512GB)(無鎖FID)	1	Part 2 B單開好	1594
Apple	I-Phone 12 Pro (128GB)	2	Part 2 B單開好	1595
Apple	I-Phone 12 Pro (256GB)	1	Part 2 B單開好	1596
Apple	I-Phone 12 Pro (128GB)	6	Part 2 B單開壞	1597
Apple	I-Phone 12 Pro (256GB)	2	Part 2 B單開壞	1598
Apple	I-Phone 12 Pro (128GB)	8	Part 2 B單有電流	1599
Apple	I-Phone 12 Pro (128GB)	17	Part 2 特別供應-B單不開換電即可(僅供參考)	1600
Apple	I-Phone 12 Pro (128GB)	15	主板	1601
Apple	I-Phone 12 Pro (256GB)	2	主板	1602
Apple	I-Phone 12 Pro (128GB)(有問題)	1	Part 2 B單開好	1603
Apple	I-Phone 12 Pro (256GB)(有問題)	1	Part 2 B單開好	1604
Apple	I-Phone 12 合計	1395	匯總	1605
Apple	I-Phone 12 (64GB)無鎖	2	N.New單(全功能)	1606
Apple	I-Phone 12 (128GB)無鎖	3	A單(靚)(全功能)	1607
Apple	I-Phone 12 (64GB)無鎖	9	A單(靚)(全功能)	1608
Apple	I-Phone 12 (64GB)無鎖	1	A單(靚)	1609
Apple	I-Phone 12 (64GB)無鎖	1	A單(靚)(後爆)	1610
Apple	I-Phone 12 (128GB)無鎖	2	A單(靚)(全功能)(彈窗)	1611
Apple	I-Phone 12 (64GB)無鎖	5	A單(靚)(全功能)(彈窗)	1612
Apple	I-Phone 12 (128GB)無鎖	1	A單(靚1)(全功能)	1613
Apple	I-Phone 12 (256GB)無鎖	1	A單(靚1)(全功能)	1614
Apple	I-Phone 12 (64GB)無鎖	11	A單(靚1)(全功能)	1615
Apple	I-Phone 12 (128GB)無鎖	1	A單(靚1)(後爆)(全功能)	1616
Apple	I-Phone 12 (256GB)無鎖	1	A單(靚1)(後爆)(全功能)	1617
Apple	I-Phone 12 (128GB)無鎖	1	A單(靚1)	1618
Apple	I-Phone 12 (64GB)無鎖	1	A單(靚1)(後爆)	1619
Apple	I-Phone 12 (128GB)無鎖	1	A單(靚1)(全功能)(彈窗)	1620

Apple	I-Phone 12 (64GB)無鎖	2	A單(靚1)(全功能)(彈窗)	1621
Apple	I-Phone 12 (128GB)無鎖	1	A單(全功能)	1622
Apple	I-Phone 12 (64GB)無鎖	4	A單(全功能)	1623
Apple	I-Phone 12 (128GB)無鎖	2	A單(後爆)(全功能)	1624
Apple	I-Phone 12 (256GB)無鎖	1	A單(後爆)(全功能)	1625
Apple	I-Phone 12 (64GB)無鎖	3	A單(後爆)(全功能)	1626
Apple	I-Phone 12 (128GB)無鎖	6	A單	1627
Apple	I-Phone 12 (256GB)無鎖	1	A單	1628
Apple	I-Phone 12 (64GB)無鎖	1	A單	1629
Apple	I-Phone 12 (128GB)無鎖	6	A單(後爆)	1630
Apple	I-Phone 12 (64GB)無鎖	1	A單(後爆)	1631
Apple	I-Phone 12 (128GB)無鎖	1	A單(全功能)(彈窗)	1632
Apple	I-Phone 12 (64GB)無鎖	2	A單(全功能)(彈窗)	1633
Apple	I-Phone 12 (128GB)無鎖	1	A單(後爆)(全功能)(彈窗)	1634
Apple	I-Phone 12 (64GB)無鎖	2	A單(後爆)(全功能)(彈窗)	1635
Apple	I-Phone 12 (128GB)無鎖	2	A單(彈窗)	1636
Apple	I-Phone 12 (64GB)無鎖	5	A單(彈窗)	1637
Apple	I-Phone 12 (256GB)無鎖	1	A單(後爆)(彈窗)	1638
Apple	I-Phone 12 (64GB)無鎖	1	A單(後爆)(彈窗)	1639
Apple	I-Phone 12 (128GB)無鎖	1	B單開好(全功能)	1640
Apple	I-Phone 12 (256GB)無鎖	2	B單開好(全功能)	1641
Apple	I-Phone 12 (64GB)無鎖	20	B單開好(全功能)	1642
Apple	I-Phone 12 (128GB)無鎖	16	B單開好	1643
Apple	I-Phone 12 (256GB)無鎖	1	B單開好	1644
Apple	I-Phone 12 (64GB)無鎖	1	B單開好	1645
Apple	I-Phone 12 (256GB)無鎖	1	B單開好(全功能)(彈窗)	1646
Apple	I-Phone 12 (256GB)無鎖	1	B單開好(彈窗)	1647
Apple	I-Phone 12 (64GB)無鎖	3	B單開好(彈窗)	1648
Apple	I-Phone 12 (64GB)無鎖	1	Part 2 B單開好(彈窗)	1649
Apple	I-Phone 12 (128GB)無鎖	6	B單開壞(全功能)	1650
Apple	I-Phone 12 (64GB)無鎖	1	B單開壞(全功能)	1651
Apple	I-Phone 12 (128GB)無鎖	18	B單開壞(FID功能好)	1652
Apple	I-Phone 12 (256GB)無鎖	1	B單開壞(FID功能好)	1653
Apple	I-Phone 12 (64GB)無鎖	7	B單開壞(FID功能好)	1654
Apple	I-Phone 12 (128GB)無鎖	114	B單開壞	1655
Apple	I-Phone 12 (256GB)無鎖	5	B單開壞	1656
Apple	I-Phone 12 (64GB)無鎖	160	B單開壞	1657
Apple	I-Phone 12 (128GB)無鎖	7	B單開壞(FID功能好)(彈窗)	1658
Apple	I-Phone 12 (64GB)無鎖	3	B單開壞(FID功能好)(彈窗)	1659
Apple	I-Phone 12 (64GB)無鎖	19	B單開壞(彈窗)	1660
Apple	I-Phone 12 (128GB)無鎖	104	B單有電流	1661
Apple	I-Phone 12 (256GB)無鎖	12	B單有電流	1662
Apple	I-Phone 12 (64GB)無鎖	163	B單有電流	1663
Apple	I-Phone 12 (128GB)無鎖	70	特別供應-B單不開換電即可(僅供參考)	1664
Apple	I-Phone 12 (256GB)無鎖	5	特別供應-B單不開換電即可(僅供參考)	1665
Apple	I-Phone 12 (64GB)無鎖	252	特別供應-B單不開換電即可(僅供參考)	1666
Apple	I-Phone 12 (128GB)(無鎖有問題)	9	Part 2 A單	1667
Apple	I-Phone 12 (64GB)(無鎖有問題)	18	Part 2 A單	1668
Apple	I-Phone 12 (64GB)(無鎖有問題)	2	Part 2 A單(彈窗)	1669
Apple	I-Phone 12 (128GB)(無鎖有問題)	10	Part 2 B單開好	1670
Apple	I-Phone 12 (256GB)(無鎖有問題)	1	Part 2 B單開好	1671
Apple	I-Phone 12 (64GB)(無鎖有問題)	24	Part 2 B單開好	1672
Apple	I-Phone 12 (128GB)(無鎖有問題)	23	Part 2 B單開壞	1673
Apple	I-Phone 12 (256GB)(無鎖有問題)	1	Part 2 B單開壞	1674
Apple	I-Phone 12 (64GB)(無鎖有問題)	21	Part 2 B單開壞	1675
Apple	I-Phone 12 (128GB)(無鎖有問題)	2	Part 2 B單有電流	1676
Apple	I-Phone 12 (64GB)(無鎖有問題)	11	Part 2 B單有電流	1677
Apple	I-Phone 12 (128GB)(無鎖FID)	4	Part 2 A單	1678
Apple	I-Phone 12 (256GB)(無鎖FID)	1	Part 2 A單	1679
Apple	I-Phone 12 (64GB)(無鎖FID)	6	Part 2 A單	1680
Apple	I-Phone 12 (128GB)(無鎖FID)	1	Part 2 A單(彈窗)	1681
Apple	I-Phone 12 (64GB)(無鎖FID)	2	Part 2 A單(彈窗)	1682
Apple	I-Phone 12 (128GB)(無鎖FID)	1	Part 2 B單開好	1683
Apple	I-Phone 12 (256GB)(無鎖FID)	1	Part 2 B單開好	1684
Apple	I-Phone 12 (64GB)(無鎖FID)	12	Part 2 B單開好	1685
Apple	I-Phone 12 (128GB)	1	Part 2 A單	1686
Apple	I-Phone 12 (64GB)	1	Part 2 A單	1687
Apple	I-Phone 12 (128GB)	3	Part 2 B單開壞	1688
Apple	I-Phone 12 (64GB)	13	Part 2 B單開壞	1689
Apple	I-Phone 12 (128GB)	4	Part 2 B單有電流	1690
Apple	I-Phone 12 (256GB)	2	Part 2 B單有電流	1691

Apple	I-Phone 12 (64GB)	28	Part 2 B單有電流	1692
Apple	I-Phone 12 (128GB)	15	Part 2 特別供應-B單不開換電即可(僅供參考)	1693
Apple	I-Phone 12 (256GB)	1	Part 2 特別供應-B單不開換電即可(僅供參考)	1694
Apple	I-Phone 12 (64GB)	39	Part 2 特別供應-B單不開換電即可(僅供參考)	1695
Apple	I-Phone 12 (128GB)	3	主板	1696
Apple	I-Phone 12 (256GB)	1	主板	1697
Apple	I-Phone 12 (64GB)	43	主板	1698
Apple	I-Phone 12 (128GB)(有問題)	1	Part 2 A單	1699
Apple	I-Phone 12 (256GB)(有問題)	1	Part 2 A單	1700
Apple	I-Phone 12 (64GB)(有問題)	1	Part 2 A單	1701
Apple	I-Phone 12 (64GB)(有問題)	1	Part 2 B單開好	1702
Apple	I-Phone 12 (128GB)(有問題)	2	Part 2 B單開壞	1703
Apple	I-Phone 12 (64GB)(有問題)	6	Part 2 B單開壞	1704
Apple	I-Phone 12 (64GB)(有問題)	1	Part 2 B單有電流	1705
Apple	I-Phone 12 Mini 合計	1197	匯總	1706
Apple	I-Phone 12 Mini (128GB)無鎖	1	N.New單(全功能)	1707
Apple	I-Phone 12 Mini (64GB)無鎖	4	N.New單(全功能)	1708
Apple	I-Phone 12 Mini (128GB)無鎖	6	N.New單	1709
Apple	I-Phone 12 Mini (64GB)無鎖	2	N.New單	1710
Apple	I-Phone 12 Mini (128GB)無鎖	3	A單(靚)(全功能)	1711
Apple	I-Phone 12 Mini (64GB)無鎖	1	A單(靚)(全功能)	1712
Apple	I-Phone 12 Mini (64GB)無鎖	11	A單(靚)	1713
Apple	I-Phone 12 Mini (128GB)無鎖	1	A單(靚)(全功能)(彈窗)	1714
Apple	I-Phone 12 Mini (64GB)無鎖	1	A單(靚)(全功能)(彈窗)	1715
Apple	I-Phone 12 Mini (64GB)無鎖	294	A單(靚1)(全功能)	1716
Apple	I-Phone 12 Mini (128GB)無鎖	6	A單(靚1)(後爆)(全功能)	1717
Apple	I-Phone 12 Mini (64GB)無鎖	4	A單(靚1)(後爆)(全功能)	1718
Apple	I-Phone 12 Mini (64GB)無鎖	4	A單(靚1)	1719
Apple	I-Phone 12 Mini (128GB)無鎖	15	A單(靚1)(全功能)(彈窗)	1720
Apple	I-Phone 12 Mini (256GB)無鎖	1	A單(靚1)(全功能)(彈窗)	1721
Apple	I-Phone 12 Mini (64GB)無鎖	16	A單(靚1)(全功能)(彈窗)	1722
Apple	I-Phone 12 Mini (128GB)無鎖	1	A單(靚1)(後鏡框爆)(全功能)(彈窗)	1723
Apple	I-Phone 12 Mini (64GB)無鎖	2	A單(靚1)(後爆)(全功能)(彈窗)	1724
Apple	I-Phone 12 Mini (128GB)無鎖	2	A單(全功能)	1725
Apple	I-Phone 12 Mini (256GB)無鎖	1	A單(全功能)	1726
Apple	I-Phone 12 Mini (64GB)無鎖	2	A單(全功能)	1727
Apple	I-Phone 12 Mini (128GB)無鎖	1	A單(後爆)(全功能)	1728
Apple	I-Phone 12 Mini (256GB)無鎖	1	A單(後爆)(全功能)	1729
Apple	I-Phone 12 Mini (64GB)無鎖	4	A單(後爆)(全功能)	1730
Apple	I-Phone 12 Mini (128GB)無鎖	16	A單	1731
Apple	I-Phone 12 Mini (256GB)無鎖	7	A單	1732
Apple	I-Phone 12 Mini (64GB)無鎖	18	A單	1733
Apple	I-Phone 12 Mini (128GB)無鎖	1	A單(後爆)	1734
Apple	I-Phone 12 Mini (64GB)無鎖	2	A單(後爆)	1735
Apple	I-Phone 12 Mini (128GB)無鎖	19	A單(全功能)(彈窗)	1736
Apple	I-Phone 12 Mini (64GB)無鎖	5	A單(全功能)(彈窗)	1737
Apple	I-Phone 12 Mini (128GB)無鎖	4	A單(後鏡框爆)(全功能)(彈窗)	1738
Apple	I-Phone 12 Mini (64GB)無鎖	4	A單(後鏡框爆)(全功能)(彈窗)	1739
Apple	I-Phone 12 Mini (64GB)無鎖	1	A單(後爆)(全功能)(彈窗)	1740
Apple	I-Phone 12 Mini (64GB)無鎖	3	A單(彈窗)	1741
Apple	I-Phone 12 Mini (128GB)無鎖	2	A單(後爆)(彈窗)	1742
Apple	I-Phone 12 Mini (128GB)無鎖	1	B單開好(全功能)	1743
Apple	I-Phone 12 Mini (64GB)無鎖	3	B單開好(全功能)	1744
Apple	I-Phone 12 Mini (128GB)無鎖	1	B單開好	1745
Apple	I-Phone 12 Mini (64GB)無鎖	1	B單開好(全功能)(彈窗)	1746
Apple	I-Phone 12 Mini (128GB)無鎖	14	B單開好(彈窗)	1747
Apple	I-Phone 12 Mini (256GB)無鎖	2	B單開好(彈窗)	1748
Apple	I-Phone 12 Mini (64GB)無鎖	20	B單開好(彈窗)	1749
Apple	I-Phone 12 Mini (128GB)無鎖	3	B單開壞(FID功能好)	1750
Apple	I-Phone 12 Mini (64GB)無鎖	8	B單開壞(FID功能好)	1751
Apple	I-Phone 12 Mini (128GB)無鎖	111	B單開壞	1752
Apple	I-Phone 12 Mini (256GB)無鎖	8	B單開壞	1753
Apple	I-Phone 12 Mini (64GB)無鎖	176	B單開壞	1754
Apple	I-Phone 12 Mini (128GB)無鎖	21	B單有電流	1755
Apple	I-Phone 12 Mini (256GB)無鎖	6	B單有電流	1756
Apple	I-Phone 12 Mini (64GB)無鎖	59	B單有電流	1757
Apple	I-Phone 12 Mini (128GB)無鎖	26	特別供應-B單不開換電即可(僅供參考)	1758
Apple	I-Phone 12 Mini (256GB)無鎖	2	特別供應-B單不開換電即可(僅供參考)	1759
Apple	I-Phone 12 Mini (64GB)無鎖	55	特別供應-B單不開換電即可(僅供參考)	1760
Apple	I-Phone 12 Mini (128GB)(無鎖有問題)	9	Part 2 A單	1761
Apple	I-Phone 12 Mini (256GB)(無鎖有問題)	6	Part 2 A單	1762

Apple	I-Phone 12 Mini (64GB)(無鎖有問題)	15	Part 2 A單	1763
Apple	I-Phone 12 Mini (128GB)(無鎖有問題)	6	Part 2 B單開好	1764
Apple	I-Phone 12 Mini (256GB)(無鎖有問題)	2	Part 2 B單開好	1765
Apple	I-Phone 12 Mini (64GB)(無鎖有問題)	25	Part 2 B單開好	1766
Apple	I-Phone 12 Mini (128GB)(無鎖有問題)	14	Part 2 B單開壞	1767
Apple	I-Phone 12 Mini (256GB)(無鎖有問題)	3	Part 2 B單開壞	1768
Apple	I-Phone 12 Mini (64GB)(無鎖有問題)	34	Part 2 B單開壞	1769
Apple	I-Phone 12 Mini (64GB)(無鎖有問題)	2	Part 2 B單有電流	1770
Apple	I-Phone 12 Mini (128GB)(無鎖FID)	3	Part 2 A單	1771
Apple	I-Phone 12 Mini (256GB)(無鎖FID)	5	Part 2 A單	1772
Apple	I-Phone 12 Mini (64GB)(無鎖FID)	3	Part 2 A單	1773
Apple	I-Phone 12 Mini (64GB)(無鎖FID)	33	Part 2 A單(彈窗)	1774
Apple	I-Phone 12 Mini (128GB)(無鎖FID)	17	Part 2 B單開好	1775
Apple	I-Phone 12 Mini (64GB)(無鎖FID)	9	Part 2 B單開好	1776
Apple	I-Phone 12 Mini (64GB)	2	Part 2 B單開好	1777
Apple	I-Phone 12 Mini (64GB)	1	Part 2 B單開壞	1778
Apple	I-Phone 12 Mini (256GB)	1	Part 2 B單有電流	1779
Apple	I-Phone 12 Mini (64GB)	4	Part 2 B單有電流	1780
Apple	I-Phone 12 Mini (128GB)	1	Part 2 特別供應-B單不開換電即可(僅供參考)	1781
Apple	I-Phone 12 Mini (64GB)	8	Part 2 特別供應-B單不開換電即可(僅供參考)	1782
Apple	I-Phone 12 Mini (64GB)	5	主板	1783
Apple	I-Phone 12 Mini (64GB)(有問題)	6	Part 2 A單	1784
Apple	I-Phone 11 Pro Max 合計	1118	匯總	1785
Apple	I-Phone 11 Pro Max (256GB)無鎖	1	A單(靚)(全功能)	1786
Apple	I-Phone 11 Pro Max (64GB)無鎖	10	A單(靚)(全功能)	1787
Apple	I-Phone 11 Pro Max (256GB)無鎖	2	A單(靚)(全功能)(彈窗)	1788
Apple	I-Phone 11 Pro Max (64GB)無鎖	33	A單(靚)(全功能)(彈窗)	1789
Apple	I-Phone 11 Pro Max (256GB)無鎖	2	A單(靚1)(全功能)	1790
Apple	I-Phone 11 Pro Max (64GB)無鎖	7	A單(靚1)(全功能)	1791
Apple	I-Phone 11 Pro Max (64GB)無鎖	1	A單(靚1)(後爆)(全功能)	1792
Apple	I-Phone 11 Pro Max (256GB)無鎖	158	A單(靚1)(全功能)(彈窗)	1793
Apple	I-Phone 11 Pro Max (512GB)無鎖	1	A單(靚1)(全功能)(彈窗)	1794
Apple	I-Phone 11 Pro Max (64GB)無鎖	94	A單(靚1)(全功能)(彈窗)	1795
Apple	I-Phone 11 Pro Max (64GB)無鎖	2	A單(靚1)(後鏡框爆)(全功能)(彈窗)	1796
Apple	I-Phone 11 Pro Max (256GB)無鎖	3	A單(靚1)(後爆)(全功能)(彈窗)	1797
Apple	I-Phone 11 Pro Max (512GB)無鎖	3	A單(靚1)(後爆)(全功能)(彈窗)	1798
Apple	I-Phone 11 Pro Max (64GB)無鎖	2	A單(靚1)(後爆)(全功能)(彈窗)	1799
Apple	I-Phone 11 Pro Max (512GB)無鎖	2	A單(靚1)(彈窗)	1800
Apple	I-Phone 11 Pro Max (512GB)無鎖	1	A單(全功能)	1801
Apple	I-Phone 11 Pro Max (512GB)無鎖	1	A單(後鏡框爆)(全功能)	1802
Apple	I-Phone 11 Pro Max (256GB)無鎖	1	A單(後爆)(全功能)	1803
Apple	I-Phone 11 Pro Max (256GB)無鎖	2	A單	1804
Apple	I-Phone 11 Pro Max (512GB)無鎖	1	A單(後鏡框爆)	1805
Apple	I-Phone 11 Pro Max (512GB)無鎖	2	A單(後爆)	1806
Apple	I-Phone 11 Pro Max (256GB)無鎖	9	A單(全功能)(彈窗)	1807
Apple	I-Phone 11 Pro Max (512GB)無鎖	5	A單(全功能)(彈窗)	1808
Apple	I-Phone 11 Pro Max (64GB)無鎖	6	A單(全功能)(彈窗)	1809
Apple	I-Phone 11 Pro Max (256GB)無鎖	1	A單(後鏡框爆)(全功能)(彈窗)	1810
Apple	I-Phone 11 Pro Max (64GB)無鎖	1	A單(後鏡框爆)(全功能)(彈窗)	1811
Apple	I-Phone 11 Pro Max (256GB)無鎖	1	A單(後爆)(全功能)(彈窗)	1812
Apple	I-Phone 11 Pro Max (512GB)無鎖	2	A單(後爆)(全功能)(彈窗)	1813
Apple	I-Phone 11 Pro Max (64GB)無鎖	29	A單(後爆)(全功能)(彈窗)	1814
Apple	I-Phone 11 Pro Max (256GB)無鎖	91	A單(彈窗)	1815
Apple	I-Phone 11 Pro Max (512GB)無鎖	11	A單(彈窗)	1816
Apple	I-Phone 11 Pro Max (64GB)無鎖	183	A單(彈窗)	1817
Apple	I-Phone 11 Pro Max (256GB)無鎖	9	A單(後鏡框爆)(彈窗)	1818
Apple	I-Phone 11 Pro Max (64GB)無鎖	19	A單(後鏡框爆)(彈窗)	1819
Apple	I-Phone 11 Pro Max (256GB)無鎖	36	A單(後爆)(彈窗)	1820
Apple	I-Phone 11 Pro Max (512GB)無鎖	2	A單(後爆)(彈窗)	1821
Apple	I-Phone 11 Pro Max (64GB)無鎖	21	A單(後爆)(彈窗)	1822
Apple	I-Phone 11 Pro Max (512GB)無鎖	2	B單開好(全功能)	1823
Apple	I-Phone 11 Pro Max (512GB)無鎖	1	B單開好	1824
Apple	I-Phone 11 Pro Max (256GB)無鎖	15	B單開好(全功能)(彈窗)	1825
Apple	I-Phone 11 Pro Max (64GB)無鎖	18	B單開好(全功能)(彈窗)	1826
Apple	I-Phone 11 Pro Max (256GB)無鎖	18	B單開好(彈窗)	1827
Apple	I-Phone 11 Pro Max (512GB)無鎖	5	B單開好(彈窗)	1828
Apple	I-Phone 11 Pro Max (64GB)無鎖	29	B單開好(彈窗)	1829
Apple	I-Phone 11 Pro Max (64GB)無鎖	1	B單開壞(FID功能好)	1830
Apple	I-Phone 11 Pro Max (256GB)無鎖	1	B單開壞	1831
Apple	I-Phone 11 Pro Max (64GB)無鎖	3	B單開壞	1832
Apple	I-Phone 11 Pro Max (64GB)無鎖	13	B單開壞(彈窗)	1833

Apple	I-Phone 11 Pro Max (256GB)無鎖	1	B單有電流	1834
Apple	I-Phone 11 Pro Max (512GB)無鎖	9	B單有電流	1835
Apple	I-Phone 11 Pro Max (64GB)無鎖	59	B單有電流	1836
Apple	I-Phone 11 Pro Max (512GB)無鎖	3	特別供應-B單不開換電即可(僅供參考)	1837
Apple	I-Phone 11 Pro Max (64GB)無鎖	61	特別供應-B單不開換電即可(僅供參考)	1838
Apple	I-Phone 11 Pro Max (64GB)(無鎖有問題)	1	Part 2 A單	1839
Apple	I-Phone 11 Pro Max (64GB)(無鎖FID)	2	Part 2 A單	1840
Apple	I-Phone 11 Pro Max (64GB)(無鎖FID)	102	Part 2 A單(彈窗)	1841
Apple	I-Phone 11 Pro Max (64GB)(無鎖FID)	1	Part 2 B單開好(彈窗)	1842
Apple	I-Phone 11 Pro Max (64GB)	1	Part 2 B單開好	1843
Apple	I-Phone 11 Pro Max (256GB)	1	Part 2 B單開壞	1844
Apple	I-Phone 11 Pro Max (64GB)	2	Part 2 B單開壞	1845
Apple	I-Phone 11 Pro Max (64GB)	4	Part 2 B單有電流	1846
Apple	I-Phone 11 Pro Max (64GB)	2	Part 2 特別供應-B單不開換電即可(僅供參考)	1847
Apple	I-Phone 11 Pro Max (64GB)	2	主板	1848
Apple	I-Phone 11 Pro Max (256GB)(有問題)	1	Part 2 A單	1849
Apple	I-Phone 11 Pro Max (64GB)(有問題)	3	Part 2 A單	1850
Apple	I-Phone 11 Pro Max (64GB)(有問題)	2	Part 2 B單開好	1851
Apple	I-Phone 11 Pro 合計	757	匯總	1852
Apple	I-Phone 11 Pro (256GB)無鎖	2	A單(靚)(全功能)(彈窗)	1853
Apple	I-Phone 11 Pro (512GB)無鎖	1	A單(靚)(全功能)(彈窗)	1854
Apple	I-Phone 11 Pro (64GB)無鎖	1	A單(靚)(全功能)(彈窗)	1855
Apple	I-Phone 11 Pro (256GB)無鎖	3	A單(靚1)(全功能)	1856
Apple	I-Phone 11 Pro (64GB)無鎖	2	A單(靚1)(全功能)	1857
Apple	I-Phone 11 Pro (64GB)無鎖	1	A單(靚1)(後爆)(全功能)	1858
Apple	I-Phone 11 Pro (256GB)無鎖	1	A單(靚1)	1859
Apple	I-Phone 11 Pro (512GB)無鎖	6	A單(靚1)(全功能)(彈窗)	1860
Apple	I-Phone 11 Pro (64GB)無鎖	1	A單(靚1)(全功能)(彈窗)	1861
Apple	I-Phone 11 Pro (64GB)無鎖	1	A單(靚1)(後鏡框爆)(全功能)(彈窗)	1862
Apple	I-Phone 11 Pro (256GB)無鎖	2	A單(靚1)(後爆)(全功能)(彈窗)	1863
Apple	I-Phone 11 Pro (64GB)無鎖	7	A單(靚1)(後爆)(全功能)(彈窗)	1864
Apple	I-Phone 11 Pro (256GB)無鎖	5	A單(靚1)(彈窗)	1865
Apple	I-Phone 11 Pro (256GB)無鎖	2	A單(全功能)	1866
Apple	I-Phone 11 Pro (512GB)無鎖	1	A單(全功能)	1867
Apple	I-Phone 11 Pro (64GB)無鎖	2	A單(全功能)	1868
Apple	I-Phone 11 Pro (64GB)無鎖	1	A單(後鏡框爆)(全功能)	1869
Apple	I-Phone 11 Pro (64GB)無鎖	6	A單(後爆)(全功能)	1870
Apple	I-Phone 11 Pro (256GB)無鎖	1	A單	1871
Apple	I-Phone 11 Pro (512GB)無鎖	4	A單	1872
Apple	I-Phone 11 Pro (64GB)無鎖	2	A單	1873
Apple	I-Phone 11 Pro (256GB)無鎖	4	A單(後鏡框爆)	1874
Apple	I-Phone 11 Pro (512GB)無鎖	1	A單(後鏡框爆)	1875
Apple	I-Phone 11 Pro (512GB)無鎖	2	A單(後爆)	1876
Apple	I-Phone 11 Pro (64GB)無鎖	5	A單(後爆)	1877
Apple	I-Phone 11 Pro (256GB)無鎖	1	A單(全功能)(彈窗)	1878
Apple	I-Phone 11 Pro (64GB)無鎖	25	A單(全功能)(彈窗)	1879
Apple	I-Phone 11 Pro (512GB)無鎖	1	A單(後鏡框爆)(全功能)(彈窗)	1880
Apple	I-Phone 11 Pro (64GB)無鎖	5	A單(後鏡框爆)(全功能)(彈窗)	1881
Apple	I-Phone 11 Pro (256GB)無鎖	19	A單(後爆)(全功能)(彈窗)	1882
Apple	I-Phone 11 Pro (512GB)無鎖	1	A單(後爆)(全功能)(彈窗)	1883
Apple	I-Phone 11 Pro (64GB)無鎖	33	A單(後爆)(全功能)(彈窗)	1884
Apple	I-Phone 11 Pro (256GB)無鎖	75	A單(彈窗)	1885
Apple	I-Phone 11 Pro (512GB)無鎖	2	A單(彈窗)	1886
Apple	I-Phone 11 Pro (64GB)無鎖	95	A單(彈窗)	1887
Apple	I-Phone 11 Pro (256GB)無鎖	2	A單(後鏡框爆)(彈窗)	1888
Apple	I-Phone 11 Pro (256GB)無鎖	13	A單(後爆)(彈窗)	1889
Apple	I-Phone 11 Pro (512GB)無鎖	1	A單(後爆)(彈窗)	1890
Apple	I-Phone 11 Pro (64GB)無鎖	15	A單(後爆)(彈窗)	1891
Apple	I-Phone 11 Pro (256GB)無鎖	9	B單開好(全功能)	1892
Apple	I-Phone 11 Pro (64GB)無鎖	9	B單開好(全功能)	1893
Apple	I-Phone 11 Pro (256GB)無鎖	2	B單開好	1894
Apple	I-Phone 11 Pro (512GB)無鎖	2	B單開好	1895
Apple	I-Phone 11 Pro (64GB)無鎖	9	B單開好	1896
Apple	I-Phone 11 Pro (256GB)無鎖	7	B單開好(全功能)(彈窗)	1897
Apple	I-Phone 11 Pro (512GB)無鎖	2	B單開好(全功能)(彈窗)	1898
Apple	I-Phone 11 Pro (64GB)無鎖	22	B單開好(全功能)(彈窗)	1899
Apple	I-Phone 11 Pro (256GB)無鎖	9	B單開好(彈窗)	1900
Apple	I-Phone 11 Pro (64GB)無鎖	14	B單開好(彈窗)	1901
Apple	I-Phone 11 Pro (256GB)無鎖	4	B單開壞(全功能)	1902
Apple	I-Phone 11 Pro (64GB)無鎖	21	B單開壞(全功能)	1903
Apple	I-Phone 11 Pro (256GB)無鎖	3	B單開壞(FID功能好)	1904

Apple	I-Phone 11 Pro (512GB)無鎖	2	B單開壞(FID功能好)	1905
Apple	I-Phone 11 Pro (64GB)無鎖	15	B單開壞(FID功能好)	1906
Apple	I-Phone 11 Pro (256GB)無鎖	84	B單開壞	1907
Apple	I-Phone 11 Pro (512GB)無鎖	3	B單開壞	1908
Apple	I-Phone 11 Pro (64GB)無鎖	4	B單開壞	1909
Apple	I-Phone 11 Pro (256GB)無鎖	3	B單有電流	1910
Apple	I-Phone 11 Pro (64GB)無鎖	22	B單有電流	1911
Apple	I-Phone 11 Pro (256GB)無鎖	22	特別供應-B單不開換電即可(僅供參考)	1912
Apple	I-Phone 11 Pro (512GB)無鎖	1	特別供應-B單不開換電即可(僅供參考)	1913
Apple	I-Phone 11 Pro (64GB)無鎖	77	特別供應-B單不開換電即可(僅供參考)	1914
Apple	I-Phone 11 Pro (256GB)(無鎖有問題)	3	Part 2 A單	1915
Apple	I-Phone 11 Pro (512GB)(無鎖有問題)	4	Part 2 A單	1916
Apple	I-Phone 11 Pro (64GB)(無鎖有問題)	7	Part 2 A單	1917
Apple	I-Phone 11 Pro (256GB)(無鎖有問題)	1	Part 2 B單開好	1918
Apple	I-Phone 11 Pro (512GB)(無鎖有問題)	1	Part 2 B單開好	1919
Apple	I-Phone 11 Pro (64GB)(無鎖有問題)	1	Part 2 B單開好	1920
Apple	I-Phone 11 Pro (256GB)(無鎖有問題)	1	Part 2 B單開壞	1921
Apple	I-Phone 11 Pro (512GB)(無鎖有問題)	2	Part 2 B單開壞	1922
Apple	I-Phone 11 Pro (64GB)(無鎖有問題)	1	Part 2 B單開壞	1923
Apple	I-Phone 11 Pro (64GB)(無鎖有問題)	3	Part 2 B單有電流	1924
Apple	I-Phone 11 Pro (256GB)(無鎖FID)	7	Part 2 A單	1925
Apple	I-Phone 11 Pro (64GB)(無鎖FID)	6	Part 2 A單	1926
Apple	I-Phone 11 Pro (256GB)(無鎖FID)	2	Part 2 B單開好	1927
Apple	I-Phone 11 Pro (512GB)(無鎖FID)	2	Part 2 B單開好	1928
Apple	I-Phone 11 Pro (64GB)(無鎖FID)	3	Part 2 B單開好	1929
Apple	I-Phone 11 Pro (256GB)	1	Part 2 B單開好	1930
Apple	I-Phone 11 Pro (64GB)	1	Part 2 B單開好	1931
Apple	I-Phone 11 Pro (256GB)	3	Part 2 B單開壞	1932
Apple	I-Phone 11 Pro (64GB)	4	Part 2 B單開壞	1933
Apple	I-Phone 11 Pro (64GB)	4	Part 2 B單有電流	1934
Apple	I-Phone 11 Pro (64GB)	1	Part 2 特別供應-B單不開換電即可(僅供參考)	1935
Apple	I-Phone 11 Pro (256GB)(有問題)	1	Part 2 A單	1936
Apple	I-Phone 11 合計	1709	匯總	1937
Apple	I-Phone 11 (64GB)無鎖	6	N.New單(全功能)	1938
Apple	I-Phone 11 (128GB)無鎖	1	A單(靚)(全功能)	1939
Apple	I-Phone 11 (64GB)無鎖	7	A單(靚)(全功能)	1940
Apple	I-Phone 11 (128GB)無鎖	2	A單(靚)(全功能)(彈窗)	1941
Apple	I-Phone 11 (64GB)無鎖	13	A單(靚)(全功能)(彈窗)	1942
Apple	I-Phone 11 (128GB)無鎖	1	A單(靚)(彈窗)	1943
Apple	I-Phone 11 (128GB)無鎖	2	A單(靚1)(全功能)	1944
Apple	I-Phone 11 (64GB)無鎖	16	A單(靚1)(全功能)	1945
Apple	I-Phone 11 (128GB)無鎖	1	A單(靚1)(後爆)(全功能)	1946
Apple	I-Phone 11 (64GB)無鎖	2	A單(靚1)(後爆)(全功能)	1947
Apple	I-Phone 11 (128GB)無鎖	5	A單(靚1)(全功能)(彈窗)	1948
Apple	I-Phone 11 (64GB)無鎖	6	A單(靚1)(全功能)(彈窗)	1949
Apple	I-Phone 11 (128GB)無鎖	1	A單(靚1)(後爆)(全功能)(彈窗)	1950
Apple	I-Phone 11 (64GB)無鎖	1	A單(靚1)(後爆)(全功能)(彈窗)	1951
Apple	I-Phone 11 (128GB)無鎖	4	A單(全功能)	1952
Apple	I-Phone 11 (256GB)無鎖	4	A單(全功能)	1953
Apple	I-Phone 11 (64GB)無鎖	18	A單(全功能)	1954
Apple	I-Phone 11 (64GB)無鎖	2	A單(後鏡框爆)(全功能)	1955
Apple	I-Phone 11 (128GB)無鎖	2	A單(後爆)(全功能)	1956
Apple	I-Phone 11 (64GB)無鎖	9	A單(後爆)(全功能)	1957
Apple	I-Phone 11 (128GB)無鎖	5	A單	1958
Apple	I-Phone 11 (256GB)無鎖	1	A單	1959
Apple	I-Phone 11 (64GB)無鎖	4	A單	1960
Apple	I-Phone 11 (64GB)無鎖	2	A單(後鏡框爆)	1961
Apple	I-Phone 11 (64GB)無鎖	2	A單(後爆)	1962
Apple	I-Phone 11 (128GB)無鎖	5	A單(全功能)(彈窗)	1963
Apple	I-Phone 11 (64GB)無鎖	4	A單(全功能)(彈窗)	1964
Apple	I-Phone 11 (64GB)無鎖	6	A單(後爆)(全功能)(彈窗)	1965
Apple	I-Phone 11 (128GB)無鎖	4	A單(彈窗)	1966
Apple	I-Phone 11 (64GB)無鎖	28	A單(彈窗)	1967
Apple	I-Phone 11 (128GB)無鎖	1	A單(後鏡框爆)(彈窗)	1968
Apple	I-Phone 11 (64GB)無鎖	1	A單(後鏡框爆)(彈窗)	1969
Apple	I-Phone 11 (128GB)無鎖	1	A單(後爆)(彈窗)	1970
Apple	I-Phone 11 (64GB)無鎖	4	A單(後爆)(彈窗)	1971
Apple	I-Phone 11 (128GB)無鎖	5	B單開好(全功能)	1972
Apple	I-Phone 11 (64GB)無鎖	12	B單開好(全功能)	1973
Apple	I-Phone 11 (128GB)無鎖	2	B單開好	1974
Apple	I-Phone 11 (64GB)無鎖	3	B單開好	1975

Apple	I-Phone 11 (128GB)無鎖	2	B單開好(全功能)(彈窗)	1976
Apple	I-Phone 11 (256GB)無鎖	1	B單開好(全功能)(彈窗)	1977
Apple	I-Phone 11 (64GB)無鎖	2	B單開好(全功能)(彈窗)	1978
Apple	I-Phone 11 (128GB)無鎖	4	B單開好(彈窗)	1979
Apple	I-Phone 11 (256GB)無鎖	2	B單開好(彈窗)	1980
Apple	I-Phone 11 (64GB)無鎖	24	B單開好(彈窗)	1981
Apple	I-Phone 11 (128GB)無鎖	1	B單開壞(全功能)	1982
Apple	I-Phone 11 (128GB)無鎖	2	B單開壞(FID功能好)	1983
Apple	I-Phone 11 (64GB)無鎖	20	B單開壞(FID功能好)	1984
Apple	I-Phone 11 (128GB)無鎖	9	B單開壞	1985
Apple	I-Phone 11 (64GB)無鎖	25	B單開壞	1986
Apple	I-Phone 11 (128GB)無鎖	14	B單開壞(FID功能好)(彈窗)	1987
Apple	I-Phone 11 (256GB)無鎖	2	B單開壞(FID功能好)(彈窗)	1988
Apple	I-Phone 11 (128GB)無鎖	14	B單開壞(彈窗)	1989
Apple	I-Phone 11 (256GB)無鎖	2	B單開壞(彈窗)	1990
Apple	I-Phone 11 (64GB)無鎖	17	B單開壞(彈窗)	1991
Apple	I-Phone 11 (128GB)無鎖	22	B單有電流	1992
Apple	I-Phone 11 (256GB)無鎖	1	B單有電流	1993
Apple	I-Phone 11 (64GB)無鎖	350	B單有電流	1994
Apple	I-Phone 11 (128GB)無鎖	68	特別供應-B單不開換電即可(僅供參考)	1995
Apple	I-Phone 11 (64GB)無鎖	506	特別供應-B單不開換電即可(僅供參考)	1996
Apple	I-Phone 11 (128GB)(無鎖有問題)	45	Part 2 A單	1997
Apple	I-Phone 11 (256GB)(無鎖有問題)	7	Part 2 A單	1998
Apple	I-Phone 11 (64GB)(無鎖有問題)	95	Part 2 A單	1999
Apple	I-Phone 11 (128GB)(無鎖有問題)	8	Part 2 B單開好	2000
Apple	I-Phone 11 (256GB)(無鎖有問題)	1	Part 2 B單開好	2001
Apple	I-Phone 11 (64GB)(無鎖有問題)	14	Part 2 B單開好	2002
Apple	I-Phone 11 (128GB)(無鎖有問題)	21	Part 2 B單開壞	2003
Apple	I-Phone 11 (256GB)(無鎖有問題)	1	Part 2 B單開壞	2004
Apple	I-Phone 11 (64GB)(無鎖有問題)	18	Part 2 B單開壞	2005
Apple	I-Phone 11 (128GB)(無鎖有問題)	3	Part 2 B單有電流	2006
Apple	I-Phone 11 (64GB)(無鎖有問題)	22	Part 2 B單有電流	2007
Apple	I-Phone 11 (128GB)(無鎖FID)	27	Part 2 A單	2008
Apple	I-Phone 11 (256GB)(無鎖FID)	3	Part 2 A單	2009
Apple	I-Phone 11 (64GB)(無鎖FID)	17	Part 2 A單	2010
Apple	I-Phone 11 (128GB)(無鎖FID)	1	Part 2 B單開好	2011
Apple	I-Phone 11 (256GB)(無鎖FID)	2	Part 2 B單開好	2012
Apple	I-Phone 11 (64GB)(無鎖FID)	9	Part 2 B單開好	2013
Apple	I-Phone 11 (128GB)	3	Part 2 A單	2014
Apple	I-Phone 11 (64GB)	1	Part 2 A單	2015
Apple	I-Phone 11 (64GB)	1	Part 2 B單開好	2016
Apple	I-Phone 11 (128GB)	6	Part 2 B單開壞	2017
Apple	I-Phone 11 (256GB)	1	Part 2 B單開壞	2018
Apple	I-Phone 11 (64GB)	3	Part 2 B單開壞	2019
Apple	I-Phone 11 (128GB)	4	Part 2 B單有電流	2020
Apple	I-Phone 11 (64GB)	25	Part 2 B單有電流	2021
Apple	I-Phone 11 (128GB)	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2022
Apple	I-Phone 11 (256GB)	3	Part 2 特別供應-B單不開換電即可(僅供參考)	2023
Apple	I-Phone 11 (64GB)	16	Part 2 特別供應-B單不開換電即可(僅供參考)	2024
Apple	I-Phone 11 (128GB)	1	主板	2025
Apple	I-Phone 11 (64GB)	60	主板	2026
Apple	I-Phone 11 (64GB)(有問題)	1	Part 2 A單	2027
Apple	I-Phone 11 (128GB)(有問題)	1	Part 2 B單開好	2028
Apple	I-Phone 11 (64GB)(有問題)	1	Part 2 B單開好	2029
Apple	I-Phone 11 (128GB)(有問題)	1	Part 2 B單開壞	2030
Apple	I-Phone 11 (64GB)(有問題)	5	Part 2 B單開壞	2031
Apple	I-Phone XS Max 合計	456	匯總	2032
Apple	I-Phone XS Max (256GB)無鎖	1	A單(靚)(全功能)	2033
Apple	I-Phone XS Max (512GB)無鎖	1	A單(靚)(全功能)	2034
Apple	I-Phone XS Max (64GB)無鎖	4	A單(靚)(全功能)	2035
Apple	I-Phone XS Max (256GB)無鎖	4	A單(靚)	2036
Apple	I-Phone XS Max (512GB)無鎖	1	A單(靚)	2037
Apple	I-Phone XS Max (64GB)無鎖	5	A單(靚)	2038
Apple	I-Phone XS Max (256GB)無鎖	1	A單(靚)(彈窗)	2039
Apple	I-Phone XS Max (64GB)無鎖	2	A單(靚)(彈窗)	2040
Apple	I-Phone XS Max (64GB)無鎖	4	A單(靚1)(全功能)	2041
Apple	I-Phone XS Max (64GB)無鎖	4	A單(靚1)(後爆)(全功能)	2042
Apple	I-Phone XS Max (256GB)無鎖	1	A單(靚1)	2043
Apple	I-Phone XS Max (64GB)無鎖	6	A單(靚1)	2044
Apple	I-Phone XS Max (256GB)無鎖	10	A單(全功能)	2045
Apple	I-Phone XS Max (64GB)無鎖	1	A單(全功能)	2046

Apple	I-Phone XS Max (256GB)無鎖	1	A單(後鏡框爆)(全功能)	2047
Apple	I-Phone XS Max (512GB)無鎖	2	A單(後爆)(全功能)	2048
Apple	I-Phone XS Max (64GB)無鎖	3	A單(後爆)(全功能)	2049
Apple	I-Phone XS Max (256GB)無鎖	4	A單	2050
Apple	I-Phone XS Max (512GB)無鎖	4	A單	2051
Apple	I-Phone XS Max (64GB)無鎖	7	A單	2052
Apple	I-Phone XS Max (256GB)無鎖	4	A單(後鏡框爆)	2053
Apple	I-Phone XS Max (64GB)無鎖	2	A單(後鏡框爆)	2054
Apple	I-Phone XS Max (256GB)無鎖	11	A單(後爆)	2055
Apple	I-Phone XS Max (512GB)無鎖	2	A單(後爆)	2056
Apple	I-Phone XS Max (64GB)無鎖	4	A單(後爆)	2057
Apple	I-Phone XS Max (256GB)無鎖	5	A單(全功能)(彈窗)	2058
Apple	I-Phone XS Max (64GB)無鎖	3	A單(全功能)(彈窗)	2059
Apple	I-Phone XS Max (256GB)無鎖	1	A單(後鏡框爆)(全功能)(彈窗)	2060
Apple	I-Phone XS Max (64GB)無鎖	10	A單(彈窗)	2061
Apple	I-Phone XS Max (256GB)無鎖	2	A單(後爆)(彈窗)	2062
Apple	I-Phone XS Max (64GB)無鎖	1	A單(後爆)(彈窗)	2063
Apple	I-Phone XS Max (256GB)無鎖	4	B單開好(全功能)	2064
Apple	I-Phone XS Max (512GB)無鎖	2	B單開好(全功能)	2065
Apple	I-Phone XS Max (64GB)無鎖	4	B單開好(全功能)	2066
Apple	I-Phone XS Max (256GB)無鎖	2	B單開好	2067
Apple	I-Phone XS Max (64GB)無鎖	3	B單開好	2068
Apple	I-Phone XS Max (256GB)無鎖	2	B單開好(彈窗)	2069
Apple	I-Phone XS Max (256GB)無鎖	9	B單開壞(FID功能好)	2070
Apple	I-Phone XS Max (512GB)無鎖	1	B單開壞(FID功能好)	2071
Apple	I-Phone XS Max (64GB)無鎖	4	B單開壞(FID功能好)	2072
Apple	I-Phone XS Max (256GB)無鎖	17	B單開壞	2073
Apple	I-Phone XS Max (512GB)無鎖	2	B單開壞	2074
Apple	I-Phone XS Max (64GB)無鎖	30	B單開壞	2075
Apple	I-Phone XS Max (512GB)無鎖	1	B單開壞(FID功能好)(彈窗)	2076
Apple	I-Phone XS Max (256GB)無鎖	25	B單有電流	2077
Apple	I-Phone XS Max (512GB)無鎖	1	B單有電流	2078
Apple	I-Phone XS Max (64GB)無鎖	37	B單有電流	2079
Apple	I-Phone XS Max (256GB)無鎖	22	特別供應-B單不開換電即可(僅供參考)	2080
Apple	I-Phone XS Max (64GB)無鎖	63	特別供應-B單不開換電即可(僅供參考)	2081
Apple	I-Phone XS Max (256GB)(無鎖有問題)	7	Part 2 A單	2082
Apple	I-Phone XS Max (512GB)(無鎖有問題)	10	Part 2 A單	2083
Apple	I-Phone XS Max (64GB)(無鎖有問題)	3	Part 2 A單	2084
Apple	I-Phone XS Max (256GB)(無鎖有問題)	1	Part 2 A單(彈窗)	2085
Apple	I-Phone XS Max (256GB)(無鎖有問題)	4	Part 2 B單開好	2086
Apple	I-Phone XS Max (64GB)(無鎖有問題)	8	Part 2 B單開好	2087
Apple	I-Phone XS Max (256GB)(無鎖有問題)	2	Part 2 B單開壞	2088
Apple	I-Phone XS Max (64GB)(無鎖有問題)	7	Part 2 B單開壞	2089
Apple	I-Phone XS Max (64GB)(無鎖有問題)	1	Part 2 B單有電流	2090
Apple	I-Phone XS Max (256GB)(無鎖FID)	2	Part 2 A單	2091
Apple	I-Phone XS Max (512GB)(無鎖FID)	9	Part 2 A單	2092
Apple	I-Phone XS Max (64GB)(無鎖FID)	8	Part 2 A單	2093
Apple	I-Phone XS Max (64GB)(無鎖FID)	1	Part 2 A單(彈窗)	2094
Apple	I-Phone XS Max (512GB)(無鎖FID)	4	Part 2 B單開好	2095
Apple	I-Phone XS Max (64GB)(無鎖FID)	15	Part 2 B單開好	2096
Apple	I-Phone XS Max (256GB)	4	Part 2 B單開壞	2097
Apple	I-Phone XS Max (64GB)	4	Part 2 B單開壞	2098
Apple	I-Phone XS Max (64GB)	6	Part 2 B單有電流	2099
Apple	I-Phone XS Max (256GB)	2	Part 2 特別供應-B單不開換電即可(僅供參考)	2100
Apple	I-Phone XS Max (64GB)	9	Part 2 特別供應-B單不開換電即可(僅供參考)	2101
Apple	I-Phone XS Max (64GB)	7	主板	2102
Apple	I-Phone XS Max (256GB)(有問題)	1	Part 2 A單	2103
Apple	I-Phone XS Max (64GB)(有問題)	1	Part 2 B單開好	2104
Apple	I-Phone XS 合計	228	匯總	2105
Apple	I-Phone XS (64GB)無鎖	6	A單(靚)(全功能)	2106
Apple	I-Phone XS (256GB)無鎖	1	A單(靚1)(全功能)	2107
Apple	I-Phone XS (512GB)無鎖	3	A單(靚1)(全功能)	2108
Apple	I-Phone XS (64GB)無鎖	29	A單(靚1)(全功能)	2109
Apple	I-Phone XS (256GB)無鎖	1	A單(全功能)	2110
Apple	I-Phone XS (512GB)無鎖	1	A單(全功能)	2111
Apple	I-Phone XS (64GB)無鎖	4	A單(全功能)	2112
Apple	I-Phone XS (256GB)無鎖	3	A單(後鏡框爆)(全功能)	2113
Apple	I-Phone XS (64GB)無鎖	1	A單(後鏡框爆)(全功能)	2114
Apple	I-Phone XS (256GB)無鎖	2	A單(後爆)(全功能)	2115
Apple	I-Phone XS (64GB)無鎖	3	A單(後爆)(全功能)	2116
Apple	I-Phone XS (256GB)無鎖	3	A單	2117

Apple	I-Phone XS (512GB)無鎖	1	A單	2118
Apple	I-Phone XS (64GB)無鎖	11	A單	2119
Apple	I-Phone XS (64GB)無鎖	3	A單(後鏡框爆)	2120
Apple	I-Phone XS (256GB)無鎖	3	A單(後爆)	2121
Apple	I-Phone XS (64GB)無鎖	2	A單(後爆)	2122
Apple	I-Phone XS (64GB)無鎖	4	A單(彈窗)	2123
Apple	I-Phone XS (64GB)無鎖	1	A單(後爆)(彈窗)	2124
Apple	I-Phone XS (64GB)無鎖	2	B單開好(全功能)	2125
Apple	I-Phone XS (256GB)無鎖	4	B單開好	2126
Apple	I-Phone XS (64GB)無鎖	3	B單開好	2127
Apple	I-Phone XS (64GB)無鎖	1	B單開好(彈窗)	2128
Apple	I-Phone XS (256GB)無鎖	2	B單開壞(FID功能好)	2129
Apple	I-Phone XS (64GB)無鎖	3	B單開壞(FID功能好)	2130
Apple	I-Phone XS (256GB)無鎖	5	B單開壞	2131
Apple	I-Phone XS (512GB)無鎖	1	B單開壞	2132
Apple	I-Phone XS (64GB)無鎖	14	B單開壞	2133
Apple	I-Phone XS (64GB)無鎖	1	B單開壞(彈窗)	2134
Apple	I-Phone XS (64GB)無鎖	2	B單有電流	2135
Apple	I-Phone XS (256GB)無鎖	31	特別供應-B單不開換電即可(僅供參考)	2136
Apple	I-Phone XS (512GB)無鎖	4	特別供應-B單不開換電即可(僅供參考)	2137
Apple	I-Phone XS (64GB)無鎖	11	特別供應-B單不開換電即可(僅供參考)	2138
Apple	I-Phone XS (256GB)(無鎖有問題)	2	Part 2 A單	2139
Apple	I-Phone XS (64GB)(無鎖有問題)	1	Part 2 B單開好	2140
Apple	I-Phone XS (256GB)(無鎖有問題)	3	Part 2 B單有電流	2141
Apple	I-Phone XS (64GB)(無鎖有問題)	9	Part 2 B單有電流	2142
Apple	I-Phone XS (64GB)(無鎖FID)	2	Part 2 A單	2143
Apple	I-Phone XS (64GB)(無鎖FID)	1	Part 2 B單開好	2144
Apple	I-Phone XS (64GB)	2	Part 2 B單開壞	2145
Apple	I-Phone XS (64GB)	2	Part 2 B單有電流	2146
Apple	I-Phone XS (256GB)	2	Part 2 特別供應-B單不開換電即可(僅供參考)	2147
Apple	I-Phone XS (64GB)	19	Part 2 特別供應-B單不開換電即可(僅供參考)	2148
Apple	I-Phone XS (256GB)	1	主板	2149
Apple	I-Phone XS (64GB)	17	主板	2150
Apple	I-Phone XS (256GB)(有問題)	1	Part 2 B單開壞	2151
Apple	I-Phone XR 合計	719	匯總	2152
Apple	I-Phone XR (128GB)無鎖	2	A單(靚)(全功能)	2153
Apple	I-Phone XR (64GB)無鎖	19	A單(靚)(全功能)	2154
Apple	I-Phone XR (64GB)無鎖	1	A單(靚)	2155
Apple	I-Phone XR (64GB)無鎖	1	A單(靚)(全功能)(彈窗)	2156
Apple	I-Phone XR (128GB)無鎖	1	A單(靚1)(全功能)	2157
Apple	I-Phone XR (64GB)無鎖	15	A單(靚1)(全功能)	2158
Apple	I-Phone XR (64GB)無鎖	2	A單(靚1)(後爆)(全功能)	2159
Apple	I-Phone XR (64GB)無鎖	2	A單(靚1)	2160
Apple	I-Phone XR (64GB)無鎖	1	A單(靚1)(彈窗)	2161
Apple	I-Phone XR (128GB)無鎖	1	A單(全功能)	2162
Apple	I-Phone XR (256GB)無鎖	1	A單(全功能)	2163
Apple	I-Phone XR (64GB)無鎖	4	A單(全功能)	2164
Apple	I-Phone XR (128GB)無鎖	1	A單(後鏡框爆)(全功能)	2165
Apple	I-Phone XR (64GB)無鎖	1	A單(後鏡框爆)(全功能)	2166
Apple	I-Phone XR (64GB)無鎖	6	A單(後爆)(全功能)	2167
Apple	I-Phone XR (128GB)無鎖	4	A單	2168
Apple	I-Phone XR (256GB)無鎖	1	A單	2169
Apple	I-Phone XR (64GB)無鎖	19	A單	2170
Apple	I-Phone XR (64GB)無鎖	2	A單(後鏡框爆)	2171
Apple	I-Phone XR (128GB)無鎖	5	A單(後爆)	2172
Apple	I-Phone XR (256GB)無鎖	1	A單(後爆)	2173
Apple	I-Phone XR (64GB)無鎖	15	A單(後爆)	2174
Apple	I-Phone XR (128GB)無鎖	1	A單(全功能)(彈窗)	2175
Apple	I-Phone XR (64GB)無鎖	1	A單(全功能)(彈窗)	2176
Apple	I-Phone XR (128GB)無鎖	1	A單(後爆)(全功能)(彈窗)	2177
Apple	I-Phone XR (128GB)無鎖	4	A單(彈窗)	2178
Apple	I-Phone XR (64GB)無鎖	22	A單(彈窗)	2179
Apple	I-Phone XR (256GB)無鎖	1	A單(後爆)(彈窗)	2180
Apple	I-Phone XR (64GB)無鎖	23	A單(後爆)(彈窗)	2181
Apple	I-Phone XR (128GB)無鎖	2	B單開好(全功能)	2182
Apple	I-Phone XR (64GB)無鎖	5	B單開好(全功能)	2183
Apple	I-Phone XR (128GB)無鎖	1	B單開好	2184
Apple	I-Phone XR (64GB)無鎖	5	B單開好	2185
Apple	I-Phone XR (128GB)無鎖	1	B單開好(彈窗)	2186
Apple	I-Phone XR (64GB)無鎖	12	B單開好(彈窗)	2187
Apple	I-Phone XR (128GB)無鎖	6	B單開壞(FID功能好)	2188

Apple	I-Phone XR (256GB)無鎖	1	B單開壞(FID功能好)	2189
Apple	I-Phone XR (64GB)無鎖	20	B單開壞(FID功能好)	2190
Apple	I-Phone XR (128GB)無鎖	17	B單開壞	2191
Apple	I-Phone XR (256GB)無鎖	8	B單開壞	2192
Apple	I-Phone XR (64GB)無鎖	99	B單開壞	2193
Apple	I-Phone XR (128GB)無鎖	5	B單開壞(FID功能好)(彈窗)	2194
Apple	I-Phone XR (64GB)無鎖	14	B單開壞(FID功能好)(彈窗)	2195
Apple	I-Phone XR (128GB)無鎖	1	B單有電流	2196
Apple	I-Phone XR (64GB)無鎖	13	B單有電流	2197
Apple	I-Phone XR (128GB)無鎖	33	特別供應-B單不開換電即可(僅供參考)	2198
Apple	I-Phone XR (256GB)無鎖	3	特別供應-B單不開換電即可(僅供參考)	2199
Apple	I-Phone XR (64GB)無鎖	29	特別供應-B單不開換電即可(僅供參考)	2200
Apple	I-Phone XR (128GB)(無鎖有問題)	18	Part 2 A單	2201
Apple	I-Phone XR (256GB)(無鎖有問題)	3	Part 2 A單	2202
Apple	I-Phone XR (64GB)(無鎖有問題)	65	Part 2 A單	2203
Apple	I-Phone XR (128GB)(無鎖有問題)	1	Part 2 B單開好	2204
Apple	I-Phone XR (256GB)(無鎖有問題)	1	Part 2 B單開好	2205
Apple	I-Phone XR (64GB)(無鎖有問題)	8	Part 2 B單開好	2206
Apple	I-Phone XR (128GB)(無鎖有問題)	1	Part 2 B單開壞	2207
Apple	I-Phone XR (64GB)(無鎖有問題)	4	Part 2 B單開壞	2208
Apple	I-Phone XR (128GB)(無鎖有問題)	1	Part 2 B單有電流	2209
Apple	I-Phone XR (64GB)(無鎖有問題)	4	Part 2 B單有電流	2210
Apple	I-Phone XR (128GB)(無鎖FID)	7	Part 2 A單	2211
Apple	I-Phone XR (64GB)(無鎖FID)	20	Part 2 A單	2212
Apple	I-Phone XR (64GB)(無鎖FID)	5	Part 2 B單開好	2213
Apple	I-Phone XR (64GB)	1	Part 2 A單	2214
Apple	I-Phone XR (64GB)	1	Part 2 B單開好	2215
Apple	I-Phone XR (64GB)	44	Part 2 B單開壞	2216
Apple	I-Phone XR (64GB)	29	Part 2 B單有電流	2217
Apple	I-Phone XR (64GB)	53	Part 2 特別供應-B單不開換電即可(僅供參考)	2218
Apple	I-Phone XR (64GB)	9	主板	2219
Apple	I-Phone XR (64GB)(有問題)	5	Part 2 B單開好	2220
Apple	I-Phone XR (64GB)(有問題)	6	Part 2 B單開壞	2221
Apple	I-Phone X 合計	516	匯總	2222
Apple	I-Phone X (256GB)無鎖	10	A單(靚)(全功能)	2223
Apple	I-Phone X (64GB)無鎖	11	A單(靚)(全功能)	2224
Apple	I-Phone X (64GB)無鎖	4	A單(靚)	2225
Apple	I-Phone X (64GB)無鎖	2	A單(靚)(全功能)(彈窗)	2226
Apple	I-Phone X (256GB)無鎖	1	A單(靚1)(全功能)	2227
Apple	I-Phone X (64GB)無鎖	2	A單(靚1)(全功能)	2228
Apple	I-Phone X (64GB)無鎖	2	A單(靚1)(後鏡框爆)(全功能)	2229
Apple	I-Phone X (64GB)無鎖	1	A單(靚1)(後爆)(全功能)	2230
Apple	I-Phone X (64GB)無鎖	4	A單(靚1)	2231
Apple	I-Phone X (256GB)無鎖	5	A單(全功能)	2232
Apple	I-Phone X (64GB)無鎖	3	A單(全功能)	2233
Apple	I-Phone X (256GB)無鎖	1	A單(後鏡框爆)(全功能)	2234
Apple	I-Phone X (256GB)無鎖	3	A單(後爆)(全功能)	2235
Apple	I-Phone X (64GB)無鎖	5	A單(後爆)(全功能)	2236
Apple	I-Phone X (256GB)無鎖	1	A單	2237
Apple	I-Phone X (64GB)無鎖	2	A單	2238
Apple	I-Phone X (256GB)無鎖	3	A單(後鏡框爆)	2239
Apple	I-Phone X (64GB)無鎖	4	A單(後鏡框爆)	2240
Apple	I-Phone X (256GB)無鎖	4	A單(後爆)	2241
Apple	I-Phone X (64GB)無鎖	2	A單(後爆)	2242
Apple	I-Phone X (256GB)無鎖	3	A單(全功能)(彈窗)	2243
Apple	I-Phone X (64GB)無鎖	9	A單(全功能)(彈窗)	2244
Apple	I-Phone X (256GB)無鎖	3	B單開好(全功能)	2245
Apple	I-Phone X (64GB)無鎖	6	B單開好(全功能)	2246
Apple	I-Phone X (256GB)無鎖	1	B單開好	2247
Apple	I-Phone X (64GB)無鎖	12	B單開好	2248
Apple	I-Phone X (256GB)無鎖	6	B單開壞(FID功能好)	2249
Apple	I-Phone X (64GB)無鎖	10	B單開壞(FID功能好)	2250
Apple	I-Phone X (256GB)無鎖	7	B單開壞	2251
Apple	I-Phone X (64GB)無鎖	21	B單開壞	2252
Apple	I-Phone X (256GB)無鎖	32	B單有電流	2253
Apple	I-Phone X (64GB)無鎖	19	B單有電流	2254
Apple	I-Phone X (256GB)無鎖	18	特別供應-B單不開換電即可(僅供參考)	2255
Apple	I-Phone X (64GB)無鎖	48	特別供應-B單不開換電即可(僅供參考)	2256
Apple	I-Phone X (256GB)(無鎖有問題)	33	Part 2 A單	2257
Apple	I-Phone X (64GB)(無鎖有問題)	58	Part 2 A單	2258
Apple	I-Phone X (256GB)(無鎖有問題)	8	Part 2 B單開好	2259

Apple	I-Phone X (64GB)(無鎖有問題)	15	Part 2 B單開好	2260
Apple	I-Phone X (256GB)(無鎖有問題)	16	Part 2 B單開壞	2261
Apple	I-Phone X (64GB)(無鎖有問題)	14	Part 2 B單開壞	2262
Apple	I-Phone X (64GB)(無鎖有問題)	10	Part 2 B單有電流	2263
Apple	I-Phone X (256GB)(無鎖FID)	10	Part 2 A單	2264
Apple	I-Phone X (64GB)(無鎖FID)	22	Part 2 A單	2265
Apple	I-Phone X (256GB)(無鎖FID)	5	Part 2 B單開好	2266
Apple	I-Phone X (64GB)(無鎖FID)	11	Part 2 B單開好	2267
Apple	I-Phone X (64GB)	1	Part 2 A單	2268
Apple	I-Phone X (64GB)	2	Part 2 B單開壞	2269
Apple	I-Phone X (64GB)	7	Part 2 B單有電流	2270
Apple	I-Phone X (256GB)	4	Part 2 特別供應-B單不開換電即可(僅供參考)	2271
Apple	I-Phone X (64GB)	9	Part 2 特別供應-B單不開換電即可(僅供參考)	2272
Apple	I-Phone X (256GB)	3	主板	2273
Apple	I-Phone X (64GB)	10	主板	2274
Apple	I-Phone X (256GB)(有問題)	2	Part 2 A單	2275
Apple	I-Phone X (64GB)(有問題)	6	Part 2 A單	2276
Apple	I-Phone X (64GB)(有問題)	3	Part 2 B單開好	2277
Apple	I-Phone X (64GB)(有問題)	2	Part 2 B單開壞	2278
Apple	I-Phone 8 Plus 合計	457	匯總	2279
Apple	I-Phone 8 Plus (64GB)無鎖	2	A單(靚)(全功能)	2280
Apple	I-Phone 8 Plus (256GB)無鎖	1	A單(靚1)(全功能)	2281
Apple	I-Phone 8 Plus (64GB)無鎖	2	A單(靚1)(全功能)	2282
Apple	I-Phone 8 Plus (64GB)無鎖	1	A單(靚1)(後爆)(全功能)	2283
Apple	I-Phone 8 Plus (256GB)無鎖	2	A單(靚1)(全功能)(彈窗)	2284
Apple	I-Phone 8 Plus (64GB)無鎖	7	A單(靚1)(全功能)(彈窗)	2285
Apple	I-Phone 8 Plus (256GB)無鎖	1	A單(全功能)	2286
Apple	I-Phone 8 Plus (256GB)無鎖	1	A單(後鏡框爆)(全功能)	2287
Apple	I-Phone 8 Plus (256GB)無鎖	1	A單(後爆)(全功能)	2288
Apple	I-Phone 8 Plus (256GB)無鎖	1	A單	2289
Apple	I-Phone 8 Plus (64GB)無鎖	1	A單	2290
Apple	I-Phone 8 Plus (256GB)無鎖	1	A單(後鏡框爆)	2291
Apple	I-Phone 8 Plus (64GB)無鎖	2	A單(後鏡框爆)	2292
Apple	I-Phone 8 Plus (64GB)無鎖	4	A單(全功能)(彈窗)	2293
Apple	I-Phone 8 Plus (64GB)無鎖	2	A單(彈窗)	2294
Apple	I-Phone 8 Plus (64GB)無鎖	1	A單(後爆)(彈窗)	2295
Apple	I-Phone 8 Plus (256GB)無鎖	3	B單開好(全功能)	2296
Apple	I-Phone 8 Plus (64GB)無鎖	19	B單開好(全功能)	2297
Apple	I-Phone 8 Plus (256GB)無鎖	7	B單開好	2298
Apple	I-Phone 8 Plus (64GB)無鎖	1	B單開好	2299
Apple	I-Phone 8 Plus (128GB)無鎖	1	B單開壞	2300
Apple	I-Phone 8 Plus (256GB)無鎖	11	B單開壞	2301
Apple	I-Phone 8 Plus (64GB)無鎖	100	B單開壞	2302
Apple	I-Phone 8 Plus (128GB)無鎖	1	B單有電流	2303
Apple	I-Phone 8 Plus (256GB)無鎖	1	B單有電流	2304
Apple	I-Phone 8 Plus (64GB)無鎖	7	B單有電流	2305
Apple	I-Phone 8 Plus (128GB)無鎖	4	特別供應-B單不開換電即可(僅供參考)	2306
Apple	I-Phone 8 Plus (256GB)無鎖	13	特別供應-B單不開換電即可(僅供參考)	2307
Apple	I-Phone 8 Plus (64GB)無鎖	102	特別供應-B單不開換電即可(僅供參考)	2308
Apple	I-Phone 8 Plus (128GB)(無鎖有問題)	2	Part 2 A單	2309
Apple	I-Phone 8 Plus (256GB)(無鎖有問題)	7	Part 2 A單	2310
Apple	I-Phone 8 Plus (64GB)(無鎖有問題)	9	Part 2 A單	2311
Apple	I-Phone 8 Plus (256GB)(無鎖有問題)	1	Part 2 B單開好	2312
Apple	I-Phone 8 Plus (64GB)(無鎖有問題)	9	Part 2 B單開好	2313
Apple	I-Phone 8 Plus (64GB)(無鎖有問題)	1	Part 2 B單開壞	2314
Apple	I-Phone 8 Plus (64GB)(無鎖有問題)	1	Part 2 B單有電流	2315
Apple	I-Phone 8 Plus (128GB)(無鎖指紋壞)	1	Part 2 A單	2316
Apple	I-Phone 8 Plus (256GB)(無鎖指紋壞)	2	Part 2 A單	2317
Apple	I-Phone 8 Plus (64GB)(無鎖指紋壞)	8	Part 2 A單	2318
Apple	I-Phone 8 Plus (256GB)(無鎖指紋壞)	2	Part 2 B單開好	2319
Apple	I-Phone 8 Plus (64GB)(無鎖指紋壞)	4	Part 2 B單開好	2320
Apple	I-Phone 8 Plus (256GB)	1	Part 2 B單開好	2321
Apple	I-Phone 8 Plus (64GB)	5	Part 2 B單開好	2322
Apple	I-Phone 8 Plus (256GB)	1	Part 2 B單開壞	2323
Apple	I-Phone 8 Plus (64GB)	20	Part 2 B單開壞	2324
Apple	I-Phone 8 Plus (64GB)	15	Part 2 B單有電流	2325
Apple	I-Phone 8 Plus (64GB)	54	Part 2 特別供應-B單不開換電即可(僅供參考)	2326
Apple	I-Phone 8 Plus (256GB)	1	主板	2327
Apple	I-Phone 8 Plus (64GB)	4	主板	2328
Apple	I-Phone 8 Plus (64GB)(有問題)	2	Part 2 A單	2329
Apple	I-Phone 8 Plus (64GB)(有問題)	1	Part 2 B單開好	2330

Apple	I-Phone 8 Plus (64GB)(有問題)	6	Part 2 B單開壞	2331
Apple	I-Phone 8 合計	106	匯總	2332
Apple	I-Phone 8 (64GB)無鎖	3	A單(靚)(全功能)	2333
Apple	I-Phone 8 (64GB)無鎖	3	A單(靚1)(全功能)	2334
Apple	I-Phone 8 (256GB)無鎖	1	A單(全功能)	2335
Apple	I-Phone 8 (64GB)無鎖	1	A單(全功能)	2336
Apple	I-Phone 8 (64GB)無鎖	2	A單(後爆)(全功能)	2337
Apple	I-Phone 8 (256GB)無鎖	1	A單	2338
Apple	I-Phone 8 (64GB)無鎖	4	A單	2339
Apple	I-Phone 8 (64GB)無鎖	2	B單開好(全功能)	2340
Apple	I-Phone 8 (64GB)無鎖	17	B單開壞	2341
Apple	I-Phone 8 (64GB)無鎖	3	B單有電流	2342
Apple	I-Phone 8 (64GB)無鎖	23	特別供應-B單不開換電即可(僅供參考)	2343
Apple	I-Phone 8 (64GB)(無鎖有問題)	22	Part 2 A單	2344
Apple	I-Phone 8 (64GB)(無鎖有問題)	2	Part 2 B單開好	2345
Apple	I-Phone 8 (64GB)(無鎖有問題)	10	Part 2 B單開壞	2346
Apple	I-Phone 8 (64GB)(無鎖指紋壞)	2	Part 2 A單	2347
Apple	I-Phone 8 (64GB)	9	主板	2348
Apple	I-Phone 8 (64GB)(有問題)	1	Part 2 B單開好	2349
Apple	I-Phone 7 Plus 合計	435	匯總	2350
Apple	I-Phone 7 Plus (32GB)無鎖	1	A單(靚)	2351
Apple	I-Phone 7 Plus (128GB)無鎖	3	A單(靚1)	2352
Apple	I-Phone 7 Plus (128GB)無鎖	1	A單(全功能)	2353
Apple	I-Phone 7 Plus (256GB)無鎖	1	A單(全功能)	2354
Apple	I-Phone 7 Plus (128GB)無鎖	25	A單	2355
Apple	I-Phone 7 Plus (256GB)無鎖	6	A單	2356
Apple	I-Phone 7 Plus (32GB)無鎖	24	A單	2357
Apple	I-Phone 7 Plus (128GB)無鎖	1	A單(後鏡框爆)	2358
Apple	I-Phone 7 Plus (32GB)無鎖	2	A單(後鏡框爆)	2359
Apple	I-Phone 7 Plus (128GB)無鎖	40	B單開好	2360
Apple	I-Phone 7 Plus (256GB)無鎖	3	B單開好	2361
Apple	I-Phone 7 Plus (32GB)無鎖	47	B單開好	2362
Apple	I-Phone 7 Plus (128GB)無鎖	9	B單開壞	2363
Apple	I-Phone 7 Plus (256GB)無鎖	3	B單開壞	2364
Apple	I-Phone 7 Plus (32GB)無鎖	47	B單開壞	2365
Apple	I-Phone 7 Plus (128GB)無鎖	38	特別供應-B單不開換電即可(僅供參考)	2366
Apple	I-Phone 7 Plus (256GB)無鎖	6	特別供應-B單不開換電即可(僅供參考)	2367
Apple	I-Phone 7 Plus (32GB)無鎖	75	特別供應-B單不開換電即可(僅供參考)	2368
Apple	I-Phone 7 Plus (128GB)(無鎖有問題)	6	Part 2 A單	2369
Apple	I-Phone 7 Plus (256GB)(無鎖有問題)	1	Part 2 A單	2370
Apple	I-Phone 7 Plus (32GB)(無鎖有問題)	3	Part 2 A單	2371
Apple	I-Phone 7 Plus (128GB)(無鎖有問題)	1	Part 2 B單開好	2372
Apple	I-Phone 7 Plus (32GB)(無鎖有問題)	4	Part 2 B單開好	2373
Apple	I-Phone 7 Plus (128GB)(無鎖指紋壞)	4	Part 2 A單	2374
Apple	I-Phone 7 Plus (256GB)(無鎖指紋壞)	1	Part 2 A單	2375
Apple	I-Phone 7 Plus (32GB)(無鎖指紋壞)	4	Part 2 A單	2376
Apple	I-Phone 7 Plus (128GB)(無鎖指紋壞)	1	Part 2 B單開好	2377
Apple	I-Phone 7 Plus (32GB)(無鎖指紋壞)	4	Part 2 B單開好	2378
Apple	I-Phone 7 Plus (32GB)	1	Part 2 A單	2379
Apple	I-Phone 7 Plus (32GB)	1	Part 2 B單開好	2380
Apple	I-Phone 7 Plus (128GB)	1	Part 2 B單開壞	2381
Apple	I-Phone 7 Plus (32GB)	2	Part 2 B單開壞	2382
Apple	I-Phone 7 Plus (128GB)	3	Part 2 特別供應-B單不開換電即可(僅供參考)	2383
Apple	I-Phone 7 Plus (32GB)	43	Part 2 特別供應-B單不開換電即可(僅供參考)	2384
Apple	I-Phone 7 Plus (128GB)	1	主板	2385
Apple	I-Phone 7 Plus (32GB)	17	主板	2386
Apple	I-Phone 7 Plus (32GB)(有問題)	1	Part 2 A單	2387
Apple	I-Phone 7 Plus (128GB)(有問題)	2	Part 2 B單開好	2388
Apple	I-Phone 7 Plus (32GB)(有問題)	2	Part 2 B單開好	2389
Apple	I-Phone 7 合計	3232	匯總	2390
Apple	I-Phone 7 (32GB)無鎖	3	A單(靚)	2391
Apple	I-Phone 7 (128GB)無鎖	124	A單	2392
Apple	I-Phone 7 (256GB)無鎖	27	A單	2393
Apple	I-Phone 7 (32GB)無鎖	1743	A單	2394
Apple	I-Phone 7 (128GB)無鎖	1	A單(彈窗)	2395
Apple	I-Phone 7 (128GB)無鎖	1	B單開好(全功能)	2396
Apple	I-Phone 7 (128GB)無鎖	114	B單開好	2397
Apple	I-Phone 7 (256GB)無鎖	6	B單開好	2398
Apple	I-Phone 7 (32GB)無鎖	591	B單開好	2399
Apple	I-Phone 7 (128GB)無鎖	72	B單開壞	2400
Apple	I-Phone 7 (256GB)無鎖	3	B單開壞	2401

Apple	I-Phone 7 (32GB)無鎖	309	B單開壞	2402
Apple	I-Phone 7 (128GB)無鎖	12	特別供應-B單不開換電即可(僅供參考)	2403
Apple	I-Phone 7 (256GB)無鎖	2	特別供應-B單不開換電即可(僅供參考)	2404
Apple	I-Phone 7 (32GB)無鎖	81	特別供應-B單不開換電即可(僅供參考)	2405
Apple	I-Phone 7 (128GB)(無鎖有問題)	12	Part 2 A單	2406
Apple	I-Phone 7 (32GB)(無鎖有問題)	19	Part 2 A單	2407
Apple	I-Phone 7 (128GB)(無鎖有問題)	1	Part 2 B單開好	2408
Apple	I-Phone 7 (32GB)(無鎖有問題)	19	Part 2 B單開好	2409
Apple	I-Phone 7 (128GB)(無鎖指紋壞)	6	Part 2 A單	2410
Apple	I-Phone 7 (32GB)(無鎖指紋壞)	15	Part 2 A單	2411
Apple	I-Phone 7 (128GB)(無鎖指紋壞)	5	Part 2 B單開好	2412
Apple	I-Phone 7 (32GB)(無鎖指紋壞)	24	Part 2 B單開好	2413
Apple	I-Phone 7 (32GB)	2	Part 2 B單開好	2414
Apple	I-Phone 7 (32GB)	4	Part 2 特別供應-B單不開換電即可(僅供參考)	2415
Apple	I-Phone 7 (32GB)	32	主板	2416
Apple	I-Phone 7 (32GB)(有問題)	1	Part 2 A單	2417
Apple	I-Phone 7 (128GB)(有問題)	1	Part 2 B單開好	2418
Apple	I-Phone 7 (32GB)(有問題)	2	Part 2 B單開好	2419
Apple	I-Phone 6S Plus 合計	669	匯總	2420
Apple	I-Phone 6S Plus (16GB)無鎖	1	N.New	2421
Apple	I-Phone 6S Plus (128GB)無鎖	1	A單(全功能)	2422
Apple	I-Phone 6S Plus (128GB)無鎖	78	A單	2423
Apple	I-Phone 6S Plus (16GB)無鎖	21	A單	2424
Apple	I-Phone 6S Plus (32GB)無鎖	24	A單	2425
Apple	I-Phone 6S Plus (64GB)無鎖	19	A單	2426
Apple	I-Phone 6S Plus (16GB)無鎖	1	B單開好(全功能)	2427
Apple	I-Phone 6S Plus (32GB)無鎖	1	B單開好(全功能)	2428
Apple	I-Phone 6S Plus (64GB)無鎖	1	B單開好(全功能)	2429
Apple	I-Phone 6S Plus (128GB)無鎖	20	B單開好	2430
Apple	I-Phone 6S Plus (16GB)無鎖	13	B單開好	2431
Apple	I-Phone 6S Plus (32GB)無鎖	21	B單開好	2432
Apple	I-Phone 6S Plus (64GB)無鎖	22	B單開好	2433
Apple	I-Phone 6S Plus (128GB)無鎖	13	B單開壞	2434
Apple	I-Phone 6S Plus (16GB)無鎖	40	B單開壞	2435
Apple	I-Phone 6S Plus (32GB)無鎖	17	B單開壞	2436
Apple	I-Phone 6S Plus (64GB)無鎖	27	B單開壞	2437
Apple	I-Phone 6S Plus (128GB)無鎖	7	特別供應-B單不開換電即可(僅供參考)	2438
Apple	I-Phone 6S Plus (16GB)無鎖	24	特別供應-B單不開換電即可(僅供參考)	2439
Apple	I-Phone 6S Plus (32GB)無鎖	46	特別供應-B單不開換電即可(僅供參考)	2440
Apple	I-Phone 6S Plus (64GB)無鎖	39	特別供應-B單不開換電即可(僅供參考)	2441
Apple	I-Phone 6S Plus (128GB)(無鎖有問題)	9	Part 2 A單	2442
Apple	I-Phone 6S Plus (16GB)(無鎖有問題)	33	Part 2 A單	2443
Apple	I-Phone 6S Plus (32GB)(無鎖有問題)	19	Part 2 A單	2444
Apple	I-Phone 6S Plus (64GB)(無鎖有問題)	31	Part 2 A單	2445
Apple	I-Phone 6S Plus (128GB)(無鎖有問題)	3	Part 2 B單開好	2446
Apple	I-Phone 6S Plus (16GB)(無鎖有問題)	6	Part 2 B單開好	2447
Apple	I-Phone 6S Plus (32GB)(無鎖有問題)	9	Part 2 B單開好	2448
Apple	I-Phone 6S Plus (64GB)(無鎖有問題)	16	Part 2 B單開好	2449
Apple	I-Phone 6S Plus (128GB)(無鎖指紋壞)	2	Part 2 A單	2450
Apple	I-Phone 6S Plus (16GB)(無鎖指紋壞)	9	Part 2 A單	2451
Apple	I-Phone 6S Plus (32GB)(無鎖指紋壞)	9	Part 2 A單	2452
Apple	I-Phone 6S Plus (64GB)(無鎖指紋壞)	9	Part 2 A單	2453
Apple	I-Phone 6S Plus (128GB)(無鎖指紋壞)	4	Part 2 B單開好	2454
Apple	I-Phone 6S Plus (16GB)(無鎖指紋壞)	6	Part 2 B單開好	2455
Apple	I-Phone 6S Plus (32GB)(無鎖指紋壞)	3	Part 2 B單開好	2456
Apple	I-Phone 6S Plus (64GB)(無鎖指紋壞)	12	Part 2 B單開好	2457
Apple	I-Phone 6S Plus (16GB)	2	Part 2 N.New單	2458
Apple	I-Phone 6S Plus (16GB)	9	Part 2 A單	2459
Apple	I-Phone 6S Plus (64GB)	4	Part 2 A單	2460
Apple	I-Phone 6S Plus (16GB)	2	Part 2 B單開好	2461
Apple	I-Phone 6S Plus (32GB)	1	Part 2 B單開好	2462
Apple	I-Phone 6S Plus (64GB)	2	Part 2 B單開好	2463
Apple	I-Phone 6S Plus (128GB)	2	Part 2 B單開壞	2464
Apple	I-Phone 6S Plus (16GB)	1	Part 2 B單開壞	2465
Apple	I-Phone 6S Plus (64GB)	4	Part 2 B單開壞	2466
Apple	I-Phone 6S Plus (16GB)	3	Part 2 特別供應-B單不開換電即可(僅供參考)	2467
Apple	I-Phone 6S Plus (64GB)	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2468
Apple	I-Phone 6S Plus (16GB)	7	主板	2469
Apple	I-Phone 6S Plus (16GB)(有問題)	11	Part 2 A單	2470
Apple	I-Phone 6S Plus (64GB)(有問題)	1	Part 2 A單	2471
Apple	I-Phone 6S Plus (16GB)(有問題)	2	Part 2 B單開好	2472

Apple	I-Phone 6S Plus (32GB)(有問題)	1	Part 2 B單開好	2473
Apple	I-Phone 6S 合計	1047	匯總	2474
Apple	I-Phone 6S (16GB)無鎖	1	N.New	2475
Apple	I-Phone 6S (128GB)無鎖	43	A單	2476
Apple	I-Phone 6S (16GB)無鎖	54	A單	2477
Apple	I-Phone 6S (32GB)無鎖	161	A單	2478
Apple	I-Phone 6S (64GB)無鎖	71	A單	2479
Apple	I-Phone 6S (32GB)無鎖	1	Part 2 A單	2480
Apple	I-Phone 6S (128GB)無鎖	8	B單開好	2481
Apple	I-Phone 6S (16GB)無鎖	15	B單開好	2482
Apple	I-Phone 6S (32GB)無鎖	32	B單開好	2483
Apple	I-Phone 6S (64GB)無鎖	28	B單開好	2484
Apple	I-Phone 6S (128GB)無鎖	10	B單開壞	2485
Apple	I-Phone 6S (16GB)無鎖	72	B單開壞	2486
Apple	I-Phone 6S (32GB)無鎖	84	B單開壞	2487
Apple	I-Phone 6S (64GB)無鎖	80	B單開壞	2488
Apple	I-Phone 6S (128GB)無鎖	4	特別供應-B單不開換電即可(僅供參考)	2489
Apple	I-Phone 6S (16GB)無鎖	23	特別供應-B單不開換電即可(僅供參考)	2490
Apple	I-Phone 6S (32GB)無鎖	23	特別供應-B單不開換電即可(僅供參考)	2491
Apple	I-Phone 6S (64GB)無鎖	18	特別供應-B單不開換電即可(僅供參考)	2492
Apple	I-Phone 6S (128GB)(無鎖有問題)	2	Part 2 A單	2493
Apple	I-Phone 6S (16GB)(無鎖有問題)	16	Part 2 A單	2494
Apple	I-Phone 6S (32GB)(無鎖有問題)	15	Part 2 A單	2495
Apple	I-Phone 6S (64GB)(無鎖有問題)	6	Part 2 A單	2496
Apple	I-Phone 6S (128GB)(無鎖有問題)	3	Part 2 B單開好	2497
Apple	I-Phone 6S (32GB)(無鎖有問題)	2	Part 2 B單開好	2498
Apple	I-Phone 6S (64GB)(無鎖有問題)	2	Part 2 B單開好	2499
Apple	I-Phone 6S (16GB)(無鎖指紋壞)	2	Part 2 A單	2500
Apple	I-Phone 6S (32GB)(無鎖指紋壞)	5	Part 2 A單	2501
Apple	I-Phone 6S (64GB)(無鎖指紋壞)	1	Part 2 A單	2502
Apple	I-Phone 6S (16GB)(無鎖指紋壞)	4	Part 2 B單開好	2503
Apple	I-Phone 6S (32GB)(無鎖指紋壞)	2	Part 2 B單開好	2504
Apple	I-Phone 6S (64GB)(無鎖指紋壞)	2	Part 2 B單開好	2505
Apple	I-Phone 6S (16GB)	4	Part 2 N.New單	2506
Apple	I-Phone 6S (32GB)	8	Part 2 N.New單	2507
Apple	I-Phone 6S (128GB)	1	Part 2 A單	2508
Apple	I-Phone 6S (16GB)	8	Part 2 A單	2509
Apple	I-Phone 6S (32GB)	7	Part 2 A單	2510
Apple	I-Phone 6S (64GB)	5	Part 2 A單	2511
Apple	I-Phone 6S (128GB)	1	Part 2 B單開好	2512
Apple	I-Phone 6S (16GB)	19	Part 2 B單開好	2513
Apple	I-Phone 6S (32GB)	8	Part 2 B單開好	2514
Apple	I-Phone 6S (64GB)	16	Part 2 B單開好	2515
Apple	I-Phone 6S (128GB)	2	Part 2 B單開壞	2516
Apple	I-Phone 6S (16GB)	9	Part 2 B單開壞	2517
Apple	I-Phone 6S (32GB)	12	Part 2 B單開壞	2518
Apple	I-Phone 6S (64GB)	9	Part 2 B單開壞	2519
Apple	I-Phone 6S (128GB)	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2520
Apple	I-Phone 6S (16GB)	13	Part 2 特別供應-B單不開換電即可(僅供參考)	2521
Apple	I-Phone 6S (32GB)	21	Part 2 特別供應-B單不開換電即可(僅供參考)	2522
Apple	I-Phone 6S (16GB)	45	主板	2523
Apple	I-Phone 6S (128GB)(有問題)	1	Part 2 A單	2524
Apple	I-Phone 6S (16GB)(有問題)	29	Part 2 A單	2525
Apple	I-Phone 6S (32GB)(有問題)	31	Part 2 A單	2526
Apple	I-Phone 6S (64GB)(有問題)	4	Part 2 A單	2527
Apple	I-Phone 6S (128GB)(有問題)	1	Part 2 B單開好	2528
Apple	I-Phone 6S (32GB)(有問題)	2	Part 2 B單開好	2529
Apple	I-Phone 6 Plus 合計	708	匯總	2530
Apple	I-Phone 6 Plus (128GB)無鎖	15	A單	2531
Apple	I-Phone 6 Plus (16GB)無鎖	12	A單	2532
Apple	I-Phone 6 Plus (64GB)無鎖	20	A單	2533
Apple	I-Phone 6 Plus (16GB)無鎖	43	B單開好(全功能)	2534
Apple	I-Phone 6 Plus (128GB)無鎖	2	B單開好	2535
Apple	I-Phone 6 Plus (16GB)無鎖	22	B單開好	2536
Apple	I-Phone 6 Plus (64GB)無鎖	7	B單開好	2537
Apple	I-Phone 6 Plus (128GB)無鎖	2	B單開壞	2538
Apple	I-Phone 6 Plus (16GB)無鎖	117	B單開壞	2539
Apple	I-Phone 6 Plus (64GB)無鎖	4	B單開壞	2540
Apple	I-Phone 6 Plus (128GB)無鎖	6	特別供應-B單不開換電即可(僅供參考)	2541
Apple	I-Phone 6 Plus (16GB)無鎖	61	特別供應-B單不開換電即可(僅供參考)	2542
Apple	I-Phone 6 Plus (64GB)無鎖	25	特別供應-B單不開換電即可(僅供參考)	2543

Apple	I-Phone 6 Plus (128GB)(無鎖有問題)	12	Part 2 A單	2544
Apple	I-Phone 6 Plus (16GB)(無鎖有問題)	67	Part 2 A單	2545
Apple	I-Phone 6 Plus (64GB)(無鎖有問題)	28	Part 2 A單	2546
Apple	I-Phone 6 Plus (128GB)(無鎖有問題)	3	Part 2 B單開好	2547
Apple	I-Phone 6 Plus (16GB)(無鎖有問題)	25	Part 2 B單開好	2548
Apple	I-Phone 6 Plus (64GB)(無鎖有問題)	14	Part 2 B單開好	2549
Apple	I-Phone 6 Plus (16GB)(無鎖指紋壞)	2	Part 2 A單	2550
Apple	I-Phone 6 Plus (128GB)(無鎖指紋壞)	1	Part 2 B單開好	2551
Apple	I-Phone 6 Plus (16GB)(無鎖指紋壞)	7	Part 2 B單開好	2552
Apple	I-Phone 6 Plus (64GB)(無鎖指紋壞)	2	Part 2 B單開好	2553
Apple	I-Phone 6 Plus (16GB)	15	Part 2 N.New單	2554
Apple	I-Phone 6 Plus (128GB)	5	Part 2 A單	2555
Apple	I-Phone 6 Plus (16GB)	16	Part 2 A單	2556
Apple	I-Phone 6 Plus (64GB)	4	Part 2 A單	2557
Apple	I-Phone 6 Plus (128GB)	2	Part 2 B單開好	2558
Apple	I-Phone 6 Plus (16GB)	4	Part 2 B單開好	2559
Apple	I-Phone 6 Plus (64GB)	3	Part 2 B單開好	2560
Apple	I-Phone 6 Plus (128GB)	3	Part 2 B單開壞	2561
Apple	I-Phone 6 Plus (16GB)	84	Part 2 B單開壞	2562
Apple	I-Phone 6 Plus (64GB)	13	Part 2 B單開壞	2563
Apple	I-Phone 6 Plus (16GB)	21	Part 2 特別供應-B單不開換電即可(僅供參考)	2564
Apple	I-Phone 6 Plus (64GB)	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2565
Apple	I-Phone 6 Plus (16GB)	17	主板	2566
Apple	I-Phone 6 Plus (128GB)(有問題)	2	Part 2 A單	2567
Apple	I-Phone 6 Plus (16GB)(有問題)	5	Part 2 A單	2568
Apple	I-Phone 6 Plus (64GB)(有問題)	2	Part 2 A單	2569
Apple	I-Phone 6 Plus (128GB)(有問題)	2	Part 2 B單開好	2570
Apple	I-Phone 6 Plus (16GB)(有問題)	10	Part 2 B單開好	2571
Apple	I-Phone 6 Plus (64GB)(有問題)	2	Part 2 B單開好	2572
Apple	I-Phone 6 合計	4014	匯總	2573
Apple	I-Phone 6 (32GB)無鎖	2	未激活-New	2574
Apple	I-Phone 6 (16GB)無鎖	1	N.New(全功能)	2575
Apple	I-Phone 6 (32GB)無鎖	2	N.New單	2576
Apple	I-Phone 6 (128GB)無鎖	50	A單	2577
Apple	I-Phone 6 (16GB)無鎖	332	A單	2578
Apple	I-Phone 6 (32GB)無鎖	98	A單	2579
Apple	I-Phone 6 (64GB)無鎖	84	A單	2580
Apple	I-Phone 6 (128GB)無鎖	10	B單開好(全功能)	2581
Apple	I-Phone 6 (16GB)無鎖	184	B單開好(全功能)	2582
Apple	I-Phone 6 (32GB)無鎖	38	B單開好(全功能)	2583
Apple	I-Phone 6 (64GB)無鎖	53	B單開好(全功能)	2584
Apple	I-Phone 6 (128GB)無鎖	6	B單開好	2585
Apple	I-Phone 6 (16GB)無鎖	164	B單開好	2586
Apple	I-Phone 6 (32GB)無鎖	40	B單開好	2587
Apple	I-Phone 6 (64GB)無鎖	135	B單開好	2588
Apple	I-Phone 6 (128GB)無鎖	14	B單開壞	2589
Apple	I-Phone 6 (16GB)無鎖	148	B單開壞	2590
Apple	I-Phone 6 (32GB)無鎖	39	B單開壞	2591
Apple	I-Phone 6 (64GB)無鎖	98	B單開壞	2592
Apple	I-Phone 6 (128GB)無鎖	24	特別供應-B單不開換電即可(僅供參考)	2593
Apple	I-Phone 6 (16GB)無鎖	306	特別供應-B單不開換電即可(僅供參考)	2594
Apple	I-Phone 6 (32GB)無鎖	69	特別供應-B單不開換電即可(僅供參考)	2595
Apple	I-Phone 6 (64GB)無鎖	311	特別供應-B單不開換電即可(僅供參考)	2596
Apple	I-Phone 6 (128GB)(無鎖有問題)	36	Part 2 A單	2597
Apple	I-Phone 6 (16GB)(無鎖有問題)	279	Part 2 A單	2598
Apple	I-Phone 6 (32GB)(無鎖有問題)	75	Part 2 A單	2599
Apple	I-Phone 6 (64GB)(無鎖有問題)	203	Part 2 A單	2600
Apple	I-Phone 6 (128GB)(無鎖有問題)	9	Part 2 B單開好	2601
Apple	I-Phone 6 (16GB)(無鎖有問題)	125	Part 2 B單開好	2602
Apple	I-Phone 6 (32GB)(無鎖有問題)	25	Part 2 B單開好	2603
Apple	I-Phone 6 (64GB)(無鎖有問題)	76	Part 2 B單開好	2604
Apple	I-Phone 6 (16GB)(無鎖有問題)	1	Part 2 B單開壞	2605
Apple	I-Phone 6 (128GB)(無鎖指紋壞)	15	Part 2 A單	2606
Apple	I-Phone 6 (16GB)(無鎖指紋壞)	5	Part 2 A單	2607
Apple	I-Phone 6 (32GB)(無鎖指紋壞)	28	Part 2 A單	2608
Apple	I-Phone 6 (64GB)(無鎖指紋壞)	12	Part 2 A單	2609
Apple	I-Phone 6 (128GB)(無鎖指紋壞)	4	Part 2 B單開好	2610
Apple	I-Phone 6 (16GB)(無鎖指紋壞)	59	Part 2 B單開好	2611
Apple	I-Phone 6 (32GB)(無鎖指紋壞)	19	Part 2 B單開好	2612
Apple	I-Phone 6 (64GB)(無鎖指紋壞)	57	Part 2 B單開好	2613
Apple	I-Phone 6 (128GB)	1	Part 2 N.New單	2614

Apple	I-Phone 6 (16GB)	4	Part 2 N.New單	2615
Apple	I-Phone 6 (32GB)	175	Part 2 N.New單	2616
Apple	I-Phone 6 (128GB)	2	Part 2 A單	2617
Apple	I-Phone 6 (16GB)	53	Part 2 A單	2618
Apple	I-Phone 6 (32GB)	38	Part 2 A單	2619
Apple	I-Phone 6 (64GB)	30	Part 2 A單	2620
Apple	I-Phone 6 (16GB)	54	Part 2 B單開好	2621
Apple	I-Phone 6 (32GB)	4	Part 2 B單開好	2622
Apple	I-Phone 6 (64GB)	25	Part 2 B單開好	2623
Apple	I-Phone 6 (128GB)	4	Part 2 B單開壞	2624
Apple	I-Phone 6 (16GB)	67	Part 2 B單開壞	2625
Apple	I-Phone 6 (32GB)	14	Part 2 B單開壞	2626
Apple	I-Phone 6 (64GB)	63	Part 2 B單開壞	2627
Apple	I-Phone 6 (128GB)	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2628
Apple	I-Phone 6 (16GB)	37	Part 2 特別供應-B單不開換電即可(僅供參考)	2629
Apple	I-Phone 6 (32GB)	6	Part 2 特別供應-B單不開換電即可(僅供參考)	2630
Apple	I-Phone 6 (64GB)	7	Part 2 特別供應-B單不開換電即可(僅供參考)	2631
Apple	I-Phone 6 (16GB)	88	主板	2632
Apple	I-Phone 6 (128GB)(有問題)	2	Part 2 A單	2633
Apple	I-Phone 6 (16GB)(有問題)	26	Part 2 A單	2634
Apple	I-Phone 6 (32GB)(有問題)	6	Part 2 A單	2635
Apple	I-Phone 6 (64GB)(有問題)	15	Part 2 A單	2636
Apple	I-Phone 6 (16GB)(有問題)	26	Part 2 B單開好	2637
Apple	I-Phone 6 (32GB)(有問題)	23	Part 2 B單開好	2638
Apple	I-Phone 6 (64GB)(有問題)	7	Part 2 B單開好	2639
Apple	I-Phone SE3 合計	124	匯總	2640
Apple	I-Phone SE3 (128GB)無鎖	1	A單(靚1)(全功能)	2641
Apple	I-Phone SE3 (64GB)無鎖	13	A單(靚1)(全功能)	2642
Apple	I-Phone SE3 (64GB)無鎖	4	A單(全功能)	2643
Apple	I-Phone SE3 (64GB)無鎖	10	A單(後爆)(全功能)	2644
Apple	I-Phone SE3 (128GB)無鎖	2	B單開好(全功能)	2645
Apple	I-Phone SE3 (64GB)無鎖	4	B單開好(全功能)	2646
Apple	I-Phone SE3 (64GB)無鎖	1	B單開好	2647
Apple	I-Phone SE3 (64GB)無鎖	4	B單有電流	2648
Apple	I-Phone SE3 (128GB)無鎖	12	特別供應-B單不開換電即可(僅供參考)	2649
Apple	I-Phone SE3 (256GB)無鎖	2	特別供應-B單不開換電即可(僅供參考)	2650
Apple	I-Phone SE3 (64GB)無鎖	52	特別供應-B單不開換電即可(僅供參考)	2651
Apple	I-Phone SE3 (128GB)(無鎖有問題)	1	Part 2 A單	2652
Apple	I-Phone SE3 (64GB)(無鎖有問題)	5	Part 2 A單	2653
Apple	I-Phone SE3 (64GB)(無鎖有問題)	1	Part 2 B單開好	2654
Apple	I-Phone SE3 (64GB)(無鎖有問題)	1	Part 2 B單開壞	2655
Apple	I-Phone SE3 (128GB)(無鎖指紋壞)	2	Part 2 A單	2656
Apple	I-Phone SE3 (64GB)(無鎖指紋壞)	1	Part 2 A單	2657
Apple	I-Phone SE3 (64GB)	3	Part 2 B單開壞	2658
Apple	I-Phone SE3 (64GB)	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2659
Apple	I-Phone SE3 (128GB)(有問題)	2	Part 2 A單	2660
Apple	I-Phone SE3 (64GB)(有問題)	2	Part 2 A單	2661
Apple	I-Phone SE2 合計	71	匯總	2662
Apple	I-Phone SE2 (64GB)無鎖	4	A單(靚)(全功能)	2663
Apple	I-Phone SE2 (64GB)無鎖	1	A單(靚1)(全功能)	2664
Apple	I-Phone SE2 (256GB)無鎖	1	A單(全功能)	2665
Apple	I-Phone SE2 (128GB)無鎖	1	B單開好(全功能)	2666
Apple	I-Phone SE2 (64GB)無鎖	3	B單開好(全功能)	2667
Apple	I-Phone SE2 (128GB)無鎖	1	B單開壞	2668
Apple	I-Phone SE2 (64GB)無鎖	4	B單開壞	2669
Apple	I-Phone SE2 (128GB)無鎖	2	B單有電流	2670
Apple	I-Phone SE2 (128GB)無鎖	4	特別供應-B單不開換電即可(僅供參考)	2671
Apple	I-Phone SE2 (256GB)無鎖	2	特別供應-B單不開換電即可(僅供參考)	2672
Apple	I-Phone SE2 (64GB)無鎖	32	特別供應-B單不開換電即可(僅供參考)	2673
Apple	I-Phone SE2 (64GB)(無鎖有問題)	4	Part 2 A單	2674
Apple	I-Phone SE2 (64GB)(無鎖指紋壞)	1	Part 2 A單	2675
Apple	I-Phone SE2 (64GB)	10	主板	2676
Apple	I-Phone SE2 (64GB)(有問題)	1	Part 2 B單開好	2677
Apple	I-Phone SE 合計	289	匯總	2678
Apple	I-Phone SE (128GB)無鎖	3	A單	2679
Apple	I-Phone SE (16GB)無鎖	46	A單	2680
Apple	I-Phone SE (32GB)無鎖	121	A單	2681
Apple	I-Phone SE (64GB)無鎖	2	A單	2682
Apple	I-Phone SE (16GB)無鎖	9	B單開好	2683
Apple	I-Phone SE (32GB)無鎖	13	B單開好	2684
Apple	I-Phone SE (64GB)無鎖	8	B單開好	2685

Apple	I-Phone SE (128GB)無鎖	1	B單開壞	2686
Apple	I-Phone SE (16GB)無鎖	14	B單開壞	2687
Apple	I-Phone SE (32GB)無鎖	19	B單開壞	2688
Apple	I-Phone SE (64GB)無鎖	12	B單開壞	2689
Apple	I-Phone SE (32GB)無鎖	6	特別供應-B單不開換電即可(僅供參考)	2690
Apple	I-Phone SE (64GB)無鎖	1	特別供應-B單不開換電即可(僅供參考)	2691
Apple	I-Phone SE (16GB)(無鎖有問題)	1	Part 2 A單	2692
Apple	I-Phone SE (32GB)(無鎖有問題)	3	Part 2 A單	2693
Apple	I-Phone SE (32GB)(無鎖有問題)	1	Part 2 B單開好	2694
Apple	I-Phone SE (32GB)(無鎖指紋壞)	1	Part 2 A單	2695
Apple	I-Phone SE (64GB)(無鎖指紋壞)	1	Part 2 A單	2696
Apple	I-Phone SE (16GB)	8	Part 2 A單	2697
Apple	I-Phone SE (32GB)	12	Part 2 A單	2698
Apple	I-Phone SE (16GB)	7	主板	2699
Apple	I-Phone 5S 合計	3233	匯總	2700
Apple	I-Phone 5S (16GB)無鎖	160	A單	2701
Apple	I-Phone 5S (32GB)無鎖	36	A單	2702
Apple	I-Phone 5S (64GB)無鎖	13	A單	2703
Apple	I-Phone 5S (16GB)無鎖	470	B單開好	2704
Apple	I-Phone 5S (32GB)無鎖	56	B單開好	2705
Apple	I-Phone 5S (64GB)無鎖	2	B單開好	2706
Apple	I-Phone 5S (16GB)無鎖	1258	B單開壞	2707
Apple	I-Phone 5S (32GB)無鎖	170	B單開壞	2708
Apple	I-Phone 5S (64GB)無鎖	34	B單開壞	2709
Apple	I-Phone 5S (16GB)無鎖	276	特別供應-B單不開換電即可(僅供參考)	2710
Apple	I-Phone 5S (32GB)無鎖	29	特別供應-B單不開換電即可(僅供參考)	2711
Apple	I-Phone 5S (64GB)無鎖	9	特別供應-B單不開換電即可(僅供參考)	2712
Apple	I-Phone 5S (16GB)(無鎖有問題)	14	Part 2 A單	2713
Apple	I-Phone 5S (32GB)(無鎖有問題)	34	Part 2 A單	2714
Apple	I-Phone 5S (64GB)(無鎖有問題)	10	Part 2 A單	2715
Apple	I-Phone 5S (16GB)(無鎖有問題)	53	Part 2 B單開好	2716
Apple	I-Phone 5S (32GB)(無鎖有問題)	9	Part 2 B單開好	2717
Apple	I-Phone 5S (64GB)(無鎖有問題)	2	Part 2 B單開好	2718
Apple	I-Phone 5S (16GB)(無鎖指紋壞)	2	Part 2 A單	2719
Apple	I-Phone 5S (32GB)(無鎖指紋壞)	1	Part 2 A單	2720
Apple	I-Phone 5S (16GB)(無鎖指紋壞)	36	Part 2 B單開好	2721
Apple	I-Phone 5S (32GB)(無鎖指紋壞)	7	Part 2 B單開好	2722
Apple	I-Phone 5S (64GB)(無鎖指紋壞)	1	Part 2 B單開好	2723
Apple	I-Phone 5S (16GB)	116	Part 2 A單	2724
Apple	I-Phone 5S (32GB)	5	Part 2 A單	2725
Apple	I-Phone 5S (64GB)	2	Part 2 A單	2726
Apple	I-Phone 5S (16GB)	20	Part 2 B單開好	2727
Apple	I-Phone 5S (32GB)	1	Part 2 B單開好	2728
Apple	I-Phone 5S (16GB)	248	Part 2 B單開壞	2729
Apple	I-Phone 5S (32GB)	22	Part 2 B單開壞	2730
Apple	I-Phone 5S (64GB)	4	Part 2 B單開壞	2731
Apple	I-Phone 5S (16GB)	57	Part 2 特別供應-B單不開換電即可(僅供參考)	2732
Apple	I-Phone 5S (32GB)	3	Part 2 特別供應-B單不開換電即可(僅供參考)	2733
Apple	I-Phone 5S (64GB)	3	Part 2 特別供應-B單不開換電即可(僅供參考)	2734
Apple	I-Phone 5S (16GB)	56	主板	2735
Apple	I-Phone 5S (16GB)(有問題)	1	Part 2 A單	2736
Apple	I-Phone 5S (16GB)(有問題)	12	Part 2 B單開好	2737
Apple	I-Phone 5S (32GB)(有問題)	1	Part 2 B單開好	2738
Apple	I-Phone 5C 合計	1514	匯總	2739
Apple	I-Phone 5C (16GB)無鎖	38	A單	2740
Apple	I-Phone 5C (32GB)無鎖	6	A單	2741
Apple	I-Phone 5C (8GB)無鎖	61	A單	2742
Apple	I-Phone 5C (8GB)無鎖	2	Part 2 A單	2743
Apple	I-Phone 5C (16GB)無鎖	76	B單開好	2744
Apple	I-Phone 5C (32GB)無鎖	2	B單開好	2745
Apple	I-Phone 5C (8GB)無鎖	151	B單開好	2746
Apple	I-Phone 5C (16GB)無鎖	140	B單開壞	2747
Apple	I-Phone 5C (32GB)無鎖	37	B單開壞	2748
Apple	I-Phone 5C (8GB)無鎖	178	B單開壞	2749
Apple	I-Phone 5C (16GB)無鎖	34	特別供應-B單不開換電即可(僅供參考)	2750
Apple	I-Phone 5C (32GB)無鎖	6	特別供應-B單不開換電即可(僅供參考)	2751
Apple	I-Phone 5C (8GB)無鎖	35	特別供應-B單不開換電即可(僅供參考)	2752
Apple	I-Phone 5C (16GB)(無鎖有問題)	56	Part 2 A單	2753
Apple	I-Phone 5C (32GB)(無鎖有問題)	17	Part 2 A單	2754
Apple	I-Phone 5C (8GB)(無鎖有問題)	56	Part 2 A單	2755
Apple	I-Phone 5C (16GB)(無鎖有問題)	15	Part 2 B單開好	2756

Apple	I-Phone 5C (32GB)(無鎖有問題)	2	Part 2 B單開好	2757
Apple	I-Phone 5C (8GB)(無鎖有問題)	2	Part 2 B單開好	2758
Apple	I-Phone 5C (16GB)	141	Part 2 A單	2759
Apple	I-Phone 5C (32GB)	11	Part 2 A單	2760
Apple	I-Phone 5C (8GB)	139	Part 2 A單	2761
Apple	I-Phone 5C (16GB)	25	Part 2 B單開好	2762
Apple	I-Phone 5C (32GB)	9	Part 2 B單開好	2763
Apple	I-Phone 5C (8GB)	47	Part 2 B單開好	2764
Apple	I-Phone 5C (16GB)	64	Part 2 B單開壞	2765
Apple	I-Phone 5C (32GB)	10	Part 2 B單開壞	2766
Apple	I-Phone 5C (8GB)	66	Part 2 B單開壞	2767
Apple	I-Phone 5C (16GB)	13	Part 2 特別供應-B單不開換電即可(僅供參考)	2768
Apple	I-Phone 5C (32GB)	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2769
Apple	I-Phone 5C (8GB)	11	Part 2 特別供應-B單不開換電即可(僅供參考)	2770
Apple	I-Phone 5C (16GB)	1	主板	2771
Apple	I-Phone 5C (8GB)	22	主板	2772
Apple	I-Phone 5C (16GB)(有問題)	17	Part 2 A單	2773
Apple	I-Phone 5C (32GB)(有問題)	2	Part 2 A單	2774
Apple	I-Phone 5C (8GB)(有問題)	11	Part 2 A單	2775
Apple	I-Phone 5C (16GB)(有問題)	3	Part 2 B單開好	2776
Apple	I-Phone 5C (8GB)(有問題)	7	Part 2 B單開好	2777
Apple	I-Phone 5 合計	1347	匯總	2778
Apple	I-Phone 5 (16GB)無鎖	96	A單	2779
Apple	I-Phone 5 (32GB)無鎖	30	A單	2780
Apple	I-Phone 5 (64GB)無鎖	14	A單	2781
Apple	I-Phone 5 (16GB)無鎖	1	Part 2 A單	2782
Apple	I-Phone 5 (16GB)無鎖	18	B單開好	2783
Apple	I-Phone 5 (32GB)無鎖	3	B單開好	2784
Apple	I-Phone 5 (64GB)無鎖	5	B單開好	2785
Apple	I-Phone 5 (16GB)無鎖	148	B單開壞	2786
Apple	I-Phone 5 (32GB)無鎖	15	B單開壞	2787
Apple	I-Phone 5 (64GB)無鎖	2	B單開壞	2788
Apple	I-Phone 5 (16GB)無鎖	45	特別供應-B單不開換電即可(僅供參考)	2789
Apple	I-Phone 5 (32GB)無鎖	2	特別供應-B單不開換電即可(僅供參考)	2790
Apple	I-Phone 5 (64GB)無鎖	4	特別供應-B單不開換電即可(僅供參考)	2791
Apple	I-Phone 5 (16GB)(無鎖有問題)	78	Part 2 A單	2792
Apple	I-Phone 5 (32GB)(無鎖有問題)	18	Part 2 A單	2793
Apple	I-Phone 5 (64GB)(無鎖有問題)	3	Part 2 A單	2794
Apple	I-Phone 5 (16GB)(無鎖有問題)	24	Part 2 B單開好	2795
Apple	I-Phone 5 (32GB)(無鎖有問題)	2	Part 2 B單開好	2796
Apple	I-Phone 5 (64GB)(無鎖有問題)	5	Part 2 B單開好	2797
Apple	I-Phone 5 (16GB)	419	Part 2 A單	2798
Apple	I-Phone 5 (32GB)	47	Part 2 A單	2799
Apple	I-Phone 5 (64GB)	28	Part 2 A單	2800
Apple	I-Phone 5 (16GB)	96	Part 2 B單開好	2801
Apple	I-Phone 5 (32GB)	5	Part 2 B單開好	2802
Apple	I-Phone 5 (64GB)	4	Part 2 B單開好	2803
Apple	I-Phone 5 (16GB)	78	Part 2 B單開壞	2804
Apple	I-Phone 5 (32GB)	16	Part 2 B單開壞	2805
Apple	I-Phone 5 (64GB)	6	Part 2 B單開壞	2806
Apple	I-Phone 5 (16GB)	32	Part 2 特別供應-B單不開換電即可(僅供參考)	2807
Apple	I-Phone 5 (32GB)	3	Part 2 特別供應-B單不開換電即可(僅供參考)	2808
Apple	I-Phone 5 (64GB)	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2809
Apple	I-Phone 5 (16GB)	16	主板	2810
Apple	I-Phone 5 (16GB)(有問題)	59	Part 2 A單	2811
Apple	I-Phone 5 (32GB)(有問題)	2	Part 2 A單	2812
Apple	I-Phone 5 (64GB)(有問題)	2	Part 2 A單	2813
Apple	I-Phone 5 (16GB)(有問題)	18	Part 2 B單開好	2814
Apple	I-Phone 5 (32GB)(有問題)	2	Part 2 B單開好	2815
Apple	I-Phone 4S 合計	453	匯總	2816
Apple	I-Phone 4S (8GB)無鎖	2	A單	2817
Apple	I-Phone 4S (16GB)無鎖	48	B單開好	2818
Apple	I-Phone 4S (32GB)無鎖	13	B單開好	2819
Apple	I-Phone 4S (64GB)無鎖	2	B單開好	2820
Apple	I-Phone 4S (8GB)無鎖	8	B單開好	2821
Apple	I-Phone 4S (16GB)無鎖	48	B單開壞	2822
Apple	I-Phone 4S (32GB)無鎖	4	B單開壞	2823
Apple	I-Phone 4S (64GB)無鎖	3	B單開壞	2824
Apple	I-Phone 4S (8GB)無鎖	30	B單開壞	2825
Apple	I-Phone 4S (16GB)無鎖	12	特別供應-B單不開換電即可(僅供參考)	2826
Apple	I-Phone 4S (32GB)無鎖	1	特別供應-B單不開換電即可(僅供參考)	2827

Apple	I-Phone 4S (8GB)無鎖	14	特別供應-B單不開換電即可(僅供參考)	2828
Apple	I-Phone 4S (16GB)(無鎖有問題)	5	Part 2 A單	2829
Apple	I-Phone 4S (32GB)(無鎖有問題)	1	Part 2 A單	2830
Apple	I-Phone 4S (8GB)(無鎖有問題)	2	Part 2 A單	2831
Apple	I-Phone 4S (16GB)(無鎖有問題)	15	Part 2 B單開好	2832
Apple	I-Phone 4S (32GB)(無鎖有問題)	3	Part 2 B單開好	2833
Apple	I-Phone 4S (64GB)(無鎖有問題)	2	Part 2 B單開好	2834
Apple	I-Phone 4S (8GB)(無鎖有問題)	2	Part 2 B單開好	2835
Apple	I-Phone 4S (16GB)	7	Part 2 A單	2836
Apple	I-Phone 4S (32GB)	4	Part 2 A單	2837
Apple	I-Phone 4S (8GB)	6	Part 2 A單	2838
Apple	I-Phone 4S (16GB)	62	Part 2 B單開好	2839
Apple	I-Phone 4S (32GB)	7	Part 2 B單開好	2840
Apple	I-Phone 4S (8GB)	14	Part 2 B單開好	2841
Apple	I-Phone 4S (16GB)	60	Part 2 B單開壞	2842
Apple	I-Phone 4S (32GB)	5	Part 2 B單開壞	2843
Apple	I-Phone 4S (64GB)	1	Part 2 B單開壞	2844
Apple	I-Phone 4S (8GB)	28	Part 2 B單開壞	2845
Apple	I-Phone 4S (16GB)	5	Part 2 特別供應-B單不開換電即可(僅供參考)	2846
Apple	I-Phone 4S (32GB)	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2847
Apple	I-Phone 4S (8GB)	10	Part 2 特別供應-B單不開換電即可(僅供參考)	2848
Apple	I-Phone 4S (8GB)	18	主板	2849
Apple	I-Phone 4S (8GB)(有問題)	3	Part 2 A單	2850
Apple	I-Phone 4S (16GB)(有問題)	5	Part 2 B單開好	2851
Apple	I-Phone 4S (8GB)(有問題)	2	Part 2 B單開好	2852
Apple	I-Phone 4 合計	475	匯總	2853
Apple	I-Phone 4 (8GB)無鎖	2	A單	2854
Apple	I-Phone 4 (16GB)無鎖	31	B單開好	2855
Apple	I-Phone 4 (32GB)無鎖	6	B單開好	2856
Apple	I-Phone 4 (8GB)無鎖	71	B單開好	2857
Apple	I-Phone 4 (16GB)無鎖	25	B單開壞	2858
Apple	I-Phone 4 (32GB)無鎖	4	B單開壞	2859
Apple	I-Phone 4 (8GB)無鎖	46	B單開壞	2860
Apple	I-Phone 4 (16GB)無鎖	3	特別供應-B單不開換電即可(僅供參考)	2861
Apple	I-Phone 4 (32GB)無鎖	3	特別供應-B單不開換電即可(僅供參考)	2862
Apple	I-Phone 4 (8GB)無鎖	16	特別供應-B單不開換電即可(僅供參考)	2863
Apple	I-Phone 4 (16GB)(無鎖有問題)	1	Part 2 A單	2864
Apple	I-Phone 4 (32GB)(無鎖有問題)	1	Part 2 A單	2865
Apple	I-Phone 4 (8GB)(無鎖有問題)	5	Part 2 A單	2866
Apple	I-Phone 4 (16GB)(無鎖有問題)	5	Part 2 B單開好	2867
Apple	I-Phone 4 (8GB)(無鎖有問題)	14	Part 2 B單開好	2868
Apple	I-Phone 4 (16GB)	5	Part 2 A單	2869
Apple	I-Phone 4 (8GB)	15	Part 2 A單	2870
Apple	I-Phone 4 (16GB)	33	Part 2 B單開好	2871
Apple	I-Phone 4 (32GB)	6	Part 2 B單開好	2872
Apple	I-Phone 4 (8GB)	49	Part 2 B單開好	2873
Apple	I-Phone 4 (16GB)	18	Part 2 B單開壞	2874
Apple	I-Phone 4 (32GB)	6	Part 2 B單開壞	2875
Apple	I-Phone 4 (8GB)	40	Part 2 B單開壞	2876
Apple	I-Phone 4 (16GB)	4	Part 2 特別供應-B單不開換電即可(僅供參考)	2877
Apple	I-Phone 4 (8GB)	24	Part 2 特別供應-B單不開換電即可(僅供參考)	2878
Apple	I-Phone 4 (16GB)	1	主板	2879
Apple	I-Phone 4 (8GB)	13	主板	2880
Apple	I-Phone 4 (8GB)(有問題)	8	Part 2 A單	2881
Apple	I-Phone 4 (16GB)(有問題)	2	Part 2 B單開好	2882
Apple	I-Phone 4 (8GB)(有問題)	18	Part 2 B單開好	2883
Apple	雲 合計	12918	匯總	2884
Apple	I-Phone 15 Pro Max (256GB)雲	1	Part 2 B單有電流	2885
Apple	I-Phone 15 Pro (256GB)雲	1	Part 2 B單開壞	2886
Apple	I-Phone 15 Pro (128GB)雲	2	Part 2 B單有電流	2887
Apple	I-Phone 15 Plus (128GB)雲	1	Part 2 B單有電流	2888
Apple	I-Phone 15 (128GB)雲	1	Part 2 B單開好	2889
Apple	I-Phone 15 (128GB)雲	8	Part 2 B單開壞	2890
Apple	I-Phone 15 (128GB)雲	3	Part 2 B單有電流	2891
Apple	I-Phone 15 (128GB)雲	4	Part 2 特別供應-B單不開換電即可(僅供參考)	2892
Apple	I-Phone 14 Pro Max (128GB)雲	1	Part 2 B單開好	2893
Apple	I-Phone 14 Pro Max (256GB)雲	2	Part 2 B單開好	2894
Apple	I-Phone 14 Pro Max (512GB)雲	1	Part 2 B單開好	2895
Apple	I-Phone 14 Pro Max (128GB)雲	20	Part 2 B單開壞	2896
Apple	I-Phone 14 Pro (128GB)雲	1	Part 2 B單開好	2897
Apple	I-Phone 14 Pro (512GB)雲	1	Part 2 B單開壞	2898

Apple	I-Phone 14 Pro (128GB)雲	1	Part 2 B單有電流	2899
Apple	I-Phone 14 Plus (128GB)雲	3	Part 2 A單	2900
Apple	I-Phone 14 Plus (128GB)雲	5	Part 2 B單開壞	2901
Apple	I-Phone 14 (128GB)雲	2	Part 2 A單	2902
Apple	I-Phone 14 (128GB)雲	1	Part 2 B單開好	2903
Apple	I-Phone 14 (128GB)雲	2	Part 2 B單開壞	2904
Apple	I-Phone 14 (128GB)雲	1	Part 2 B單有電流	2905
Apple	I-Phone 14 (128GB)雲	4	Part 2 特別供應-B單不開換電即可(僅供參考)	2906
Apple	I-Phone 13 Pro Max (256GB)雲	1	Part 2 B單開好	2907
Apple	I-Phone 13 Pro Max (128GB)雲	11	Part 2 B單開壞	2908
Apple	I-Phone 13 Pro Max (1TB)雲	1	Part 2 B單開壞	2909
Apple	I-Phone 13 Pro Max (256GB)雲	1	Part 2 B單開壞	2910
Apple	I-Phone 13 Pro Max (512GB)雲	3	Part 2 B單開壞	2911
Apple	I-Phone 13 Pro Max (128GB)雲	1	Part 2 B單有電流	2912
Apple	I-Phone 13 Pro Max (128GB)雲	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2913
Apple	I-Phone 13 Pro Max (1TB)雲	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2914
Apple	I-Phone 13 Pro (256GB)雲	2	Part 2 B單開好	2915
Apple	I-Phone 13 Pro (128GB)雲	4	Part 2 B單有電流	2916
Apple	I-Phone 13 Pro (512GB)雲	1	Part 2 B單有電流	2917
Apple	I-Phone 13 Pro (256GB)雲	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2918
Apple	I-Phone 13 (128GB)雲	1	Part 2 A單	2919
Apple	I-Phone 13 (128GB)雲	9	Part 2 B單開壞	2920
Apple	I-Phone 13 (128GB)雲	2	Part 2 B單有電流	2921
Apple	I-Phone 13 (128GB)雲	4	Part 2 特別供應-B單不開換電即可(僅供參考)	2922
Apple	I-Phone 13 (256GB)雲	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2923
Apple	I-Phone 13 Mini (128GB)雲	1	Part 2 B單開好	2924
Apple	I-Phone 13 Mini (128GB)雲	2	Part 2 B單有電流	2925
Apple	I-Phone 12 Pro Max (256GB)雲	1	Part 2 B單開壞	2926
Apple	I-Phone 12 Pro Max (512GB)雲	1	Part 2 B單開壞	2927
Apple	I-Phone 12 Pro Max (512GB)雲	1	Part 2 B單有電流	2928
Apple	I-Phone 12 Pro Max (128GB)雲	4	Part 2 特別供應-B單不開換電即可(僅供參考)	2929
Apple	I-Phone 12 Pro (128GB)雲	2	Part 2 A單	2930
Apple	I-Phone 12 Pro (128GB)雲	2	Part 2 B單開好	2931
Apple	I-Phone 12 Pro (128GB)雲	6	Part 2 B單有電流	2932
Apple	I-Phone 12 Pro (128GB)雲	22	Part 2 特別供應-B單不開換電即可(僅供參考)	2933
Apple	I-Phone 12 (128GB)雲	1	Part 2 B單開好	2934
Apple	I-Phone 12 (64GB)雲	5	Part 2 B單開好	2935
Apple	I-Phone 12 (256GB)雲	3	Part 2 B單開壞	2936
Apple	I-Phone 12 (64GB)雲	1	Part 2 B單開壞	2937
Apple	I-Phone 12 (128GB)雲	5	Part 2 B單有電流	2938
Apple	I-Phone 12 (64GB)雲	25	Part 2 B單有電流	2939
Apple	I-Phone 12 (128GB)雲	7	Part 2 特別供應-B單不開換電即可(僅供參考)	2940
Apple	I-Phone 12 (64GB)雲	12	Part 2 特別供應-B單不開換電即可(僅供參考)	2941
Apple	I-Phone 12 Mini (128GB)雲	3	Part 2 A單	2942
Apple	I-Phone 12 Mini (64GB)雲	2	Part 2 B單開好	2943
Apple	I-Phone 12 Mini (128GB)雲	1	Part 2 B單開壞	2944
Apple	I-Phone 12 Mini (128GB)雲	2	Part 2 B單有電流	2945
Apple	I-Phone 12 Mini (64GB)雲	2	Part 2 B單有電流	2946
Apple	I-Phone 12 Mini (64GB)雲	8	Part 2 特別供應-B單不開換電即可(僅供參考)	2947
Apple	I-Phone 11 Pro Max (256GB)雲	6	Part 2 A單	2948
Apple	I-Phone 11 Pro Max (512GB)雲	2	Part 2 A單	2949
Apple	I-Phone 11 Pro Max (64GB)雲	15	Part 2 A單	2950
Apple	I-Phone 11 Pro Max (256GB)雲	5	Part 2 B單開好	2951
Apple	I-Phone 11 Pro Max (512GB)雲	1	Part 2 B單開好	2952
Apple	I-Phone 11 Pro Max (64GB)雲	13	Part 2 B單開好	2953
Apple	I-Phone 11 Pro Max (256GB)雲	3	Part 2 B單有電流	2954
Apple	I-Phone 11 Pro Max (64GB)雲	8	Part 2 B單有電流	2955
Apple	I-Phone 11 Pro Max (256GB)雲	4	Part 2 特別供應-B單不開換電即可(僅供參考)	2956
Apple	I-Phone 11 Pro Max (512GB)雲	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2957
Apple	I-Phone 11 Pro Max (64GB)雲	10	Part 2 特別供應-B單不開換電即可(僅供參考)	2958
Apple	I-Phone 11 Pro (256GB)雲	5	Part 2 A單	2959
Apple	I-Phone 11 Pro (512GB)雲	1	Part 2 A單	2960
Apple	I-Phone 11 Pro (64GB)雲	17	Part 2 A單	2961
Apple	I-Phone 11 Pro (256GB)雲	2	Part 2 B單開好	2962
Apple	I-Phone 11 Pro (64GB)雲	15	Part 2 B單開好	2963
Apple	I-Phone 11 Pro (64GB)雲	6	Part 2 B單有電流	2964
Apple	I-Phone 11 Pro (256GB)雲	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2965
Apple	I-Phone 11 Pro (64GB)雲	13	Part 2 特別供應-B單不開換電即可(僅供參考)	2966
Apple	I-Phone 11 (128GB)雲	9	Part 2 A單	2967
Apple	I-Phone 11 (64GB)雲	98	Part 2 A單	2968
Apple	I-Phone 11 (128GB)雲	8	Part 2 B單開好	2969

Apple	I-Phone 11 (256GB)雲	2	Part 2 B單開好	2970
Apple	I-Phone 11 (64GB)雲	65	Part 2 B單開好	2971
Apple	I-Phone 11 (128GB)雲	2	Part 2 B單開壞	2972
Apple	I-Phone 11 (256GB)雲	2	Part 2 B單開壞	2973
Apple	I-Phone 11 (64GB)雲	62	Part 2 B單開壞	2974
Apple	I-Phone 11 (128GB)雲	7	Part 2 B單有電流	2975
Apple	I-Phone 11 (64GB)雲	63	Part 2 B單有電流	2976
Apple	I-Phone 11 (128GB)雲	7	Part 2 特別供應-B單不開換電即可(僅供參考)	2977
Apple	I-Phone 11 (256GB)雲	4	Part 2 特別供應-B單不開換電即可(僅供參考)	2978
Apple	I-Phone 11 (64GB)雲	110	Part 2 特別供應-B單不開換電即可(僅供參考)	2979
Apple	I-Phone XS Max (256GB)雲	4	Part 2 A單	2980
Apple	I-Phone XS Max (64GB)雲	11	Part 2 A單	2981
Apple	I-Phone XS Max (256GB)雲	10	Part 2 B單開好	2982
Apple	I-Phone XS Max (64GB)雲	14	Part 2 B單開好	2983
Apple	I-Phone XS Max (256GB)雲	8	Part 2 B單開壞	2984
Apple	I-Phone XS Max (64GB)雲	34	Part 2 B單開壞	2985
Apple	I-Phone XS Max (64GB)雲	5	Part 2 B單有電流	2986
Apple	I-Phone XS Max (256GB)雲	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2987
Apple	I-Phone XS Max (64GB)雲	18	Part 2 特別供應-B單不開換電即可(僅供參考)	2988
Apple	I-Phone XS (256GB)雲	8	Part 2 A單	2989
Apple	I-Phone XS (512GB)雲	2	Part 2 A單	2990
Apple	I-Phone XS (64GB)雲	23	Part 2 A單	2991
Apple	I-Phone XS (256GB)雲	8	Part 2 B單開好	2992
Apple	I-Phone XS (64GB)雲	11	Part 2 B單開好	2993
Apple	I-Phone XS (256GB)雲	2	Part 2 B單開壞	2994
Apple	I-Phone XS (64GB)雲	133	Part 2 B單開壞	2995
Apple	I-Phone XS (256GB)雲	6	Part 2 B單有電流	2996
Apple	I-Phone XS (64GB)雲	45	Part 2 B單有電流	2997
Apple	I-Phone XS (256GB)雲	4	Part 2 特別供應-B單不開換電即可(僅供參考)	2998
Apple	I-Phone XS (512GB)雲	1	Part 2 特別供應-B單不開換電即可(僅供參考)	2999
Apple	I-Phone XS (64GB)雲	20	Part 2 特別供應-B單不開換電即可(僅供參考)	3000
Apple	I-Phone X (64GB)雲	3	Part 2 A單	3001
Apple	I-Phone X (256GB)雲	6	Part 2 B單開好	3002
Apple	I-Phone X (64GB)雲	23	Part 2 B單開好	3003
Apple	I-Phone X (256GB)雲	15	Part 2 B單開壞	3004
Apple	I-Phone X (256GB)雲	2	Part 2 B單有電流	3005
Apple	I-Phone X (64GB)雲	11	Part 2 B單有電流	3006
Apple	I-Phone X (256GB)雲	2	Part 2 特別供應-B單不開換電即可(僅供參考)	3007
Apple	I-Phone X (64GB)雲	8	Part 2 特別供應-B單不開換電即可(僅供參考)	3008
Apple	I-Phone XR (128GB)雲	3	Part 2 A單	3009
Apple	I-Phone XR (64GB)雲	25	Part 2 A單	3010
Apple	I-Phone XR (128GB)雲	17	Part 2 B單開好	3011
Apple	I-Phone XR (256GB)雲	3	Part 2 B單開好	3012
Apple	I-Phone XR (64GB)雲	244	Part 2 B單開好	3013
Apple	I-Phone XR (128GB)雲	34	Part 2 B單開壞	3014
Apple	I-Phone XR (256GB)雲	8	Part 2 B單開壞	3015
Apple	I-Phone XR (64GB)雲	433	Part 2 B單開壞	3016
Apple	I-Phone XR (128GB)雲	8	Part 2 B單有電流	3017
Apple	I-Phone XR (64GB)雲	43	Part 2 B單有電流	3018
Apple	I-Phone XR (128GB)雲	12	Part 2 特別供應-B單不開換電即可(僅供參考)	3019
Apple	I-Phone XR (64GB)雲	81	Part 2 特別供應-B單不開換電即可(僅供參考)	3020
Apple	I-Phone 8 Plus (256GB)雲	1	Part 2 A單	3021
Apple	I-Phone 8 Plus (64GB)雲	8	Part 2 A單	3022
Apple	I-Phone 8 Plus (128GB)雲	1	Part 2 B單開好	3023
Apple	I-Phone 8 Plus (256GB)雲	6	Part 2 B單開好	3024
Apple	I-Phone 8 Plus (64GB)雲	85	Part 2 B單開好	3025
Apple	I-Phone 8 Plus (128GB)雲	1	Part 2 B單開壞	3026
Apple	I-Phone 8 Plus (256GB)雲	3	Part 2 B單開壞	3027
Apple	I-Phone 8 Plus (64GB)雲	53	Part 2 B單開壞	3028
Apple	I-Phone 8 Plus (256GB)雲	2	Part 2 B單有電流	3029
Apple	I-Phone 8 Plus (64GB)雲	11	Part 2 B單有電流	3030
Apple	I-Phone 8 Plus (64GB)雲	27	Part 2 特別供應-B單不開換電即可(僅供參考)	3031
Apple	I-Phone 8 (128GB)雲	2	Part 2 A單	3032
Apple	I-Phone 8 (256GB)雲	3	Part 2 A單	3033
Apple	I-Phone 8 (64GB)雲	32	Part 2 A單	3034
Apple	I-Phone 8 (128GB)雲	3	Part 2 B單開好	3035
Apple	I-Phone 8 (64GB)雲	46	Part 2 B單開好	3036
Apple	I-Phone 8 (64GB)雲	1	Part 2 B單開壞	3037
Apple	I-Phone 7 Plus (256GB)雲	2	Part 2 A單	3038
Apple	I-Phone 7 Plus (32GB)雲	1	Part 2 A單	3039
Apple	I-Phone 7 Plus (128GB)雲	8	Part 2 B單開好	3040

Apple	I-Phone 7 Plus (256GB)雲	2	Part 2 B單開好	3041
Apple	I-Phone 7 Plus (32GB)雲	35	Part 2 B單開好	3042
Apple	I-Phone 7 Plus (128GB)雲	6	Part 2 B單開壞	3043
Apple	I-Phone 7 Plus (256GB)雲	1	Part 2 B單開壞	3044
Apple	I-Phone 7 Plus (32GB)雲	24	Part 2 B單開壞	3045
Apple	I-Phone 7 Plus (128GB)雲	9	Part 2 特別供應-B單不開換電即可(僅供參考)	3046
Apple	I-Phone 7 Plus (256GB)雲	2	Part 2 特別供應-B單不開換電即可(僅供參考)	3047
Apple	I-Phone 7 Plus (32GB)雲	52	Part 2 特別供應-B單不開換電即可(僅供參考)	3048
Apple	I-Phone 7 (128GB)雲	107	Part 2 A單	3049
Apple	I-Phone 7 (32GB)雲	309	Part 2 A單	3050
Apple	I-Phone 7 (128GB)雲	31	Part 2 B單開好	3051
Apple	I-Phone 7 (256GB)雲	2	Part 2 B單開好	3052
Apple	I-Phone 7 (32GB)雲	209	Part 2 B單開好	3053
Apple	I-Phone 7 (128GB)雲	24	Part 2 B單開壞	3054
Apple	I-Phone 7 (256GB)雲	4	Part 2 B單開壞	3055
Apple	I-Phone 7 (32GB)雲	352	Part 2 B單開壞	3056
Apple	I-Phone 7 (128GB)雲	20	Part 2 特別供應-B單不開換電即可(僅供參考)	3057
Apple	I-Phone 7 (256GB)雲	1	Part 2 特別供應-B單不開換電即可(僅供參考)	3058
Apple	I-Phone 7 (32GB)雲	173	Part 2 特別供應-B單不開換電即可(僅供參考)	3059
Apple	I-Phone SE2 (128GB)雲	4	Part 2 A單	3060
Apple	I-Phone SE2 (64GB)雲	30	Part 2 A單	3061
Apple	I-Phone SE2 (128GB)雲	14	Part 2 B單開好	3062
Apple	I-Phone SE2 (256GB)雲	1	Part 2 B單開好	3063
Apple	I-Phone SE2 (64GB)雲	283	Part 2 B單開好	3064
Apple	I-Phone SE2 (128GB)雲	17	Part 2 B單開壞	3065
Apple	I-Phone SE2 (256GB)雲	3	Part 2 B單開壞	3066
Apple	I-Phone SE2 (64GB)雲	139	Part 2 B單開壞	3067
Apple	I-Phone SE2 (128GB)雲	1	Part 2 B單有電流	3068
Apple	I-Phone SE2 (64GB)雲	4	Part 2 B單有電流	3069
Apple	I-Phone SE2 (128GB)雲	2	Part 2 特別供應-B單不開換電即可(僅供參考)	3070
Apple	I-Phone SE2 (64GB)雲	42	Part 2 特別供應-B單不開換電即可(僅供參考)	3071
Apple	I-Phone 6S Plus (16GB)雲	5	Part 2 A單	3072
Apple	I-Phone 6S Plus (32GB)雲	4	Part 2 A單	3073
Apple	I-Phone 6S Plus (64GB)雲	1	Part 2 A單	3074
Apple	I-Phone 6S Plus (128GB)雲	2	Part 2 B單開好	3075
Apple	I-Phone 6S Plus (16GB)雲	21	Part 2 B單開好	3076
Apple	I-Phone 6S Plus (32GB)雲	9	Part 2 B單開好	3077
Apple	I-Phone 6S Plus (64GB)雲	7	Part 2 B單開好	3078
Apple	I-Phone 6S Plus (128GB)雲	1	Part 2 B單開壞	3079
Apple	I-Phone 6S Plus (16GB)雲	103	Part 2 B單開壞	3080
Apple	I-Phone 6S Plus (32GB)雲	13	Part 2 B單開壞	3081
Apple	I-Phone 6S Plus (64GB)雲	21	Part 2 B單開壞	3082
Apple	I-Phone 6S Plus (16GB)雲	42	Part 2 特別供應-B單不開換電即可(僅供參考)	3083
Apple	I-Phone 6S Plus (32GB)雲	6	Part 2 特別供應-B單不開換電即可(僅供參考)	3084
Apple	I-Phone 6S Plus (64GB)雲	3	Part 2 特別供應-B單不開換電即可(僅供參考)	3085
Apple	I-Phone 6S (128GB)雲	7	Part 2 A單	3086
Apple	I-Phone 6S (16GB)雲	47	Part 2 A單	3087
Apple	I-Phone 6S (32GB)雲	49	Part 2 A單	3088
Apple	I-Phone 6S (64GB)雲	11	Part 2 A單	3089
Apple	I-Phone 6S (128GB)雲	1	Part 2 B單開好	3090
Apple	I-Phone 6S (16GB)雲	111	Part 2 B單開好	3091
Apple	I-Phone 6S (32GB)雲	35	Part 2 B單開好	3092
Apple	I-Phone 6S (64GB)雲	13	Part 2 B單開好	3093
Apple	I-Phone 6S (128GB)雲	1	Part 2 B單開壞	3094
Apple	I-Phone 6S (16GB)雲	151	Part 2 B單開壞	3095
Apple	I-Phone 6S (32GB)雲	27	Part 2 B單開壞	3096
Apple	I-Phone 6S (64GB)雲	13	Part 2 B單開壞	3097
Apple	I-Phone 6S (128GB)雲	2	Part 2 特別供應-B單不開換電即可(僅供參考)	3098
Apple	I-Phone 6S (16GB)雲	24	Part 2 特別供應-B單不開換電即可(僅供參考)	3099
Apple	I-Phone 6S (32GB)雲	1	Part 2 特別供應-B單不開換電即可(僅供參考)	3100
Apple	I-Phone 6 Plus (128GB)雲	2	Part 2 A單	3101
Apple	I-Phone 6 Plus (16GB)雲	5	Part 2 A單	3102
Apple	I-Phone 6 Plus (64GB)雲	2	Part 2 A單	3103
Apple	I-Phone 6 Plus (128GB)雲	7	Part 2 B單開好	3104
Apple	I-Phone 6 Plus (16GB)雲	96	Part 2 B單開好	3105
Apple	I-Phone 6 Plus (64GB)雲	11	Part 2 B單開好	3106
Apple	I-Phone 6 Plus (128GB)雲	5	Part 2 B單開壞	3107
Apple	I-Phone 6 Plus (16GB)雲	145	Part 2 B單開壞	3108
Apple	I-Phone 6 Plus (64GB)雲	27	Part 2 B單開壞	3109
Apple	I-Phone 6 Plus (16GB)雲	60	Part 2 特別供應-B單不開換電即可(僅供參考)	3110
Apple	I-Phone 6 Plus (64GB)雲	5	Part 2 特別供應-B單不開換電即可(僅供參考)	3111

Apple	I-Phone 6 (128GB)雲	7	Part 2 A單	3112
Apple	I-Phone 6 (16GB)雲	1120	Part 2 A單	3113
Apple	I-Phone 6 (32GB)雲	11	Part 2 A單	3114
Apple	I-Phone 6 (64GB)雲	21	Part 2 A單	3115
Apple	I-Phone 6 (128GB)雲	7	Part 2 B單開好	3116
Apple	I-Phone 6 (16GB)雲	968	Part 2 B單開好	3117
Apple	I-Phone 6 (32GB)雲	51	Part 2 B單開好	3118
Apple	I-Phone 6 (64GB)雲	87	Part 2 B單開好	3119
Apple	I-Phone 6 (128GB)雲	14	Part 2 B單開壞	3120
Apple	I-Phone 6 (16GB)雲	1143	Part 2 B單開壞	3121
Apple	I-Phone 6 (32GB)雲	76	Part 2 B單開壞	3122
Apple	I-Phone 6 (64GB)雲	112	Part 2 B單開壞	3123
Apple	I-Phone 6 (128GB)雲	2	Part 2 特別供應-B單不開換電即可(僅供參考)	3124
Apple	I-Phone 6 (16GB)雲	511	Part 2 特別供應-B單不開換電即可(僅供參考)	3125
Apple	I-Phone 6 (32GB)雲	14	Part 2 特別供應-B單不開換電即可(僅供參考)	3126
Apple	I-Phone 6 (64GB)雲	36	Part 2 特別供應-B單不開換電即可(僅供參考)	3127
Apple	I-Phone 5S (16GB)雲	11	Part 2 A單	3128
Apple	I-Phone 5S (32GB)雲	1	Part 2 A單	3129
Apple	I-Phone 5S (16GB)雲	19	Part 2 B單開好	3130
Apple	I-Phone 5S (32GB)雲	3	Part 2 B單開好	3131
Apple	I-Phone 5S (64GB)雲	1	Part 2 B單開好	3132
Apple	I-Phone 5S (16GB)雲	31	Part 2 B單開壞	3133
Apple	I-Phone 5S (32GB)雲	1	Part 2 B單開壞	3134
Apple	I-Phone 5S (64GB)雲	1	Part 2 B單開壞	3135
Apple	I-Phone 5S (16GB)雲	7	Part 2 特別供應-B單不開換電即可(僅供參考)	3136
Apple	I-Phone SE3 (64GB)雲	61	Part 2 A單	3137
Apple	I-Phone SE3 (128GB)雲	3	Part 2 B單開好	3138
Apple	I-Phone SE3 (64GB)雲	2	Part 2 B單開好	3139
Apple	I-Phone SE3 (128GB)雲	1	Part 2 B單開壞	3140
Apple	I-Phone SE3 (64GB)雲	35	Part 2 B單開壞	3141
Apple	I-Phone SE3 (64GB)雲	8	Part 2 特別供應-B單不開換電即可(僅供參考)	3142
Apple	I-Phone SE (16GB)雲	14	Part 2 A單	3143
Apple	I-Phone SE (32GB)雲	24	Part 2 A單	3144
Apple	I-Phone SE (16GB)雲	7	Part 2 B單開好	3145
Apple	I-Phone SE (32GB)雲	7	Part 2 B單開好	3146
Apple	I-Phone SE (64GB)雲	4	Part 2 B單開好	3147
Apple	I-Phone SE (128GB)雲	1	Part 2 B單開壞	3148
Apple	I-Phone SE (16GB)雲	2	Part 2 B單開壞	3149
Apple	I-Phone SE (64GB)雲	1	Part 2 B單開壞	3150
Apple	I-Phone SE (16GB)雲	3	Part 2 特別供應-B單不開換電即可(僅供參考)	3151
Apple	I-Phone 5C (16GB)雲	5	Part 2 A單	3152
Apple	I-Phone 5C (8GB)雲	6	Part 2 A單	3153
Apple	I-Phone 5C (16GB)雲	34	Part 2 B單開好	3154
Apple	I-Phone 5C (32GB)雲	8	Part 2 B單開好	3155
Apple	I-Phone 5C (8GB)雲	111	Part 2 B單開好	3156
Apple	I-Phone 5C (16GB)雲	60	Part 2 B單開壞	3157
Apple	I-Phone 5C (32GB)雲	8	Part 2 B單開壞	3158
Apple	I-Phone 5C (8GB)雲	265	Part 2 B單開壞	3159
Apple	I-Phone 5C (16GB)雲	5	Part 2 特別供應-B單不開換電即可(僅供參考)	3160
Apple	I-Phone 5C (32GB)雲	2	Part 2 特別供應-B單不開換電即可(僅供參考)	3161
Apple	I-Phone 5C (8GB)雲	108	Part 2 特別供應-B單不開換電即可(僅供參考)	3162
Apple	I-Phone 5 (16GB)雲	66	Part 2 A單	3163
Apple	I-Phone 5 (32GB)雲	4	Part 2 A單	3164
Apple	I-Phone 5 (16GB)雲	130	Part 2 B單開好	3165
Apple	I-Phone 5 (32GB)雲	8	Part 2 B單開好	3166
Apple	I-Phone 5 (64GB)雲	1	Part 2 B單開好	3167
Apple	I-Phone 5 (16GB)雲	197	Part 2 B單開壞	3168
Apple	I-Phone 5 (32GB)雲	8	Part 2 B單開壞	3169
Apple	I-Phone 5 (64GB)雲	3	Part 2 B單開壞	3170
Apple	I-Phone 5 (16GB)雲	138	Part 2 特別供應-B單不開換電即可(僅供參考)	3171
Apple	I-Phone 5 (32GB)雲	1	Part 2 特別供應-B單不開換電即可(僅供參考)	3172
Apple	I-Phone 5 (64GB)雲	2	Part 2 特別供應-B單不開換電即可(僅供參考)	3173
Apple	I-Phone 4S (16GB)雲	1	Part 2 A單	3174
Apple	I-Phone 4S (8GB)雲	19	Part 2 A單	3175
Apple	I-Phone 4S (16GB)雲	19	Part 2 B單開好	3176
Apple	I-Phone 4S (32GB)雲	1	Part 2 B單開好	3177
Apple	I-Phone 4S (8GB)雲	72	Part 2 B單開好	3178
Apple	I-Phone 4S (16GB)雲	14	Part 2 B單開壞	3179
Apple	I-Phone 4S (32GB)雲	1	Part 2 B單開壞	3180
Apple	I-Phone 4S (8GB)雲	108	Part 2 B單開壞	3181
Apple	I-Phone 4S (16GB)雲	4	Part 2 特別供應-B單不開換電即可(僅供參考)	3182

Apple	I-Phone 4S (32GB)雲	3	Part 2 特別供應-B單不開換電即可(僅供參考)	3183
Apple	I-Phone 4S (8GB)雲	45	Part 2 特別供應-B單不開換電即可(僅供參考)	3184
Apple	I-Phone 4 (8GB)雲	10	Part 2 A單	3185
Apple	I-Phone 4 (16GB)雲	3	Part 2 B單開好	3186
Apple	I-Phone 4 (32GB)雲	1	Part 2 B單開好	3187
Apple	I-Phone 4 (8GB)雲	45	Part 2 B單開好	3188
Apple	I-Phone 4 (16GB)雲	8	Part 2 B單開壞	3189
Apple	I-Phone 4 (32GB)雲	1	Part 2 B單開壞	3190
Apple	I-Phone 4 (8GB)雲	48	Part 2 B單開壞	3191
Apple	I-Phone 4 (16GB)雲	1	Part 2 特別供應-B單不開換電即可(僅供參考)	3192
Apple	I-Phone 4 (8GB)雲	31	Part 2 特別供應-B單不開換電即可(僅供參考)	3193
Apple	The New I-Pad Wifi (16GB)雲	31	Part 2 A單	3194
Apple	The New I-Pad Wifi (32GB)雲	10	Part 2 A單	3195
Apple	The New I-Pad Wifi (64GB)雲	2	Part 2 A單	3196
Apple	The New I-Pad Wifi (16GB)雲	17	Part 2 B單開好	3197
Apple	The New I-Pad Wifi (32GB)雲	10	Part 2 B單開好	3198
Apple	The New I-Pad Wifi (64GB)雲	5	Part 2 B單開好	3199
Apple	The New I-Pad Wifi (16GB)雲	7	Part 2 B單開壞	3200
Apple	The New I-Pad Wifi (32GB)雲	5	Part 2 B單開壞	3201
Apple	The New I-Pad Wifi 4G (16GB)雲	3	Part 2 A單	3202
Apple	The New I-Pad Wifi 4G (32GB)雲	2	Part 2 A單	3203
Apple	The New I-Pad Wifi 4G (64GB)雲	6	Part 2 A單	3204
Apple	The New I-Pad Wifi 4G (16GB)雲	3	Part 2 B單開好	3205
Apple	The New I-Pad Wifi 4G (32GB)雲	4	Part 2 B單開好	3206
Apple	The New I-Pad Wifi 4G (64GB)雲	4	Part 2 B單開好	3207
Apple	The New I-Pad Wifi 4G (16GB)雲	5	Part 2 B單開壞	3208
Apple	The New I-Pad Wifi 4G (32GB)雲	3	Part 2 B單開壞	3209
Apple	The New I-Pad Wifi 4G (64GB)雲	1	Part 2 B單開壞	3210
Apple	The New I-Pad Wifi 4G (16GB)雲	1	Part 2 B單不開	3211
Apple	The New I-Pad Wifi 4G (32GB)雲	1	Part 2 B單不開	3212
Apple	I-Pad Wifi (32GB)雲	2	Part 2 A單	3213
Apple	I-Pad Wifi (16GB)雲	1	Part 2 B單開好	3214
Apple	I-Pad Wifi (16GB)雲	1	Part 2 B單開壞	3215
Apple	I-Pad Wifi (32GB)雲	1	Part 2 B單開壞	3216
Apple	I-Pad Wifi 3G (16GB)雲	1	Part 2 B單開壞	3217
Apple	I-Pad Wifi 3G (32GB)雲	1	Part 2 B單開壞	3218
Apple	I-Pad Pro Wifi (128GB)雲	2	Part 2 B單開壞	3219
Apple	I-Pad Pro Wifi (256GB)雲	1	Part 2 B單開壞	3220
Apple	I-Pad Pro Wifi (32GB)雲	3	Part 2 B單開壞	3221
Apple	I-Pad Pro Wifi (32GB)雲	1	Part 2 B單不開	3222
Apple	I-Pad Pro Wifi 4G (128GB)雲	1	Part 2 B單開壞	3223
Apple	I-Pad Pro 9.7 Wifi (32GB)雲	3	Part 2 A單	3224
Apple	I-Pad Pro 9.7 Wifi (256GB)雲	1	Part 2 B單開好	3225
Apple	I-Pad Pro 9.7 Wifi (32GB)雲	1	Part 2 B單開好	3226
Apple	I-Pad Pro 9.7 Wifi (256GB)雲	1	Part 2 B單開壞	3227
Apple	I-Pad Pro 9.7 Wifi (32GB)雲	4	Part 2 B單開壞	3228
Apple	I-Pad Pro 9.7 Wifi (256GB)雲	1	Part 2 B單不開	3229
Apple	I-Pad Pro 9.7 Wifi (32GB)雲	1	Part 2 B單不開	3230
Apple	I-Pad Pro 9.7 Wifi 4G (32GB)雲	3	Part 2 A單	3231
Apple	I-Pad Pro 9.7 Wifi 4G (128GB)雲	1	Part 2 B單開好	3232
Apple	I-Pad Pro 9.7 Wifi 4G (256GB)雲	1	Part 2 B單開好	3233
Apple	I-Pad Pro 9.7 Wifi 4G (128GB)雲	1	Part 2 B單開壞	3234
Apple	I-Pad Pro 9.7 Wifi 4G (32GB)雲	2	Part 2 B單開壞	3235
Apple	I-Pad Pro 9.7 Wifi 4G (128GB)雲	1	Part 2 B單不開	3236
Apple	I-Pad Pro 2 Wifi (64GB)雲	1	Part 2 B單不開	3237
Apple	I-Pad Pro 10.5 Wifi (64GB)雲	6	Part 2 B單開壞	3238
Apple	I-Pad Pro 10.5 Wifi 4G (256GB)雲	1	Part 2 B單開壞	3239
Apple	I-Pad Pro 10.5 Wifi 4G (64GB)雲	7	Part 2 B單開壞	3240
Apple	I-Pad Pro 10.5 Wifi 4G (64GB)雲	1	Part 2 B單不開	3241
Apple	I-Pad Mini 5 Wifi (64GB)雲	6	Part 2 B單開壞	3242
Apple	I-Pad Mini 5 Wifi 4G (256GB)雲	1	Part 2 A單	3243
Apple	I-Pad Mini 5 Wifi 4G (64GB)雲	3	Part 2 A單	3244
Apple	I-Pad Mini 4 Wifi (128GB)雲	7	Part 2 A單	3245
Apple	I-Pad Mini 4 Wifi (16GB)雲	1	Part 2 A單	3246
Apple	I-Pad Mini 4 Wifi (32GB)雲	1	Part 2 A單	3247
Apple	I-Pad Mini 4 Wifi (64GB)雲	1	Part 2 A單	3248
Apple	I-Pad Mini 4 Wifi (128GB)雲	1	Part 2 B單開好	3249
Apple	I-Pad Mini 4 Wifi (128GB)雲	6	Part 2 B單開壞	3250
Apple	I-Pad Mini 4 Wifi (16GB)雲	1	Part 2 B單開壞	3251
Apple	I-Pad Mini 4 Wifi (64GB)雲	4	Part 2 B單開壞	3252
Apple	I-Pad Mini 4 Wifi (128GB)雲	1	Part 2 B單不開	3253

Apple	I-Pad Mini 4 Wifi (16GB)雲	1	Part 2 B單不開	3254
Apple	I-Pad Mini 4 Wifi 4G (128GB)雲	6	Part 2 A單	3255
Apple	I-Pad Mini 4 Wifi 4G (32GB)雲	1	Part 2 A單	3256
Apple	I-Pad Mini 4 Wifi 4G (128GB)雲	2	Part 2 B單開好	3257
Apple	I-Pad Mini 4 Wifi 4G (16GB)雲	1	Part 2 B單開好	3258
Apple	I-Pad Mini 4 Wifi 4G (16GB)雲	1	Part 2 B單開壞	3259
Apple	I-Pad Mini 4 Wifi 4G (32GB)雲	1	Part 2 B單開壞	3260
Apple	I-Pad Mini 3 Wifi (16GB)雲	2	Part 2 B單開好	3261
Apple	I-Pad Mini 3 Wifi (16GB)雲	1	Part 2 B單開壞	3262
Apple	I-Pad Mini 3 Wifi (64GB)雲	2	Part 2 B單開壞	3263
Apple	I-Pad Mini 3 Wifi 4G (16GB)雲	4	Part 2 A單	3264
Apple	I-Pad Mini 3 Wifi 4G (64GB)雲	1	Part 2 A單	3265
Apple	I-Pad Mini 3 Wifi 4G (16GB)雲	5	Part 2 B單開好	3266
Apple	I-Pad Mini 3 Wifi 4G (64GB)雲	1	Part 2 B單開好	3267
Apple	I-Pad Mini 3 Wifi 4G (16GB)雲	5	Part 2 B單開壞	3268
Apple	I-Pad Mini 3 Wifi 4G (16GB)雲	1	Part 2 B單不開	3269
Apple	I-Pad Mini 2 Wifi (16GB)雲	21	Part 2 A單	3270
Apple	I-Pad Mini 2 Wifi (32GB)雲	15	Part 2 A單	3271
Apple	I-Pad Mini 2 Wifi (128GB)雲	1	Part 2 B單開好	3272
Apple	I-Pad Mini 2 Wifi (16GB)雲	25	Part 2 B單開好	3273
Apple	I-Pad Mini 2 Wifi (32GB)雲	22	Part 2 B單開好	3274
Apple	I-Pad Mini 2 Wifi (16GB)雲	14	Part 2 B單開壞	3275
Apple	I-Pad Mini 2 Wifi (32GB)雲	8	Part 2 B單開壞	3276
Apple	I-Pad Mini 2 Wifi (64GB)雲	1	Part 2 B單開壞	3277
Apple	I-Pad Mini 2 Wifi (64GB)雲	1	Part 2 B單不開	3278
Apple	I-Pad Mini 2 Wifi 4G (16GB)雲	5	Part 2 A單	3279
Apple	I-Pad Mini 2 Wifi 4G (32GB)雲	3	Part 2 A單	3280
Apple	I-Pad Mini 2 Wifi 4G (128GB)雲	1	Part 2 B單開好	3281
Apple	I-Pad Mini 2 Wifi 4G (16GB)雲	4	Part 2 B單開好	3282
Apple	I-Pad Mini 2 Wifi 4G (32GB)雲	3	Part 2 B單開好	3283
Apple	I-Pad Mini 2 Wifi 4G (64GB)雲	1	Part 2 B單開好	3284
Apple	I-Pad Mini 2 Wifi 4G (16GB)雲	10	Part 2 B單開壞	3285
Apple	I-Pad Mini 2 Wifi 4G (32GB)雲	1	Part 2 B單開壞	3286
Apple	I-Pad Mini Wifi (16GB)雲	47	Part 2 A單	3287
Apple	I-Pad Mini Wifi (32GB)雲	7	Part 2 A單	3288
Apple	I-Pad Mini Wifi (64GB)雲	1	Part 2 A單	3289
Apple	I-Pad Mini Wifi (16GB)雲	160	Part 2 B單開好	3290
Apple	I-Pad Mini Wifi (32GB)雲	6	Part 2 B單開好	3291
Apple	I-Pad Mini Wifi (16GB)雲	41	Part 2 B單開壞	3292
Apple	I-Pad Mini Wifi (32GB)雲	4	Part 2 B單開壞	3293
Apple	I-Pad Mini Wifi (16GB)雲	12	Part 2 B單不開	3294
Apple	I-Pad Mini Wifi (32GB)雲	1	Part 2 B單不開	3295
Apple	I-Pad Mini Wifi 4G (16GB)雲	3	Part 2 A單	3296
Apple	I-Pad Mini Wifi 4G (32GB)雲	2	Part 2 A單	3297
Apple	I-Pad Mini Wifi 4G (16GB)雲	32	Part 2 B單開好	3298
Apple	I-Pad Mini Wifi 4G (32GB)雲	1	Part 2 B單開好	3299
Apple	I-Pad Mini Wifi 4G (64GB)雲	2	Part 2 B單開好	3300
Apple	I-Pad Mini Wifi 4G (16GB)雲	3	Part 2 B單開壞	3301
Apple	I-Pad Mini Wifi 4G (64GB)雲	1	Part 2 B單開壞	3302
Apple	I-Pad Mini Wifi 4G (32GB)雲	1	Part 2 B單不開	3303
Apple	I-Pad Air Wifi (16GB)雲	20	Part 2 A單	3304
Apple	I-Pad Air Wifi (16GB)雲	16	Part 2 B單開好	3305
Apple	I-Pad Air Wifi (32GB)雲	11	Part 2 B單開好	3306
Apple	I-Pad Air Wifi (64GB)雲	1	Part 2 B單開好	3307
Apple	I-Pad Air Wifi (128GB)雲	1	Part 2 B單開壞	3308
Apple	I-Pad Air Wifi (16GB)雲	22	Part 2 B單開壞	3309
Apple	I-Pad Air Wifi (32GB)雲	6	Part 2 B單開壞	3310
Apple	I-Pad Air Wifi (64GB)雲	2	Part 2 B單開壞	3311
Apple	I-Pad Air Wifi (16GB)雲	4	Part 2 B單不開	3312
Apple	I-Pad Air Wifi (32GB)雲	1	Part 2 B單不開	3313
Apple	I-Pad Air Wifi (64GB)雲	1	Part 2 B單不開	3314
Apple	I-Pad Air Wifi 4G (128GB)雲	2	Part 2 A單	3315
Apple	I-Pad Air Wifi 4G (16GB)雲	5	Part 2 A單	3316
Apple	I-Pad Air Wifi 4G (32GB)雲	4	Part 2 A單	3317
Apple	I-Pad Air Wifi 4G (64GB)雲	1	Part 2 A單	3318
Apple	I-Pad Air Wifi 4G (16GB)雲	1	Part 2 B單開好	3319
Apple	I-Pad Air Wifi 4G (32GB)雲	3	Part 2 B單開好	3320
Apple	I-Pad Air Wifi 4G (16GB)雲	6	Part 2 B單開壞	3321
Apple	I-Pad Air Wifi 4G (32GB)雲	2	Part 2 B單開壞	3322
Apple	I-Pad AIR 4 Wifi (64GB)雲	1	Part 2 A單	3323
Apple	I-Pad Air 3 Wifi 4G (64GB)雲	1	Part 2 A單	3324

Apple	I-Pad Air 3 Wifi 4G (256GB)雲	1	Part 2 B單開壞	3325
Apple	I-Pad Air 3 Wifi 4G (64GB)雲	1	Part 2 B單開壞	3326
Apple	I-Pad Air 3 Wifi (64GB)雲	7	Part 2 B單開壞	3327
Apple	I-Pad Air 2 Wifi (128GB)雲	6	Part 2 A單	3328
Apple	I-Pad Air 2 Wifi (16GB)雲	13	Part 2 A單	3329
Apple	I-Pad Air 2 Wifi (32GB)雲	5	Part 2 A單	3330
Apple	I-Pad Air 2 Wifi (64GB)雲	12	Part 2 A單	3331
Apple	I-Pad Air 2 Wifi (16GB)雲	4	Part 2 B單開好	3332
Apple	I-Pad Air 2 Wifi (32GB)雲	2	Part 2 B單開好	3333
Apple	I-Pad Air 2 Wifi (64GB)雲	3	Part 2 B單開好	3334
Apple	I-Pad Air 2 Wifi (128GB)雲	1	Part 2 B單開壞	3335
Apple	I-Pad Air 2 Wifi (16GB)雲	9	Part 2 B單開壞	3336
Apple	I-Pad Air 2 Wifi (32GB)雲	3	Part 2 B單開壞	3337
Apple	I-Pad Air 2 Wifi (64GB)雲	4	Part 2 B單開壞	3338
Apple	I-Pad Air 2 Wifi (16GB)雲	2	Part 2 B單不開	3339
Apple	I-Pad Air 2 Wifi (32GB)雲	2	Part 2 B單不開	3340
Apple	I-Pad Air 2 Wifi (64GB)雲	1	Part 2 B單不開	3341
Apple	I-Pad Air 2 Wifi 4G (128GB)雲	1	Part 2 A單	3342
Apple	I-Pad Air 2 Wifi 4G (16GB)雲	1	Part 2 A單	3343
Apple	I-Pad Air 2 Wifi 4G (32GB)雲	1	Part 2 A單	3344
Apple	I-Pad Air 2 Wifi 4G (64GB)雲	4	Part 2 A單	3345
Apple	I-Pad Air 2 Wifi 4G (128GB)雲	1	Part 2 B單開好	3346
Apple	I-Pad Air 2 Wifi 4G (16GB)雲	9	Part 2 B單開好	3347
Apple	I-Pad Air 2 Wifi 4G (32GB)雲	2	Part 2 B單開好	3348
Apple	I-Pad Air 2 Wifi 4G (128GB)雲	2	Part 2 B單開壞	3349
Apple	I-Pad Air 2 Wifi 4G (16GB)雲	12	Part 2 B單開壞	3350
Apple	I-Pad Air 2 Wifi 4G (32GB)雲	3	Part 2 B單開壞	3351
Apple	I-Pad Air 2 Wifi 4G (64GB)雲	3	Part 2 B單開壞	3352
Apple	I-Pad Air 2 Wifi 4G (16GB)雲	2	Part 2 B單不開	3353
Apple	I-Pad Air 2 Wifi 4G (64GB)雲	1	Part 2 B單不開	3354
Apple	I-Pad 7 Wifi 4G (32GB)雲	3	Part 2 B單開壞	3355
Apple	I-Pad 9 Wifi (64GB)雲	1	Part 2 A單	3356
Apple	I-Pad 9 Wifi (64GB)雲	6	Part 2 B單開好	3357
Apple	I-Pad 9 Wifi (64GB)雲	14	Part 2 B單開壞	3358
Apple	I-Pad 9 Wifi (64GB)雲	1	Part 2 B單不開	3359
Apple	I-Pad 9 Wifi 4G (256GB)雲	1	Part 2 B單開壞	3360
Apple	I-Pad 9 Wifi 4G (64GB)雲	12	Part 2 B單開壞	3361
Apple	I-Pad 8 Wifi (32GB)雲	3	Part 2 A單	3362
Apple	I-Pad 8 Wifi (32GB)雲	2	Part 2 B單開壞	3363
Apple	I-Pad 8 Wifi 4G (32GB)雲	1	Part 2 A單	3364
Apple	I-Pad 7 Wifi (32GB)雲	1	Part 2 A單	3365
Apple	I-Pad 7 Wifi (32GB)雲	1	Part 2 B單開好	3366
Apple	I-Pad 7 Wifi (32GB)雲	1	Part 2 B單開壞	3367
Apple	I-Pad 6 Wifi 4G (128GB)雲	4	Part 2 A單	3368
Apple	I-Pad 6 Wifi 4G (32GB)雲	3	Part 2 A單	3369
Apple	I-Pad 6 Wifi 4G (32GB)雲	2	Part 2 B單開好	3370
Apple	I-Pad 6 Wifi 4G (128GB)雲	2	Part 2 B單開壞	3371
Apple	I-Pad 6 Wifi 4G (32GB)雲	2	Part 2 B單開壞	3372
Apple	I-Pad 6 Wifi (128GB)雲	1	Part 2 A單	3373
Apple	I-Pad 6 Wifi (32GB)雲	2	Part 2 A單	3374
Apple	I-Pad 6 Wifi (32GB)雲	3	Part 2 B單開好	3375
Apple	I-Pad 6 Wifi (32GB)雲	7	Part 2 B單開壞	3376
Apple	I-Pad 6 Wifi (32GB)雲	2	Part 2 B單不開	3377
Apple	I-Pad 5 Wifi (128GB)雲	2	Part 2 A單	3378
Apple	I-Pad 5 Wifi (32GB)雲	15	Part 2 A單	3379
Apple	I-Pad 5 Wifi (128GB)雲	4	Part 2 B單開好	3380
Apple	I-Pad 5 Wifi (32GB)雲	5	Part 2 B單開好	3381
Apple	I-Pad 5 Wifi (32GB)雲	9	Part 2 B單開壞	3382
Apple	I-Pad 5 Wifi (32GB)雲	1	Part 2 B單不開	3383
Apple	I-Pad 5 Wifi 4G (128GB)雲	1	Part 2 A單	3384
Apple	I-Pad 5 Wifi 4G (128GB)雲	2	Part 2 B單開壞	3385
Apple	I-Pad 5 Wifi 4G (32GB)雲	1	Part 2 B單開壞	3386
Apple	I-Pad 5 Wifi 4G (32GB)雲	2	Part 2 B單不開	3387
Apple	I-Pad 4 Wifi (16GB)雲	55	Part 2 A單	3388
Apple	I-Pad 4 Wifi (32GB)雲	3	Part 2 A單	3389
Apple	I-Pad 4 Wifi (64GB)雲	3	Part 2 A單	3390
Apple	I-Pad 4 Wifi (16GB)雲	96	Part 2 B單開好	3391
Apple	I-Pad 4 Wifi (32GB)雲	21	Part 2 B單開好	3392
Apple	I-Pad 4 Wifi (64GB)雲	5	Part 2 B單開好	3393
Apple	I-Pad 4 Wifi (16GB)雲	8	Part 2 B單開壞	3394
Apple	I-Pad 4 Wifi (32GB)雲	7	Part 2 B單開壞	3395

Apple	I-Pad 4 Wifi (16GB)雲	3	Part 2 B單不開	3396
Apple	I-Pad 4 Wifi (64GB)雲	1	Part 2 B單不開	3397
Apple	I-Pad 4 Wifi 4G (32GB)雲	1	Part 2 A單	3398
Apple	I-Pad 4 Wifi 4G (64GB)雲	1	Part 2 A單	3399
Apple	I-Pad 4 Wifi 4G (16GB)雲	5	Part 2 B單開好	3400
Apple	I-Pad 4 Wifi 4G (32GB)雲	7	Part 2 B單開好	3401
Apple	I-Pad 4 Wifi 4G (16GB)雲	3	Part 2 B單開壞	3402
Apple	I-Pad 4 Wifi 4G (64GB)雲	1	Part 2 B單開壞	3403
Apple	I-Pad 4 Wifi 4G (32GB)雲	1	Part 2 B單不開	3404
Apple	I-Pad 2 Wifi (16GB)雲	72	Part 2 B單開好	3405
Apple	I-Pad 2 Wifi (32GB)雲	4	Part 2 B單開好	3406
Apple	I-Pad 2 Wifi (64GB)雲	7	Part 2 B單開好	3407
Apple	I-Pad 2 Wifi (16GB)雲	48	Part 2 B單開壞	3408
Apple	I-Pad 2 Wifi (32GB)雲	1	Part 2 B單開壞	3409
Apple	I-Pad 2 Wifi (64GB)雲	2	Part 2 B單開壞	3410
Apple	I-Pad 2 Wifi (16GB)雲	5	Part 2 B單不開	3411
Apple	I-Pad 2 Wifi (32GB)雲	2	Part 2 B單不開	3412
Apple	I-Pad 2 Wifi 3G (16GB)雲	6	Part 2 A單	3413
Apple	I-Pad 2 Wifi 3G (32GB)雲	3	Part 2 A單	3414
Apple	I-Pad 2 Wifi 3G (64GB)雲	5	Part 2 A單	3415
Apple	I-Pad 2 Wifi 3G (16GB)雲	9	Part 2 B單開好	3416
Apple	I-Pad 2 Wifi 3G (32GB)雲	1	Part 2 B單開好	3417
Apple	I-Pad 2 Wifi 3G (64GB)雲	2	Part 2 B單開好	3418
Apple	I-Pad 2 Wifi 3G (16GB)雲	5	Part 2 B單開壞	3419
Apple	I-Pad 2 Wifi 3G (32GB)雲	1	Part 2 B單開壞	3420
Apple	I-Pad 2 Wifi 3G (64GB)雲	4	Part 2 B單開壞	3421
Apple	I-Pad 合計	1218	匯總	3422
Apple	I-Pad 4 Wifi 4G (128GB)	1	A單	3423
Apple	I-Pad 4 Wifi 4G (16GB)	20	A單	3424
Apple	I-Pad 4 Wifi 4G (32GB)	4	A單	3425
Apple	I-Pad 4 Wifi 4G (64GB)	1	A單	3426
Apple	I-Pad 4 Wifi (16GB)	23	A單	3427
Apple	I-Pad 4 Wifi (32GB)	10	A單	3428
Apple	I-Pad 4 Wifi (64GB)	5	A單	3429
Apple	I-Pad 2 Wifi 3G (16GB)	6	A單	3430
Apple	I-Pad 2 Wifi 3G (64GB)	3	A單	3431
Apple	I-Pad 2 Wifi (16GB)	57	A單	3432
Apple	I-Pad 2 Wifi (32GB)	6	A單	3433
Apple	I-Pad 2 Wifi (64GB)	1	A單	3434
Apple	I-Pad Air Wifi 4G (16GB)	1	A單	3435
Apple	I-Pad Air Wifi (16GB)	14	A單	3436
Apple	I-Pad Air Wifi (32GB)	1	A單	3437
Apple	I-Pad Air Wifi (64GB)	1	A單	3438
Apple	I-Pad Mini 5 Wifi 4G (256GB)	1	A單	3439
Apple	I-Pad Mini 4 Wifi 4G (128GB)	4	A單	3440
Apple	I-Pad Mini 4 Wifi 4G (16GB)	1	A單	3441
Apple	I-Pad Mini 4 Wifi (128GB)	6	A單	3442
Apple	I-Pad Mini 4 Wifi (16GB)	5	A單	3443
Apple	I-Pad Mini 4 Wifi (64GB)	2	A單	3444
Apple	I-Pad Mini 2 Wifi 4G (16GB)	1	A單	3445
Apple	I-Pad Mini 2 Wifi (16GB)	7	A單	3446
Apple	I-Pad Mini 2 Wifi (32GB)	13	A單	3447
Apple	I-Pad Mini Wifi 4G (16GB)	6	A單	3448
Apple	I-Pad Mini Wifi 4G (32GB)	2	A單	3449
Apple	I-Pad Mini Wifi 4G (64GB)	1	A單	3450
Apple	I-Pad Mini Wifi (16GB)	35	A單	3451
Apple	I-Pad Mini Wifi (64GB)	4	A單	3452
Apple	I-Pad Pro Wifi (32GB)	1	A單	3453
Apple	I-Pad Wifi (16GB)	11	A單	3454
Apple	I-Pad Wifi (32GB)	1	A單	3455
Apple	I-Pad Wifi 3G (16GB)	6	A單	3456
Apple	I-Pad Wifi 3G (32GB)	9	A單	3457
Apple	I-Pad Wifi 3G (64GB)	11	A單	3458
Apple	The New I-Pad Wifi (16GB)	17	A單	3459
Apple	The New I-Pad Wifi (32GB)	2	A單	3460
Apple	The New I-Pad Wifi (64GB)	2	A單	3461
Apple	The New I-Pad Wifi 4G (16GB)	3	A單	3462
Apple	The New I-Pad Wifi 4G (32GB)	8	A單	3463
Apple	The New I-Pad Wifi 4G (64GB)	5	A單	3464
Apple	I-Pad 6 Wifi 4G (128GB)	1	B單開好	3465
Apple	I-Pad 6 Wifi 4G (32GB)	7	B單開好	3466

Apple	I-Pad 6 Wifi (128GB)	1	B單開好	3467
Apple	I-Pad 5 Wifi 4G (128GB)	4	B單開好	3468
Apple	I-Pad 5 Wifi 4G (32GB)	1	B單開好	3469
Apple	I-Pad 5 Wifi (128GB)	6	B單開好	3470
Apple	I-Pad 5 Wifi (32GB)	40	B單開好	3471
Apple	I-Pad 4 Wifi 4G (16GB)	11	B單開好	3472
Apple	I-Pad 4 Wifi 4G (32GB)	2	B單開好	3473
Apple	I-Pad 4 Wifi 4G (64GB)	1	B單開好	3474
Apple	I-Pad 4 Wifi (16GB)	26	B單開好	3475
Apple	I-Pad 4 Wifi (32GB)	3	B單開好	3476
Apple	I-Pad 2 Wifi 3G (16GB)	5	B單開好	3477
Apple	I-Pad 2 Wifi 3G (32GB)	2	B單開好	3478
Apple	I-Pad 2 Wifi (16GB)	44	B單開好	3479
Apple	I-Pad 2 Wifi (32GB)	6	B單開好	3480
Apple	I-Pad 2 Wifi (64GB)	6	B單開好	3481
Apple	I-Pad Air 2 Wifi 4G (128GB)	3	B單開好	3482
Apple	I-Pad Air 2 Wifi 4G (16GB)	5	B單開好	3483
Apple	I-Pad Air 2 Wifi 4G (64GB)	4	B單開好	3484
Apple	I-Pad Air 2 Wifi (128GB)	3	B單開好	3485
Apple	I-Pad Air 2 Wifi (16GB)	3	B單開好	3486
Apple	I-Pad Air 2 Wifi (32GB)	5	B單開好	3487
Apple	I-Pad Air 2 Wifi (64GB)	6	B單開好	3488
Apple	I-Pad Air Wifi 4G (16GB)	13	B單開好	3489
Apple	I-Pad Air Wifi 4G (32GB)	3	B單開好	3490
Apple	I-Pad Air Wifi (128GB)	1	B單開好	3491
Apple	I-Pad Air Wifi (16GB)	36	B單開好	3492
Apple	I-Pad Air Wifi (32GB)	13	B單開好	3493
Apple	I-Pad Air Wifi (64GB)	4	B單開好	3494
Apple	I-Pad Mini 4 Wifi 4G (64GB)	1	B單開好	3495
Apple	I-Pad Mini 4 Wifi (128GB)	9	B單開好	3496
Apple	I-Pad Mini 4 Wifi (16GB)	1	B單開好	3497
Apple	I-Pad Mini 4 Wifi (32GB)	1	B單開好	3498
Apple	I-Pad Mini 4 Wifi (64GB)	1	B單開好	3499
Apple	I-Pad Mini 3 Wifi 4G (128GB)	1	B單開好	3500
Apple	I-Pad Mini 3 Wifi (128GB)	1	B單開好	3501
Apple	I-Pad Mini 2 Wifi 4G (128GB)	1	B單開好	3502
Apple	I-Pad Mini 2 Wifi 4G (16GB)	2	B單開好	3503
Apple	I-Pad Mini 2 Wifi 4G (32GB)	5	B單開好	3504
Apple	I-Pad Mini 2 Wifi (16GB)	16	B單開好	3505
Apple	I-Pad Mini 2 Wifi (32GB)	10	B單開好	3506
Apple	I-Pad Mini Wifi 4G (16GB)	5	B單開好	3507
Apple	I-Pad Mini Wifi 4G (32GB)	1	B單開好	3508
Apple	I-Pad Mini Wifi (16GB)	39	B單開好	3509
Apple	I-Pad Mini Wifi (32GB)	4	B單開好	3510
Apple	I-Pad Pro 9.7 Wifi (32GB)	1	B單開好	3511
Apple	I-Pad Pro 9.7 Wifi 4G (256GB)	1	B單開好	3512
Apple	I-Pad Pro Wifi 4G (128GB)	2	B單開好	3513
Apple	I-Pad Wifi (16GB)	2	B單開好	3514
Apple	I-Pad Wifi (32GB)	1	B單開好	3515
Apple	I-Pad Wifi (64GB)	1	B單開好	3516
Apple	The New I-Pad Wifi (16GB)	14	B單開好	3517
Apple	The New I-Pad Wifi (32GB)	10	B單開好	3518
Apple	The New I-Pad Wifi (64GB)	3	B單開好	3519
Apple	The New I-Pad Wifi 4G (16GB)	3	B單開好	3520
Apple	The New I-Pad Wifi 4G (32GB)	1	B單開好	3521
Apple	The New I-Pad Wifi 4G (64GB)	1	B單開好	3522
Apple	I-Pad 7 Wifi (32GB)	5	B單開壞	3523
Apple	I-Pad 6 Wifi (128GB)	3	B單開壞	3524
Apple	I-Pad 6 Wifi (32GB)	2	B單開壞	3525
Apple	I-Pad 5 Wifi 4G (32GB)	12	B單開壞	3526
Apple	I-Pad 5 Wifi (128GB)	1	B單開壞	3527
Apple	I-Pad 5 Wifi (32GB)	16	B單開壞	3528
Apple	I-Pad 4 Wifi 4G (16GB)	8	B單開壞	3529
Apple	I-Pad 4 Wifi (128GB)	1	B單開壞	3530
Apple	I-Pad 4 Wifi (16GB)	10	B單開壞	3531
Apple	I-Pad 4 Wifi (32GB)	2	B單開壞	3532
Apple	I-Pad 4 Wifi (64GB)	1	B單開壞	3533
Apple	I-Pad 2 Wifi 3G (16GB)	1	B單開壞	3534
Apple	I-Pad 2 Wifi (16GB)	22	B單開壞	3535
Apple	I-Pad 2 Wifi (32GB)	2	B單開壞	3536
Apple	I-Pad 2 Wifi (64GB)	2	B單開壞	3537

Apple	I-Pad Air 4 Wifi (64GB)	1	B單開壞	3538
Apple	I-Pad Air 2 Wifi 4G (128GB)	1	B單開壞	3539
Apple	I-Pad Air 2 Wifi 4G (16GB)	17	B單開壞	3540
Apple	I-Pad Air 2 Wifi 4G (32GB)	2	B單開壞	3541
Apple	I-Pad Air 2 Wifi 4G (64GB)	2	B單開壞	3542
Apple	I-Pad Air 2 Wifi (128GB)	1	B單開壞	3543
Apple	I-Pad Air 2 Wifi (16GB)	5	B單開壞	3544
Apple	I-Pad Air 2 Wifi (32GB)	2	B單開壞	3545
Apple	I-Pad Air Wifi 4G (128GB)	1	B單開壞	3546
Apple	I-Pad Air Wifi 4G (16GB)	9	B單開壞	3547
Apple	I-Pad Air Wifi 4G (32GB)	1	B單開壞	3548
Apple	I-Pad Air Wifi (16GB)	9	B單開壞	3549
Apple	I-Pad Air Wifi (32GB)	3	B單開壞	3550
Apple	I-Pad Mini 5 Wifi 4G (64GB)	1	B單開壞	3551
Apple	I-Pad Mini 5 Wifi (64GB)	5	B單開壞	3552
Apple	I-Pad Mini 4 Wifi 4G (128GB)	3	B單開壞	3553
Apple	I-Pad Mini 4 Wifi 4G (16GB)	19	B單開壞	3554
Apple	I-Pad Mini 4 Wifi 4G (32GB)	4	B單開壞	3555
Apple	I-Pad Mini 4 Wifi 4G (64GB)	3	B單開壞	3556
Apple	I-Pad Mini 4 Wifi (16GB)	9	B單開壞	3557
Apple	I-Pad Mini 4 Wifi (32GB)	3	B單開壞	3558
Apple	I-Pad Mini 4 Wifi (64GB)	2	B單開壞	3559
Apple	I-Pad Mini 3 Wifi 4G (16GB)	1	B單開壞	3560
Apple	I-Pad Mini 3 Wifi (16GB)	6	B單開壞	3561
Apple	I-Pad Mini 3 Wifi (64GB)	1	B單開壞	3562
Apple	I-Pad Mini 2 Wifi 4G (16GB)	9	B單開壞	3563
Apple	I-Pad Mini 2 Wifi 4G (32GB)	1	B單開壞	3564
Apple	I-Pad Mini 2 Wifi (16GB)	9	B單開壞	3565
Apple	I-Pad Mini 2 Wifi (32GB)	2	B單開壞	3566
Apple	I-Pad Mini Wifi 4G (16GB)	4	B單開壞	3567
Apple	I-Pad Mini Wifi (16GB)	31	B單開壞	3568
Apple	I-Pad Mini Wifi (32GB)	3	B單開壞	3569
Apple	I-Pad Pro 2 Wifi (64GB)	2	B單開壞	3570
Apple	I-Pad Pro 10.5 Wifi (256GB)	2	B單開壞	3571
Apple	I-Pad Pro 9.7 Wifi (128GB)	1	B單開壞	3572
Apple	I-Pad Pro 9.7 Wifi (256GB)	1	B單開壞	3573
Apple	I-Pad Pro 9.7 Wifi (32GB)	3	B單開壞	3574
Apple	I-Pad Pro 9.7 Wifi 4G (128GB)	4	B單開壞	3575
Apple	I-Pad Pro 9.7 Wifi 4G (32GB)	8	B單開壞	3576
Apple	I-Pad Pro Wifi 4G (128GB)	1	B單開壞	3577
Apple	I-Pad Wifi (16GB)	5	B單開壞	3578
Apple	I-Pad Wifi (32GB)	6	B單開壞	3579
Apple	I-Pad Wifi (64GB)	6	B單開壞	3580
Apple	I-Pad Wifi 3G (16GB)	4	B單開壞	3581
Apple	I-Pad Wifi 3G (32GB)	3	B單開壞	3582
Apple	I-Pad Wifi 3G (64GB)	4	B單開壞	3583
Apple	The New I-Pad Wifi (16GB)	5	B單開壞	3584
Apple	The New I-Pad Wifi (32GB)	2	B單開壞	3585
Apple	The New I-Pad Wifi 4G (16GB)	1	B單開壞	3586
Apple	The New I-Pad Wifi 4G (32GB)	3	B單開壞	3587
Apple	The New I-Pad Wifi 4G (64GB)	1	B單開壞	3588
Apple	I-Pad 7 Wifi (32GB)	1	B單不開	3589
Apple	I-Pad 6 Wifi 4G (32GB)	1	B單不開	3590
Apple	I-Pad 6 Wifi (32GB)	1	B單不開	3591
Apple	I-Pad 5 Wifi (32GB)	2	B單不開	3592
Apple	I-Pad 4 Wifi 4G (16GB)	4	B單不開	3593
Apple	I-Pad 4 Wifi 4G (32GB)	3	B單不開	3594
Apple	I-Pad 4 Wifi (16GB)	4	B單不開	3595
Apple	I-Pad 2 Wifi 3G (16GB)	2	B單不開	3596
Apple	I-Pad 2 Wifi (16GB)	4	B單不開	3597
Apple	I-Pad Air 2 Wifi 4G (16GB)	1	B單不開	3598
Apple	I-Pad Air 2 Wifi (16GB)	1	B單不開	3599
Apple	I-Pad Air 2 Wifi (32GB)	2	B單不開	3600
Apple	I-Pad Air Wifi 4G (16GB)	4	B單不開	3601
Apple	I-Pad Air Wifi (16GB)	14	B單不開	3602
Apple	I-Pad Air Wifi (32GB)	4	B單不開	3603
Apple	I-Pad Mini 4 Wifi 4G (128GB)	3	B單不開	3604
Apple	I-Pad Mini 4 Wifi 4G (16GB)	14	B單不開	3605
Apple	I-Pad Mini 4 Wifi 4G (32GB)	2	B單不開	3606
Apple	I-Pad Mini 4 Wifi (128GB)	5	B單不開	3607
Apple	I-Pad Mini 4 Wifi (64GB)	2	B單不開	3608

Apple	I-Pad Mini 3 Wifi (16GB)	2	B單不開	3609
Apple	I-Pad Mini 3 Wifi (64GB)	2	B單不開	3610
Apple	I-Pad Mini 2 Wifi 4G (16GB)	2	B單不開	3611
Apple	I-Pad Mini 2 Wifi (16GB)	7	B單不開	3612
Apple	I-Pad Mini 2 Wifi (32GB)	1	B單不開	3613
Apple	I-Pad Mini 2 Wifi (64GB)	2	B單不開	3614
Apple	I-Pad Mini Wifi 4G (16GB)	7	B單不開	3615
Apple	I-Pad Mini Wifi (16GB)	23	B單不開	3616
Apple	I-Pad Mini Wifi (32GB)	6	B單不開	3617
Apple	I-Pad Pro 10.5 Wifi (256GB)	1	B單不開	3618
Apple	I-Pad Pro 9.7 Wifi 4G (32GB)	1	B單不開	3619
Apple	I-Pad Wifi (32GB)	2	B單不開	3620
Apple	I-Pad Wifi (64GB)	8	B單不開	3621
Apple	I-Pad Wifi 3G (16GB)	2	B單不開	3622
Apple	I-Pad Wifi 3G (64GB)	2	B單不開	3623
Apple	The New I-Pad Wifi (16GB)	4	B單不開	3624
Apple	The New I-Pad Wifi (32GB)	2	B單不開	3625
Apple	The New I-Pad Wifi 4G (16GB)	4	B單不開	3626
Apple	The New I-Pad Wifi 4G (32GB)	4	B單不開	3627
Apple	The New I-Pad Wifi 4G (64GB)	2	B單不開	3628
Apple	I-Pad 5 Wifi 4G (32GB)	1	主板	3629
Apple	I-Pad 2 Wifi (16GB)	2	主板	3630
Apple	I-Pad Air 2 Wifi (16GB)	1	主板	3631
Apple	I-Pad Mini Wifi 4G (16GB)	1	主板	3632
Apple	I-Pad Pro 9.7 Wifi 4G (32GB)	3	主板	3633
Apple	I-Pad Wifi (16GB)	8	主板	3634
Apple	I-Pad Wifi (64GB)	1	主板	3635
Apple	The New I-Pad Wifi (16GB)	1	主板	3636
Apple	The New I-Pad Wifi 4G (16GB)	1	主板	3637
Apple	I-Phone 3GS (16GB)	125	B單	3638
Apple	I-Phone 3GS (32GB)	47	B單	3639
Apple	I-Phone 3GS (8GB)	108	B單	3640
Apple	I-Phone 3GS (16GB)	3	B單開壞不開	3641
Apple	I-Phone 3GS (32GB)	3	B單開壞不開	3642
Apple	I-Phone 3GS (8GB)	7	B單開壞不開	3643
Apple	I-Phone 3G (16GB)	34	B單	3644
Apple	I-Phone 3G (8GB)	69	B單	3645
Apple	I-Phone 3G (16GB)	2	B單開壞不開	3646
Apple	I-Phone 3G (8GB)	2	B單開壞不開	3647
Apple	I-Pod Touch III (60GB)	1	B單	3648
Apple	I-Pod Touch III (40GB)	1	B單	3649
Apple	I-Pod Touch III (30GB)	1	B單	3650
Apple	I-Pod Touch III (32GB)	15	B單	3651
Apple	I-Pod Touch III (64GB)	4	B單	3652
Apple	I-Pod Touch II (16GB)	11	B單	3653
Apple	I-Pod Touch II (32GB)	6	B單	3654
Apple	I-Pod Touch II (8GB)	67	B單	3655
Apple	I-Pod Touch II (16GB)	1	B單開壞不開	3656
Apple	I-Pod Touch 6 (16GB)	12	B單	3657
Apple	I-Pod Touch 6 (32GB)	3	B單	3658
Apple	I-Pod Touch 6 (64GB)	1	B單	3659
Apple	I-Pod touch 5 (16GB)	12	B單	3660
Apple	I-Pod touch 5 (32GB)	6	B單	3661
Apple	I-Pod Touch 4 (16GB)	25	B單	3662
Apple	I-Pod Touch 4 (32GB)	37	B單	3663
Apple	I-Pod Touch 4 (64GB)	4	B單	3664
Apple	I-Pod Touch 4 (8GB)	98	B單	3665
Apple	I-Pod touch (16GB)	24	B單	3666
Apple	I-Pod Touch (32GB)	1	B單	3667
Apple	I-Pod Touch (8GB)	10	B單	3668
Apple	I-Pod Nano 4 (16GB)	1	B單	3669
Apple	I-Pod Mini II (4GB)	2	B單	3670
Apple	I-Pod (20GB)	2	B單	3671
Apple	I-Pod Classic (30GB)	3	B單	3672
Apple	I-Pod Nano (4GB)	2	B單	3673
Apple	I-Pod Nano 2 (4GB)	1	B單	3674
Apple	I-Pod Nano 3 (4GB)	1	B單	3675
Apple	I-Pod Touch 5 (30GB)	1	B單	3676
Alcatel	OT4034	3	New	3677
Alcatel	OT4035	1	New	3678
Alcatel	OT5002	1	New	3679

Ericsson	F3213	1	New	3680
Huawei	Huawei Y635	2	New	3681
LG	D802	1	New	3682
LG	M250N	5	New	3683
Nokia	111	5	New	3684
Nokia	435	1	New	3685
Other	Bmobile K355	1	New	3686
Other	Bmobile K360	2	New	3687
Other	Go Mobile 181	7	New	3688
Other	Go Mobile 190	2	New	3689
Other	IMO Q2 Pro	1	New	3690
Other	Mobile AX1015	2	New	3691
Other	Mobile AX1016	2	New	3692
Other	Mobile AX1017	1	New	3693
Other	Mobile AX1070E	1	New	3694
Other	Mobile AX1076+	1	New	3695
Other	Mobile AX685	1	New	3696
Other	Mobiwire Kanuna	1	New	3697
Other	ZAMKO Z11	1	New	3698
Alcatel	OT3040	1	N.New	3699
Alcatel	OT4009	1	N.New	3700
Alcatel	OT4015	1	N.New	3701
Alcatel	OT4034	4	N.New	3702
Alcatel	OT4035	2	N.New	3703
Alcatel	OT5050	1	N.New	3704
Alcatel	OT6012	1	N.New	3705
Alcatel	OT6034	1	N.New	3706
Blackberry	BB9720	2	N.New	3707
Ericsson	C1505	2	N.New	3708
Ericsson	E2003	3	N.New	3709
Ericsson	E2303	3	N.New	3710
LG	LMX410	1	N.New	3711
Motorola	XT890	1	N.New	3712
Nokia	435	2	N.New	3713
Nokia	520	3	N.New	3714
Nokia	530	16	N.New	3715
Nokia	550	2	N.New	3716
Nokia	610	1	N.New	3717
Nokia	625	3	N.New	3718
Nokia	630	2	N.New	3719
Nokia	635	35	N.New	3720
Nokia	640	10	N.New	3721
Nokia	650	22	N.New	3722
Nokia	820	2	N.New	3723
Nokia	435(無鎖)	22	N.New	3724
Nokia	535(無鎖)	40	N.New	3725
Nokia	550(無鎖)	5	N.New	3726
Nokia	640XL	1	N.New	3727
Other	DORO 8100(無鎖)	1	N.New	3728
Other	Go Mobile 181	1	N.New	3729
Other	Go Mobile 190	1	N.New	3730
Other	Go Mobile 963	3	N.New	3731
Other	Go Mobile 980	3	N.New	3732
Other	Harrier	1	N.New	3733
Other	Harrier Mini	1	N.New	3734
Other	Harrier Rook	1	N.New	3735
Other	Maxcom Classic MM128	5	N.New	3736
Other	Maxcom Classic MM129	1	N.New	3737
Other	Maxcom Classic MM134	4	N.New	3738
Other	Maxcom MM721 3G	1	N.New	3739
Other	Mobile AX1016	8	N.New	3740
Other	Mobile AX1075X	4	N.New	3741
Other	Mobile AX1080	1	N.New	3742
Other	Mobile AX1082	1	N.New	3743
Other	MTT L402	2	N.New	3744
Other	MTT M14D	10	N.New	3745
Other	MTT S25	5	N.New	3746
Other	OWN F1016	1	N.New	3747
Other	OWN F1021	1	N.New	3748
Other	SKY ELite M5 Plus	1	N.New	3749
Other	SKY F3P	3	N.New	3750

Other	STK R45i	1	N.New	3751
Other	Welcome A5S	1	N.New	3752
SFR	SFR Starshine IV	1	N.New	3753
Sharp	550SH	60	N.New	3754
Vodafone	V527	1080	N.New	3755
ZTE	ZTE Blade A110	1	N.New	3756
ZTE	ZTE KIS III	1	N.New	3757
Alcatel	OT4003	1	N.New單	3758
Alcatel	OT815	2	N.New單	3759
Ericsson	C1505	2	N.New單	3760
Ericsson	CK13I	302	N.New單	3761
Ericsson	G3121	1	N.New單	3762
Ericsson	G3221	1	N.New單	3763
Ericsson	W150A(高頻有碼)	125	N.New單	3764
HP	IPAQ Data Messenger	36	N.New單	3765
HP	Ipaq Voice Messenger	92	N.New單	3766
HTC	HTC Desire C	3	N.New單	3767
HTC	HTC Diamond	210	N.New單	3768
Huawei	Huawei CAG-L03	1	N.New單	3769
LG	X210	1	N.New單	3770
Motorola	I420	300	N.New單	3771
Motorola	I460	18	N.New單	3772
Motorola	I475	26	N.New單	3773
Motorola	I485	26	N.New單	3774
Motorola	I706	40	N.New單	3775
Motorola	I867	228	N.New單	3776
Motorola	I897	154	N.New單	3777
Motorola	I940	60	N.New單	3778
Motorola	XT605	250	N.New單	3779
Motorola	XT626	23	N.New單	3780
Motorola	XT627	8	N.New單	3781
Nokia	550	3	N.New單	3782
Nokia	635	1	N.New單	3783
Other	IMO DASH	1	N.New單	3784
Other	Mobile AX1070E	1	N.New單	3785
Other	Mobile AX1071	1	N.New單	3786
Other	Mobile AX685	8	N.New單	3787
Other	Mobiwire Ayasha	19	N.New單	3788
Other	Pantech MD Cube	11	N.New單	3789
Sagem	421Z	1674	N.New單	3790
Sagem	W-8	256	N.New單	3791
Sharp	880SH	108	N.New單	3792
Vodafone	V527	500	N.New單	3793
Vodafone	V533	300	N.New單	3794
ZTE	ZTE R303	49	N.New單	3795
ZTE	ZTE R880	52	N.New單	3796
ZTE	ZTE S50	55	N.New單	3797
Alcatel	OT9022	1	A單(靚)	3798
Ericsson	D6616	1	A單(靚)	3799
Ericsson	F5321	1	A單(靚)	3800
Ericsson	G3311	2	A單(靚)	3801
HTC	HTC Desire 610	1	A單(靚)	3802
HTC	HTC One M8	2	A單(靚)	3803
LG	D415	2	A單(靚)	3804
LG	H918	2	A單(靚)	3805
LG	K330	1	A單(靚)	3806
LG	MS330	1	A單(靚)	3807
LG	TP260	1	A單(靚)	3808
Motorola	XT1034	1	A單(靚)	3809
Motorola	XT1103	1	A單(靚)	3810
Motorola	XT1254	1	A單(靚)	3811
Motorola	XT1528	1	A單(靚)	3812
Other	ALTICE S33	1	A單(靚)	3813
Other	Doro PE820 Mini	1	A單(靚)	3814
Other	IMO Q2 Pro	7	A單(靚)	3815
SFR	SFR Starxtrem IV	1	A單(靚)	3816
Ericsson	J8210	1	14A	3817
Nokia	Nokia 7.2	1	14A	3818
Other	XiaoMi Redmi Note 11 Pro 5G	1	14A	3819
Other	XiaoMi Redmi Note 11S 5G	1	14A	3820
Other	XiaoMi Redmi Note 13 5G	2	14A	3821

Other	XiaoMi Redmi Note 13 Pro 5G	2	14A	3822
Other	XiaoMi Redmi Note 13 Pro+ 5G	1	14A	3823
Acer	Acer A510	1	A單	3824
Acer	Acer B3-A20	1	A單	3825
Acer	Acer E310	4	A單	3826
Alcatel	OT1013	1	A單	3827
Alcatel	OT1054	1	A單	3828
Alcatel	OT1066	1	A單	3829
Alcatel	OT1068	1	A單	3830
Alcatel	OT2035	2	A單	3831
Alcatel	OT2045	1	A單	3832
Alcatel	OT4009	3	A單	3833
Alcatel	OT4013	1	A單	3834
Alcatel	OT4024	1	A單	3835
Alcatel	OT4030	1	A單	3836
Alcatel	OT4033	3	A單	3837
Alcatel	OT4034	1	A單	3838
Alcatel	OT4035	1	A單	3839
Alcatel	OT4087	1	A單	3840
Alcatel	OT5009	1	A單	3841
Alcatel	OT5015	1	A單	3842
Alcatel	OT5045	1	A單	3843
Alcatel	OT5051	2	A單	3844
Alcatel	OT5056	1	A單	3845
Alcatel	OT6037	2	A單	3846
Alcatel	OT9008	1	A單	3847
Asus	Asus A007	1	A單	3848
Asus	Asus K00F	1	A單	3849
Asus	Asus K01E	1	A單	3850
Asus	Asus Nexus 7	2	A單	3851
Asus	Asus Nexus 7 K009	2	A單	3852
Asus	Asus P023	1	A單	3853
Asus	Asus TF101	1	A單	3854
Blackberry	BB9000	1	A單	3855
Blackberry	BB9360	4	A單	3856
Blackberry	BB9700	2	A單	3857
Blackberry	BB9720	3	A單	3858
Blackberry	BB9720(倒)	2	A單	3859
Blackberry	BB9790	5	A單	3860
Blackberry	DTEK50	37	A單	3861
Blackberry	Dtek60	1	A單	3862
Blackberry	Key2 LE	1	A單	3863
Blackberry	Leap	139	A單	3864
Blackberry	Z10	1	A單	3865
Blackberry	Z10 4G	235	A單	3866
Blackberry	Z3	33	A單	3867
Blackberry	Z30 4G	51	A單	3868
Ericsson	C2105	1	A單	3869
Ericsson	C5303	4	A單	3870
Ericsson	C6833	3	A單	3871
Ericsson	C6903	12	A單	3872
Ericsson	D2005	3	A單	3873
Ericsson	D2203	1	A單	3874
Ericsson	D2203(無鎖)	1	A單	3875
Ericsson	D2303	9	A單	3876
Ericsson	D2403	4	A單	3877
Ericsson	D5103	3	A單	3878
Ericsson	D5503	7	A單	3879
Ericsson	D5803	7	A單	3880
Ericsson	D6503	13	A單	3881
Ericsson	D6603	9	A單	3882
Ericsson	E2105	5	A單	3883
Ericsson	E2303	14	A單	3884
Ericsson	E2333	3	A單	3885
Ericsson	E5303(無鎖)	1	A單	3886
Ericsson	E5506	1	A單	3887
Ericsson	E5533	1	A單	3888
Ericsson	E5533(無鎖)	2	A單	3889
Ericsson	E5603	23	A單	3890
Ericsson	E5603(無鎖)	5	A單	3891
Ericsson	E5606	1	A單	3892

Ericsson	E5653(無鎖)	3	A單	3893
Ericsson	E5803(無鎖)	1	A單	3894
Ericsson	E5823	22	A單	3895
Ericsson	E5823(無鎖)	14	A單	3896
Ericsson	E6533	2	A單	3897
Ericsson	E6553	1	A單	3898
Ericsson	E6553(無鎖)	1	A單	3899
Ericsson	E6603	1	A單	3900
Ericsson	E6633	2	A單	3901
Ericsson	E6633(無鎖)	2	A單	3902
Ericsson	E6653	22	A單	3903
Ericsson	E6653(無鎖)	9	A單	3904
Ericsson	E6833(無鎖)	1	A單	3905
Ericsson	E6853	11	A單	3906
Ericsson	F3111	123	A單	3907
Ericsson	F3111(無鎖)	8	A單	3908
Ericsson	F3113	12	A單	3909
Ericsson	F3115	13	A單	3910
Ericsson	F3115(無鎖)	1	A單	3911
Ericsson	F3121	1	A單	3912
Ericsson	F3211	10	A單	3913
Ericsson	F3211(無鎖)	1	A單	3914
Ericsson	F3213	4	A單	3915
Ericsson	F3311	50	A單	3916
Ericsson	F3311(無鎖)	6	A單	3917
Ericsson	F3313	11	A單	3918
Ericsson	F5121	1	A單	3919
Ericsson	F5121(無鎖)	4	A單	3920
Ericsson	F5321	1	A單	3921
Ericsson	F8131(無鎖)	1	A單	3922
Ericsson	F8331(無鎖)	2	A單	3923
Ericsson	G3112	1	A單	3924
Ericsson	G3121	49	A單	3925
Ericsson	G3121(無鎖)	5	A單	3926
Ericsson	G3125	1	A單	3927
Ericsson	G3223	4	A單	3928
Ericsson	G3311	101	A單	3929
Ericsson	G3311(無鎖)	17	A單	3930
Ericsson	G3312	1	A單	3931
Ericsson	G3312(無鎖)	1	A單	3932
Ericsson	G3313	3	A單	3933
Ericsson	G8231(無鎖)	1	A單	3934
Ericsson	G8232(無鎖)	1	A單	3935
Ericsson	G8341	1	A單	3936
Ericsson	G8441(無鎖)	1	A單	3937
Ericsson	H3113	1	A單	3938
Ericsson	H3213	1	A單	3939
Ericsson	H3223	3	A單	3940
Ericsson	H3311	3	A單	3941
Ericsson	H3311(無鎖)	1	A單	3942
Ericsson	H4311	2	A單	3943
Ericsson	H8216	1	A單	3944
Ericsson	H8331	2	A單	3945
Ericsson	I3113(無鎖)	1	A單	3946
Ericsson	I3312	43	A單	3947
Ericsson	I3312(無鎖)	2	A單	3948
Ericsson	I4312	1	A單	3949
Ericsson	J8110(無鎖)	2	A單	3950
Ericsson	J8210	1	A單	3951
Ericsson	J8210(無鎖)	1	A單	3952
Ericsson	LT25I	3	A單	3953
Ericsson	LT26i	6	A單	3954
Ericsson	LT30P	3	A單	3955
Ericsson	LT36	10	A單	3956
Ericsson	MT11i	1	A單	3957
Ericsson	MT15i	3	A單	3958
Ericsson	SGPT611	1	A單	3959
Ericsson	SO-53C	1	A單	3960
Ericsson	ST18i	1	A單	3961
Ericsson	ST21i	2	A單	3962
Ericsson	ST23i	3	A單	3963

Ericsson	ST27i	2	A單	3964
Ericsson	X12	15	A單	3965
Ericsson	X8	3	A單	3966
Ericsson	XQ-AD51	1	A單	3967
Ericsson	XQ-AD51(無鎖)	1	A單	3968
Ericsson	XQ-BC52(無鎖)	1	A單	3969
Ericsson	XQ-BQ52(無鎖)	1	A單	3970
HTC	HTC 7 Mozart	1	A單	3971
HTC	HTC 8S	2	A單	3972
HTC	HTC 8X	1	A單	3973
HTC	HTC Chacha	2	A單	3974
HTC	HTC Desire 310	28	A單	3975
HTC	HTC Desire 500	88	A單	3976
HTC	HTC Desire 510	84	A單	3977
HTC	HTC Desire 516	1	A單	3978
HTC	HTC Desire 530	3	A單	3979
HTC	HTC Desire 610	1	A單	3980
HTC	HTC Desire 620	1	A單	3981
HTC	HTC Desire 728	1	A單	3982
HTC	HTC Desire 816	1	A單	3983
HTC	HTC Desire 820	1	A單	3984
HTC	HTC Desire 825	2	A單	3985
HTC	HTC Desire C	19	A單	3986
HTC	HTC Desire HD	2	A單	3987
HTC	HTC Desire S	4	A單	3988
HTC	HTC Desire Z	20	A單	3989
HTC	HTC Explorer	4	A單	3990
HTC	HTC One A9	1	A單	3991
HTC	HTC One A9S	1	A單	3992
HTC	HTC One M8S	10	A單	3993
HTC	HTC One Mini	40	A單	3994
HTC	HTC One Mini II	112	A單	3995
HTC	HTC One S	54	A單	3996
HTC	HTC One SV	11	A單	3997
HTC	HTC One SV 4G	20	A單	3998
HTC	HTC One X	49	A單	3999
HTC	HTC One X+	2	A單	4000
HTC	HTC Sensation	3	A單	4001
HTC	HTC Sensation Xe	2	A單	4002
HTC	HTC U11	1	A單	4003
HTC	HTC Wildfire	8	A單	4004
HTC	HTC Wildfire S	2	A單	4005
Huawei	Huawei BLA-L09	1	A單	4006
Huawei	Huawei BLA-L29	1	A單	4007
Huawei	Huawei CAM-L21	3	A單	4008
Huawei	Huawei COL-L29	1	A單	4009
Huawei	Huawei CRR-L09	1	A單	4010
Huawei	Huawei DIG-L21	1	A單	4011
Huawei	Huawei DRA-L21	1	A單	4012
Huawei	Huawei FRL-L23	1	A單	4013
Huawei	Huawei G510	1	A單	4014
Huawei	Huawei G535	1	A單	4015
Huawei	Huawei G620	1	A單	4016
Huawei	Huawei G630	1	A單	4017
Huawei	Huawei HMA-L09	1	A單	4018
Huawei	Huawei Honor 50	1	A單	4019
Huawei	Huawei Honor 70 Lite	1	A單	4020
Huawei	Huawei LUA-L21	2	A單	4021
Huawei	Huawei MT1-U06	8	A單	4022
Huawei	Huawei MYA-L41	4	A單	4023
Huawei	Huawei P10	4	A單	4024
Huawei	Huawei P10 Lite	4	A單	4025
Huawei	Huawei P2	1	A單	4026
Huawei	Huawei P30 Lite	2	A單	4027
Huawei	Huawei P30 Pro	1	A單	4028
Huawei	Huawei P8 Lite	38	A單	4029
Huawei	Huawei P9	1	A單	4030
Huawei	Huawei PCT-L29	1	A單	4031
Huawei	Huawei PE-TL10	1	A單	4032
Huawei	Huawei S7-721	2	A單	4033
Huawei	Huawei SCL-L01	3	A單	4034

Huawei	Huawei SCL-L21	5	A單	4035
Huawei	Huawei T1-821	1	A單	4036
Huawei	Huawei Y530	1	A單	4037
Huawei	Huawei Y550	1	A單	4038
Huawei	Huawei Y625	1	A單	4039
Huawei	Huawei Y635	3	A單	4040
Huawei	Huawei YAL-L21	1	A單	4041
LG	D331	5	A單	4042
LG	D335	1	A單	4043
LG	E400	1	A單	4044
LG	E460	1	A單	4045
LG	E610	2	A單	4046
LG	E960	48	A單	4047
LG	H420	4	A單	4048
LG	H440	1	A單	4049
LG	H500	11	A單	4050
LG	H525	2	A單	4051
LG	H735	1	A單	4052
LG	H791	1	A單	4053
LG	H815	3	A單	4054
LG	H818	1	A單	4055
LG	H850	4	A單	4056
LG	H955	1	A單	4057
LG	K350n	5	A單	4058
LG	K420n	4	A單	4059
LG	K500	1	A單	4060
LG	K500N	1	A單	4061
LG	P500	1	A單	4062
LG	P710	1	A單	4063
LG	P880	1	A單	4064
LG	P920	1	A單	4065
LG	P970	1	A單	4066
LG	X150	1	A單	4067
LG	X410EO	1	A單	4068
Motorola	XT1032	2	A單	4069
Motorola	XT1068	1	A單	4070
Motorola	XT1541	5	A單	4071
Motorola	XT1542	3	A單	4072
Motorola	XT1562	1	A單	4073
Motorola	XT1622	3	A單	4074
Motorola	XT1650	3	A單	4075
Motorola	XT1675	1	A單	4076
Motorola	XT1676	4	A單	4077
Motorola	XT1685	1	A單	4078
Motorola	XT1794	7	A單	4079
Motorola	XT1920	1	A單	4080
Motorola	XT2000	6	A單	4081
Motorola	XT2013	1	A單	4082
Motorola	XT2019	2	A單	4083
Motorola	XT2025	48	A單	4084
Motorola	XT2029	6	A單	4085
Motorola	XT2041	8	A單	4086
Motorola	XT2041DL	2	A單	4087
Motorola	XT2053	1	A單	4088
Motorola	XT2055	11	A單	4089
Motorola	XT2091	1	A單	4090
Motorola	XT2097	3	A單	4091
Motorola	XT2117	3	A單	4092
Motorola	XT2127	2	A單	4093
Motorola	XT2128	2	A單	4094
Motorola	XT2129	3	A單	4095
Motorola	XT2149	1	A單	4096
Motorola	XT2155	9	A單	4097
Motorola	XT2159	4	A單	4098
Motorola	XT2163	1	A單	4099
Motorola	XT2173	2	A單	4100
Motorola	XT2203	1	A單	4101
Motorola	XT2205	1	A單	4102
Motorola	XT2223	1	A單	4103
Motorola	XT2231	4	A單	4104
Motorola	XT2235	4	A單	4105

Motorola	XT2341	1	A單	4106
Motorola	XT2403	1	A單	4107
Motorola	XT2413	1	A單	4108
Nokia	111	2	A單	4109
Nokia	207	1	A單	4110
Nokia	301	1	A單	4111
Nokia	435	2	A單	4112
Nokia	503	1	A單	4113
Nokia	520	5	A單	4114
Nokia	530	1	A單	4115
Nokia	532	1	A單	4116
Nokia	625	5	A單	4117
Nokia	635	3	A單	4118
Nokia	640	8	A單	4119
Nokia	650	6	A單	4120
Nokia	720	1	A單	4121
Nokia	800	1	A單	4122
Nokia	900	1	A單	4123
Nokia	1320	1	A單	4124
Nokia	105(2019)	1	A單	4125
Nokia	520(無鎖)	4	A單	4126
Nokia	530(無鎖)	6	A單	4127
Nokia	535(無鎖)	5	A單	4128
Nokia	550(無鎖)	25	A單	4129
Nokia	625(無鎖)	3	A單	4130
Nokia	630(無鎖)	7	A單	4131
Nokia	635(無鎖)	8	A單	4132
Nokia	640(無鎖)	11	A單	4133
Nokia	640XL	5	A單	4134
Nokia	640XL(無鎖)	1	A單	4135
Nokia	650(無鎖)	10	A單	4136
Nokia	710(無鎖)	1	A單	4137
Nokia	720(無鎖)	2	A單	4138
Nokia	950(無鎖)	2	A單	4139
Nokia	C1-01	1	A單	4140
Nokia	Nokia 3	15	A單	4141
Nokia	Nokia 3(無鎖)	6	A單	4142
Nokia	Nokia 3.1	9	A單	4143
Nokia	Nokia 3.1(2018)(無鎖)	10	A單	4144
Nokia	Nokia 3.1(無鎖)	11	A單	4145
Nokia	Nokia 3.2	4	A單	4146
Nokia	Nokia 3.2(無鎖)	1	A單	4147
Nokia	Nokia 3.4(無鎖)	2	A單	4148
Nokia	Nokia 4.2(無鎖)	5	A單	4149
Nokia	Nokia 5(無鎖)	4	A單	4150
Nokia	Nokia 5.4(無鎖)	2	A單	4151
Nokia	Nokia 6(無鎖)	7	A單	4152
Nokia	Nokia 6.1(無鎖)	4	A單	4153
Nokia	Nokia 6.2(無鎖)	1	A單	4154
Nokia	Nokia 7 Plus	1	A單	4155
Nokia	Nokia 7 Plus(無鎖)	2	A單	4156
Nokia	Nokia 7.1(無鎖)	7	A單	4157
Nokia	Nokia 7.2	2	A單	4158
Nokia	Nokia 7.2(無鎖)	2	A單	4159
Nokia	Nokia 8(無鎖)	3	A單	4160
Nokia	Nokia 8.1(無鎖)	1	A單	4161
Nokia	Nokia C22	2	A單	4162
Nokia	Nokia G10(無鎖)	2	A單	4163
Nokia	Nokia G11(無鎖)	1	A單	4164
Nokia	Nokia G20(無鎖)	1	A單	4165
Nokia	Nokia G22(無鎖)	1	A單	4166
Nokia	Nokia XR20(無鎖)	1	A單	4167
Other	ALTICE E54	1	A單	4168
Other	Altice S10	2	A單	4169
Other	Altice S61	8	A單	4170
Other	Altice S70	3	A單	4171
Other	ALTICE SX41	2	A單	4172
Other	Archos 55 Helium	1	A單	4173
Other	AZ210	1	A單	4174
Other	Blaupunkt BS04	9	A單	4175
Other	Blaupunkt BS04i	20	A單	4176

Other	Blaupunkt FL04	8	A單	4177
Other	Blaupunkt FL07	1	A單	4178
Other	Blaupunkt FL08	39	A單	4179
Other	Blaupunkt OT16	4	A單	4180
Other	Blaupunkt SF01	1	A單	4181
Other	Blaupunkt SF02	12	A單	4182
Other	Blaupunkt SF04	386	A單	4183
Other	Blaupunkt SF04 4G	237	A單	4184
Other	Blaupunkt SL05	1	A單	4185
Other	Blaupunkt SM01	4	A單	4186
Other	Blaupunkt SM02	2	A單	4187
Other	Blaupunkt SM05	41	A單	4188
Other	Cat B15	2	A單	4189
Other	Crosscall Trekker M1 Core	3	A單	4190
Other	Doro 7030	1	A單	4191
Other	Doro 8050	3	A單	4192
Other	Doro PE810	1	A單	4193
Other	Doro PE820	1	A單	4194
Other	Emporia Smart 4	1	A單	4195
Other	Google G020M	2	A單	4196
Other	Google G025I	1	A單	4197
Other	Google GB7N6	1	A單	4198
Other	Google GLU0G	2	A單	4199
Other	Google GP4BC	1	A單	4200
Other	Google GTT9Q	1	A單	4201
Other	Harrier	2	A單	4202
Other	IMO Q2 Pro	30	A單	4203
Other	Lenovo TB300XU	1	A單	4204
Other	Logic F11L	27	A單	4205
Other	Mobile AX1091	1	A單	4206
Other	Mobile C40	8	A單	4207
Other	Mobiwire Kanuna	1	A單	4208
Other	Mobiwire Klah	1	A單	4209
Other	MTT L506	1	A單	4210
Other	Navon SPT1100	194	A單	4211
Other	Navon T310	24	A單	4212
Other	One Plus	10	A單	4213
Other	One Plus 2	1	A單	4214
Other	One Plus 3	2	A單	4215
Other	One Plus 6	2	A單	4216
Other	One Plus 6T	2	A單	4217
Other	One Plus 7 Pro	1	A單	4218
Other	One Plus 8 5G	1	A單	4219
Other	One Plus Nord 5G	2	A單	4220
Other	One Plus Nord N10 5G	1	A單	4221
Other	One Plus X	7	A單	4222
Other	Oppo A15	1	A單	4223
Other	Oppo A17	1	A單	4224
Other	Oppo A54 5G	1	A單	4225
Other	Oppo A54S	1	A單	4226
Other	Oppo A72	1	A單	4227
Other	Oppo A77	1	A單	4228
Other	Oppo Find X2 Lite 5G	1	A單	4229
Other	Oppo Find X3 Pro 5G	1	A單	4230
Other	Oppo Find X5 5G	1	A單	4231
Other	Oppo Find X5 Lite 5G	3	A單	4232
Other	Oppo Reno 5 Lite	1	A單	4233
Other	Oppo Reno 8 Lite 5G	2	A單	4234
Other	OWN F1016	6	A單	4235
Other	OWN F1021	1	A單	4236
Other	OWN F1023	1	A單	4237
Other	OWN F1024	4	A單	4238
Other	OWN F1026	6	A單	4239
Other	OWN FUN 6	2	A單	4240
Other	OWN S4010	2	A單	4241
Other	OWN S5010	1	A單	4242
Other	OWN Smart	1	A單	4243
Other	OWN Smart Plus LTE	6	A單	4244
Other	QUBE NCP01	2	A單	4245
Other	Razer PhOne 2	1	A單	4246
Other	Razer RZ35-0215	9	A單	4247

Other	TCL 30 SE	1	A單	4248
Other	Wiko Tommy 2	1	A單	4249
Other	Windows Surface 1516	5	A單	4250
Other	Windows Surface 1572	1	A單	4251
Other	Windows surface 1631	1	A單	4252
Other	Windows Surface 1645	1	A單	4253
Other	Windows Surface 1824	1	A單	4254
Other	XiaoMi RedMi 9	2	A單	4255
Other	XiaoMi Redmi 9A	2	A單	4256
Other	XiaoMi Redmi 9T	1	A單	4257
Other	XiaoMi Redmi Note 10 Pro	1	A單	4258
Other	XiaoMi Redmi Note 10s	1	A單	4259
Other	XiaoMi Redmi Note 11	1	A單	4260
Other	XiaoMi Redmi Note 11 Pro 5G	2	A單	4261
Other	XiaoMi Redmi Note 12	3	A單	4262
Other	XiaoMi Redmi Note 13	1	A單	4263
Other	XiaoMi Redmi Note 8 Pro	1	A單	4264
Other	XiaoMi RedMi Note 9 Pro	1	A單	4265
SFR	SFR StarActive II	1	A單	4266
SFR	SFR Staraddict V	1	A單	4267
SFR	SFR Starnaute IV	2	A單	4268
SFR	SFR StarShine V	1	A單	4269
SFR	SFR Startrail 8	1	A單	4270
SFR	SFR Starxtrem 5	3	A單	4271
SFR	SFR Starxtrem II	1	A單	4272
Vodafone	V860	1	A單	4273
Vodafone	V865	1	A單	4274
Vodafone	V890	1	A單	4275
Vodafone	V985	1	A單	4276
ZTE	ZTE Blade A3	1	A單	4277
ZTE	ZTE Blade A3 Lite	1	A單	4278
ZTE	ZTE Blade A3(2019)	1	A單	4279
ZTE	ZTE Blade A510	1	A單	4280
ZTE	ZTE Blade C341	1	A單	4281
ZTE	ZTE Blade G	2	A單	4282
ZTE	ZTE Blade V10 Vita	1	A單	4283
ZTE	ZTE Blade V40 Smart	3	A單	4284
ZTE	ZTE Blade V40 Vita	3	A單	4285
ZTE	ZTE Grand Memo LTE	1	A單	4286
PC	Acer ASPIRE D257	1	14B	4287
PC	Acer CP513-1HL	2	14B	4288
PC	Acer SP111-33	1	14B	4289
PC	Apple iMac 27 2020	2	14B	4290
PC	Apple Mac Mini 2013	3	14B	4291
PC	Apple Macbook	1	14B	4292
PC	Apple MacBook 12 2015	3	14B	4293
PC	Apple MacBook Pro 13 2010	1	14B	4294
PC	Apple MacBook Pro 15 2008	2	14B	4295
PC	Asus C214M	1	14B	4296
PC	Asus C434T	1	14B	4297
PC	Asus E210MA	1	14B	4298
PC	Compaq CQ10	1	14B	4299
PC	Dell N5110	1	14B	4300
PC	Fujitsu Q702	1	14B	4301
PC	HP 4530S	1	14B	4302
PC	HP 620	1	14B	4303
PC	HP G6 2372SA	1	14B	4304
PC	Lenovo 320s-14IKB	1	14B	4305
PC	Lenovo 82CE	1	14B	4306
PC	Lenovo S10	1	14B	4307
PC	Samsung N145 Plus	1	14B	4308
PC	Samsung NC10	2	14B	4309
PC	Samsung NF210	1	14B	4310
PC	Samsung NP300E5X	1	14B	4311
PC	Samsung NP340XNA	1	14B	4312
PC	Samsung NP345XLA	1	14B	4313
PC	Samsung W700	7	14B	4314
PC	Samsung XE315XDA	1	14B	4315
PC	Samsung XE345XDA	11	14B	4316
PC	Samsung XE525QEA	2	14B	4317
Alcatel	OT2003	1	B單開好	4318

Blackberry	Z10	8	B單開好	4319
Ericsson	D5803(無鎖)	1	B單開好	4320
Ericsson	E5303	1	B單開好	4321
Ericsson	E5603	2	B單開好	4322
Ericsson	E5603(無鎖)	4	B單開好	4323
Ericsson	E5606(無鎖)	1	B單開好	4324
Ericsson	E5653(無鎖)	1	B單開好	4325
Ericsson	E5823	4	B單開好	4326
Ericsson	E5823(無鎖)	1	B單開好	4327
Ericsson	E6633(無鎖)	1	B單開好	4328
Ericsson	E6653	7	B單開好	4329
Ericsson	E6653(無鎖)	2	B單開好	4330
Ericsson	E6853(無鎖)	1	B單開好	4331
Ericsson	F3111	34	B單開好	4332
Ericsson	F3111(無鎖)	11	B單開好	4333
Ericsson	F3113	4	B單開好	4334
Ericsson	F3115(無鎖)	1	B單開好	4335
Ericsson	F3213	1	B單開好	4336
Ericsson	F3311	4	B單開好	4337
Ericsson	F3311(無鎖)	3	B單開好	4338
Ericsson	F3313	1	B單開好	4339
Ericsson	F5121	4	B單開好	4340
Ericsson	F5121(無鎖)	1	B單開好	4341
Ericsson	F8131(無鎖)	1	B單開好	4342
Ericsson	F8331	8	B單開好	4343
Ericsson	F8331(無鎖)	3	B單開好	4344
Ericsson	G3121	4	B單開好	4345
Ericsson	G3121(無鎖)	3	B單開好	4346
Ericsson	G3221	4	B單開好	4347
Ericsson	G3221(無鎖)	1	B單開好	4348
Ericsson	G3223	1	B單開好	4349
Ericsson	G3223(無鎖)	1	B單開好	4350
Ericsson	G3311	36	B單開好	4351
Ericsson	G3311(無鎖)	14	B單開好	4352
Ericsson	G3313	1	B單開好	4353
Ericsson	G8341	2	B單開好	4354
Ericsson	H3113(無鎖)	1	B單開好	4355
Ericsson	H3311(無鎖)	3	B單開好	4356
Ericsson	H3321	1	B單開好	4357
Ericsson	H8416	2	B單開好	4358
Ericsson	I3312	27	B單開好	4359
Ericsson	I3312(無鎖)	7	B單開好	4360
Ericsson	I4312(無鎖)	1	B單開好	4361
Ericsson	ST25i(無鎖)	1	B單開好	4362
Ericsson	XQ-AD51	1	B單開好	4363
Ericsson	XQ-AD51(無鎖)	2	B單開好	4364
HTC	HTC Desire X	1	B單開好	4365
Huawei	Huawei COL-L29(無鎖)	1	B單開好	4366
Huawei	Huawei COR-L29	1	B單開好	4367
Huawei	Huawei Honor 9X	3	B單開好	4368
Huawei	Huawei Honor Magic 6 Pro 5G	1	B單開好	4369
Huawei	Huawei NEN-LX1	1	B單開好	4370
Huawei	Huawei P10	2	B單開好	4371
Huawei	Huawei P10 Lite	883	B單開好	4372
Huawei	Huawei P10 Plus	9	B單開好	4373
Huawei	Huawei P20	18	B單開好	4374
Huawei	Huawei P20 Lite	357	B單開好	4375
Huawei	Huawei P20 Pro	3	B單開好	4376
Huawei	Huawei P30 Lite	2	B單開好	4377
Huawei	Huawei PCT-L29	4	B單開好	4378
Huawei	Huawei SNE-LX1	3	B單開好	4379
Huawei	Huawei SNE-LX3	1	B單開好	4380
LG	D373	1	B單開好	4381
LG	E975	1	B單開好	4382
LG	G350	1	B單開好	4383
LG	Q710	33	B單開好	4384
Motorola	XT2005	1	B單開好	4385
Motorola	XT2013	3	B單開好	4386
Motorola	XT2015	6	B單開好	4387
Motorola	XT2016	10	B單開好	4388
Motorola	XT2019	31	B單開好	4389

Motorola	XT2025	32	B單開好	4390
Motorola	XT2027	3	B單開好	4391
Motorola	XT2029	10	B單開好	4392
Motorola	XT2041	5	B單開好	4393
Motorola	XT2045	8	B單開好	4394
Motorola	XT2053	20	B單開好	4395
Motorola	XT2055	11	B單開好	4396
Motorola	XT2075	1	B單開好	4397
Motorola	XT2081	2	B單開好	4398
Motorola	XT2083	10	B單開好	4399
Motorola	XT2093	1	B單開好	4400
Motorola	XT2095	32	B單開好	4401
Motorola	XT2097	35	B單開好	4402
Motorola	XT2117	12	B單開好	4403
Motorola	XT2127	10	B單開好	4404
Motorola	XT2128	3	B單開好	4405
Motorola	XT2129	2	B單開好	4406
Motorola	XT2149	3	B單開好	4407
Motorola	XT2159	21	B單開好	4408
Motorola	XT2223	1	B單開好	4409
Motorola	XT2231	4	B單開好	4410
Motorola	XT2235	2	B單開好	4411
Motorola	XT2345	6	B單開好	4412
Nokia	100	5	B單開好	4413
Nokia	108	3	B單開好	4414
Nokia	215	1	B單開好	4415
Nokia	311	1	B單開好	4416
Nokia	435	16	B單開好	4417
Nokia	503	4	B單開好	4418
Nokia	520	3	B單開好	4419
Nokia	530	34	B單開好	4420
Nokia	625	11	B單開好	4421
Nokia	635	3	B單開好	4422
Nokia	640	14	B單開好	4423
Nokia	650	8	B單開好	4424
Nokia	710	31	B單開好	4425
Nokia	720	38	B單開好	4426
Nokia	800	4	B單開好	4427
Nokia	105(無鎖)	1	B單開好	4428
Nokia	111(無鎖)	1	B單開好	4429
Nokia	1320(無鎖)	5	B單開好	4430
Nokia	3310(2017)(無鎖)	1	B單開好	4431
Nokia	435(無鎖)	10	B單開好	4432
Nokia	520(無鎖)	294	B單開好	4433
Nokia	530(無鎖)	3	B單開好	4434
Nokia	532(無鎖)	2	B單開好	4435
Nokia	535(無鎖)	44	B單開好	4436
Nokia	550(無鎖)	78	B單開好	4437
Nokia	620(無鎖)	15	B單開好	4438
Nokia	625(無鎖)	57	B單開好	4439
Nokia	630(無鎖)	47	B單開好	4440
Nokia	635(無鎖)	151	B單開好	4441
Nokia	640(無鎖)	276	B單開好	4442
Nokia	640XL	6	B單開好	4443
Nokia	640XL(無鎖)	84	B單開好	4444
Nokia	650(無鎖)	86	B單開好	4445
Nokia	710(無鎖)	6	B單開好	4446
Nokia	720(無鎖)	4	B單開好	4447
Nokia	730(無鎖)	1	B單開好	4448
Nokia	735(無鎖)	1	B單開好	4449
Nokia	800(無鎖)	2	B單開好	4450
Nokia	820(無鎖)	21	B單開好	4451
Nokia	830(無鎖)	2	B單開好	4452
Nokia	920(無鎖)	2	B單開好	4453
Nokia	Nokia 1 Plus(無鎖)	2	B單開好	4454
Nokia	Nokia 1(無鎖)	2	B單開好	4455
Nokia	Nokia 1.3(無鎖)	1	B單開好	4456
Nokia	Nokia 1.4(無鎖)	1	B單開好	4457
Nokia	Nokia 2(無鎖)	9	B單開好	4458
Nokia	Nokia 2.1(無鎖)	7	B單開好	4459
Nokia	Nokia 2.2(無鎖)	7	B單開好	4460

Nokia	Nokia 2.3(無鎖)	4	B單開好	4461
Nokia	Nokia 2.4(無鎖)	11	B單開好	4462
Nokia	Nokia 3.4(無鎖)	1	B單開好	4463
Nokia	Nokia 5.1(無鎖)	1	B單開好	4464
Nokia	Nokia 7 Plus	1	B單開好	4465
Nokia	Nokia C02	1	B單開好	4466
Nokia	Nokia C21 Plus(無鎖)	3	B單開好	4467
Nokia	Nokia G21	1	B單開好	4468
Nokia	Nokia G50(無鎖)	1	B單開好	4469
Other	Blaupunkt OT16	22	B單開好	4470
Other	Doro 5516	2	B單開好	4471
Other	Doro 6520	1	B單開好	4472
Other	Doro PE810	1	B單開好	4473
Other	Google G013C	2	B單開好	4474
Other	Google G020F	1	B單開好	4475
Other	Google G1AZG	1	B單開好	4476
Other	Google GB7N6	1	B單開好	4477
Other	Google GVV6C	1	B單開好	4478
Other	One Plus	5	B單開好	4479
Other	One Plus 2	5	B單開好	4480
Other	One Plus 5T	1	B單開好	4481
Other	One Plus 6	4	B單開好	4482
Other	One Plus 6T	1	B單開好	4483
Other	One Plus 7	1	B單開好	4484
Other	One Plus 7 Pro	1	B單開好	4485
Other	One Plus 7T Pro	1	B單開好	4486
Other	One Plus 8 Pro 5G	1	B單開好	4487
Other	One Plus Nord 5G	1	B單開好	4488
Other	One Plus Nord N10 5G	1	B單開好	4489
Other	One Plus X	4	B單開好	4490
Other	Oppo A54S	1	B單開好	4491
Other	Oppo A73 5G	1	B單開好	4492
Other	Oppo A77	1	B單開好	4493
Other	Oppo Find X2 Pro 5G	1	B單開好	4494
Other	Oppo Find X5 Lite 5G	2	B單開好	4495
Other	Oppo Reno 4 Pro 5G	1	B單開好	4496
Other	OWN F1014	2	B單開好	4497
Other	OWN F1016	3	B單開好	4498
Other	OWN F1026	28	B單開好	4499
Other	OWN F1035	1	B單開好	4500
Other	Razer RZ35-0215	2	B單開好	4501
Other	TCL 20 R 5G	1	B單開好	4502
Other	TCL 20 SE	3	B單開好	4503
Other	TCL 20S	1	B單開好	4504
Other	TCL 40 SE	1	B單開好	4505
Other	TCL 40R 5G	1	B單開好	4506
Other	ViVo Y52 5G	1	B單開好	4507
Other	XiaoMi Mi 10T Pro 5G	1	B單開好	4508
Other	XiaoMi Mi 11T Pro 5G	1	B單開好	4509
Other	XiaoMi Mi 9 SE	1	B單開好	4510
Other	XiaoMi Mi Mix 2	1	B單開好	4511
Other	XiaoMi Mi Note 10 Pro	1	B單開好	4512
Other	XiaoMi Redmi 10A	1	B單開好	4513
Other	XiaoMi Redmi 9A	2	B單開好	4514
Other	XiaoMi Redmi Note 11	1	B單開好	4515
Other	XiaoMi Redmi Note 11 Pro 5G	1	B單開好	4516
Other	XiaoMi Redmi Note 7	1	B單開好	4517
Other	XiaoMi Redmi Note 8	1	B單開好	4518
Other	XiaoMi Redmi Note 9	1	B單開好	4519
Other	XiaoMi RedMi Note 9 Pro	1	B單開好	4520
PC	Acer A114-31	1	B單開好	4521
ZTE	ZTE Blade V40 Smart	20	B單開好	4522
ZTE	ZTE Blade V40 Vita	9	B單開好	4523
PC	Acer 532H-2DS	1	14C	4524
PC	Acer 5732Z	1	14C	4525
PC	Acer A514-52	1	14C	4526
PC	Acer CB314	1	14C	4527
PC	Acer CB514-1H	1	14C	4528
PC	Acer CP513-1HL	1	14C	4529
PC	Acer R752TN	1	14C	4530
PC	Acer SF114-32	1	14C	4531

PC	Acer SWIFT 1 N5100	1	14C	4532
PC	Acer V3-571	1	14C	4533
PC	Apple Ibook G3	1	14C	4534
PC	Apple Macbook Air 13 2011	1	14C	4535
PC	Apple Macbook Air 13 2015	2	14C	4536
PC	Apple Macbook Air 13 2017	1	14C	4537
PC	Apple MacBook Pro 13 2008	1	14C	4538
PC	Apple MacBook Pro 13 2009	1	14C	4539
PC	Apple MacBook Pro 13 2010	1	14C	4540
PC	Apple MacBook Pro 13 2015	1	14C	4541
PC	Apple MacBook Pro 13 2017	2	14C	4542
PC	Apple MacBook Pro 15 2017	1	14C	4543
PC	Apple MacBook Pro Retina 13 2012	1	14C	4544
PC	Apple MacBook Pro Retina 13 2015	2	14C	4545
PC	Apple MacBook Pro Retina 15 2012	1	14C	4546
PC	Asus A411U	1	14C	4547
PC	Asus C434T	1	14C	4548
PC	Asus CX5400FM	1	14C	4549
PC	Asus M413I	1	14C	4550
PC	Asus M509D	1	14C	4551
PC	Asus TP412F	1	14C	4552
PC	Asus UX303L	1	14C	4553
PC	FUJITSU A530	1	14C	4554
PC	HP 11-AK0502SA	1	14C	4555
PC	HP 14DV598SA	1	14C	4556
PC	HP Mini 110	1	14C	4557
PC	HP Probook 440 G3	1	14C	4558
PC	Lenovo 310-10ICR	1	14C	4559
PC	Lenovo T530	1	14C	4560
PC	Samsung N150	1	14C	4561
PC	Samsung NP345XNA	1	14C	4562
PC	Samsung W700	2	14C	4563
PC	Samsung W720	2	14C	4564
PC	Samsung W727	1	14C	4565
PC	Samsung XE315XDA	3	14C	4566
PC	Samsung XE345XDA	60	14C	4567
PC	Samsung XE345XNA	1	14C	4568
PC	Samsung XE525QEA	5	14C	4569
PC	Toshiba U500	1	14C	4570
Ericsson	E5303	3	B單開壞	4571
Ericsson	E5333	1	B單開壞	4572
Ericsson	E5506	1	B單開壞	4573
Ericsson	E5533	31	B單開壞	4574
Ericsson	E5603	7	B單開壞	4575
Ericsson	E5633	4	B單開壞	4576
Ericsson	E5653	2	B單開壞	4577
Ericsson	E5823	12	B單開壞	4578
Ericsson	E6533	1	B單開壞	4579
Ericsson	E6633	3	B單開壞	4580
Ericsson	E6653	1	B單開壞	4581
Ericsson	E6683	1	B單開壞	4582
Ericsson	E6853	10	B單開壞	4583
Ericsson	F3111	77	B單開壞	4584
Ericsson	F3112	4	B單開壞	4585
Ericsson	F3113	1	B單開壞	4586
Ericsson	F3115	6	B單開壞	4587
Ericsson	F3211	6	B單開壞	4588
Ericsson	F3212	2	B單開壞	4589
Ericsson	F3213	2	B單開壞	4590
Ericsson	F3311	17	B單開壞	4591
Ericsson	F5121	18	B單開壞	4592
Ericsson	F5122	1	B單開壞	4593
Ericsson	F5321	1	B單開壞	4594
Ericsson	F8131	3	B單開壞	4595
Ericsson	F8331	34	B單開壞	4596
Ericsson	F8341	1	B單開壞	4597
Ericsson	G3121	11	B單開壞	4598
Ericsson	G3221	8	B單開壞	4599
Ericsson	G3311	66	B單開壞	4600
Ericsson	G3312	3	B單開壞	4601
Ericsson	G3313	1	B單開壞	4602

Ericsson	G8341	8	B單開壞	4603
Ericsson	H3113	1	B單開壞	4604
Ericsson	H3223	1	B單開壞	4605
Ericsson	H3311	1	B單開壞	4606
Ericsson	I3113	1	B單開壞	4607
Ericsson	I3312	6	B單開壞	4608
Ericsson	I4113	1	B單開壞	4609
Ericsson	I4312	1	B單開壞	4610
Ericsson	XQ-AD51	2	B單開壞	4611
Ericsson	XQ-AS52	1	B單開壞	4612
Huawei	Huawei ALP-L09	1	B單開壞	4613
Huawei	Huawei BLA-L29	1	B單開壞	4614
Huawei	Huawei COL-L29	1	B單開壞	4615
Huawei	Huawei COR-L29	3	B單開壞	4616
Huawei	Huawei HMA-L09	2	B單開壞	4617
Huawei	Huawei HMA-L29	1	B單開壞	4618
Huawei	Huawei Honor 50	1	B單開壞	4619
Huawei	Huawei Honor 90	1	B單開壞	4620
Huawei	Huawei LYA-L09	7	B單開壞	4621
Huawei	Huawei P10	37	B單開壞	4622
Huawei	Huawei P10 Lite	306	B單開壞	4623
Huawei	Huawei P20	52	B單開壞	4624
Huawei	Huawei P20 Lite	261	B單開壞	4625
Huawei	Huawei P20 Pro	2	B單開壞	4626
Huawei	Huawei P30	5	B單開壞	4627
Huawei	Huawei P30 Lite	4	B單開壞	4628
Huawei	Huawei P30 Pro	2	B單開壞	4629
Huawei	Huawei P8 Lite	1	B單開壞	4630
Huawei	Huawei SNE-LX1	3	B單開壞	4631
Huawei	Huawei YAL-L21	6	B單開壞	4632
LG	K200QM	1	B單開壞	4633
LG	M320	1	B單開壞	4634
LG	M470	1	B單開壞	4635
LG	Q710	8	B單開壞	4636
LG	X210	2	B單開壞	4637
LG	X320	3	B單開壞	4638
LG	X510	9	B單開壞	4639
Motorola	XT2000	84	B單開壞	4640
Motorola	XT2010	14	B單開壞	4641
Motorola	XT2013	5	B單開壞	4642
Motorola	XT2015	7	B單開壞	4643
Motorola	XT2016	1	B單開壞	4644
Motorola	XT2019	2	B單開壞	4645
Motorola	XT2025	37	B單開壞	4646
Motorola	XT2027	7	B單開壞	4647
Motorola	XT2029	16	B單開壞	4648
Motorola	XT2041	22	B單開壞	4649
Motorola	XT2045	10	B單開壞	4650
Motorola	XT2053	70	B單開壞	4651
Motorola	XT2055	7	B單開壞	4652
Motorola	XT2063	1	B單開壞	4653
Motorola	XT2067	1	B單開壞	4654
Motorola	XT2081	2	B單開壞	4655
Motorola	XT2083	10	B單開壞	4656
Motorola	XT2091	1	B單開壞	4657
Motorola	XT2095	1	B單開壞	4658
Motorola	XT2097	19	B單開壞	4659
Motorola	XT2117	1	B單開壞	4660
Motorola	XT2127	7	B單開壞	4661
Motorola	XT2128	1	B單開壞	4662
Motorola	XT2129	1	B單開壞	4663
Motorola	XT2131	2	B單開壞	4664
Motorola	XT2149	1	B單開壞	4665
Motorola	XT2155	24	B單開壞	4666
Motorola	XT2159	14	B單開壞	4667
Motorola	XT2163	4	B單開壞	4668
Motorola	XT2165	2	B單開壞	4669
Motorola	XT2167	12	B單開壞	4670
Motorola	XT2173	1	B單開壞	4671
Motorola	XT2203	1	B單開壞	4672
Motorola	XT2213	7	B單開壞	4673

Motorola	XT2223	2	B單開壞	4674
Motorola	XT2227	5	B單開壞	4675
Motorola	XT2231	3	B單開壞	4676
Motorola	XT2235	1	B單開壞	4677
Motorola	XT2237	1	B單開壞	4678
Motorola	XT2239	46	B單開壞	4679
Motorola	XT2245	10	B單開壞	4680
Motorola	XT2293	22	B單開壞	4681
Motorola	XT2313	1	B單開壞	4682
Motorola	XT2333	9	B單開壞	4683
Motorola	XT2335	1	B單開壞	4684
Motorola	XT2341	2	B單開壞	4685
Motorola	XT2345	14	B單開壞	4686
Motorola	XT2413	3	B單開壞	4687
Nokia	Nokia 1	1	B單開壞	4688
Nokia	Nokia 2.1	1	B單開壞	4689
Nokia	Nokia 2.2	1	B單開壞	4690
Nokia	Nokia 3	26	B單開壞	4691
Nokia	Nokia 3.1	6	B單開壞	4692
Nokia	Nokia 3.1 Plus	2	B單開壞	4693
Nokia	Nokia 3.1(2018)	3	B單開壞	4694
Nokia	Nokia 3.2	2	B單開壞	4695
Nokia	Nokia 3.4	2	B單開壞	4696
Nokia	Nokia 4.2	13	B單開壞	4697
Nokia	Nokia 5	10	B單開壞	4698
Nokia	Nokia 5.1	8	B單開壞	4699
Nokia	Nokia 5.1 Plus	1	B單開壞	4700
Nokia	Nokia 6	9	B單開壞	4701
Nokia	Nokia 6.1	10	B單開壞	4702
Nokia	Nokia 7 Plus	4	B單開壞	4703
Nokia	Nokia C1 Plus	1	B單開壞	4704
Nokia	Nokia C2	1	B單開壞	4705
Nokia	Nokia C21	2	B單開壞	4706
Nokia	Nokia C21 Plus	1	B單開壞	4707
Nokia	Nokia G10	2	B單開壞	4708
Nokia	Nokia G20	1	B單開壞	4709
Nokia	Nokia G21	1	B單開壞	4710
Nokia	Nokia G22	1	B單開壞	4711
Nokia	Nokia T20	1	B單開壞	4712
Other	Google G011A	3	B單開壞	4713
Other	Google G011C	1	B單開壞	4714
Other	Google G013A	8	B單開壞	4715
Other	Google G020M	4	B單開壞	4716
Other	Google G020P	3	B單開壞	4717
Other	Google G025I	1	B單開壞	4718
Other	Google G025J	2	B單開壞	4719
Other	Google G025N	6	B單開壞	4720
Other	Google G1AZG	3	B單開壞	4721
Other	Google G9FPL	1	B單開壞	4722
Other	Google GB7N6	2	B單開壞	4723
Other	Google GHL1X	1	B單開壞	4724
Other	Google GLU0G	4	B單開壞	4725
Other	Google GP4BC	1	B單開壞	4726
Other	Google GTT9Q	5	B單開壞	4727
Other	Google GVV6C	1	B單開壞	4728
Other	Lenovo TB300XU	1	B單開壞	4729
Other	Lenovo TB-8505	1	B單開壞	4730
Other	Lenovo TB-X306X	1	B單開壞	4731
Other	Lenovo TB-X606F	1	B單開壞	4732
Other	Lenovo TB-X606X	2	B單開壞	4733
Other	One Plus	12	B單開壞	4734
Other	One Plus 2	3	B單開壞	4735
Other	One Plus 5	5	B單開壞	4736
Other	One Plus 5T	4	B單開壞	4737
Other	One Plus 6	3	B單開壞	4738
Other	One Plus 6T	3	B單開壞	4739
Other	One Plus 7 Pro	2	B單開壞	4740
Other	One Plus 7T	1	B單開壞	4741
Other	One Plus 7T Pro	2	B單開壞	4742
Other	One Plus 8 5G	1	B單開壞	4743
Other	One Plus 8 Pro 5G	4	B單開壞	4744

Other	One Plus Nord	2	B單開壞	4745
Other	One Plus Nord 2 5G	1	B單開壞	4746
Other	One Plus Nord 2T 5G	2	B單開壞	4747
Other	One Plus Nord 5G	3	B單開壞	4748
Other	One Plus Nord CE 2 5G	2	B單開壞	4749
Other	One Plus Nord CE 2 Lite 5G	5	B單開壞	4750
Other	One Plus Nord CE 5G	1	B單開壞	4751
Other	One Plus X	7	B單開壞	4752
Other	Oppo A17	6	B單開壞	4753
Other	Oppo A38	3	B單開壞	4754
Other	Oppo A54 5G	1	B單開壞	4755
Other	Oppo A54S	1	B單開壞	4756
Other	Oppo A58	1	B單開壞	4757
Other	Oppo A72	1	B單開壞	4758
Other	Oppo A73 5G	1	B單開壞	4759
Other	Oppo A74 5G	2	B單開壞	4760
Other	Oppo A76	1	B單開壞	4761
Other	Oppo A77	3	B單開壞	4762
Other	Oppo A78 5G	2	B單開壞	4763
Other	Oppo A9(2020)	4	B單開壞	4764
Other	Oppo A94 5G	6	B單開壞	4765
Other	Oppo A96	1	B單開壞	4766
Other	Oppo Find N2 Flip	3	B單開壞	4767
Other	Oppo Find X	3	B單開壞	4768
Other	Oppo Find X2 5G	1	B單開壞	4769
Other	Oppo Find X2 Pro 5G	1	B單開壞	4770
Other	Oppo Find X3 Lite 5G	2	B單開壞	4771
Other	Oppo Find X5 Pro 5G	2	B單開壞	4772
Other	Oppo Reno	6	B單開壞	4773
Other	Oppo Reno 2 Z	1	B單開壞	4774
Other	Oppo Reno 4 Z 5G	2	B單開壞	4775
Other	Oppo Reno 5 Z	2	B單開壞	4776
Other	Oppo Reno 5G	1	B單開壞	4777
Other	Oppo Reno 6 5G	2	B單開壞	4778
Other	Oppo Reno 8 Lite 5G	3	B單開壞	4779
Other	Razer PhOne 2	1	B單開壞	4780
Other	Razer RZ35-0215	7	B單開壞	4781
Other	TCL 10 SE	1	B單開壞	4782
Other	TCL 10L	2	B單開壞	4783
Other	TCL 20 SE	1	B單開壞	4784
Other	TCL 20S	3	B單開壞	4785
Other	TCL 20Y	1	B單開壞	4786
Other	TCL 30 SE	20	B單開壞	4787
Other	TCL 40 SE	6	B單開壞	4788
Other	TCL 40R 5G	5	B單開壞	4789
Other	ViVo Y16	1	B單開壞	4790
Other	ViVo Y33S	4	B單開壞	4791
Other	ViVo Y52 5G	1	B單開壞	4792
Other	ViVo Y55 5G	1	B單開壞	4793
Other	Windows Surface 1516	4	B單開壞	4794
Other	Windows Surface 1645	1	B單開壞	4795
Other	XiaoMi Mi 10T Lite 5G	2	B單開壞	4796
Other	XiaoMi Mi 11 Lite 5G NE	1	B單開壞	4797
Other	XiaoMi Mi 11T 5G	1	B單開壞	4798
Other	XiaoMi Mi 12T	1	B單開壞	4799
Other	XiaoMi Mi 13 Pro 5G	1	B單開壞	4800
Other	Xiaomi Mi 14	1	B單開壞	4801
Other	XiaoMi Mi 8 Lite	3	B單開壞	4802
Other	XiaoMi Mi 9 Lite	2	B單開壞	4803
Other	XiaoMi Mi 9 SE	1	B單開壞	4804
Other	XiaoMi Mi 9T	1	B單開壞	4805
Other	XiaoMi Mi 9T Pro	1	B單開壞	4806
Other	XiaoMi Mi Note 10 Lite	1	B單開壞	4807
Other	XiaoMi Poco F3 5G	1	B單開壞	4808
Other	XiaoMi Poco M4 Pro	1	B單開壞	4809
Other	XiaoMi Poco X3 Pro	5	B單開壞	4810
Other	XiaoMi Redmi 10	1	B單開壞	4811
Other	XiaoMi Redmi 10 5G	1	B單開壞	4812
Other	XiaoMi Redmi 10C	1	B單開壞	4813
Other	XiaoMi Redmi 12	2	B單開壞	4814
Other	XiaoMi Redmi 12C	8	B單開壞	4815

Other	XiaoMi Redmi 13C	3	B單開壞	4816
Other	XiaoMi Redmi 8	1	B單開壞	4817
Other	XiaoMi RedMi 9	9	B單開壞	4818
Other	XiaoMi Redmi 9A	13	B單開壞	4819
Other	XiaoMi Redmi 9C	3	B單開壞	4820
Other	Xiaomi Redmi 9S	1	B單開壞	4821
Other	XiaoMi Redmi 9T	7	B單開壞	4822
Other	XiaoMi Redmi Note 10 5G	30	B單開壞	4823
Other	XiaoMi Redmi Note 10 Pro	4	B單開壞	4824
Other	XiaoMi Redmi Note 11	17	B單開壞	4825
Other	XiaoMi Redmi Note 11 Pro 5G	4	B單開壞	4826
Other	XiaoMi Redmi Note 12 5G	5	B單開壞	4827
Other	XiaoMi Redmi Note 12 Pro	1	B單開壞	4828
Other	XiaoMi Redmi Note 12 Pro+ 5G	1	B單開壞	4829
Other	XiaoMi Redmi Note 13	1	B單開壞	4830
Other	XiaoMi Redmi Note 13 Pro+ 5G	1	B單開壞	4831
Other	XiaoMi Redmi Note 8 Pro	13	B單開壞	4832
Other	XiaoMi Redmi Note 8T	11	B單開壞	4833
Other	XiaoMi Redmi Note 9	13	B單開壞	4834
Other	XiaoMi RedMi Note 9 Pro	5	B單開壞	4835
Other	XiaoMi Redmi Note 9S	1	B單開壞	4836
ZTE	ZTE AXON 50 Lite	1	B單開壞	4837
ZTE	ZTE Blade V10 Vita	5	B單開壞	4838
ZTE	ZTE Blade V2020 Smart	1	B單開壞	4839
ZTE	ZTE Blade V2020 Vita	1	B單開壞	4840
ZTE	ZTE Blade V30 Vita	2	B單開壞	4841
ZTE	ZTE Blade V40	2	B單開壞	4842
ZTE	ZTE Blade V40 Design	5	B單開壞	4843
ZTE	ZTE Blade V40 Pro	1	B單開壞	4844
ZTE	ZTE Blade V40 Smart	18	B單開壞	4845
ZTE	ZTE Blade V40 Vita	39	B單開壞	4846
Asus	Asus Rog Phone II	1	B單不開	4847
Ericsson	E5533	5	B單不開	4848
Ericsson	E5603	1	B單不開	4849
Ericsson	E5606	1	B單不開	4850
Ericsson	E5633	1	B單不開	4851
Ericsson	E5823	5	B單不開	4852
Ericsson	E6553	1	B單不開	4853
Ericsson	E6633	3	B單不開	4854
Ericsson	E6653	4	B單不開	4855
Ericsson	E6853	5	B單不開	4856
Ericsson	F3111	4	B單不開	4857
Ericsson	F3112	2	B單不開	4858
Ericsson	F3115	1	B單不開	4859
Ericsson	F3211	2	B單不開	4860
Ericsson	F3311	1	B單不開	4861
Ericsson	F5121	4	B單不開	4862
Ericsson	F8331	12	B單不開	4863
Ericsson	G3121	5	B單不開	4864
Ericsson	G3125	2	B單不開	4865
Ericsson	G3221	2	B單不開	4866
Ericsson	G3311	7	B單不開	4867
Ericsson	G3313	1	B單不開	4868
Ericsson	G8141	8	B單不開	4869
Ericsson	G8341	3	B單不開	4870
Ericsson	H3213	1	B單不開	4871
Ericsson	H8216	3	B單不開	4872
Ericsson	H8314	2	B單不開	4873
Ericsson	H8416	1	B單不開	4874
Ericsson	I3312	1	B單不開	4875
Ericsson	I4332	1	B單不開	4876
Huawei	Huawei ALP-L09	1	B單不開	4877
Huawei	Huawei ALP-L29	1	B單不開	4878
Huawei	Huawei BLA-L09	1	B單不開	4879
Huawei	Huawei FRL-L23	1	B單不開	4880
Huawei	Huawei LYA-L09	2	B單不開	4881
Huawei	Huawei P10	1	B單不開	4882
Huawei	Huawei P10 Plus	1	B單不開	4883
Huawei	Huawei P20	1	B單不開	4884
Huawei	Huawei P20 Lite	1	B單不開	4885
Huawei	Huawei P30	1	B單不開	4886

Huawei	Huawei P30 Lite	1	B單不開	4887
Huawei	Huawei P7	1	B單不開	4888
Huawei	Huawei SNE-LX1	1	B單不開	4889
LG	LMK520	1	B單不開	4890
LG	Q710	1	B單不開	4891
Motorola	XT2010	3	B單不開	4892
Motorola	XT2015	5	B單不開	4893
Motorola	XT2016	2	B單不開	4894
Motorola	XT2025	34	B單不開	4895
Motorola	XT2027	6	B單不開	4896
Motorola	XT2029	5	B單不開	4897
Motorola	XT2041	2	B單不開	4898
Motorola	XT2053	4	B單不開	4899
Motorola	XT2055	5	B單不開	4900
Motorola	XT2091	1	B單不開	4901
Motorola	XT2095	1	B單不開	4902
Motorola	XT2097	2	B單不開	4903
Motorola	XT2127	1	B單不開	4904
Motorola	XT2128	2	B單不開	4905
Motorola	XT2135	3	B單不開	4906
Motorola	XT2159	3	B單不開	4907
Motorola	XT2231	3	B單不開	4908
Motorola	XT2239	3	B單不開	4909
Nokia	Nokia 2.2	1	B單不開	4910
Nokia	Nokia 3	7	B單不開	4911
Nokia	Nokia 3.1	2	B單不開	4912
Nokia	Nokia 3.1 Plus	2	B單不開	4913
Nokia	Nokia 3.1(2018)	1	B單不開	4914
Nokia	Nokia 3.2	1	B單不開	4915
Nokia	Nokia 4.2	2	B單不開	4916
Nokia	Nokia 5	6	B單不開	4917
Nokia	Nokia 5.1	10	B單不開	4918
Nokia	Nokia 5.1 Plus	10	B單不開	4919
Nokia	Nokia 5.4	1	B單不開	4920
Nokia	Nokia 6	10	B單不開	4921
Nokia	Nokia 6.1	8	B單不開	4922
Nokia	Nokia 6.1 Plus	1	B單不開	4923
Nokia	Nokia 7 Plus	4	B單不開	4924
Nokia	Nokia 7.1	9	B單不開	4925
Nokia	Nokia 8	1	B單不開	4926
Nokia	Nokia 8.1	2	B單不開	4927
Nokia	Nokia C2	1	B單不開	4928
Nokia	Nokia G10	1	B單不開	4929
Other	Google G011A	1	B單不開	4930
Other	Google G011C	1	B單不開	4931
Other	Google G013A	1	B單不開	4932
Other	Google G020F	4	B單不開	4933
Other	Google G020M	1	B單不開	4934
Other	Google G025I	2	B單不開	4935
Other	Google GB7N6	1	B單不開	4936
Other	Google GHL1X	1	B單不開	4937
Other	Google GTT9Q	3	B單不開	4938
Other	One Plus	1	B單不開	4939
Other	One Plus 3	3	B單不開	4940
Other	One Plus 5T	2	B單不開	4941
Other	One Plus 6	2	B單不開	4942
Other	Oppo A76	1	B單不開	4943
Other	Oppo A78 5G	1	B單不開	4944
Other	Razer PhOne 2	1	B單不開	4945
Other	Razer RZ35-0215	6	B單不開	4946
Other	Redmagic 8S Pro	1	B單不開	4947
Other	TCL 10 SE	1	B單不開	4948
Other	TCL 10L	1	B單不開	4949
Other	TCL 30 SE	1	B單不開	4950
Other	TCL 40 SE	2	B單不開	4951
Other	ViVo Y21S	1	B單不開	4952
Other	XiaoMi Mi 10T Lite 5G	1	B單不開	4953
Other	XiaoMi Mi 10T Pro 5G	3	B單不開	4954
Other	XiaoMi Mi 11 Lite	1	B單不開	4955
Other	XiaoMi Mi 11 Lite 5G	2	B單不開	4956
Other	XiaoMi Mi 11 Lite 5G NE	1	B單不開	4957

Other	XiaoMi Mi 12T Pro	1	B單不開	4958
Other	XiaoMi Mi 9 Lite	1	B單不開	4959
Other	XiaoMi Mi 9T	1	B單不開	4960
Other	XiaoMi Mi Note 10 Lite	1	B單不開	4961
Other	XiaoMi Poco X3 Pro	1	B單不開	4962
Other	XiaoMi Redmi 10A	1	B單不開	4963
Other	XiaoMi Redmi 10C	1	B單不開	4964
Other	XiaoMi Redmi 12	1	B單不開	4965
Other	XiaoMi Redmi 12C	2	B單不開	4966
Other	XiaoMi Redmi 9	6	B單不開	4967
Other	XiaoMi Redmi 9A	7	B單不開	4968
Other	XiaoMi Redmi 9C	6	B單不開	4969
Other	XiaoMi Redmi 9T	2	B單不開	4970
Other	XiaoMi Redmi Note 10 5G	7	B單不開	4971
Other	XiaoMi Redmi Note 10 Pro	3	B單不開	4972
Other	XiaoMi Redmi Note 10s	9	B單不開	4973
Other	XiaoMi Redmi Note 11	3	B單不開	4974
Other	XiaoMi Redmi Note 11 Pro 5G	1	B單不開	4975
Other	XiaoMi Redmi Note 12	2	B單不開	4976
Other	XiaoMi Redmi Note 12 5G	1	B單不開	4977
Other	XiaoMi Redmi Note 12 Pro	1	B單不開	4978
Other	XiaoMi Redmi Note 8 Pro	5	B單不開	4979
Other	XiaoMi Redmi Note 8T	5	B單不開	4980
Other	XiaoMi Redmi Note 9	5	B單不開	4981
ZTE	ZTE AXON 50 Lite	1	B單不開	4982
ZTE	ZTE Blade V30 Vita	1	B單不開	4983
ZTE	ZTE Blade V40 Smart	2	B單不開	4984
ZTE	ZTE Blade V40 Vita	1	B單不開	4985
Acer	Acer A3-A20	1	B單	4986
Acer	Acer A60	3	B單	4987
Acer	Acer A8003	1	B單	4988
Acer	Acer ACTAB1021	1	B單	4989
Acer	Acer ACTAB1022	3	B單	4990
Acer	Acer ACTAB1024	2	B單	4991
Acer	Acer ACTAB10KB24	2	B單	4992
Acer	Acer ACTAB1123	1	B單	4993
Acer	Acer ACTAB1422	3	B單	4994
Acer	Acer ACTAB721	1	B單	4995
Acer	Acer B1-850	3	B單	4996
Acer	Acer B3-A20	3	B單	4997
Acer	Acer B3-A30	5	B單	4998
Acer	Acer B3-A40	1	B單	4999
Acer	Acer E380	1	B單	5000
Acer	Acer N18Q1	1	B單	5001
Acer	Acer Sospiro AX64	1	B單	5002
Acer	Acer T06	1	B單	5003
Acer	Acer W510	1	B單	5004
Acer	Acer Z520	1	B單	5005
Alcatel	OT1013	3	B單	5006
Alcatel	OT1016	2	B單	5007
Alcatel	OT1052	1	B單	5008
Alcatel	OT1054	5	B單	5009
Alcatel	OT1066	21	B單	5010
Alcatel	OT1067	1	B單	5011
Alcatel	OT1068	17	B單	5012
Alcatel	OT2000	6	B單	5013
Alcatel	OT2001	1	B單	5014
Alcatel	OT2003	6	B單	5015
Alcatel	OT2004	157	B單	5016
Alcatel	OT2007	3	B單	5017
Alcatel	OT2012	1	B單	5018
Alcatel	OT2020	5	B單	5019
Alcatel	OT2036	6	B單	5020
Alcatel	OT2038	1	B單	5021
Alcatel	OT2045	4	B單	5022
Alcatel	OT2051	470	B單	5023
Alcatel	OT2052	28	B單	5024
Alcatel	OT2053	10	B單	5025
Alcatel	OT2057	5	B單	5026
Alcatel	OT2067	7	B單	5027
Alcatel	OT3025	1	B單	5028

Alcatel	OT3026	1	B單	5029
Alcatel	OT3080	1	B單	5030
Alcatel	OT3082	119	B單	5031
Alcatel	OT4003	165	B單	5032
Alcatel	OT4009	8	B單	5033
Alcatel	OT4010	12	B單	5034
Alcatel	OT4013	117	B單	5035
Alcatel	OT4015	2	B單	5036
Alcatel	OT4018	48	B單	5037
Alcatel	OT4022	1	B單	5038
Alcatel	OT4024	37	B單	5039
Alcatel	OT4027	31	B單	5040
Alcatel	OT4030	50	B單	5041
Alcatel	OT4031	1	B單	5042
Alcatel	OT4032	1	B單	5043
Alcatel	OT4033	41	B單	5044
Alcatel	OT4034	165	B單	5045
Alcatel	OT4035	7	B單	5046
Alcatel	OT4037	7	B單	5047
Alcatel	OT4044	10	B單	5048
Alcatel	OT4047	14	B單	5049
Alcatel	OT4052	55	B單	5050
Alcatel	OT4055	2	B單	5051
Alcatel	OT4056	3	B單	5052
Alcatel	OT4060	6	B單	5053
Alcatel	OT4087	3	B單	5054
Alcatel	OT5001	5	B單	5055
Alcatel	OT5002	55	B單	5056
Alcatel	OT5003	43	B單	5057
Alcatel	OT5006	1	B單	5058
Alcatel	OT5007	2	B單	5059
Alcatel	OT5008	14	B單	5060
Alcatel	OT5009	8	B單	5061
Alcatel	OT5010	37	B單	5062
Alcatel	OT5015	10	B單	5063
Alcatel	OT5017	20	B單	5064
Alcatel	OT5020	39	B單	5065
Alcatel	OT5022	10	B單	5066
Alcatel	OT5024	2	B單	5067
Alcatel	OT5025	1	B單	5068
Alcatel	OT5026	3	B單	5069
Alcatel	OT5030	22	B單	5070
Alcatel	OT5031	31	B單	5071
Alcatel	OT5033	770	B單	5072
Alcatel	OT5036	24	B單	5073
Alcatel	OT5037	1	B單	5074
Alcatel	OT5038	1	B單	5075
Alcatel	OT5039	7	B單	5076
Alcatel	OT5041	1	B單	5077
Alcatel	OT5042	27	B單	5078
Alcatel	OT5044	26	B單	5079
Alcatel	OT5045	39	B單	5080
Alcatel	OT5046	7	B單	5081
Alcatel	OT5047	6	B單	5082
Alcatel	OT5048	2	B單	5083
Alcatel	OT5049	1	B單	5084
Alcatel	OT5050	4	B單	5085
Alcatel	OT5051	29	B單	5086
Alcatel	OT5052	2	B單	5087
Alcatel	OT5053	1	B單	5088
Alcatel	OT5054	2	B單	5089
Alcatel	OT5056	15	B單	5090
Alcatel	OT5059	55	B單	5091
Alcatel	OT5060	1	B單	5092
Alcatel	OT5065	1	B單	5093
Alcatel	OT5095	1	B單	5094
Alcatel	OT6010	5	B單	5095
Alcatel	OT6012	4	B單	5096
Alcatel	OT6016	2	B單	5097
Alcatel	OT6025	1	B單	5098
Alcatel	OT6030	7	B單	5099

Alcatel	OT6036	13	B單	5100
Alcatel	OT6039	6	B單	5101
Alcatel	OT6044	1	B單	5102
Alcatel	OT6050	3	B單	5103
Alcatel	OT6055	3	B單	5104
Alcatel	OT606	1	B單	5105
Alcatel	OT6233	2	B單	5106
Alcatel	OT7040	6	B單	5107
Alcatel	OT7041	5	B單	5108
Alcatel	OT7047	5	B單	5109
Alcatel	OT7048	7	B單	5110
Alcatel	OT8000	2	B單	5111
Alcatel	OT8050	7	B單	5112
Alcatel	OT8055	1	B單	5113
Alcatel	OT8063	3	B單	5114
Alcatel	OT8068	1	B單	5115
Alcatel	OT8079	1	B單	5116
Alcatel	OT8092	1	B單	5117
Alcatel	OT815	11	B單	5118
Alcatel	OT9001	14	B單	5119
Alcatel	OT9007	1	B單	5120
Alcatel	OT9008	7	B單	5121
Alcatel	OT9010	1	B單	5122
Alcatel	OT9022	3	B單	5123
Alcatel	OT9026	2	B單	5124
Alcatel	OT9027	9	B單	5125
Alcatel	OT903	25	B單	5126
Alcatel	OT9032	7	B單	5127
Alcatel	OT918	3	B單	5128
Alcatel	OT922	17	B單	5129
Alcatel	OT983	1	B單	5130
Alcatel	OT991	2	B單	5131
Alcatel	OT993	4	B單	5132
Alcatel	OT995	5	B單	5133
Alcatel	OT997	11	B單	5134
Alcatel	OT-A571	1	B單	5135
Alcatel	OT-P310	1	B單	5136
Alcatel	OT-P330	2	B單	5137
Asus	Asus A001	1	B單	5138
Asus	Asus A007	2	B單	5139
Asus	Asus K004	3	B單	5140
Asus	Asus K00B	2	B單	5141
Asus	Asus K00E	3	B單	5142
Asus	Asus K00F	2	B單	5143
Asus	Asus K013	1	B單	5144
Asus	Asus K017	1	B單	5145
Asus	Asus ME370T	4	B單	5146
Asus	Asus Nexus 7	17	B單	5147
Asus	Asus Nexus 7 K008	12	B單	5148
Asus	Asus P00A	5	B單	5149
Asus	Asus P00C	6	B單	5150
Asus	Asus P00I	1	B單	5151
Asus	Asus P024	1	B單	5152
Asus	Asus P028	2	B單	5153
Asus	Asus T00F	1	B單	5154
Asus	Asus T00G	1	B單	5155
Asus	Asus T00J	7	B單	5156
Asus	Asus T00P	3	B單	5157
Asus	Asus TF700	1	B單	5158
Asus	Asus X007D	1	B單	5159
Asus	Asus X00DD	3	B單	5160
Asus	Asus X018D	1	B單	5161
Asus	Asus X01AD	1	B單	5162
Asus	Asus Z002	1	B單	5163
Asus	Asus Z00AD	3	B單	5164
Asus	Asus Z00D	1	B單	5165
Asus	Asus Z00ED	3	B單	5166
Asus	Asus Z00LD	1	B單	5167
Asus	Asus Z00UD	2	B單	5168
Asus	Asus Z010D	1	B單	5169
Asus	Asus Z011D	1	B單	5170

Asus	Asus Z017D	4	B單	5171
Asus	Asus Z01BD	1	B單	5172
Blackberry	BB9000	50	B單	5173
Blackberry	BB9100	3	B單	5174
Blackberry	BB9105	13	B單	5175
Blackberry	BB9220	5	B單	5176
Blackberry	BB9300	1	B單	5177
Blackberry	BB9320	155	B單	5178
Blackberry	BB9360	91	B單	5179
Blackberry	BB9380	5	B單	5180
Blackberry	BB9520	1	B單	5181
Blackberry	BB9700	46	B單	5182
Blackberry	BB9720	66	B單	5183
Blackberry	BB9780	9	B單	5184
Blackberry	BB9790	20	B單	5185
Blackberry	BB9800	7	B單	5186
Blackberry	BB9800(倒)	27	B單	5187
Blackberry	BB9860	4	B單	5188
Blackberry	BB9900	13	B單	5189
Blackberry	BB9900(倒)	6	B單	5190
Blackberry	BB9930	1	B單	5191
Blackberry	DTEK50	17	B單	5192
Blackberry	Dtek60	1	B單	5193
Blackberry	Leap	145	B單	5194
Blackberry	Playbook (16GB)	2	B單	5195
Blackberry	Playbook (32GB)	2	B單	5196
Blackberry	Priv	1	B單	5197
Blackberry	Q20	1	B單	5198
Blackberry	Q5	1	B單	5199
Blackberry	Z10	12	B單	5200
Blackberry	Z10 4G	97	B單	5201
Blackberry	Z3	5	B單	5202
Blackberry	Z30	3	B單	5203
Blackberry	Z30 4G	9	B單	5204
Dell	DELL T02D	7	B單	5205
Ericsson	C1505	8	B單	5206
Ericsson	C1904	9	B單	5207
Ericsson	C1905	15	B單	5208
Ericsson	C2104	2	B單	5209
Ericsson	C2105	28	B單	5210
Ericsson	C2305	1	B單	5211
Ericsson	C5302	1	B單	5212
Ericsson	C5303	23	B單	5213
Ericsson	C6833	12	B單	5214
Ericsson	C6903	27	B單	5215
Ericsson	C6906	7	B單	5216
Ericsson	C702	1	B單	5217
Ericsson	D2004	31	B單	5218
Ericsson	D2005	7	B單	5219
Ericsson	D2203	7	B單	5220
Ericsson	D2303	126	B單	5221
Ericsson	D2306	35	B單	5222
Ericsson	D2403	10	B單	5223
Ericsson	D2533	4	B單	5224
Ericsson	D5103	12	B單	5225
Ericsson	D5106	2	B單	5226
Ericsson	D5303	2	B單	5227
Ericsson	D5322	1	B單	5228
Ericsson	D5503	51	B單	5229
Ericsson	D5803	56	B單	5230
Ericsson	D5833	13	B單	5231
Ericsson	D6503	30	B單	5232
Ericsson	D6603	54	B單	5233
Ericsson	D6653	9	B單	5234
Ericsson	E2003	16	B單	5235
Ericsson	E2053	27	B單	5236
Ericsson	E2104	35	B單	5237
Ericsson	E2105	12	B單	5238
Ericsson	E2115	3	B單	5239
Ericsson	E2303	81	B單	5240
Ericsson	E2306	10	B單	5241

Ericsson	E2353	22	B單	5242
Ericsson	E5353	26	B單	5243
Ericsson	E6553	1	B單	5244
Ericsson	J108	3	B單	5245
Ericsson	K800	25	B單	5246
Ericsson	K810	1	B單	5247
Ericsson	LT18i	184	B單	5248
Ericsson	LT22i	1	B單	5249
Ericsson	LT25I	2	B單	5250
Ericsson	LT26i	35	B單	5251
Ericsson	LT26W	8	B單	5252
Ericsson	LT28I	1	B單	5253
Ericsson	LT30P	6	B單	5254
Ericsson	LT36	66	B單	5255
Ericsson	MK16i	12	B單	5256
Ericsson	MT11i	30	B單	5257
Ericsson	MT15i	8	B單	5258
Ericsson	S500I	5	B單	5259
Ericsson	SGPT311	2	B單	5260
Ericsson	SGPT521	5	B單	5261
Ericsson	SGPT771	1	B單	5262
Ericsson	SK17i	21	B單	5263
Ericsson	SO-04G	3	B單	5264
Ericsson	ST15I	18	B單	5265
Ericsson	ST18i	2	B單	5266
Ericsson	ST21i	53	B單	5267
Ericsson	ST23i	3	B單	5268
Ericsson	ST25I	5	B單	5269
Ericsson	ST26I	31	B單	5270
Ericsson	ST27i	2	B單	5271
Ericsson	W200I	1	B單	5272
Ericsson	W20i	24	B單	5273
Ericsson	W350	3	B單	5274
Ericsson	W580	12	B單	5275
Ericsson	W715	1	B單	5276
Ericsson	WT19I	1	B單	5277
Ericsson	X12	15	B單	5278
Ericsson	X8	2	B單	5279
Ericsson	Z750	7	B單	5280
HTC	HTC 10	57	B單	5281
HTC	HTC 10 EVO	2	B單	5282
HTC	HTC 7 Mozart	4	B單	5283
HTC	HTC 7 Trophy	5	B單	5284
HTC	HTC 8S	49	B單	5285
HTC	HTC 8X	3	B單	5286
HTC	HTC Chacha	5	B單	5287
HTC	HTC Desire	44	B單	5288
HTC	HTC Desire 10 LifeStyle	2	B單	5289
HTC	HTC Desire 10 Pro	3	B單	5290
HTC	HTC Desire 12 Plus	1	B單	5291
HTC	HTC Desire 12+	1	B單	5292
HTC	HTC Desire 200	2	B單	5293
HTC	HTC Desire 300	12	B單	5294
HTC	HTC Desire 310	46	B單	5295
HTC	HTC Desire 320	4	B單	5296
HTC	HTC Desire 500	19	B單	5297
HTC	HTC Desire 510	51	B單	5298
HTC	HTC Desire 520	2	B單	5299
HTC	HTC Desire 526	3	B單	5300
HTC	HTC Desire 530	21	B單	5301
HTC	HTC Desire 601	2	B單	5302
HTC	HTC Desire 610	15	B單	5303
HTC	HTC Desire 620	5	B單	5304
HTC	HTC Desire 626	30	B單	5305
HTC	HTC Desire 626S	24	B單	5306
HTC	HTC Desire 628	1	B單	5307
HTC	HTC Desire 650	60	B單	5308
HTC	HTC Desire 816	5	B單	5309
HTC	HTC Desire 820	4	B單	5310
HTC	HTC Desire 825	3	B單	5311
HTC	HTC Desire 826	1	B單	5312

HTC	HTC Desire C	8	B單	5313
HTC	HTC Desire Eye	5	B單	5314
HTC	HTC Desire HD	3	B單	5315
HTC	HTC Desire S	25	B單	5316
HTC	HTC Desire X	46	B單	5317
HTC	HTC Desire Z	3	B單	5318
HTC	HTC Explorer	2	B單	5319
HTC	HTC HD II	3	B單	5320
HTC	HTC Incredible S	12	B單	5321
HTC	HTC Nexus 9	6	B單	5322
HTC	HTC One	21	B單	5323
HTC	HTC One A9	1	B單	5324
HTC	HTC One A9S	6	B單	5325
HTC	HTC One E9	1	B單	5326
HTC	HTC One M8	7	B單	5327
HTC	HTC One M8S	9	B單	5328
HTC	HTC One M9	9	B單	5329
HTC	HTC One Max	2	B單	5330
HTC	HTC One Mini	7	B單	5331
HTC	HTC One Mini II	4	B單	5332
HTC	HTC One S	5	B單	5333
HTC	HTC One SV	3	B單	5334
HTC	HTC One SV 4G	5	B單	5335
HTC	HTC One V	12	B單	5336
HTC	HTC One X	35	B單	5337
HTC	HTC One X+	3	B單	5338
HTC	HTC One X9	2	B單	5339
HTC	HTC One XL	1	B單	5340
HTC	HTC Radar	3	B單	5341
HTC	HTC Sensation	42	B單	5342
HTC	HTC Sensation Xe	4	B單	5343
HTC	HTC Sensation XL	8	B單	5344
HTC	HTC U Ultra	1	B單	5345
HTC	HTC U11	9	B單	5346
HTC	HTC U11 Life	3	B單	5347
HTC	HTC U12 LIFE	1	B單	5348
HTC	HTC Wildfire	9	B單	5349
HTC	HTC Wildfire S	56	B單	5350
Huawei	Huawei AGRK-L09	2	B單	5351
Huawei	Huawei AGRK-W09	1	B單	5352
Huawei	Huawei AGR-L09	1	B單	5353
Huawei	Huawei AGR-W09	4	B單	5354
Huawei	Huawei AGS2-L09	1	B單	5355
Huawei	Huawei AGS2-W09	5	B單	5356
Huawei	Huawei AGS-L09	4	B單	5357
Huawei	Huawei AGS-W09	6	B單	5358
Huawei	Huawei AMN-LX9	2	B單	5359
Huawei	Huawei ART-L28	1	B單	5360
Huawei	Huawei ART-L29	2	B單	5361
Huawei	Huawei ATU-AL10	1	B單	5362
Huawei	Huawei ATU-L11	35	B單	5363
Huawei	Huawei ATU-L21	60	B單	5364
Huawei	Huawei ATU-L22	22	B單	5365
Huawei	Huawei ATU-L31	96	B單	5366
Huawei	Huawei ATU-LX3	60	B單	5367
Huawei	Huawei AUM-L29	6	B單	5368
Huawei	Huawei BAC-L23	1	B單	5369
Huawei	Huawei BAH2-W19	6	B單	5370
Huawei	Huawei BAH3-W09	3	B單	5371
Huawei	Huawei BAH-W09	2	B單	5372
Huawei	Huawei BG2-U01	1	B單	5373
Huawei	Huawei BG2-W09	5	B單	5374
Huawei	Huawei BGO-DL09	1	B單	5375
Huawei	Huawei BLL-L22	2	B單	5376
Huawei	Huawei BLL-L23	10	B單	5377
Huawei	Huawei BLN-L21	4	B單	5378
Huawei	Huawei BND-L21	1	B單	5379
Huawei	Huawei BTV-W09	1	B單	5380
Huawei	Huawei CAG-L03	91	B單	5381
Huawei	Huawei Cam-L03	17	B單	5382
Huawei	Huawei CAM-L21	18	B單	5383

Huawei	Huawei CAM-L29	1	B單	5384
Huawei	Huawei CAN-L01	1	B單	5385
Huawei	Huawei CAN-L11	44	B單	5386
Huawei	Huawei CAN-L12	1	B單	5387
Huawei	Huawei CHC-U01	5	B單	5388
Huawei	Huawei CHC-U03	1	B單	5389
Huawei	Huawei CHE2-L11	3	B單	5390
Huawei	Huawei CHM-U01	2	B單	5391
Huawei	Huawei CRO-L03	1	B單	5392
Huawei	Huawei CRO-L23	1	B單	5393
Huawei	Huawei CRR-L09	5	B單	5394
Huawei	Huawei CUN-L01	3	B單	5395
Huawei	Huawei CUN-L21	1	B單	5396
Huawei	Huawei DAV-703L	1	B單	5397
Huawei	Huawei DIG-L03	2	B單	5398
Huawei	Huawei DIG-L21	1	B單	5399
Huawei	Huawei DIG-LX3	2	B單	5400
Huawei	Huawei DLI-L22	9	B單	5401
Huawei	Huawei DRA-L01	10	B單	5402
Huawei	Huawei DRA-L21	12	B單	5403
Huawei	Huawei DRA-LX1	1	B單	5404
Huawei	Huawei DRA-LX2	2	B單	5405
Huawei	Huawei DRA-LX3	40	B單	5406
Huawei	Huawei DRA-LX9	22	B單	5407
Huawei	Huawei DUA-L22	11	B單	5408
Huawei	Huawei DUB-LX3	21	B單	5409
Huawei	Huawei DUK-L09	2	B單	5410
Huawei	Huawei EDI-AL10	1	B單	5411
Huawei	Huawei FIG-LX1	15	B單	5412
Huawei	Huawei FIG-LX3	7	B單	5413
Huawei	Huawei FLA-LX3	1	B單	5414
Huawei	Huawei FRD-AL10	1	B單	5415
Huawei	Huawei FRD-L09	6	B單	5416
Huawei	Huawei G510	38	B單	5417
Huawei	Huawei G526	6	B單	5418
Huawei	Huawei G535	43	B單	5419
Huawei	Huawei G6	13	B單	5420
Huawei	Huawei G610	4	B單	5421
Huawei	Huawei G620	2	B單	5422
Huawei	Huawei G630	9	B單	5423
Huawei	Huawei G6600	2	B單	5424
Huawei	Huawei G7	4	B單	5425
Huawei	Huawei G7010	1	B單	5426
Huawei	Huawei G730	22	B單	5427
Huawei	Huawei G735	1	B單	5428
Huawei	Huawei G750	1	B單	5429
Huawei	Huawei G8	12	B單	5430
Huawei	Huawei H1512	30	B單	5431
Huawei	Huawei H30-U10	4	B單	5432
Huawei	Huawei H60-L04	1	B單	5433
Huawei	Huawei HOL-U19	1	B單	5434
Huawei	Huawei Honor 8A	1	B單	5435
Huawei	Huawei Honor 8X	3	B單	5436
Huawei	Huawei JAT-L29	1	B單	5437
Huawei	Huawei JAT-L41	2	B單	5438
Huawei	Huawei JDN2-W09	1	B單	5439
Huawei	Huawei JKM-LX3	1	B單	5440
Huawei	Huawei JMM-L22	1	B單	5441
Huawei	Huawei KII-L22	4	B單	5442
Huawei	Huawei KII-L23	4	B單	5443
Huawei	Huawei KIW-L21	7	B單	5444
Huawei	Huawei KOB-L09	7	B單	5445
Huawei	Huawei KOB-W09	1	B單	5446
Huawei	Huawei KSA-LX9	2	B單	5447
Huawei	Huawei LDN-L01	3	B單	5448
Huawei	Huawei LDN-L21	2	B單	5449
Huawei	Huawei LDN-LX3	74	B單	5450
Huawei	Huawei LLD-AL10	1	B單	5451
Huawei	Huawei LLD-L31	2	B單	5452
Huawei	Huawei LON-L29	3	B單	5453
Huawei	Huawei LUA-L01	2	B單	5454

Huawei	Huawei LUA-L03	6	B單	5455
Huawei	Huawei LUA-L21	1	B單	5456
Huawei	Huawei LYO-L01	4	B單	5457
Huawei	Huawei LYO-L21	1	B單	5458
Huawei	Huawei MED-LX9N	1	B單	5459
Huawei	Huawei MHA-L09	2	B單	5460
Huawei	Huawei MHA-L29	8	B單	5461
Huawei	Huawei MRD-LX1	7	B單	5462
Huawei	Huawei MRD-LX3	1	B單	5463
Huawei	Huawei MT2-L03	2	B單	5464
Huawei	Huawei MT7-L09	4	B單	5465
Huawei	Huawei MT7-TL10	1	B單	5466
Huawei	Huawei MYA-L02	25	B單	5467
Huawei	Huawei MYA-L11	20	B單	5468
Huawei	Huawei MYA-L41	26	B單	5469
Huawei	Huawei NEM-L21	4	B單	5470
Huawei	Huawei NEM-L51	12	B單	5471
Huawei	Huawei NMO-L22	7	B單	5472
Huawei	Huawei NXT-L29	2	B單	5473
Huawei	Huawei P2	8	B單	5474
Huawei	Huawei P6	8	B單	5475
Huawei	Huawei P7	13	B單	5476
Huawei	Huawei P8	5	B單	5477
Huawei	Huawei P8 Lite	18	B單	5478
Huawei	Huawei P8 Lite 2017	19	B單	5479
Huawei	Huawei P9	10	B單	5480
Huawei	Huawei P9 Lite	511	B單	5481
Huawei	Huawei P9 Lite Mini	131	B單	5482
Huawei	Huawei P9 Plus	3	B單	5483
Huawei	Huawei PE-TL10	1	B單	5484
Huawei	Huawei PIC-LX9	4	B單	5485
Huawei	Huawei PLK-L01	3	B單	5486
Huawei	Huawei POT-LX1	400	B單	5487
Huawei	Huawei POT-LX1A	1	B單	5488
Huawei	Huawei POT-LX3	32	B單	5489
Huawei	Huawei PPA-LX2	1	B單	5490
Huawei	Huawei RNE-L21	3	B單	5491
Huawei	Huawei S10-231	2	B單	5492
Huawei	Huawei S7-301	1	B單	5493
Huawei	Huawei S7-721	5	B單	5494
Huawei	Huawei S8-301	10	B單	5495
Huawei	Huawei SCL-L01	8	B單	5496
Huawei	Huawei SCL-L21	1	B單	5497
Huawei	Huawei SCL-U31	3	B單	5498
Huawei	Huawei STF-L09	3	B單	5499
Huawei	Huawei T1-701	2	B單	5500
Huawei	Huawei T1-821	4	B單	5501
Huawei	Huawei T1-821L	1	B單	5502
Huawei	Huawei T1-A21	2	B單	5503
Huawei	Huawei TAG-AL00	1	B單	5504
Huawei	Huawei TAG-L21	1	B單	5505
Huawei	Huawei TAG-L23	2	B單	5506
Huawei	Huawei TRT-L53	1	B單	5507
Huawei	Huawei TRT-LX1	33	B單	5508
Huawei	Huawei TRT-LX3	4	B單	5509
Huawei	Huawei TRT-TL10	1	B單	5510
Huawei	Huawei U2900	3	B單	5511
Huawei	Huawei U8150	88	B單	5512
Huawei	Huawei U8180	61	B單	5513
Huawei	Huawei U8186	12	B單	5514
Huawei	Huawei U8510	25	B單	5515
Huawei	Huawei U8650	4	B單	5516
Huawei	Huawei U8655	33	B單	5517
Huawei	Huawei U8666	21	B單	5518
Huawei	Huawei U8685	84	B單	5519
Huawei	Huawei U8800	15	B單	5520
Huawei	Huawei U8815	9	B單	5521
Huawei	Huawei U8833	137	B單	5522
Huawei	Huawei U8855	1	B單	5523
Huawei	Huawei U8950	14	B單	5524
Huawei	Huawei U9200	4	B單	5525

Huawei	Huawei U9202	13	B單	5526
Huawei	Huawei Y210	5	B單	5527
Huawei	Huawei Y221	8	B單	5528
Huawei	Huawei Y320	235	B單	5529
Huawei	Huawei Y330	49	B單	5530
Huawei	Huawei Y360	122	B單	5531
Huawei	Huawei Y520	88	B單	5532
Huawei	Huawei Y530	45	B單	5533
Huawei	Huawei Y540	1	B單	5534
Huawei	Huawei Y550	10	B單	5535
Huawei	Huawei Y560	4	B單	5536
Huawei	Huawei Y600	18	B單	5537
Huawei	Huawei Y625	27	B單	5538
Huawei	Huawei Y635	29	B單	5539
LG	C365	1	B單	5540
LG	D150	1	B單	5541
LG	D160	4	B單	5542
LG	D165	1	B單	5543
LG	D288	1	B單	5544
LG	D290	18	B單	5545
LG	D295	1	B單	5546
LG	D315	14	B單	5547
LG	D320	122	B單	5548
LG	D321	1	B單	5549
LG	D325	30	B單	5550
LG	D331	4	B單	5551
LG	D335	2	B單	5552
LG	D337	60	B單	5553
LG	D373	1	B單	5554
LG	D380	2	B單	5555
LG	D390	7	B單	5556
LG	D405	11	B單	5557
LG	D410	17	B單	5558
LG	D415	2	B單	5559
LG	D505	5	B單	5560
LG	D605	3	B單	5561
LG	D620	22	B單	5562
LG	D631	1	B單	5563
LG	D682	4	B單	5564
LG	D685	2	B單	5565
LG	D686	4	B單	5566
LG	D690	2	B單	5567
LG	D722	32	B單	5568
LG	D725	6	B單	5569
LG	D800	1	B單	5570
LG	D801	1	B單	5571
LG	D802	30	B單	5572
LG	D805	1	B單	5573
LG	D820	2	B單	5574
LG	D821	14	B單	5575
LG	D850	3	B單	5576
LG	D855	28	B單	5577
LG	D858	2	B單	5578
LG	D950	1	B單	5579
LG	D955	1	B單	5580
LG	D959	1	B單	5581
LG	E160	1	B單	5582
LG	E400	42	B單	5583
LG	E425	52	B單	5584
LG	E430	24	B單	5585
LG	E450	4	B單	5586
LG	E455	4	B單	5587
LG	E460	54	B單	5588
LG	E465	1	B單	5589
LG	E510	3	B單	5590
LG	E610	4	B單	5591
LG	E612	43	B單	5592
LG	E900	2	B單	5593
LG	E960	86	B單	5594
LG	E975	28	B單	5595
LG	E986	1	B單	5596

LG	E988	1	B單	5597
LG	F310	1	B單	5598
LG	F320	1	B單	5599
LG	F350	1	B單	5600
LG	H220	4	B單	5601
LG	H320	7	B單	5602
LG	H340	19	B單	5603
LG	H420	2	B單	5604
LG	H440	26	B單	5605
LG	H500	9	B單	5606
LG	H502	3	B單	5607
LG	H520	2	B單	5608
LG	H525	10	B單	5609
LG	H540	1	B單	5610
LG	H630	1	B單	5611
LG	H631	4	B單	5612
LG	H634	1	B單	5613
LG	H635	2	B單	5614
LG	H650	1	B單	5615
LG	H791	156	B單	5616
LG	H810	3	B單	5617
LG	H811	5	B單	5618
LG	H812	1	B單	5619
LG	H815	25	B單	5620
LG	H818	2	B單	5621
LG	H820	1	B單	5622
LG	H830	5	B單	5623
LG	H840	7	B單	5624
LG	H850	9	B單	5625
LG	H855	1	B單	5626
LG	H870	1	B單	5627
LG	H900	2	B單	5628
LG	H901	2	B單	5629
LG	H955	5	B單	5630
LG	H960	1	B單	5631
LG	K100	9	B單	5632
LG	K120	17	B單	5633
LG	K121	1	B單	5634
LG	K130	28	B單	5635
LG	K200	17	B單	5636
LG	K220	10	B單	5637
LG	K330	3	B單	5638
LG	K350	2	B單	5639
LG	K350n	23	B單	5640
LG	K420	71	B單	5641
LG	K420n	2	B單	5642
LG	K428	6	B單	5643
LG	K430	149	B單	5644
LG	K500	28	B單	5645
LG	K500N	3	B單	5646
LG	K520	7	B單	5647
LG	K530	1	B單	5648
LG	K550	1	B單	5649
LG	K580	4	B單	5650
LG	KP500	15	B單	5651
LG	LMK120	1	B單	5652
LG	LMK200	33	B單	5653
LG	LMK300	6	B單	5654
LG	LMK410	1	B單	5655
LG	LMK420	1	B單	5656
LG	LML212	4	B單	5657
LG	LMQ610	86	B單	5658
LG	LMQ710	3	B單	5659
LG	LMX120	53	B單	5660
LG	LMX210	82	B單	5661
LG	LMX320	16	B單	5662
LG	LMX410	64	B單	5663
LG	LMX430	2	B單	5664
LG	LS450	4	B單	5665
LG	LS676	1	B單	5666
LG	LS980	1	B單	5667

LG	LS991	3	B單	5668
LG	LS997	1	B單	5669
LG	LS998	1	B單	5670
LG	M150	2	B單	5671
LG	M151	1	B單	5672
LG	M153	2	B單	5673
LG	M160	123	B單	5674
LG	M200	159	B單	5675
LG	M210	12	B單	5676
LG	M250	53	B單	5677
LG	M250N	4	B單	5678
LG	M320	11	B單	5679
LG	M327	3	B單	5680
LG	M400	44	B單	5681
LG	M430	2	B單	5682
LG	M470	8	B單	5683
LG	M700	128	B單	5684
LG	MP260	5	B單	5685
LG	MS330	4	B單	5686
LG	MS550	8	B單	5687
LG	MS631	1	B單	5688
LG	P350	65	B單	5689
LG	P500	27	B單	5690
LG	P700	27	B單	5691
LG	P705	9	B單	5692
LG	P708	7	B單	5693
LG	P710	13	B單	5694
LG	P715	2	B單	5695
LG	P760	14	B單	5696
LG	P768	21	B單	5697
LG	P880	6	B單	5698
LG	P920	3	B單	5699
LG	P970	8	B單	5700
LG	P990	12	B單	5701
LG	Q610	2	B單	5702
LG	T385	3	B單	5703
LG	T505	1	B單	5704
LG	V400	1	B單	5705
LG	V410	1	B單	5706
LG	V490	1	B單	5707
LG	V500(PAD)	2	B單	5708
LG	V930	1	B單	5709
LG	VK810	1	B單	5710
LG	VS425	1	B單	5711
LG	VS500	1	B單	5712
LG	VS501	1	B單	5713
LG	VS810	1	B單	5714
LG	VS835	3	B單	5715
LG	VS985	2	B單	5716
LG	VS986	3	B單	5717
LG	VS990	4	B單	5718
LG	X120	2	B單	5719
LG	X130	1	B單	5720
LG	X150	9	B單	5721
LG	X210	4	B單	5722
LG	X220	8	B單	5723
LG	X230	39	B單	5724
LG	X240	2	B單	5725
LG	X320	1	B單	5726
LG	X410	7	B單	5727
LG	X520	1	B單	5728
Motorola	LEX L10	2	B單	5729
Motorola	MB511	4	B單	5730
Motorola	MB525	5	B單	5731
Motorola	MB860	3	B單	5732
Motorola	MB865	53	B單	5733
Motorola	MB886	1	B單	5734
Motorola	MZ616	1	B單	5735
Motorola	U9	117	B單	5736
Motorola	V3	2	B單	5737
Motorola	V8	2	B單	5738

Motorola	XT1021	48	B單	5739
Motorola	XT1022	16	B單	5740
Motorola	XT1031	1	B單	5741
Motorola	XT1032	103	B單	5742
Motorola	XT1033	10	B單	5743
Motorola	XT1034	1	B單	5744
Motorola	XT1039	38	B單	5745
Motorola	XT1040	10	B單	5746
Motorola	XT1052	10	B單	5747
Motorola	XT1053	3	B單	5748
Motorola	XT1058	6	B單	5749
Motorola	XT1063	2	B單	5750
Motorola	XT1068	35	B單	5751
Motorola	XT1069	1	B單	5752
Motorola	XT1072	34	B單	5753
Motorola	XT1080	6	B單	5754
Motorola	XT1092	4	B單	5755
Motorola	XT1095	2	B單	5756
Motorola	XT1097	6	B單	5757
Motorola	XT1100	5	B單	5758
Motorola	XT1103	3	B單	5759
Motorola	XT1254	1	B單	5760
Motorola	XT1521	12	B單	5761
Motorola	XT1524	36	B單	5762
Motorola	XT1527	5	B單	5763
Motorola	XT1528	1	B單	5764
Motorola	XT1540	1	B單	5765
Motorola	XT1541	120	B單	5766
Motorola	XT1542	2	B單	5767
Motorola	XT1550	7	B單	5768
Motorola	XT1557	1	B單	5769
Motorola	XT1562	10	B單	5770
Motorola	XT1563	17	B單	5771
Motorola	XT1565	1	B單	5772
Motorola	XT1572	14	B單	5773
Motorola	XT1575	8	B單	5774
Motorola	XT1580	2	B單	5775
Motorola	XT1585	9	B單	5776
Motorola	XT1601	4	B單	5777
Motorola	XT1602	6	B單	5778
Motorola	XT1603	6	B單	5779
Motorola	XT1604	45	B單	5780
Motorola	XT1607	3	B單	5781
Motorola	XT1609	3	B單	5782
Motorola	XT1621	6	B單	5783
Motorola	XT1622	100	B單	5784
Motorola	XT1625	2	B單	5785
Motorola	XT1635	22	B單	5786
Motorola	XT1640	57	B單	5787
Motorola	XT1641	2	B單	5788
Motorola	XT1642	14	B單	5789
Motorola	XT1643	4	B單	5790
Motorola	XT1650	18	B單	5791
Motorola	XT1670	9	B單	5792
Motorola	XT1671	1	B單	5793
Motorola	XT1672	61	B單	5794
Motorola	XT1675	105	B單	5795
Motorola	XT1676	43	B單	5796
Motorola	XT1677	2	B單	5797
Motorola	XT1680	11	B單	5798
Motorola	XT1681	1	B單	5799
Motorola	XT1684	6	B單	5800
Motorola	XT1685	11	B單	5801
Motorola	XT1686	3	B單	5802
Motorola	XT1687	2	B單	5803
Motorola	XT1700	49	B單	5804
Motorola	XT1710	6	B單	5805
Motorola	XT1723	8	B單	5806
Motorola	XT1725	1	B單	5807
Motorola	XT1754	52	B單	5808
Motorola	XT1756	6	B單	5809

Motorola	XT1757	1	B單	5810
Motorola	XT1758	6	B單	5811
Motorola	XT1761	11	B單	5812
Motorola	XT1762	6	B單	5813
Motorola	XT1763	3	B單	5814
Motorola	XT1764	1	B單	5815
Motorola	XT1769	5	B單	5816
Motorola	XT1770	3	B單	5817
Motorola	XT1771	18	B單	5818
Motorola	XT1772	4	B單	5819
Motorola	XT1789	17	B單	5820
Motorola	XT1790	5	B單	5821
Motorola	XT1792	21	B單	5822
Motorola	XT1793	29	B單	5823
Motorola	XT1794	3	B單	5824
Motorola	XT1797	4	B單	5825
Motorola	XT1802	2	B單	5826
Motorola	XT1803	2	B單	5827
Motorola	XT1804	1	B單	5828
Motorola	XT1805	5	B單	5829
Motorola	XT1900	8	B單	5830
Motorola	XT1910	1	B單	5831
Motorola	XT1920	53	B單	5832
Motorola	XT1921	16	B單	5833
Motorola	XT1922	121	B單	5834
Motorola	XT1924	4	B單	5835
Motorola	XT1925	39	B單	5836
Motorola	XT1926	16	B單	5837
Motorola	XT1929	4	B單	5838
Motorola	XT1941	6	B單	5839
Motorola	XT1942	1	B單	5840
Motorola	XT1944	66	B單	5841
Motorola	XT1952	7	B單	5842
Motorola	XT1955	11	B單	5843
Motorola	XT1962	4	B單	5844
Motorola	XT1965	14	B單	5845
Motorola	XT1970	1	B單	5846
Motorola	XT1976	1	B單	5847
Motorola	XT300	38	B單	5848
Motorola	XT320	57	B單	5849
Motorola	XT531	1	B單	5850
Motorola	XT535	2	B單	5851
Motorola	XT890	21	B單	5852
Motorola	XT905	3	B單	5853
Motorola	XT910	5	B單	5854
Motorola	XT912	2	B單	5855
Motorola	XT915	6	B單	5856
Motorola	XT919	22	B單	5857
Motorola	XT925	14	B單	5858
Nokia	100	48	B單	5859
Nokia	103	1	B單	5860
Nokia	105	16	B單	5861
Nokia	106	3	B單	5862
Nokia	108	7	B單	5863
Nokia	110	1	B單	5864
Nokia	111	179	B單	5865
Nokia	113	2	B單	5866
Nokia	130	67	B單	5867
Nokia	201	1	B單	5868
Nokia	203	2	B單	5869
Nokia	206	1	B單	5870
Nokia	207	6	B單	5871
Nokia	208	10	B單	5872
Nokia	225	3	B單	5873
Nokia	301	50	B單	5874
Nokia	302	3	B單	5875
Nokia	306	2	B單	5876
Nokia	308	1	B單	5877
Nokia	435	43	B單	5878
Nokia	501	2	B單	5879
Nokia	505	1	B單	5880

Nokia	515	15	B單	5881
Nokia	520	55	B單	5882
Nokia	530	3	B單	5883
Nokia	532	2	B單	5884
Nokia	535	201	B單	5885
Nokia	540	2	B單	5886
Nokia	550	178	B單	5887
Nokia	610	3	B單	5888
Nokia	620	72	B單	5889
Nokia	625	24	B單	5890
Nokia	630	272	B單	5891
Nokia	635	394	B單	5892
Nokia	638	1	B單	5893
Nokia	640	543	B單	5894
Nokia	650	117	B單	5895
Nokia	700	7	B單	5896
Nokia	710	3	B單	5897
Nokia	720	2	B單	5898
Nokia	730	1	B單	5899
Nokia	735	1	B單	5900
Nokia	800	101	B單	5901
Nokia	810	1	B單	5902
Nokia	820	46	B單	5903
Nokia	830	4	B單	5904
Nokia	900	2	B單	5905
Nokia	920	9	B單	5906
Nokia	925	8	B單	5907
Nokia	930	1	B單	5908
Nokia	1100	27	B單	5909
Nokia	1112	3	B單	5910
Nokia	1200	2	B單	5911
Nokia	1202	1	B單	5912
Nokia	1208	12	B單	5913
Nokia	1209	1	B單	5914
Nokia	1280	8	B單	5915
Nokia	1320	13	B單	5916
Nokia	1600	7	B單	5917
Nokia	1616	18	B單	5918
Nokia	1650	2	B單	5919
Nokia	1661	5	B單	5920
Nokia	1662	2	B單	5921
Nokia	1800	2	B單	5922
Nokia	2112	14	B單	5923
Nokia	2310	9	B單	5924
Nokia	2505	1	B單	5925
Nokia	2610	26	B單	5926
Nokia	2626	9	B單	5927
Nokia	2630	12	B單	5928
Nokia	2690	9	B單	5929
Nokia	2760	10	B單	5930
Nokia	3100	5	B單	5931
Nokia	3120	20	B單	5932
Nokia	3310	9	B單	5933
Nokia	5000	3	B單	5934
Nokia	5230	48	B單	5935
Nokia	5233	1	B單	5936
Nokia	5310	1	B單	5937
Nokia	5800	36	B單	5938
Nokia	6015	13	B單	5939
Nokia	6020	7	B單	5940
Nokia	6030	5	B單	5941
Nokia	6070	4	B單	5942
Nokia	6085	115	B單	5943
Nokia	6100	11	B單	5944
Nokia	6210	14	B單	5945
Nokia	6233	1	B單	5946
Nokia	6234	13	B單	5947
Nokia	6235	32	B單	5948
Nokia	6300	22	B單	5949
Nokia	6555	7	B單	5950
Nokia	6630	2	B單	5951

Nokia	7370	1	B單	5952
Nokia	7373	1	B單	5953
Nokia	105 4G	1	B單	5954
Nokia	105(2017)	8	B單	5955
Nokia	105(2019)	27	B單	5956
Nokia	105(2023)	2	B單	5957
Nokia	106(2018)	1	B單	5958
Nokia	1110i	9	B單	5959
Nokia	130(2017)	1	B單	5960
Nokia	1680C	3	B單	5961
Nokia	2220S	6	B單	5962
Nokia	2323C	4	B單	5963
Nokia	2330C	9	B單	5964
Nokia	2700C	3	B單	5965
Nokia	2720 Flip	35	B單	5966
Nokia	2720A	20	B單	5967
Nokia	2730C	54	B單	5968
Nokia	3109C	6	B單	5969
Nokia	3110C	10	B單	5970
Nokia	3120C	16	B單	5971
Nokia	3310(2017)	16	B單	5972
Nokia	3600S	1	B單	5973
Nokia	3610A	5	B單	5974
Nokia	3720C	8	B單	5975
Nokia	5130C	14	B單	5976
Nokia	5310(2020)	1	B單	5977
Nokia	6120C	36	B單	5978
Nokia	6210S	6	B單	5979
Nokia	6303C	23	B單	5980
Nokia	6310i	2	B單	5981
Nokia	640XL	42	B單	5982
Nokia	6500C	3	B單	5983
Nokia	6500S	5	B單	5984
Nokia	6600F	4	B單	5985
Nokia	6600S	4	B單	5986
Nokia	6700s	1	B單	5987
Nokia	6720C	1	B單	5988
Nokia	6730C	1	B單	5989
Nokia	7230S	10	B單	5990
Nokia	8110 4G	4	B單	5991
Nokia	C1-01	15	B單	5992
Nokia	C2	2	B單	5993
Nokia	C2-01	43	B單	5994
Nokia	C2-02	4	B單	5995
Nokia	C3	9	B單	5996
Nokia	C3-01	22	B單	5997
Nokia	C5	32	B單	5998
Nokia	C5-03	39	B單	5999
Nokia	C6	3	B單	6000
Nokia	C6-01	12	B單	6001
Nokia	C7	8	B單	6002
Nokia	E5	15	B單	6003
Nokia	E50-2	1	B單	6004
Nokia	E51	1	B單	6005
Nokia	E52	1	B單	6006
Nokia	E61-1	1	B單	6007
Nokia	E63	4	B單	6008
Nokia	E65	1	B單	6009
Nokia	E66	2	B單	6010
Nokia	E72	1	B單	6011
Nokia	N70	1	B單	6012
Nokia	N9	1	B單	6013
Nokia	N900	2	B單	6014
Nokia	N97 Mini	3	B單	6015
Nokia	Nokia 1	11	B單	6016
Nokia	Nokia 1 Plus	20	B單	6017
Nokia	Nokia 1.3	13	B單	6018
Nokia	Nokia 1.4	5	B單	6019
Nokia	Nokia 2	20	B單	6020
Nokia	Nokia 2.1	17	B單	6021
Nokia	Nokia 2.2	9	B單	6022

Nokia	Nokia 2.3	6	B單	6023
Nokia	Nokia 2.4	1	B單	6024
Nokia	Nokia C01 Plus	8	B單	6025
Nokia	Nokia C02	2	B單	6026
Nokia	Nokia C1	4	B單	6027
Nokia	Nokia C1 Plus	9	B單	6028
Nokia	Nokia C110	1	B單	6029
Nokia	Nokia C12	4	B單	6030
Nokia	Nokia C2	2	B單	6031
Nokia	Nokia C21 Plus	3	B單	6032
Nokia	Nokia X	1	B單	6033
Nokia	X1	3	B單	6034
Nokia	X2	1	B單	6035
Nokia	X3	1	B單	6036
Nokia	X3-02	35	B單	6037
Nokia	X6	3	B單	6038
Other	2HIX Wee Pad	1	B單	6039
Other	A1 Alpha 2+	1	B單	6040
Other	A1 Alpha 20	1	B單	6041
Other	A1 Alpha 21	1	B單	6042
Other	ALBA AC40 AS3G	1	B單	6043
Other	ALBA AC57	1	B單	6044
Other	ALBA AC57AS	1	B單	6045
Other	ALTICE E54	2	B單	6046
Other	Altice S11	1	B單	6047
Other	Altice S31	16	B單	6048
Other	Altice S41	2	B單	6049
Other	Altice S61	1	B單	6050
Other	Altice S62	1	B單	6051
Other	ALTICE SX41	1	B單	6052
Other	Amazon Fire 7	11	B單	6053
Other	Amazon Fire HD 10	3	B單	6054
Other	Amazon Fire HD 10 Plus	1	B單	6055
Other	Amazon Fire HD 10(2021)	1	B單	6056
Other	Amazon Fire HD 7	1	B單	6057
Other	Amazon Fire HD 7(2017)	3	B單	6058
Other	Amazon Fire HD 8	17	B單	6059
Other	Amazon FirephOne	7	B單	6060
Other	Amazon Kindle 4	1	B單	6061
Other	Amazon Kindle Fire	1	B單	6062
Other	Amazon Kindle Fire 7	127	B單	6063
Other	Amazon Kindle Fire HD 7	1	B單	6064
Other	Amazon Kindle Fire HD 8.9	1	B單	6065
Other	Amgoo AM530	4	B單	6066
Other	Archos 50 DIAMOND	1	B單	6067
Other	Archos 50C Neon	1	B單	6068
Other	Archos 50E Helium 4G	1	B單	6069
Other	Archos 53 Platinum	1	B單	6070
Other	Archos AC50	1	B單	6071
Other	Archos AC50FNE V2	1	B單	6072
Other	AZUMI A5	101	B單	6073
Other	AZUMI A50C+	46	B單	6074
Other	AZUMI A55Q Pro	39	B單	6075
Other	AZUMI A55T	66	B單	6076
Other	AZUMI A5D	142	B單	6077
Other	AZUMI A5Q	15	B單	6078
Other	AZUMI Q10	61	B單	6079
Other	AZUMI SPEED 5.5	10	B單	6080
Other	AZUMI V5	417	B單	6081
Other	Blackview A60	1	B單	6082
Other	Blackview A7	2	B單	6083
Other	Blackview A8 Max	1	B單	6084
Other	Blackview BV2000	12	B單	6085
Other	Blackview BV4900 Pro	1	B單	6086
Other	Blackview BV6200	1	B單	6087
Other	Blaupunkt BS04	1	B單	6088
Other	Blaupunkt BS04i	1	B單	6089
Other	Blaupunkt FL02	4	B單	6090
Other	Blaupunkt FL08	2	B單	6091
Other	Blaupunkt FM02	1	B單	6092
Other	Blaupunkt FM03	10	B單	6093

Other	Blaupunkt FM03I	2	B單	6094
Other	Blaupunkt OT16	1	B單	6095
Other	Blaupunkt SF01	19	B單	6096
Other	Blaupunkt SF04	10	B單	6097
Other	Blaupunkt SF04 4G	18	B單	6098
Other	Blaupunkt SL04	7	B單	6099
Other	Blaupunkt SM02	202	B單	6100
Other	Blaupunkt SM05	2	B單	6101
Other	BLU Life Play	29	B單	6102
Other	BLU R2 Plus	1	B單	6103
Other	BLU X130E	1	B單	6104
Other	BQ Aquaris A4.5	1	B單	6105
Other	BQ Aquaris C	1	B單	6106
Other	BQ Aquaris E4.5	2	B單	6107
Other	BQ Aquaris E5	8	B單	6108
Other	BQ Aquaris E5S	2	B單	6109
Other	BQ Aquaris E6	1	B單	6110
Other	BQ Aquaris M4.5	1	B單	6111
Other	BQ Aquaris M5	4	B單	6112
Other	BQ Aquaris M5.5	5	B單	6113
Other	BQ Aquaris U	5	B單	6114
Other	BQ Aquaris X	1	B單	6115
Other	Cat B15	191	B單	6116
Other	Cat B25	1	B單	6117
Other	Cat B30	15	B單	6118
Other	CAT B35	5	B單	6119
Other	CAT B40	6	B單	6120
Other	CAT S30	12	B單	6121
Other	Cat S40	1	B單	6122
Other	CAT S62 Pro	1	B單	6123
Other	Crosscall Action X3	2	B單	6124
Other	Crosscall CORE M4	39	B單	6125
Other	Crosscall Core X4	2	B單	6126
Other	Crosscall Trekker M1 Core	14	B單	6127
Other	Crosscall Trekker X3	3	B單	6128
Other	Crosscall Trekker X4	3	B單	6129
Other	Cryptodata Impulse K1	1	B單	6130
Other	CUBOT Cheetah 2	1	B單	6131
Other	CUBOT Max	3	B單	6132
Other	Cubot Note 7	1	B單	6133
Other	CUBOT X18 Plus	1	B單	6134
Other	Cyrus CS22	1	B單	6135
Other	Cyrus CS24	1	B單	6136
Other	Cyrus CS28	3	B單	6137
Other	Doogee F5	1	B單	6138
Other	Doogee Mix Lite	1	B單	6139
Other	Doogee N55 Pro	1	B單	6140
Other	Doogee S35	1	B單	6141
Other	Doogee S35T	1	B單	6142
Other	Doogee S40	2	B單	6143
Other	Doogee S59	1	B單	6144
Other	Doogee S96 Pro	1	B單	6145
Other	Doogee X10	2	B單	6146
Other	Doogee X10S	1	B單	6147
Other	Doogee X20L	2	B單	6148
Other	Doogee X30	1	B單	6149
Other	Doogee X5	2	B單	6150
Other	Doogee X50	2	B單	6151
Other	Doogee Y6 Max	1	B單	6152
Other	Doro 1360	7	B單	6153
Other	Doro 1370	30	B單	6154
Other	Doro 1380	2	B單	6155
Other	Doro 2404	5	B單	6156
Other	Doro 5030	10	B單	6157
Other	Doro 5516	13	B單	6158
Other	Doro 5517	5	B單	6159
Other	Doro 6030	13	B單	6160
Other	Doro 6050	10	B單	6161
Other	DORO 6060	1	B單	6162
Other	Doro 6520	2	B單	6163
Other	Doro 6530	1	B單	6164

Other	Doro 6620	62	B單	6165
Other	Doro 6880	4	B單	6166
Other	Doro 7010	9	B單	6167
Other	Doro 7030	77	B單	6168
Other	Doro 7060	45	B單	6169
Other	Doro 7070	8	B單	6170
Other	Doro 7080	4	B單	6171
Other	Doro 8030	5	B單	6172
Other	Doro 8035	8	B單	6173
Other	Doro 8040	8	B單	6174
Other	Doro 8050	13	B單	6175
Other	DORO 8080	2	B單	6176
Other	Doro 8100	4	B單	6177
Other	DORO 8200	1	B單	6178
Other	Doro PE508	5	B單	6179
Other	Doro PE612	6	B單	6180
Other	Doro PE621	2	B單	6181
Other	Doro PE631	158	B單	6182
Other	Doro PE632	17	B單	6183
Other	Doro PE820	1	B單	6184
Other	Elephone C1 Max	1	B單	6185
Other	Elephone M2	1	B單	6186
Other	Elephone S7	1	B單	6187
Other	Emporia S5	2	B單	6188
Other	Emporia Smart 2	4	B單	6189
Other	Emporia Smart 3	7	B單	6190
Other	Emporia Smart 3 Mini	2	B單	6191
Other	Emporia Smart 4	1	B單	6192
Other	Emporia Smart 5	1	B單	6193
Other	Energizer S550	2	B單	6194
Other	Enspire C8660	45	B單	6195
Other	Fnac 2 4.5	1	B單	6196
Other	General Mobile GM 8 Go	1	B單	6197
Other	Gigabyte Gsmart Classic Lite	1	B單	6198
Other	Gigaset GS110	2	B單	6199
Other	Gigaset GS4	1	B單	6200
Other	Gigaset GS5 Lite	1	B單	6201
Other	Google G-2PW2100	1	B單	6202
Other	Google G-2PW2200	1	B單	6203
Other	Google G-2PW4100	3	B單	6204
Other	Google G-2PW4200	5	B單	6205
Other	Hafury Note 10	1	B單	6206
Other	Harrier Mini	32	B單	6207
Other	Harrier Rook	26	B單	6208
Other	Harrier TAB	6	B單	6209
Other	Hawk	9	B單	6210
Other	Hisense C20	4	B單	6211
Other	Homtom HT70	1	B單	6212
Other	Homtom S9 Plus	1	B單	6213
Other	iHunt Like 12 Pro	1	B單	6214
Other	IMO DASH	11	B單	6215
Other	IMO Dash 4G	14	B單	6216
Other	IMO Q2	7	B單	6217
Other	IMO Q2 Plus	43	B單	6218
Other	IMO Q2 Pro	21	B單	6219
Other	IMO Q3 Plus	2	B單	6220
Other	IMO Q4 Pro	9	B單	6221
Other	IMO Q4 Pro(2021)	4	B單	6222
Other	IMO Q5	4	B單	6223
Other	Impulse K1	1	B單	6224
Other	Infinix X6512	1	B單	6225
Other	INSYS IH9-L614	1	B單	6226
Other	ITRAVL X1	1	B單	6227
Other	Kazam Life B5	1	B單	6228
Other	Kazam Trooper 2 6.0	1	B單	6229
Other	Kazam Trooper 540	3	B單	6230
Other	Kazam Trooper 551	1	B單	6231
Other	Kicka 5 Plus 4G	1	B單	6232
Other	Kogan Agora 4G	1	B單	6233
Other	Kogan Agora 6	1	B單	6234
Other	Kogan Agora Lite	1	B單	6235

Other	Kyocera C6530N	2	B單	6236
Other	Kyocera E4750	1	B單	6237
Other	Kyocera E6910	1	B單	6238
Other	LAIQ GLOW	1	B單	6239
Other	LEAGOO T5	1	B單	6240
Other	Lenovo 10E	3	B單	6241
Other	Lenovo A1000	3	B單	6242
Other	Lenovo A1010A20	1	B單	6243
Other	Lenovo A2010	4	B單	6244
Other	Lenovo A2016	1	B單	6245
Other	Lenovo A319	1	B單	6246
Other	Lenovo A6000	2	B單	6247
Other	Lenovo A6020	12	B單	6248
Other	Lenovo A606	1	B單	6249
Other	Lenovo A7000	1	B單	6250
Other	Lenovo A7010A48	5	B單	6251
Other	Lenovo A7600	4	B單	6252
Other	Lenovo A806	1	B單	6253
Other	Lenovo A816	1	B單	6254
Other	Lenovo A916	2	B單	6255
Other	Lenovo B6000	1	B單	6256
Other	Lenovo B8000	2	B單	6257
Other	Lenovo K10A40	18	B單	6258
Other	Lenovo K320T	1	B單	6259
Other	Lenovo K33B36	8	B單	6260
Other	Lenovo K50	2	B單	6261
Other	Lenovo Miix 2 8	1	B單	6262
Other	Lenovo PB2-690	1	B單	6263
Other	Lenovo SILA40	1	B單	6264
Other	Lenovo S6000	1	B單	6265
Other	Lenovo S750	1	B單	6266
Other	Lenovo S856	2	B單	6267
Other	Lenovo Tab 2 A10-70	2	B單	6268
Other	Lenovo Tab 2 A7-30	2	B單	6269
Other	Lenovo Tab 2 X30	5	B單	6270
Other	Lenovo Tab 3-710F	2	B單	6271
Other	Lenovo Tab E10	1	B單	6272
Other	Lenovo TABLET 2-1050L	1	B單	6273
Other	Lenovo TB128XU	21	B單	6274
Other	Lenovo TB300XU	16	B單	6275
Other	Lenovo TB301XU	1	B單	6276
Other	Lenovo TB328XU	2	B單	6277
Other	Lenovo TB3-730X	1	B單	6278
Other	Lenovo TB3-X70	1	B單	6279
Other	Lenovo TB-7104F	3	B單	6280
Other	Lenovo TB-7305	2	B單	6281
Other	Lenovo TB-8304	3	B單	6282
Other	Lenovo TB-8504	1	B單	6283
Other	Lenovo TB-8505	99	B單	6284
Other	Lenovo TB-J607Z	1	B單	6285
Other	Lenovo TB-X103	1	B單	6286
Other	Lenovo TB-X103F	12	B單	6287
Other	Lenovo TB-X104F	17	B單	6288
Other	Lenovo TB-X304	2	B單	6289
Other	Lenovo TB-X304F	2	B單	6290
Other	Lenovo TB-X306X	5	B單	6291
Other	Lenovo TB-X505	3	B單	6292
Other	Lenovo TB-X505F	5	B單	6293
Other	Lenovo TB-X605F	1	B單	6294
Other	Lenovo TB-X606X	5	B單	6295
Other	Lenovo TB-X636	1	B單	6296
Other	Lenovo TB-X704	1	B單	6297
Other	Lenovo TB-X705	1	B單	6298
Other	Lenovo Thinkpad Tablet 2	1	B單	6299
Other	Lenovo Yoga Tab 2-1050F	1	B單	6300
Other	Lenovo YT3-850	3	B單	6301
Other	Lenovo YT3-X50F	3	B單	6302
Other	Lenovo YT3-X90F	1	B單	6303
Other	Lenovo YT-J706	1	B單	6304
Other	Lenovo YT-X705F	1	B單	6305
Other	LETV LEX651	1	B單	6306

Other	LETV LEX820	1	B單	6307
Other	LETV X526	1	B單	6308
Other	Logicom Flow	1	B單	6309
Other	Maxfone Max 70 Plus	1	B單	6310
Other	Meizu 16TH	1	B單	6311
Other	Meizu M3 Note	1	B單	6312
Other	Meizu M3S	2	B單	6313
Other	Meizu M5S	1	B單	6314
Other	Meizu Pro 5	1	B單	6315
Other	MOBICEL R1 Plus	1	B單	6316
Other	Mobile AX1082	9	B單	6317
Other	Mobile AX810	2	B單	6318
Other	Mobile AX820	1	B單	6319
Other	Mobiphone 3G	139	B單	6320
Other	Mobiwire Dakota	61	B單	6321
Other	Mobiwire Hakan	28	B單	6322
Other	Mobiwire Hinto 4G	119	B單	6323
Other	Mobiwire Hotah	1	B單	6324
Other	Mobiwire Kanuna	18	B單	6325
Other	Mobiwire Kosumi	4	B單	6326
Other	Mobiwire Nokosi	6	B單	6327
Other	Mobiwire Ogima	12	B單	6328
Other	Mobiwire Oneida	1	B單	6329
Other	Mobiwire Sakari	106	B單	6330
Other	MTT M14D	52	B單	6331
Other	Navon SPT1100	8	B單	6332
Other	Navon T310	1	B單	6333
Other	Neffos C5 Plus	1	B單	6334
Other	Neffos X1	1	B單	6335
Other	Neffos X20	1	B單	6336
Other	NUU A4L	1	B單	6337
Other	NUU A5L	1	B單	6338
Other	NUU G2	1	B單	6339
Other	NUU G3	1	B單	6340
Other	NUU N5004L	1	B單	6341
Other	NUU X6 Mini	1	B單	6342
Other	Oppo A37	1	B單	6343
Other	Oppo A57(2016)	1	B單	6344
Other	Oppo A77(2017)	1	B單	6345
Other	OPPO R9 Plus	1	B單	6346
Other	Oppo R9S Plus	1	B單	6347
Other	Optus P600	5	B單	6348
Other	OPTUS P650	1	B單	6349
Other	OPTUS P652	3	B單	6350
Other	Oscal C80	2	B單	6351
Other	Oukitel K15 Plus	1	B單	6352
Other	Oukitel U7 Plus	1	B單	6353
Other	Oukitel WP22	1	B單	6354
Other	OWN F1023	43	B單	6355
Other	OWN F1024	393	B單	6356
Other	OWN FUN 6	16	B單	6357
Other	OWN FUN 7	8	B單	6358
Other	OWN FUN Plus	2	B單	6359
Other	OWN Fun+	6	B單	6360
Other	OWN One Plus	1	B單	6361
Other	OWN S3020	1	B單	6362
Other	OWN Smart 8	5	B單	6363
Other	OWN Smart 9	8	B單	6364
Other	Polaroid P4526A	3	B單	6365
Other	Polaroid P5526A	15	B單	6366
Other	SHARP AQUOS D10	1	B單	6367
Other	SKY 55M	4	B單	6368
Other	Sonim XP5800	8	B單	6369
Other	Spark Plus 3	120	B單	6370
Other	Spark Pocket 2	229	B單	6371
Other	SPC Gen Max	1	B單	6372
Other	SPC Smart Plus	1	B單	6373
Other	SPC Smart Ultimate	1	B單	6374
Other	STK ACE	1	B單	6375
Other	TCL 306	6	B單	6376
Other	TCL 403	4	B單	6377

Other	TCL 4058	25	B單	6378
Other	TCL 406	2	B單	6379
Other	TCL T301	3	B單	6380
Other	TCL T302	1	B單	6381
Other	TCL T431	11	B單	6382
Other	TCL T433	4	B單	6383
Other	Tesco K15	1	B單	6384
Other	T-Mobile REVVLRY	1	B單	6385
Other	Ulefone Armor X5	2	B單	6386
Other	Ulefone Armor X5 Pro	1	B單	6387
Other	Ulefone Armor X7 Pro	3	B單	6388
Other	Ulefone Note 6	1	B單	6389
Other	Ulefone Note 7	1	B單	6390
Other	Ulefone T1	1	B單	6391
Other	Umidigi A7S	1	B單	6392
Other	Umidigi Power 3	1	B單	6393
Other	UMIDIGI Power 5	1	B單	6394
Other	Unihertz Titan	1	B單	6395
Other	VIVO A5	1	B單	6396
Other	Wiko BLOOM	1	B單	6397
Other	Wiko Harry 2	20	B單	6398
Other	Wiko JERRY	6	B單	6399
Other	Wiko Jerry 2	4	B單	6400
Other	Wiko LENNY	1	B單	6401
Other	Wiko lenny 2	5	B單	6402
Other	Wiko Lenny 3	5	B單	6403
Other	Wiko Lenny 4	3	B單	6404
Other	Wiko Lenny 4 Plus	1	B單	6405
Other	Wiko Lenny 5	2	B單	6406
Other	Wiko Power U10	1	B單	6407
Other	Wiko Power U20	1	B單	6408
Other	Wiko pulp 4G	2	B單	6409
Other	Wiko Rainbow	1	B單	6410
Other	Wiko RAINBOW UP 4G	1	B單	6411
Other	Wiko Robby	1	B單	6412
Other	Wiko SAS	1	B單	6413
Other	Wiko Sunny 2	2	B單	6414
Other	Wiko Tommy 2	2	B單	6415
Other	Wiko View	1	B單	6416
Other	Wiko View 2	2	B單	6417
Other	Wiko View 3	1	B單	6418
Other	Wiko View 4	1	B單	6419
Other	Wiko View Go	1	B單	6420
Other	Wiko View Prime	1	B單	6421
Other	Wiko Wim	1	B單	6422
Other	Wiko Wim Lite	1	B單	6423
Other	WIKO Y50	1	B單	6424
Other	WIKO Y51	2	B單	6425
Other	Wiko Y60	2	B單	6426
Other	Wiko Y80	1	B單	6427
Other	WIKO Y81	1	B單	6428
Other	WIKO Y82	1	B單	6429
Other	Wileyfox Pro	1	B單	6430
Other	Wileyfox Spark	1	B單	6431
Other	Wileyfox Spark X	7	B單	6432
Other	Wileyfox Spark+	2	B單	6433
Other	Wileyfox Storm	3	B單	6434
Other	Wileyfox Swift	8	B單	6435
Other	Wileyfox Swift 2	12	B單	6436
Other	Wileyfox Swift 2 Plus	2	B單	6437
Other	Wileyfox Swift 2X	14	B單	6438
Other	Xgody K40 Pro	1	B單	6439
Other	Xgody P30	1	B單	6440
Other	Xgody S14	1	B單	6441
Other	Xgody X18	1	B單	6442
Other	XiaoMi Mi 5S Plus	1	B單	6443
Other	XiaoMi Mi A1	1	B單	6444
Other	XiaoMi Mi A2	2	B單	6445
Other	XiaoMi Mi A2 Lite	5	B單	6446
Other	XiaoMi Mi A3	1	B單	6447
Other	XiaoMi Mi Max 2	1	B單	6448

Other	XiaoMi Mi Mix 2S	1	B單	6449
Other	XiaoMi Redmi 1S	2	B單	6450
Other	XiaoMi Redmi 2	3	B單	6451
Other	XiaoMi Redmi 4 Prime	1	B單	6452
Other	XiaoMi Redmi 4X	1	B單	6453
Other	XiaoMi Redmi 5	1	B單	6454
Other	XiaoMi Redmi 5 Plus	1	B單	6455
Other	XiaoMi Redmi 6A	1	B單	6456
Other	XiaoMi Redmi A2	1	B單	6457
Other	XiaoMi RedMi Note	1	B單	6458
Other	XiaoMi RedMi Note 4X	2	B單	6459
Other	XiaoMi Redmi Note 5	3	B單	6460
Other	XiaoMi Redmi Note 5A	1	B單	6461
Other	XiaoMi Redmi Note 6 Pro	1	B單	6462
Other	XiaoMi Redmi Note 7	1	B單	6463
Other	Yezz Andy 5EI3	2	B單	6464
Other	Zebra TC26BK	1	B單	6465
Other	Zebra TC700K	1	B單	6466
Other	ZONda ZMCK870	18	B單	6467
Other	雜平板	46	B單	6468
Other	雜電子書	4	B單	6469
Samsung	A300	4	B單	6470
Samsung	A300F	135	B單	6471
Samsung	A310(Demo)	1	B單	6472
Samsung	A310F	103	B單	6473
Samsung	A320F	112	B單	6474
Samsung	B2100	1	B單	6475
Samsung	B270	20	B單	6476
Samsung	B2700	2	B單	6477
Samsung	B2710	1	B單	6478
Samsung	B300	5	B單	6479
Samsung	B3210	1	B單	6480
Samsung	B3410	1	B單	6481
Samsung	B5510	2	B單	6482
Samsung	B7510	1	B單	6483
Samsung	C260	5	B單	6484
Samsung	C270	2	B單	6485
Samsung	C3050	23	B單	6486
Samsung	C3262	1	B單	6487
Samsung	C3300	9	B單	6488
Samsung	C3520	7	B單	6489
Samsung	C5000	1	B單	6490
Samsung	C5010	3	B單	6491
Samsung	C5130	2	B單	6492
Samsung	C5220	17	B單	6493
Samsung	C5510	1	B單	6494
Samsung	C7010	2	B單	6495
Samsung	E1050	1	B單	6496
Samsung	E1080	4	B單	6497
Samsung	E1120	2	B單	6498
Samsung	E1150	2	B單	6499
Samsung	E1170	9	B單	6500
Samsung	E1190	14	B單	6501
Samsung	E1200	12	B單	6502
Samsung	E1205	4	B單	6503
Samsung	E1230	7	B單	6504
Samsung	E1270	6	B單	6505
Samsung	E1310	6	B單	6506
Samsung	E1360	1	B單	6507
Samsung	E2100	1	B單	6508
Samsung	E2121	2	B單	6509
Samsung	E2210	1	B單	6510
Samsung	E2230	4	B單	6511
Samsung	E2370	17	B單	6512
Samsung	E2550	25	B單	6513
Samsung	E2600	15	B單	6514
Samsung	E3300	13	B單	6515
Samsung	E3309	18	B單	6516
Samsung	E500	4	B單	6517
Samsung	E700	1	B單	6518
Samsung	F480	26	B單	6519

Samsung	F488	1	B單	6520
Samsung	G110	4	B單	6521
Samsung	G130	20	B單	6522
Samsung	G310	19	B單	6523
Samsung	G313	55	B單	6524
Samsung	G316	27	B單	6525
Samsung	G318	97	B單	6526
Samsung	G350	11	B單	6527
Samsung	G355	24	B單	6528
Samsung	G357F	112	B單	6529
Samsung	G360	188	B單	6530
Samsung	G360F	46	B單	6531
Samsung	G361	1	B單	6532
Samsung	G361F	142	B單	6533
Samsung	G3815	9	B單	6534
Samsung	G386	3	B單	6535
Samsung	G386F	20	B單	6536
Samsung	G388F	394	B單	6537
Samsung	G389F	6	B單	6538
Samsung	G390	339	B單	6539
Samsung	G390F	599	B單	6540
Samsung	G398F	495	B單	6541
Samsung	G398F(劃標)	3	B單	6542
Samsung	G530	44	B單	6543
Samsung	G5308	1	B單	6544
Samsung	G530F	14	B單	6545
Samsung	G531	7	B單	6546
Samsung	G531F	5	B單	6547
Samsung	G532	102	B單	6548
Samsung	G532F	1	B單	6549
Samsung	G550	7	B單	6550
Samsung	G570	1	B單	6551
Samsung	G570F	1	B單	6552
Samsung	G600F	2	B單	6553
Samsung	G610	35	B單	6554
Samsung	G611F	3	B單	6555
Samsung	G7102	4	B單	6556
Samsung	G7105	5	B單	6557
Samsung	G7106	1	B單	6558
Samsung	G720	1	B單	6559
Samsung	G730	2	B單	6560
Samsung	G750	3	B單	6561
Samsung	G800(Demo)	1	B單	6562
Samsung	G800F	87	B單	6563
Samsung	G850	3	B單	6564
Samsung	G850F	14	B單	6565
Samsung	G870	6	B單	6566
Samsung	G870F	1	B單	6567
Samsung	G892	1	B單	6568
Samsung	G900	31	B單	6569
Samsung	G900(Demo)	3	B單	6570
Samsung	G900F	85	B單	6571
Samsung	G901F	22	B單	6572
Samsung	G903	1	B單	6573
Samsung	G903F	18	B單	6574
Samsung	G920F	75	B單	6575
Samsung	I257	1	B單	6576
Samsung	I317	3	B單	6577
Samsung	I337	4	B單	6578
Samsung	i437	1	B單	6579
Samsung	I497	1	B單	6580
Samsung	I535	3	B單	6581
Samsung	I537	2	B單	6582
Samsung	I545	9	B單	6583
Samsung	I5500	1	B單	6584
Samsung	I5503	13	B單	6585
Samsung	I5700	2	B單	6586
Samsung	I5800	2	B單	6587
Samsung	i605	5	B單	6588
Samsung	I705	3	B單	6589
Samsung	i727	1	B單	6590

Samsung	i747	5	B單	6591
Samsung	i757	1	B單	6592
Samsung	I777	1	B單	6593
Samsung	I8000	1	B單	6594
Samsung	I8150	13	B單	6595
Samsung	I8160	148	B單	6596
Samsung	I8190	510	B單	6597
Samsung	I8200	205	B單	6598
Samsung	I8260	16	B單	6599
Samsung	i8262	3	B單	6600
Samsung	I8350	1	B單	6601
Samsung	I8552	8	B單	6602
Samsung	I8700	5	B單	6603
Samsung	I8730	12	B單	6604
Samsung	I8750	21	B單	6605
Samsung	I897	2	B單	6606
Samsung	I9000	118	B單	6607
Samsung	I9001	17	B單	6608
Samsung	I9003	12	B單	6609
Samsung	I9020	9	B單	6610
Samsung	I9023	15	B單	6611
Samsung	I905	4	B單	6612
Samsung	I9060	125	B單	6613
Samsung	I9070	11	B單	6614
Samsung	i9080	1	B單	6615
Samsung	I9082	3	B單	6616
Samsung	I9100	362	B單	6617
Samsung	I9103	1	B單	6618
Samsung	I9105	44	B單	6619
Samsung	I9150	2	B單	6620
Samsung	I9152	1	B單	6621
Samsung	I918	1	B單	6622
Samsung	I9190	2	B單	6623
Samsung	i9192	13	B單	6624
Samsung	I9195	541	B單	6625
Samsung	I9195(Demo)	1	B單	6626
Samsung	I9197	1	B單	6627
Samsung	I9200	1	B單	6628
Samsung	I9205	5	B單	6629
Samsung	I9210	4	B單	6630
Samsung	I9250	2	B單	6631
Samsung	I9295	14	B單	6632
Samsung	I9300	584	B單	6633
Samsung	i9300(Demo)	5	B單	6634
Samsung	I9301	136	B單	6635
Samsung	I9305	50	B單	6636
Samsung	I9500	7	B單	6637
Samsung	I9505	81	B單	6638
Samsung	I9505(Demo)	2	B單	6639
Samsung	I9506	1	B單	6640
Samsung	I9515	8	B單	6641
Samsung	I997	2	B單	6642
Samsung	J100	104	B單	6643
Samsung	J105	8	B單	6644
Samsung	J105f	2	B單	6645
Samsung	J106	3	B單	6646
Samsung	J106F	1	B單	6647
Samsung	J110	1	B單	6648
Samsung	J120	4	B單	6649
Samsung	J120F	8	B單	6650
Samsung	J200	2	B單	6651
Samsung	J250	17	B單	6652
Samsung	J260	10	B單	6653
Samsung	J320F	31	B單	6654
Samsung	J330F	22	B單	6655
Samsung	J337	2	B單	6656
Samsung	J410	3	B單	6657
Samsung	J410F	2	B單	6658
Samsung	J415F	10	B單	6659
Samsung	J500F	2	B單	6660
Samsung	J510F	4	B單	6661

Samsung	J610F	12	B單	6662
Samsung	J710F	1	B單	6663
Samsung	J720F	1	B單	6664
Samsung	J727	3	B單	6665
Samsung	J730	1	B單	6666
Samsung	J730F	2	B單	6667
Samsung	J737	6	B單	6668
Samsung	J810	9	B單	6669
Samsung	L720	2	B單	6670
Samsung	L900	5	B單	6671
Samsung	M150	1	B單	6672
Samsung	M919	2	B單	6673
Samsung	N5110	5	B單	6674
Samsung	N7000	17	B單	6675
Samsung	N7100	33	B單	6676
Samsung	N7100(Demo)	1	B單	6677
Samsung	N7105	12	B單	6678
Samsung	N7505	3	B單	6679
Samsung	N8000	1	B單	6680
Samsung	N8010	20	B單	6681
Samsung	N8020	2	B單	6682
Samsung	N900	3	B單	6683
Samsung	N900(Demo)	4	B單	6684
Samsung	N9005	59	B單	6685
Samsung	N9007	2	B單	6686
Samsung	N910	32	B單	6687
Samsung	N910(Demo)	8	B單	6688
Samsung	N9100	3	B單	6689
Samsung	N910F	13	B單	6690
Samsung	N910S	1	B單	6691
Samsung	N915	1	B單	6692
Samsung	N915F	5	B單	6693
Samsung	N920	1	B單	6694
Samsung	N9208	1	B單	6695
Samsung	P1000	1	B單	6696
Samsung	P3100	3	B單	6697
Samsung	P3110	41	B單	6698
Samsung	P3113	4	B單	6699
Samsung	P355	4	B單	6700
Samsung	P5100	6	B單	6701
Samsung	P5110	33	B單	6702
Samsung	P5113	3	B單	6703
Samsung	P5200	6	B單	6704
Samsung	P5210	23	B單	6705
Samsung	P550	7	B單	6706
Samsung	P580	2	B單	6707
Samsung	P600	3	B單	6708
Samsung	P601	1	B單	6709
Samsung	P605	1	B單	6710
Samsung	P7310	1	B單	6711
Samsung	P7500	1	B單	6712
Samsung	P7510	4	B單	6713
Samsung	P8110	9	B單	6714
Samsung	P900	1	B單	6715
Samsung	P900(PAD)	4	B單	6716
Samsung	P905	1	B單	6717
Samsung	R530	3	B單	6718
Samsung	R970	2	B單	6719
Samsung	S111	2	B單	6720
Samsung	S205	1	B單	6721
Samsung	S260	46	B單	6722
Samsung	S3100	1	B單	6723
Samsung	S3350	2	B單	6724
Samsung	S3370	48	B單	6725
Samsung	S3570	1	B單	6726
Samsung	S3650	34	B單	6727
Samsung	S367	1	B單	6728
Samsung	S5220	11	B單	6729
Samsung	S5230	2	B單	6730
Samsung	S5250	1	B單	6731
Samsung	S5260	18	B單	6732

Samsung	S5280	4	B單	6733
Samsung	S5300	35	B單	6734
Samsung	S5310	8	B單	6735
Samsung	S5360	55	B單	6736
Samsung	S5360T	98	B單	6737
Samsung	S5363	6	B單	6738
Samsung	S5380	7	B單	6739
Samsung	S550	5	B單	6740
Samsung	S5560	1	B單	6741
Samsung	S5570	154	B單	6742
Samsung	S5600	60	B單	6743
Samsung	S5610	7	B單	6744
Samsung	S5620	80	B單	6745
Samsung	S5660	22	B單	6746
Samsung	S5670	47	B單	6747
Samsung	S5690	84	B單	6748
Samsung	S5780	1	B單	6749
Samsung	S5830	330	B單	6750
Samsung	S6310	74	B單	6751
Samsung	S6500	55	B單	6752
Samsung	S6790	4	B單	6753
Samsung	S6802	3	B單	6754
Samsung	S6810	95	B單	6755
Samsung	S7230	6	B單	6756
Samsung	S7275	151	B單	6757
Samsung	S737	2	B單	6758
Samsung	S7390	45	B單	6759
Samsung	S7392	4	B單	6760
Samsung	S7500	65	B單	6761
Samsung	S7530	2	B單	6762
Samsung	S7560	29	B單	6763
Samsung	S7562	38	B單	6764
Samsung	S7580	56	B單	6765
Samsung	S7582	5	B單	6766
Samsung	S7583	1	B單	6767
Samsung	S767	1	B單	6768
Samsung	S7710	47	B單	6769
Samsung	S8000	1	B單	6770
Samsung	S820	3	B單	6771
Samsung	S8300	10	B單	6772
Samsung	S8500	4	B單	6773
Samsung	S8530	4	B單	6774
Samsung	S8600	5	B單	6775
Samsung	S907	3	B單	6776
Samsung	S978	1	B單	6777
Samsung	SC-56B	1	B單	6778
Samsung	T110	2	B單	6779
Samsung	T113	4	B單	6780
Samsung	T116	1	B單	6781
Samsung	T210	19	B單	6782
Samsung	T2105	1	B單	6783
Samsung	T211	2	B單	6784
Samsung	T220	11	B單	6785
Samsung	T220(劃標)	4	B單	6786
Samsung	T225	12	B單	6787
Samsung	T230	13	B單	6788
Samsung	T280	1	B單	6789
Samsung	T290	3	B單	6790
Samsung	T295	6	B單	6791
Samsung	T307	19	B單	6792
Samsung	T310	9	B單	6793
Samsung	T320	1	B單	6794
Samsung	T330	4	B單	6795
Samsung	T335	5	B單	6796
Samsung	T337	1	B單	6797
Samsung	T350	1	B單	6798
Samsung	T355	3	B單	6799
Samsung	T365	32	B單	6800
Samsung	T377	2	B單	6801
Samsung	T385	2	B單	6802
Samsung	T387	10	B單	6803

Samsung	T390	2	B單	6804
Samsung	T395	22	B單	6805
Samsung	T397	1	B單	6806
Samsung	T399	1	B單	6807
Samsung	T520	4	B單	6808
Samsung	T530	7	B單	6809
Samsung	T533	1	B單	6810
Samsung	T535	1	B單	6811
Samsung	T550	9	B單	6812
Samsung	T555	1	B單	6813
Samsung	T560	6	B單	6814
Samsung	T580	81	B單	6815
Samsung	T590	1	B單	6816
Samsung	T679	1	B單	6817
Samsung	T700	2	B單	6818
Samsung	T705	6	B單	6819
Samsung	T710	1	B單	6820
Samsung	T713	1	B單	6821
Samsung	T719	1	B單	6822
Samsung	T800	7	B單	6823
Samsung	T805	19	B單	6824
Samsung	T810	1	B單	6825
Samsung	T813	2	B單	6826
Samsung	T815	4	B單	6827
Samsung	T817	1	B單	6828
Samsung	T819	3	B單	6829
Samsung	T900	2	B單	6830
Samsung	T959	8	B單	6831
Samsung	T991	1	B單	6832
Samsung	T999	2	B單	6833
SFR	SFR Starnaute IV	3	B單	6834
SFR	SFR Starshine IV	1	B單	6835
SFR	SFR Startrail 8	28	B單	6836
SFR	SFR Starxtrem 6	2	B單	6837
Vodafone	SMART C11	8	B單	6838
Vodafone	Smart E10	76	B單	6839
Vodafone	Smart E11	29	B單	6840
Vodafone	Smart P11	97	B單	6841
Vodafone	Smart P12	27	B單	6842
Vodafone	Smart V10	1	B單	6843
Vodafone	Smart V12	3	B單	6844
Vodafone	Smart V22	11	B單	6845
Vodafone	V1397	2	B單	6846
Vodafone	V155	24	B單	6847
Vodafone	V500	2	B單	6848
Vodafone	V555	4	B單	6849
Vodafone	V655	2	B單	6850
Vodafone	V685	147	B單	6851
Vodafone	V695	2	B單	6852
Vodafone	V785	114	B單	6853
Vodafone	V795	38	B單	6854
Vodafone	V858	73	B單	6855
Vodafone	V860	14	B單	6856
Vodafone	V875	9	B單	6857
Vodafone	V888	13	B單	6858
Vodafone	V890	34	B單	6859
Vodafone	V895	19	B單	6860
Vodafone	V985	35	B單	6861
Vodafone	V995	1	B單	6862
Vodafone	VFD 120	129	B單	6863
Vodafone	VFD 1300	15	B單	6864
Vodafone	VFD 200	51	B單	6865
Vodafone	VFD 300	135	B單	6866
Vodafone	VFD 320	134	B單	6867
Vodafone	VFD 500	3	B單	6868
Vodafone	VFD 510	15	B單	6869
Vodafone	VFD 511	2	B單	6870
Vodafone	VFD 513	66	B單	6871
Vodafone	VFD 527	2	B單	6872
Vodafone	VFD 529	41	B單	6873
Vodafone	VFD 600	58	B單	6874

Vodafone	VFD 610	106	B單	6875
Vodafone	VFD 620	88	B單	6876
Vodafone	VFD 630	14	B單	6877
Vodafone	VFD 700	60	B單	6878
Vodafone	VFD 710	80	B單	6879
Vodafone	VFD 720	125	B單	6880
Vodafone	VFD 730	5	B單	6881
Vodafone	VFD 900	2	B單	6882
ZTE	ZTE Axon 7 Mini	1	B單	6883
ZTE	ZTE Blade 10 Smart	1	B單	6884
ZTE	ZTE Blade A110	193	B單	6885
ZTE	ZTE Blade A112	2	B單	6886
ZTE	ZTE Blade A3 Lite	542	B單	6887
ZTE	ZTE Blade A3(2019)	6	B單	6888
ZTE	ZTE Blade A3(2020)	30	B單	6889
ZTE	ZTE Blade A31 Plus	1	B單	6890
ZTE	ZTE Blade A321	2	B單	6891
ZTE	ZTE Blade A33	6	B單	6892
ZTE	ZTE Blade A330	88	B單	6893
ZTE	ZTE Blade A33S	1	B單	6894
ZTE	ZTE BLADE A410	1	B單	6895
ZTE	ZTE Blade A452	1	B單	6896
ZTE	ZTE Blade A460	29	B單	6897
ZTE	ZTE Blade A462	246	B單	6898
ZTE	ZTE Blade A5(2019)	12	B單	6899
ZTE	ZTE Blade A5(2020)	34	B單	6900
ZTE	ZTE Blade A506	2	B單	6901
ZTE	ZTE Blade A51	1	B單	6902
ZTE	ZTE Blade A510	4	B單	6903
ZTE	ZTE Blade A512	9	B單	6904
ZTE	ZTE Blade A52	4	B單	6905
ZTE	ZTE Blade A521	8	B單	6906
ZTE	ZTE Blade A6	13	B單	6907
ZTE	ZTE Blade A602	6	B單	6908
ZTE	ZTE Blade A610	21	B單	6909
ZTE	ZTE Blade A612	1	B單	6910
ZTE	ZTE Blade A7(2019)	3	B單	6911
ZTE	ZTE Blade A71	1	B單	6912
ZTE	ZTE Blade A72S	85	B單	6913
ZTE	ZTE Blade A73	3	B單	6914
ZTE	ZTE Blade A910	2	B單	6915
ZTE	ZTE Blade APEX	1	B單	6916
ZTE	ZTE Blade apex II	2	B單	6917
ZTE	ZTE Blade apex III	1	B單	6918
ZTE	ZTE Blade C2 Plus	3	B單	6919
ZTE	ZTE Blade G	2	B單	6920
ZTE	ZTE Blade III	3	B單	6921
ZTE	ZTE Blade L110	106	B單	6922
ZTE	ZTE Blade L2	38	B單	6923
ZTE	ZTE Blade L210	1	B單	6924
ZTE	ZTE Blade L3	13	B單	6925
ZTE	ZTE Blade L5	1	B單	6926
ZTE	ZTE Blade L5 Plus	40	B單	6927
ZTE	ZTE Blade L7	15	B單	6928
ZTE	ZTE Blade L8	2	B單	6929
ZTE	ZTE Blade Q	2	B單	6930
ZTE	ZTE Blade Q Lux	3	B單	6931
ZTE	ZTE Blade V	1	B單	6932
ZTE	ZTE Blade V3(2019)	1	B單	6933
ZTE	ZTE Blade V30 Vita	1	B單	6934
ZTE	ZTE Blade V40 Vita	1	B單	6935
ZTE	ZTE Blade V6	1	B單	6936
ZTE	ZTE Blade V6 Plus	8	B單	6937
ZTE	ZTE Blade V7	7	B單	6938
ZTE	ZTE Blade V7 Lite	1	B單	6939
ZTE	ZTE Blade V9 Vita	17	B單	6940
ZTE	ZTE Blade VEC	1	B單	6941
ZTE	ZTE E8QP	2	B單	6942
ZTE	ZTE F102 3G	139	B單	6943
ZTE	ZTE F320	213	B單	6944
ZTE	ZTE F327	16	B單	6945

ZTE	ZTE F328	27	B單	6946
ZTE	ZTE Grand S Flex	1	B單	6947
ZTE	ZTE K88	1	B單	6948
ZTE	ZTE N9520	1	B單	6949
ZTE	ZTE Nubia M2 Lite	2	B單	6950
ZTE	ZTE P743	2	B單	6951
ZTE	ZTE R101	4	B單	6952
ZTE	ZTE R109	66	B單	6953
ZTE	ZTE R22	18	B單	6954
ZTE	ZTE R286	44	B單	6955
ZTE	ZTE R350	202	B單	6956
ZTE	ZTE R55	134	B單	6957
ZTE	ZTE R83	16	B單	6958
ZTE	ZTE R84	22	B單	6959
ZTE	ZTE T126	1	B單	6960
ZTE	ZTE T21	1	B單	6961
ZTE	ZTE T57	1	B單	6962
ZTE	ZTE T610	1	B單	6963
ZTE	ZTE T815	5	B單	6964
ZTE	ZTE T83	33	B單	6965
ZTE	ZTE T84	55	B單	6966
ZTE	ZTE T85	9	B單	6967
ZTE	ZTE T95	2	B單	6968
ZTE	ZTE V795	38	B單	6969
ZTE	ZTE V811	1	B單	6970
ZTE	ZTE V812	3	B單	6971
ZTE	ZTE V9	1	B單	6972
ZTE	ZTE Z831	1	B單	6973
ZTE	ZTE Z835	2	B單	6974
ZTE	ZTE Z970	2	B單	6975
ZTE	ZTE Z981	12	B單	6976
ZTE	ZTE Z982	4	B單	6977
Acer	Acer A1-830	1	B單開壞不開	6978
Acer	Acer A60	3	B單開壞不開	6979
Acer	Acer Sospiro AX64	1	B單開壞不開	6980
Alcatel	OT1066	2	B單開壞不開	6981
Alcatel	OT2004	1	B單開壞不開	6982
Alcatel	OT2008	2	B單開壞不開	6983
Alcatel	OT2020	1	B單開壞不開	6984
Alcatel	OT2053	2	B單開壞不開	6985
Alcatel	OT2057	33	B單開壞不開	6986
Alcatel	OT3026	3	B單開壞不開	6987
Alcatel	OT3082	1	B單開壞不開	6988
Alcatel	OT4034	1	B單開壞不開	6989
Alcatel	OT4047	7	B單開壞不開	6990
Alcatel	OT5002	4	B單開壞不開	6991
Alcatel	OT5006	1	B單開壞不開	6992
Alcatel	OT5008	3	B單開壞不開	6993
Alcatel	OT5009	2	B單開壞不開	6994
Alcatel	OT5010	4	B單開壞不開	6995
Alcatel	OT5015	3	B單開壞不開	6996
Alcatel	OT5017	1	B單開壞不開	6997
Alcatel	OT5022	1	B單開壞不開	6998
Alcatel	OT5024	34	B單開壞不開	6999
Alcatel	OT5025	1	B單開壞不開	7000
Alcatel	OT5026	1	B單開壞不開	7001
Alcatel	OT5028	4	B單開壞不開	7002
Alcatel	OT5029	2	B單開壞不開	7003
Alcatel	OT5030	41	B單開壞不開	7004
Alcatel	OT5031	4	B單開壞不開	7005
Alcatel	OT5033	62	B單開壞不開	7006
Alcatel	OT5039	1	B單開壞不開	7007
Alcatel	OT5042	1	B單開壞不開	7008
Alcatel	OT5044	7	B單開壞不開	7009
Alcatel	OT5045	2	B單開壞不開	7010
Alcatel	OT5047	2	B單開壞不開	7011
Alcatel	OT5048	2	B單開壞不開	7012
Alcatel	OT5054	4	B單開壞不開	7013
Alcatel	OT5056	1	B單開壞不開	7014
Alcatel	OT5058	2	B單開壞不開	7015
Alcatel	OT5059	4	B單開壞不開	7016

Alcatel	OT5061	1	B單開壞不開	7017
Alcatel	OT5080	1	B單開壞不開	7018
Alcatel	OT5085	1	B單開壞不開	7019
Alcatel	OT5099	1	B單開壞不開	7020
Alcatel	OT6012	1	B單開壞不開	7021
Alcatel	OT6025	4	B單開壞不開	7022
Alcatel	OT6045	1	B單開壞不開	7023
Alcatel	OT6055	1	B單開壞不開	7024
Alcatel	OT6071	1	B單開壞不開	7025
Alcatel	OT7047	1	B單開壞不開	7026
Alcatel	OT7048	1	B單開壞不開	7027
Alcatel	OT8055	1	B單開壞不開	7028
Alcatel	OT8063	1	B單開壞不開	7029
Alcatel	OT8088	7	B單開壞不開	7030
Alcatel	OT8094	1	B單開壞不開	7031
Alcatel	OT9001	1	B單開壞不開	7032
Alcatel	OT9007	6	B單開壞不開	7033
Alcatel	OT9008	2	B單開壞不開	7034
Alcatel	OT9013	1	B單開壞不開	7035
Alcatel	OT9022	5	B單開壞不開	7036
Alcatel	OT9027	4	B單開壞不開	7037
Alcatel	OT9032	1	B單開壞不開	7038
Alcatel	OT-P330	3	B單開壞不開	7039
Asus	Asus Nexus 7	1	B單開壞不開	7040
Asus	Asus Nexus 7 K008	1	B單開壞不開	7041
Asus	Asus Z01HD	2	B單開壞不開	7042
Asus	Asus Z01KD	1	B單開壞不開	7043
Blackberry	BB9900	8	B單開壞不開	7044
Blackberry	BB9900(倒)	7	B單開壞不開	7045
Blackberry	DTEK50	16	B單開壞不開	7046
Blackberry	Dtek60	2	B單開壞不開	7047
Blackberry	Playbook (64GB)	1	B單開壞不開	7048
Blackberry	Priv	4	B單開壞不開	7049
Blackberry	Q10	2	B單開壞不開	7050
Blackberry	Q10(倒)	1	B單開壞不開	7051
Blackberry	Q20	2	B單開壞不開	7052
Blackberry	Q20(倒)	4	B單開壞不開	7053
Blackberry	Q5	1	B單開壞不開	7054
Blackberry	Q5(倒)	1	B單開壞不開	7055
Blackberry	Z10	1	B單開壞不開	7056
Blackberry	Z10 4G	5	B單開壞不開	7057
Blackberry	Z3	2	B單開壞不開	7058
Blackberry	Z30	1	B單開壞不開	7059
Blackberry	Z30 4G	3	B單開壞不開	7060
Ericsson	C1505	5	B單開壞不開	7061
Ericsson	C2105	1	B單開壞不開	7062
Ericsson	C5303	5	B單開壞不開	7063
Ericsson	C6833	2	B單開壞不開	7064
Ericsson	C6903	1	B單開壞不開	7065
Ericsson	D2005	1	B單開壞不開	7066
Ericsson	D2203	3	B單開壞不開	7067
Ericsson	D2403	4	B單開壞不開	7068
Ericsson	D5106	1	B單開壞不開	7069
Ericsson	D5303	1	B單開壞不開	7070
Ericsson	D5503	13	B單開壞不開	7071
Ericsson	D5803	8	B單開壞不開	7072
Ericsson	D6503	3	B單開壞不開	7073
Ericsson	D6603	6	B單開壞不開	7074
Ericsson	E2053	2	B單開壞不開	7075
Ericsson	E2104	1	B單開壞不開	7076
Ericsson	E2303	2	B單開壞不開	7077
Ericsson	E2306	3	B單開壞不開	7078
Ericsson	LT30P	1	B單開壞不開	7079
Ericsson	LT36	1	B單開壞不開	7080
Ericsson	SGPT321	1	B單開壞不開	7081
Ericsson	SGPT521	2	B單開壞不開	7082
Ericsson	ST21i	1	B單開壞不開	7083
Ericsson	ST26I	2	B單開壞不開	7084
Ericsson	X12	1	B單開壞不開	7085
HTC	HTC Desire 10 LifeStyle	3	B單開壞不開	7086
HTC	HTC Desire 12 Plus	4	B單開壞不開	7087

HTC	HTC Desire 510	2	B單開壞不開	7088
HTC	HTC Desire 530	4	B單開壞不開	7089
HTC	HTC Desire 610	7	B單開壞不開	7090
HTC	HTC Desire 620	1	B單開壞不開	7091
HTC	HTC Desire 626	7	B單開壞不開	7092
HTC	HTC Desire 816	4	B單開壞不開	7093
HTC	HTC Desire 820	3	B單開壞不開	7094
HTC	HTC Desire 825	1	B單開壞不開	7095
HTC	HTC Nexus 9	2	B單開壞不開	7096
HTC	HTC One	3	B單開壞不開	7097
HTC	HTC One A9	3	B單開壞不開	7098
HTC	HTC One E9	1	B單開壞不開	7099
HTC	HTC One M8	2	B單開壞不開	7100
HTC	HTC One M8S	2	B單開壞不開	7101
HTC	HTC One M9	1	B單開壞不開	7102
HTC	HTC One Mini	2	B單開壞不開	7103
HTC	HTC One Mini II	8	B單開壞不開	7104
HTC	HTC One X	3	B單開壞不開	7105
HTC	HTC One X+	1	B單開壞不開	7106
HTC	HTC Sensation XL	1	B單開壞不開	7107
HTC	HTC U Play	1	B單開壞不開	7108
HTC	HTC U Ultra	1	B單開壞不開	7109
Huawei	Huawei AGRK-W09	2	B單開壞不開	7110
Huawei	Huawei AGR-W09	1	B單開壞不開	7111
Huawei	Huawei AGS2-L03	1	B單開壞不開	7112
Huawei	Huawei AGS2-L09	2	B單開壞不開	7113
Huawei	Huawei AGS3-W09	1	B單開壞不開	7114
Huawei	Huawei AGS-L09	1	B單開壞不開	7115
Huawei	Huawei ATU-L11	1	B單開壞不開	7116
Huawei	Huawei ATU-L21	1	B單開壞不開	7117
Huawei	Huawei ATU-L31	5	B單開壞不開	7118
Huawei	Huawei AUM-L29	2	B單開壞不開	7119
Huawei	Huawei BAC-L03	2	B單開壞不開	7120
Huawei	Huawei BAH2-L09	2	B單開壞不開	7121
Huawei	Huawei BAH2-W19	4	B單開壞不開	7122
Huawei	Huawei BAH3-W09	1	B單開壞不開	7123
Huawei	Huawei BAH-L09	1	B單開壞不開	7124
Huawei	Huawei BAH-W09	1	B單開壞不開	7125
Huawei	Huawei BND-L21	1	B單開壞不開	7126
Huawei	Huawei BTV-DL09	1	B單開壞不開	7127
Huawei	Huawei CAG-L03	8	B單開壞不開	7128
Huawei	Huawei CAG-L23	1	B單開壞不開	7129
Huawei	Huawei CAG-LX3	1	B單開壞不開	7130
Huawei	Huawei Cam-L03	2	B單開壞不開	7131
Huawei	Huawei CAM-L21	8	B單開壞不開	7132
Huawei	Huawei CAM-L23	1	B單開壞不開	7133
Huawei	Huawei CHC-U01	1	B單開壞不開	7134
Huawei	Huawei CHE2-L11	1	B單開壞不開	7135
Huawei	Huawei CMR-W09	1	B單開壞不開	7136
Huawei	Huawei CPN-W09	3	B單開壞不開	7137
Huawei	Huawei CRO-L03	2	B單開壞不開	7138
Huawei	Huawei CRR-L09	6	B單開壞不開	7139
Huawei	Huawei CRR-UL00	2	B單開壞不開	7140
Huawei	Huawei CUN-L03	1	B單開壞不開	7141
Huawei	Huawei DIG-L03	2	B單開壞不開	7142
Huawei	Huawei DIG-LX3	1	B單開壞不開	7143
Huawei	Huawei DRA-L01	2	B單開壞不開	7144
Huawei	Huawei DRA-L21	2	B單開壞不開	7145
Huawei	Huawei DRA-LX2	1	B單開壞不開	7146
Huawei	Huawei DUA-L22	3	B單開壞不開	7147
Huawei	Huawei DUB-LX2	2	B單開壞不開	7148
Huawei	Huawei DUK-L09	1	B單開壞不開	7149
Huawei	Huawei FIG-LX1	7	B單開壞不開	7150
Huawei	Huawei FLA-LX3	2	B單開壞不開	7151
Huawei	Huawei FRD-L09	1	B單開壞不開	7152
Huawei	Huawei G510	5	B單開壞不開	7153
Huawei	Huawei G527	96	B單開壞不開	7154
Huawei	Huawei G535	1	B單開壞不開	7155
Huawei	Huawei G610	2	B單開壞不開	7156
Huawei	Huawei G620	2	B單開壞不開	7157
Huawei	Huawei G7	6	B單開壞不開	7158

Huawei	Huawei G8	3	B單開壞不開	7159
Huawei	Huawei H60-L04	6	B單開壞不開	7160
Huawei	Huawei Honor 8X	1	B單開壞不開	7161
Huawei	Huawei HRY-LX1	1	B單開壞不開	7162
Huawei	Huawei HRY-LX1T	2	B單開壞不開	7163
Huawei	Huawei JAT-L41	1	B單開壞不開	7164
Huawei	Huawei JDN2-W09	1	B單開壞不開	7165
Huawei	Huawei JMM-L22	1	B單開壞不開	7166
Huawei	Huawei KIW-L21	2	B單開壞不開	7167
Huawei	Huawei KOB2-W09	2	B單開壞不開	7168
Huawei	Huawei KOB-L09	1	B單開壞不開	7169
Huawei	Huawei KSA-L09	2	B單開壞不開	7170
Huawei	Huawei KSA-LX9	3	B單開壞不開	7171
Huawei	Huawei LDN-L01	3	B單開壞不開	7172
Huawei	Huawei LDN-L21	2	B單開壞不開	7173
Huawei	Huawei LDN-LX3	10	B單開壞不開	7174
Huawei	Huawei LLD-L31	3	B單開壞不開	7175
Huawei	Huawei LND-L29	1	B單開壞不開	7176
Huawei	Huawei MHA-L09	3	B單開壞不開	7177
Huawei	Huawei MLA-L01	2	B單開壞不開	7178
Huawei	Huawei MT1-U06	1	B單開壞不開	7179
Huawei	Huawei MT7-L09	3	B單開壞不開	7180
Huawei	Huawei MT7-TL10	2	B單開壞不開	7181
Huawei	Huawei NEM-L21	2	B單開壞不開	7182
Huawei	Huawei NMO-L22	2	B單開壞不開	7183
Huawei	Huawei NMO-L31	1	B單開壞不開	7184
Huawei	Huawei NXT-L09	1	B單開壞不開	7185
Huawei	Huawei NXT-L29	3	B單開壞不開	7186
Huawei	Huawei NXT-TL00	1	B單開壞不開	7187
Huawei	Huawei P6	14	B單開壞不開	7188
Huawei	Huawei P7	4	B單開壞不開	7189
Huawei	Huawei P8	1	B單開壞不開	7190
Huawei	Huawei P8 Lite	293	B單開壞不開	7191
Huawei	Huawei P8 Lite 2017	6	B單開壞不開	7192
Huawei	Huawei P9	13	B單開壞不開	7193
Huawei	Huawei P9 Lite Mini	6	B單開壞不開	7194
Huawei	Huawei P9 Plus	1	B單開壞不開	7195
Huawei	Huawei PAR-LX1	1	B單開壞不開	7196
Huawei	Huawei PAR-LX9	1	B單開壞不開	7197
Huawei	Huawei PE-TL10	2	B單開壞不開	7198
Huawei	Huawei PIC-LX9	4	B單開壞不開	7199
Huawei	Huawei PLK-L01	1	B單開壞不開	7200
Huawei	Huawei POT-LX1	10	B單開壞不開	7201
Huawei	Huawei S8-301	3	B單開壞不開	7202
Huawei	Huawei SCL-L01	1	B單開壞不開	7203
Huawei	Huawei STF-L09	4	B單開壞不開	7204
Huawei	Huawei STK-LX1	5	B單開壞不開	7205
Huawei	Huawei T1-701	1	B單開壞不開	7206
Huawei	Huawei T1-821	3	B單開壞不開	7207
Huawei	Huawei T1-A21	1	B單開壞不開	7208
Huawei	Huawei TAG-AL00	1	B單開壞不開	7209
Huawei	Huawei TAG-L01	1	B單開壞不開	7210
Huawei	Huawei TAG-L21	1	B單開壞不開	7211
Huawei	Huawei TRT-L53	2	B單開壞不開	7212
Huawei	Huawei TRT-LX2	3	B單開壞不開	7213
Huawei	Huawei U8833	1	B單開壞不開	7214
Huawei	Huawei Y330	1	B單開壞不開	7215
Huawei	Huawei Y550	4	B單開壞不開	7216
Huawei	Huawei Y635	1	B單開壞不開	7217
LG	D150	1	B單開壞不開	7218
LG	D290	1	B單開壞不開	7219
LG	D315	5	B單開壞不開	7220
LG	D415	1	B單開壞不開	7221
LG	D682	2	B單開壞不開	7222
LG	D802	7	B單開壞不開	7223
LG	D805	1	B單開壞不開	7224
LG	D820	1	B單開壞不開	7225
LG	D821	30	B單開壞不開	7226
LG	D855	5	B單開壞不開	7227
LG	D955	1	B單開壞不開	7228
LG	E610	1	B單開壞不開	7229

LG	E960	1	B單開壞不開	7230
LG	E975	3	B單開壞不開	7231
LG	H340	3	B單開壞不開	7232
LG	H440	3	B單開壞不開	7233
LG	H522	1	B單開壞不開	7234
LG	H525	1	B單開壞不開	7235
LG	H635	1	B單開壞不開	7236
LG	H735	1	B單開壞不開	7237
LG	H791	25	B單開壞不開	7238
LG	H810	1	B單開壞不開	7239
LG	H811	2	B單開壞不開	7240
LG	H815	7	B單開壞不開	7241
LG	H840	8	B單開壞不開	7242
LG	H850	3	B單開壞不開	7243
LG	H870	25	B單開壞不開	7244
LG	H900	1	B單開壞不開	7245
LG	H930	3	B單開壞不開	7246
LG	H960	2	B單開壞不開	7247
LG	K100	1	B單開壞不開	7248
LG	K120	1	B單開壞不開	7249
LG	K130	2	B單開壞不開	7250
LG	K200	1	B單開壞不開	7251
LG	K220	6	B單開壞不開	7252
LG	K300	1	B單開壞不開	7253
LG	K350	42	B單開壞不開	7254
LG	K350n	3	B單開壞不開	7255
LG	K410	2	B單開壞不開	7256
LG	K420n	11	B單開壞不開	7257
LG	K430	1	B單開壞不開	7258
LG	K500	10	B單開壞不開	7259
LG	K500N	2	B單開壞不開	7260
LG	K580	12	B單開壞不開	7261
LG	LMK200	14	B單開壞不開	7262
LG	LMK410	1	B單開壞不開	7263
LG	LMQ610	3	B單開壞不開	7264
LG	LMX120	13	B單開壞不開	7265
LG	LMX410	1	B單開壞不開	7266
LG	LMX420	2	B單開壞不開	7267
LG	LMX430	1	B單開壞不開	7268
LG	LMX525	1	B單開壞不開	7269
LG	LMX540	1	B單開壞不開	7270
LG	M160	1	B單開壞不開	7271
LG	M200	14	B單開壞不開	7272
LG	M210	2	B單開壞不開	7273
LG	M250	1	B單開壞不開	7274
LG	M320	11	B單開壞不開	7275
LG	M700	27	B單開壞不開	7276
LG	MS550	1	B單開壞不開	7277
LG	P705	1	B單開壞不開	7278
LG	P768	1	B單開壞不開	7279
LG	P880	2	B單開壞不開	7280
LG	Q610	12	B單開壞不開	7281
LG	Q720	1	B單開壞不開	7282
LG	Q730	1	B單開壞不開	7283
LG	V350	1	B單開壞不開	7284
LG	V400	1	B單開壞不開	7285
LG	V405	1	B單開壞不開	7286
LG	V480	1	B單開壞不開	7287
LG	V495	11	B單開壞不開	7288
LG	VS986	2	B單開壞不開	7289
LG	X180	2	B單開壞不開	7290
LG	X210	1	B單開壞不開	7291
LG	X220	1	B單開壞不開	7292
LG	X230	14	B單開壞不開	7293
LG	X320	3	B單開壞不開	7294
LG	X410	1	B單開壞不開	7295
Motorola	ME865	2	B單開壞不開	7296
Motorola	XT1021	5	B單開壞不開	7297
Motorola	XT1022	2	B單開壞不開	7298
Motorola	XT1032	4	B單開壞不開	7299
Motorola	XT1039	2	B單開壞不開	7300

Motorola	XT1053	1	B單開壞不開	7301
Motorola	XT1064	1	B單開壞不開	7302
Motorola	XT1068	2	B單開壞不開	7303
Motorola	XT1072	5	B單開壞不開	7304
Motorola	XT1097	1	B單開壞不開	7305
Motorola	XT1100	2	B單開壞不開	7306
Motorola	XT1524	1	B單開壞不開	7307
Motorola	XT1526	9	B單開壞不開	7308
Motorola	XT1527	2	B單開壞不開	7309
Motorola	XT1528	2	B單開壞不開	7310
Motorola	XT1541	15	B單開壞不開	7311
Motorola	XT1542	1	B單開壞不開	7312
Motorola	XT1562	7	B單開壞不開	7313
Motorola	XT1572	2	B單開壞不開	7314
Motorola	XT1575	1	B單開壞不開	7315
Motorola	XT1585	1	B單開壞不開	7316
Motorola	XT1604	2	B單開壞不開	7317
Motorola	XT1621	17	B單開壞不開	7318
Motorola	XT1622	5	B單開壞不開	7319
Motorola	XT1625	1	B單開壞不開	7320
Motorola	XT1635	51	B單開壞不開	7321
Motorola	XT1640	103	B單開壞不開	7322
Motorola	XT1641	2	B單開壞不開	7323
Motorola	XT1642	3	B單開壞不開	7324
Motorola	XT1643	1	B單開壞不開	7325
Motorola	XT1650	19	B單開壞不開	7326
Motorola	XT1672	146	B單開壞不開	7327
Motorola	XT1675	8	B單開壞不開	7328
Motorola	XT1676	14	B單開壞不開	7329
Motorola	XT1680	8	B單開壞不開	7330
Motorola	XT1685	2	B單開壞不開	7331
Motorola	XT1700	6	B單開壞不開	7332
Motorola	XT1710	1	B單開壞不開	7333
Motorola	XT1721	1	B單開壞不開	7334
Motorola	XT1723	2	B單開壞不開	7335
Motorola	XT1725	3	B單開壞不開	7336
Motorola	XT1750	2	B單開壞不開	7337
Motorola	XT1754	3	B單開壞不開	7338
Motorola	XT1761	6	B單開壞不開	7339
Motorola	XT1763	1	B單開壞不開	7340
Motorola	XT1764	1	B單開壞不開	7341
Motorola	XT1766	1	B單開壞不開	7342
Motorola	XT1771	13	B單開壞不開	7343
Motorola	XT1772	16	B單開壞不開	7344
Motorola	XT1789	1	B單開壞不開	7345
Motorola	XT1790	4	B單開壞不開	7346
Motorola	XT1793	3	B單開壞不開	7347
Motorola	XT1794	28	B單開壞不開	7348
Motorola	XT1797	1	B單開壞不開	7349
Motorola	XT1803	1	B單開壞不開	7350
Motorola	XT1805	3	B單開壞不開	7351
Motorola	XT1920	4	B單開壞不開	7352
Motorola	XT1921	2	B單開壞不開	7353
Motorola	XT1922	13	B單開壞不開	7354
Motorola	XT1924	1	B單開壞不開	7355
Motorola	XT1925	2	B單開壞不開	7356
Motorola	XT1926	1	B單開壞不開	7357
Motorola	XT1929	1	B單開壞不開	7358
Motorola	XT1941	1	B單開壞不開	7359
Motorola	XT1944	1	B單開壞不開	7360
Motorola	XT1952	1	B單開壞不開	7361
Motorola	XT1955	5	B單開壞不開	7362
Motorola	XT1980	4	B單開壞不開	7363
Motorola	XT2025	68	B單開壞不開	7364
Motorola	XT535	2	B單開壞不開	7365
Nokia	110	6	B單開壞不開	7366
Nokia	206	1	B單開壞不開	7367
Nokia	435	2	B單開壞不開	7368
Nokia	520	3	B單開壞不開	7369
Nokia	535	1	B單開壞不開	7370
Nokia	550	1	B單開壞不開	7371

Nokia	625	3	B單開壞不開	7372
Nokia	630	1	B單開壞不開	7373
Nokia	635	2	B單開壞不開	7374
Nokia	640	4	B單開壞不開	7375
Nokia	650	1	B單開壞不開	7376
Nokia	710	2	B單開壞不開	7377
Nokia	735	6	B單開壞不開	7378
Nokia	920	17	B單開壞不開	7379
Nokia	950	1	B單開壞不開	7380
Nokia	1320	2	B單開壞不開	7381
Nokia	105(2019)	4	B單開壞不開	7382
Nokia	110(2019)	1	B單開壞不開	7383
Nokia	2720 Flip	1	B單開壞不開	7384
Nokia	3310(2017)	1	B單開壞不開	7385
Nokia	640XL	4	B單開壞不開	7386
Nokia	6500C	1	B單開壞不開	7387
Nokia	8110 4G	1	B單開壞不開	7388
Nokia	Nokia 1	2	B單開壞不開	7389
Nokia	Nokia 1 Plus	17	B單開壞不開	7390
Nokia	Nokia 1.3	1	B單開壞不開	7391
Nokia	Nokia 1.4	7	B單開壞不開	7392
Nokia	Nokia 2	5	B單開壞不開	7393
Nokia	Nokia 2.1	11	B單開壞不開	7394
Nokia	Nokia 2.2	13	B單開壞不開	7395
Nokia	Nokia 2.3	18	B單開壞不開	7396
Nokia	Nokia 2.4	1	B單開壞不開	7397
Nokia	Nokia 3	1	B單開壞不開	7398
Nokia	Nokia C01 Plus	5	B單開壞不開	7399
Nokia	Nokia C02	1	B單開壞不開	7400
Nokia	Nokia C1	1	B單開壞不開	7401
Nokia	Nokia C1 Plus	3	B單開壞不開	7402
Nokia	Nokia C110	2	B單開壞不開	7403
Nokia	Nokia C20	1	B單開壞不開	7404
Nokia	Nokia C200	1	B單開壞不開	7405
Nokia	Nokia C21 Plus	3	B單開壞不開	7406
Nokia	Nokia C32	1	B單開壞不開	7407
Nokia	Nokia G100	1	B單開壞不開	7408
Nokia	Nokia T10	2	B單開壞不開	7409
Nokia	Nokia T20	2	B單開壞不開	7410
Other	Altice S31	10	B單開壞不開	7411
Other	Amazon Fire HD 10(2021)	2	B單開壞不開	7412
Other	Amazon Fire HD 8(2020)	1	B單開壞不開	7413
Other	Amazon FirephOne	4	B單開壞不開	7414
Other	Amazon Kindle Fire 7	75	B單開壞不開	7415
Other	Blackview A30	1	B單開壞不開	7416
Other	Blaupunkt SF01	26	B單開壞不開	7417
Other	CAT B35	3	B單開壞不開	7418
Other	CAT S41	1	B單開壞不開	7419
Other	CAT S52	1	B單開壞不開	7420
Other	Cat S60	1	B單開壞不開	7421
Other	Doro 1370	5	B單開壞不開	7422
Other	Doro 6520	3	B單開壞不開	7423
Other	Doro 6620	1	B單開壞不開	7424
Other	Doro 7030	39	B單開壞不開	7425
Other	Doro 8030	4	B單開壞不開	7426
Other	Doro 8035	6	B單開壞不開	7427
Other	Doro 8050	3	B單開壞不開	7428
Other	Doro 8100	3	B單開壞不開	7429
Other	Fairphone	1	B單開壞不開	7430
Other	Fairphone 4 5G	1	B單開壞不開	7431
Other	Google G-2PW2100	1	B單開壞不開	7432
Other	Google G-2PW4100	1	B單開壞不開	7433
Other	Google G-2PW4200	2	B單開壞不開	7434
Other	Harrier Mini	1	B單開壞不開	7435
Other	Harrier TAB	3	B單開壞不開	7436
Other	IMO Q2 Pro	15	B單開壞不開	7437
Other	Land Rover Explore	2	B單開壞不開	7438
Other	Lenovo A616	1	B單開壞不開	7439
Other	Lenovo CT-X636F	1	B單開壞不開	7440
Other	Lenovo Tab 2 X30	1	B單開壞不開	7441
Other	Lenovo Tab S8-50F	1	B單開壞不開	7442

Other	Lenovo TB128XU	7	B單開壞不開	7443
Other	Lenovo TB300XU	12	B單開壞不開	7444
Other	Lenovo TB328XU	1	B單開壞不開	7445
Other	Lenovo TB330XU	1	B單開壞不開	7446
Other	Lenovo TB350FU	2	B單開壞不開	7447
Other	Lenovo TB360ZU	1	B單開壞不開	7448
Other	Lenovo TB-7306	1	B單開壞不開	7449
Other	Lenovo TB-8505	2	B單開壞不開	7450
Other	Lenovo TB-J607Z	1	B單開壞不開	7451
Other	Lenovo TB-J616F	1	B單開壞不開	7452
Other	Lenovo TB-X104F	1	B單開壞不開	7453
Other	Lenovo TB-X605	8	B單開壞不開	7454
Other	Lenovo TB-X605F	3	B單開壞不開	7455
Other	Lenovo TB-X704	1	B單開壞不開	7456
Other	Lenovo YT-J706	3	B單開壞不開	7457
Other	Lenovo YT-X703F	1	B單開壞不開	7458
Other	Navon T400	1	B單開壞不開	7459
Other	Nothing Phone	2	B單開壞不開	7460
Other	Oppo A37	1	B單開壞不開	7461
Other	Oppo A7	2	B單開壞不開	7462
Other	Oppo A77(2017)	2	B單開壞不開	7463
Other	Oppo AX5	2	B單開壞不開	7464
Other	Oppo R11	1	B單開壞不開	7465
Other	OWN F1026	3	B單開壞不開	7466
Other	OWN Fun 5	1	B單開壞不開	7467
Other	OWN FUN 6	2	B單開壞不開	7468
Other	OWN S1	14	B單開壞不開	7469
Other	TCL 205	7	B單開壞不開	7470
Other	TCL 305	5	B單開壞不開	7471
Other	TCL 306	4	B單開壞不開	7472
Other	TCL 403	1	B單開壞不開	7473
Other	TCL 505	1	B單開壞不開	7474
Other	TCL T431	3	B單開壞不開	7475
Other	TCL TAB 10L	1	B單開壞不開	7476
Other	TCL TKEE MID 2	1	B單開壞不開	7477
Other	XiaoMi Mi 4	1	B單開壞不開	7478
Other	XiaoMi Mi 5S Plus	1	B單開壞不開	7479
Other	XiaoMi Mi A1	1	B單開壞不開	7480
Other	XiaoMi Mi A2 Lite	3	B單開壞不開	7481
Other	XiaoMi Mi Mix 3	1	B單開壞不開	7482
Other	XiaoMi Redmi 3S	3	B單開壞不開	7483
Other	XiaoMi Redmi 4	2	B單開壞不開	7484
Other	XiaoMi Redmi 4A	3	B單開壞不開	7485
Other	XiaoMi Redmi 4X	3	B單開壞不開	7486
Other	XiaoMi Redmi 6	2	B單開壞不開	7487
Other	XiaoMi Redmi 6A	1	B單開壞不開	7488
Other	XiaoMi Redmi 7	1	B單開壞不開	7489
Other	XiaoMi Redmi 7A	2	B單開壞不開	7490
Other	XiaoMi Redmi A1	13	B單開壞不開	7491
Other	XiaoMi Redmi A2	2	B單開壞不開	7492
Other	XiaoMi RedMi Note 3	2	B單開壞不開	7493
Other	XiaoMi Redmi Note 7	13	B單開壞不開	7494
Other	雜平板	25	B單開壞不開	7495
Other	雜電子書	1	B單開壞不開	7496
Samsung	A300	1	B單開壞不開	7497
Samsung	A300F	9	B單開壞不開	7498
Samsung	A310	12	B單開壞不開	7499
Samsung	A310(Demo)	6	B單開壞不開	7500
Samsung	A310F	6	B單開壞不開	7501
Samsung	A320	5	B單開壞不開	7502
Samsung	A320(Demo)	1	B單開壞不開	7503
Samsung	A320F	23	B單開壞不開	7504
Samsung	B550	1	B單開壞不開	7505
Samsung	E500	2	B單開壞不開	7506
Samsung	E700	1	B單開壞不開	7507
Samsung	G316	2	B單開壞不開	7508
Samsung	G357	1	B單開壞不開	7509
Samsung	G357F	6	B單開壞不開	7510
Samsung	G360F	2	B單開壞不開	7511
Samsung	G361F	5	B單開壞不開	7512
Samsung	G386	2	B單開壞不開	7513

Samsung	G388F	6	B單開壞不開	7514
Samsung	G389F	4	B單開壞不開	7515
Samsung	G390F	65	B單開壞不開	7516
Samsung	G398F	70	B單開壞不開	7517
Samsung	G530	2	B單開壞不開	7518
Samsung	G530F	6	B單開壞不開	7519
Samsung	G531	1	B單開壞不開	7520
Samsung	G531F	2	B單開壞不開	7521
Samsung	G532	7	B單開壞不開	7522
Samsung	G532F	4	B單開壞不開	7523
Samsung	G550	2	B單開壞不開	7524
Samsung	G570	25	B單開壞不開	7525
Samsung	G570F	3	B單開壞不開	7526
Samsung	G610	8	B單開壞不開	7527
Samsung	G610F	1	B單開壞不開	7528
Samsung	G611F	2	B單開壞不開	7529
Samsung	G7508	1	B單開壞不開	7530
Samsung	G800F	69	B單開壞不開	7531
Samsung	G850F	1	B單開壞不開	7532
Samsung	G890	1	B單開壞不開	7533
Samsung	G891	1	B單開壞不開	7534
Samsung	G900	2	B單開壞不開	7535
Samsung	G900F	2	B單開壞不開	7536
Samsung	G901F	2	B單開壞不開	7537
Samsung	G903F	1	B單開壞不開	7538
Samsung	G920F	16	B單開壞不開	7539
Samsung	G925F	1	B單開壞不開	7540
Samsung	I257	1	B單開壞不開	7541
Samsung	I337	9	B單開壞不開	7542
Samsung	I545	1	B單開壞不開	7543
Samsung	I5500	1	B單開壞不開	7544
Samsung	I5800	1	B單開壞不開	7545
Samsung	I705	2	B單開壞不開	7546
Samsung	i747	15	B單開壞不開	7547
Samsung	I8160	1	B單開壞不開	7548
Samsung	I8190	4	B單開壞不開	7549
Samsung	I8200	1	B單開壞不開	7550
Samsung	I8260	2	B單開壞不開	7551
Samsung	I8552	1	B單開壞不開	7552
Samsung	I9060	3	B單開壞不開	7553
Samsung	I9070	1	B單開壞不開	7554
Samsung	I9082	6	B單開壞不開	7555
Samsung	I9100	7	B單開壞不開	7556
Samsung	I9105	82	B單開壞不開	7557
Samsung	I9190	1	B單開壞不開	7558
Samsung	I9195	10	B單開壞不開	7559
Samsung	I9205	5	B單開壞不開	7560
Samsung	I9300	451	B單開壞不開	7561
Samsung	I9301	157	B單開壞不開	7562
Samsung	I9305	2	B單開壞不開	7563
Samsung	I9505	144	B單開壞不開	7564
Samsung	I9506	87	B單開壞不開	7565
Samsung	I9515	33	B單開壞不開	7566
Samsung	J100	8	B單開壞不開	7567
Samsung	J105	1	B單開壞不開	7568
Samsung	J110	108	B單開壞不開	7569
Samsung	J110F	2	B單開壞不開	7570
Samsung	J111	3	B單開壞不開	7571
Samsung	J120	65	B單開壞不開	7572
Samsung	J120F	5	B單開壞不開	7573
Samsung	J250	26	B單開壞不開	7574
Samsung	J250F	2	B單開壞不開	7575
Samsung	J260F	2	B單開壞不開	7576
Samsung	J3110	1	B單開壞不開	7577
Samsung	J320	31	B單開壞不開	7578
Samsung	J320F	181	B單開壞不開	7579
Samsung	J330	3	B單開壞不開	7580
Samsung	J330F	11	B單開壞不開	7581
Samsung	J337	1	B單開壞不開	7582
Samsung	J400	91	B單開壞不開	7583
Samsung	J400F	1	B單開壞不開	7584

Samsung	J415	2	B單開壞不開	7585
Samsung	J415F	8	B單開壞不開	7586
Samsung	J500	198	B單開壞不開	7587
Samsung	J500F	45	B單開壞不開	7588
Samsung	J510	52	B單開壞不開	7589
Samsung	J510F	8	B單開壞不開	7590
Samsung	J530	8	B單開壞不開	7591
Samsung	J530F	753	B單開壞不開	7592
Samsung	J600F	3	B單開壞不開	7593
Samsung	J610	6	B單開壞不開	7594
Samsung	J610F	4	B單開壞不開	7595
Samsung	J700	4	B單開壞不開	7596
Samsung	J700F	2	B單開壞不開	7597
Samsung	J701	22	B單開壞不開	7598
Samsung	J701F	4	B單開壞不開	7599
Samsung	J710	19	B單開壞不開	7600
Samsung	J710F	1	B單開壞不開	7601
Samsung	J727	4	B單開壞不開	7602
Samsung	J730	8	B單開壞不開	7603
Samsung	J730F	2	B單開壞不開	7604
Samsung	J737	4	B單開壞不開	7605
Samsung	J810F	1	B單開壞不開	7606
Samsung	L720	1	B單開壞不開	7607
Samsung	M919	2	B單開壞不開	7608
Samsung	N5100	1	B單開壞不開	7609
Samsung	N5110	3	B單開壞不開	7610
Samsung	N5120	1	B單開壞不開	7611
Samsung	N7000	2	B單開壞不開	7612
Samsung	N7100	3	B單開壞不開	7613
Samsung	N8010	12	B單開壞不開	7614
Samsung	N8020	1	B單開壞不開	7615
Samsung	N900	6	B單開壞不開	7616
Samsung	N910	3	B單開壞不開	7617
Samsung	N910F	2	B單開壞不開	7618
Samsung	N915	1	B單開壞不開	7619
Samsung	N920	1	B單開壞不開	7620
Samsung	N9208	1	B單開壞不開	7621
Samsung	N920F	1	B單開壞不開	7622
Samsung	P1000	2	B單開壞不開	7623
Samsung	P205	1	B單開壞不開	7624
Samsung	P3100	1	B單開壞不開	7625
Samsung	P3110	9	B單開壞不開	7626
Samsung	P3113	11	B單開壞不開	7627
Samsung	P5100	4	B單開壞不開	7628
Samsung	P5110	3	B單開壞不開	7629
Samsung	P5113	4	B單開壞不開	7630
Samsung	P5210	7	B單開壞不開	7631
Samsung	P5220	3	B單開壞不開	7632
Samsung	P550	1	B單開壞不開	7633
Samsung	P580	2	B單開壞不開	7634
Samsung	P600	3	B單開壞不開	7635
Samsung	P605	1	B單開壞不開	7636
Samsung	P6800	1	B單開壞不開	7637
Samsung	P7300	1	B單開壞不開	7638
Samsung	P7310	1	B單開壞不開	7639
Samsung	P7500	4	B單開壞不開	7640
Samsung	P7510	4	B單開壞不開	7641
Samsung	P8110	4	B單開壞不開	7642
Samsung	S134	3	B單開壞不開	7643
Samsung	S260	27	B單開壞不開	7644
Samsung	S357	1	B單開壞不開	7645
Samsung	S5310	1	B單開壞不開	7646
Samsung	S5830	2	B單開壞不開	7647
Samsung	S5839	1	B單開壞不開	7648
Samsung	S6802	1	B單開壞不開	7649
Samsung	S737	2	B單開壞不開	7650
Samsung	S7580	1	B單開壞不開	7651
Samsung	S7710	1	B單開壞不開	7652
Samsung	S968	2	B單開壞不開	7653
Samsung	T110	5	B單開壞不開	7654
Samsung	T113	4	B單開壞不開	7655

Samsung	T210	13	B單開壞不開	7656
Samsung	T2105	1	B單開壞不開	7657
Samsung	T211	1	B單開壞不開	7658
Samsung	T217	2	B單開壞不開	7659
Samsung	T220	5	B單開壞不開	7660
Samsung	T225	23	B單開壞不開	7661
Samsung	T230	2	B單開壞不開	7662
Samsung	T231	1	B單開壞不開	7663
Samsung	T280	11	B單開壞不開	7664
Samsung	T285	1	B單開壞不開	7665
Samsung	T290	1	B單開壞不開	7666
Samsung	T300	1	B單開壞不開	7667
Samsung	T307	30	B單開壞不開	7668
Samsung	T310	11	B單開壞不開	7669
Samsung	T315	3	B單開壞不開	7670
Samsung	T330	3	B單開壞不開	7671
Samsung	T335	2	B單開壞不開	7672
Samsung	T350	1	B單開壞不開	7673
Samsung	T365	6	B單開壞不開	7674
Samsung	T377	5	B單開壞不開	7675
Samsung	T378	2	B單開壞不開	7676
Samsung	T380	3	B單開壞不開	7677
Samsung	T385	2	B單開壞不開	7678
Samsung	T387	10	B單開壞不開	7679
Samsung	T390	1	B單開壞不開	7680
Samsung	T500	1	B單開壞不開	7681
Samsung	T520	5	B單開壞不開	7682
Samsung	T530	7	B單開壞不開	7683
Samsung	T533	1	B單開壞不開	7684
Samsung	T535	2	B單開壞不開	7685
Samsung	T537	1	B單開壞不開	7686
Samsung	T550	12	B單開壞不開	7687
Samsung	T555	1	B單開壞不開	7688
Samsung	T560	5	B單開壞不開	7689
Samsung	T561	3	B單開壞不開	7690
Samsung	T580	28	B單開壞不開	7691
Samsung	T585	1	B單開壞不開	7692
Samsung	T590	19	B單開壞不開	7693
Samsung	T700	2	B單開壞不開	7694
Samsung	T705	10	B單開壞不開	7695
Samsung	T710	19	B單開壞不開	7696
Samsung	T713	6	B單開壞不開	7697
Samsung	T715	1	B單開壞不開	7698
Samsung	T719	10	B單開壞不開	7699
Samsung	T800	15	B單開壞不開	7700
Samsung	T805	9	B單開壞不開	7701
Samsung	T810	2	B單開壞不開	7702
Samsung	T813	16	B單開壞不開	7703
Samsung	T815	8	B單開壞不開	7704
Samsung	T819	5	B單開壞不開	7705
Samsung	T889	1	B單開壞不開	7706
Samsung	T905	1	B單開壞不開	7707
Samsung	T999	8	B單開壞不開	7708
Vodafone	Smart V22	1	B單開壞不開	7709
Vodafone	V995	3	B單開壞不開	7710
Vodafone	VFD 200	1	B單開壞不開	7711
Vodafone	VFD 510	1	B單開壞不開	7712
Vodafone	VFD 513	1	B單開壞不開	7713
Vodafone	VFD 600	1	B單開壞不開	7714
Vodafone	VFD 610	14	B單開壞不開	7715
Vodafone	VFD 630	2	B單開壞不開	7716
Vodafone	VFD 700	2	B單開壞不開	7717
Vodafone	VFD 710	6	B單開壞不開	7718
Vodafone	VFD 720	3	B單開壞不開	7719
Vodafone	VFD 730	2	B單開壞不開	7720
Vodafone	VFD 900	3	B單開壞不開	7721
ZTE	ZTE A2017	1	B單開壞不開	7722
ZTE	ZTE B2017G	3	B單開壞不開	7723
ZTE	ZTE Blade 10	1	B單開壞不開	7724
ZTE	ZTE Blade 10 Smart	1	B單開壞不開	7725
ZTE	ZTE BLADE A212	1	B單開壞不開	7726

ZTE	ZTE Blade A31	2	B單開壞不開	7727
ZTE	ZTE Blade A33S	5	B單開壞不開	7728
ZTE	ZTE Blade A5(2020)	3	B單開壞不開	7729
ZTE	ZTE Blade A51	4	B單開壞不開	7730
ZTE	ZTE Blade A52	4	B單開壞不開	7731
ZTE	ZTE Blade A52 Lite	3	B單開壞不開	7732
ZTE	ZTE Blade A53 Pro	2	B單開壞不開	7733
ZTE	ZTE Blade A53+	10	B單開壞不開	7734
ZTE	ZTE Blade A530	1	B單開壞不開	7735
ZTE	ZTE Blade A54	2	B單開壞不開	7736
ZTE	ZTE Blade a610 Plus	1	B單開壞不開	7737
ZTE	ZTE Blade A7(2020)	4	B單開壞不開	7738
ZTE	ZTE Blade A71	17	B單開壞不開	7739
ZTE	ZTE Blade A73	3	B單開壞不開	7740
ZTE	ZTE Blade A7S	3	B單開壞不開	7741
ZTE	ZTE Blade L2	1	B單開壞不開	7742
ZTE	ZTE Blade L3	3	B單開壞不開	7743
ZTE	ZTE Blade L5 Plus	1	B單開壞不開	7744
ZTE	ZTE Blade S6	2	B單開壞不開	7745
ZTE	ZTE Blade V10 Vita	7	B單開壞不開	7746
ZTE	ZTE Blade V20 Smart	2	B單開壞不開	7747
ZTE	ZTE Blade V6	1	B單開壞不開	7748
ZTE	ZTE Blade V8 Lite	1	B單開壞不開	7749
ZTE	ZTE Blade X10	4	B單開壞不開	7750
ZTE	ZTE T85	1	B單開壞不開	7751
ZTE	ZTE Z981	1	B單開壞不開	7752
ZTE	ZTE Z999	1	B單開壞不開	7753
Alcatel	OT4019	1	主板	7754
Alcatel	OT4030	8	主板	7755
Alcatel	OT4033	19	主板	7756
Alcatel	OT4045	9	主板	7757
Alcatel	OT4046	1	主板	7758
Alcatel	OT5001	1	主板	7759
Alcatel	OT5010	1	主板	7760
Alcatel	OT5017	60	主板	7761
Alcatel	OT5033	1	主板	7762
Alcatel	OT5036	3	主板	7763
Alcatel	OT5042	81	主板	7764
Alcatel	OT5044	39	主板	7765
Alcatel	OT5050	36	主板	7766
Alcatel	OT5065	1	主板	7767
Alcatel	OT5080	1	主板	7768
Alcatel	OT6010	10	主板	7769
Alcatel	OT6012	17	主板	7770
Alcatel	OT6016	1	主板	7771
Alcatel	OT6030	13	主板	7772
Alcatel	OT6034	21	主板	7773
Alcatel	OT6036	30	主板	7774
Alcatel	OT6039	36	主板	7775
Alcatel	OT6045	1	主板	7776
Alcatel	OT6050	10	主板	7777
Alcatel	OT6055	4	主板	7778
Alcatel	OT8055	1	主板	7779
Alcatel	OT8062	1	主板	7780
Alcatel	OT808	1	主板	7781
Alcatel	OT9002	3	主板	7782
Alcatel	OT9010	1	主板	7783
Alcatel	OT902	3	主板	7784
Alcatel	OT-I216	1	主板	7785
Alcatel	OT-P310	1	主板	7786
Asus	Asus K012	1	主板	7787
Ericsson	C1504	17	主板	7788
Ericsson	C1904	20	主板	7789
Ericsson	C2104	7	主板	7790
Ericsson	C6502	8	主板	7791
Ericsson	C6906	11	主板	7792
Ericsson	D2004	16	主板	7793
Ericsson	D2206	4	主板	7794
Ericsson	D2303	44	主板	7795
Ericsson	D5503	2	主板	7796
Ericsson	D5803	4	主板	7797

Ericsson	D6503	4	主板	7798
Ericsson	D6603	3	主板	7799
Ericsson	E2006	1	主板	7800
Ericsson	E2306	115	主板	7801
Ericsson	E5653	2	主板	7802
Ericsson	E5823	3	主板	7803
Ericsson	E6553	1	主板	7804
Ericsson	E6653	2	主板	7805
Ericsson	E6853	1	主板	7806
Ericsson	F3111	1	主板	7807
Ericsson	F3113	6	主板	7808
Ericsson	F3313	8	主板	7809
Ericsson	G3313	19	主板	7810
Ericsson	G3412	2	主板	7811
Ericsson	G8141	1	主板	7812
Ericsson	I3312	1	主板	7813
Ericsson	ST21i	2	主板	7814
Ericsson	ST23i	5	主板	7815
Ericsson	W580	3	主板	7816
HTC	HTC U11	1	主板	7817
Huawei	Huawei AGS2-W09	1	主板	7818
Huawei	Huawei CAM-L21	1	主板	7819
Huawei	Huawei CUN-L01	1	主板	7820
Huawei	Huawei DIG-L01	1	主板	7821
Huawei	Huawei G6620	1	主板	7822
Huawei	Huawei G8	1	主板	7823
Huawei	Huawei LDN-L21	1	主板	7824
Huawei	Huawei NMO-L31	1	主板	7825
Huawei	Huawei P8 Lite	1	主板	7826
Huawei	Huawei P8 Lite 2017	2	主板	7827
Huawei	Huawei P9	2	主板	7828
Huawei	Huawei U8220	5	主板	7829
Huawei	Huawei Y330	1	主板	7830
Huawei	Huawei Y360	2	主板	7831
Huawei	Huawei Y560	2	主板	7832
Huawei	Huawei Y635	1	主板	7833
LG	D625	1	主板	7834
LG	D725	1	主板	7835
LG	D855	1	主板	7836
LG	D950	2	主板	7837
LG	E610	1	主板	7838
LG	E975	1	主板	7839
LG	H840	1	主板	7840
LG	K120	1	主板	7841
LG	K350	1	主板	7842
LG	K430	1	主板	7843
LG	X230	1	主板	7844
Motorola	XT2307	1	主板	7845
Nokia	435	1	主板	7846
Nokia	625	1	主板	7847
Nokia	630	1	主板	7848
Nokia	1020	1	主板	7849
Nokia	1320	1	主板	7850
Nokia	C3	1	主板	7851
Nokia	Nokia 1.3 Plus	1	主板	7852
Nokia	Nokia 6.2	1	主板	7853
Nokia	Nokia C1 Plus	1	主板	7854
Other	Google G011A	1	主板	7855
Other	Lenovo S6000	1	主板	7856
Other	Oppo A16K	1	主板	7857
Other	Oppo A17K	1	主板	7858
Other	Wiko getaway	1	主板	7859
Samsung	A105F	1	主板	7860
Samsung	A207	1	主板	7861
Samsung	A207F	1	主板	7862
Samsung	A300F	7	主板	7863
Samsung	A310	1	主板	7864
Samsung	A310F	32	主板	7865
Samsung	A320F	6	主板	7866
Samsung	A500F	2	主板	7867
Samsung	A510F	11	主板	7868

Samsung	A536B	1	主板	7869
Samsung	A720F	4	主板	7870
Samsung	G310	1	主板	7871
Samsung	G318	2	主板	7872
Samsung	G350F	1	主板	7873
Samsung	G355	4	主板	7874
Samsung	G360F	1	主板	7875
Samsung	G398F	1	主板	7876
Samsung	G531F	2	主板	7877
Samsung	G570	1	主板	7878
Samsung	G610	3	主板	7879
Samsung	G800F	5	主板	7880
Samsung	G850	1	主板	7881
Samsung	G900	16	主板	7882
Samsung	G900F	9	主板	7883
Samsung	G920	8	主板	7884
Samsung	G920F	11	主板	7885
Samsung	G925F	11	主板	7886
Samsung	G928	1	主板	7887
Samsung	G928F	3	主板	7888
Samsung	G930F	1	主板	7889
Samsung	G935F	1	主板	7890
Samsung	i605	11	主板	7891
Samsung	I8160	32	主板	7892
Samsung	I8260	1	主板	7893
Samsung	i8262	2	主板	7894
Samsung	i8550	1	主板	7895
Samsung	I9060	2	主板	7896
Samsung	I9070	9	主板	7897
Samsung	I9100	1	主板	7898
Samsung	I9195	2	主板	7899
Samsung	I9300	7	主板	7900
Samsung	I9305	2	主板	7901
Samsung	I9505	7	主板	7902
Samsung	J100	24	主板	7903
Samsung	J250	22	主板	7904
Samsung	J320F	18	主板	7905
Samsung	J330F	7	主板	7906
Samsung	J400	4	主板	7907
Samsung	J410	2	主板	7908
Samsung	J500	3	主板	7909
Samsung	J500F	5	主板	7910
Samsung	J510F	6	主板	7911
Samsung	J530F	1	主板	7912
Samsung	J610	1	主板	7913
Samsung	J700	1	主板	7914
Samsung	J700F	1	主板	7915
Samsung	J701	3	主板	7916
Samsung	J710	1	主板	7917
Samsung	J710F	7	主板	7918
Samsung	J730	1	主板	7919
Samsung	J730F	2	主板	7920
Samsung	J810	1	主板	7921
Samsung	L720	2	主板	7922
Samsung	N5100	1	主板	7923
Samsung	N7100	2	主板	7924
Samsung	N9005	1	主板	7925
Samsung	N910	7	主板	7926
Samsung	N9600	1	主板	7927
Samsung	P1000	2	主板	7928
Samsung	P5100	1	主板	7929
Samsung	P600	1	主板	7930
Samsung	P7300	1	主板	7931
Samsung	S5830	1	主板	7932
Samsung	S6500	1	主板	7933
Samsung	T230	2	主板	7934
Samsung	T310	2	主板	7935
Samsung	T395	1	主板	7936
Samsung	T500	1	主板	7937
Samsung	T520	1	主板	7938
Samsung	T531	1	主板	7939

Samsung	T595	1	主板	7940
Samsung	T705	1	主板	7941
Samsung	T713	4	主板	7942
Samsung	T715	1	主板	7943
Samsung	T810	1	主板	7944
Samsung	T825	1	主板	7945
Samsung	T999	3	主板	7946
Samsung	W708	1	主板	7947
VR	Samsung Gear VR	74	配件(New)	7948
手機手制	Moto Mods	21	配件(New)	7949
手錶	Huawei Band 7	3	配件(N.New)	7950
耳機	雜USB耳機	1	配件(N.New)	7951
冷風機	Nedis Smart Air Cooler 3L	14	配件(N.New)	7952
家用電話	ADOC K4	90	配件(N.New)	7953
家用電話	DT180	2	配件(N.New)	7954
家用電話	Homephone 4G	15	配件(N.New)	7955
家用電話	NEO 3850	4	配件(N.New)	7956
家用電話	NEO 3850(連耳機)	1	配件(N.New)	7957
家用電話	NEO 4800	2	配件(N.New)	7958
暖爐	Denver Smart Convector Heater SCH-2105	15	配件(N.New)	7959
遊戲卡	Nintendo Switch 遊戲卡	1	配件(N.New)	7960
電子磅	XiaoMi Body Composition Scale 2	14	配件(N.New)	7961
藍牙耳機	Plantronics CS540	1	配件(N.New)	7962
警報器	Vodafone Help Flash	3	配件(N.New)	7963
Dvd機	ALBA DVD機	1	配件	7964
Dvd機	HD95CX	2	配件	7965
Dvd機	PHILIP DVD機	14	配件	7966
Dvd機	Samsung DVD機	1	配件	7967
Dvd機	SPD3400C	1	配件	7968
GPS	Allterco Myki Spot	1	配件	7969
GPS	Blaupunkt GS02	12	配件	7970
GPS	Kippy Evo	14	配件	7971
GPS	Vodafone VST001	11	配件	7972
GPS	雜GPS	56	配件	7973
Other	雜手錶	145	配件	7974
Other	雜配件	419	配件	7975
TV	LG SMART TV 55 UQ751 UHD 4K	5	配件	7976
TV	LG SMART TV 55 UR781 UHD 4K	49	配件	7977
TV	LG SMART TV 65 UP751	1	配件	7978
TV	LG SMART TV 65 UQ751 UHD 4K	6	配件	7979
TV	LG SMART TV 65 UR781 UHD 4K	11	配件	7980
TV	LG SMART TV 75 75UR80 UHD 4K	1	配件	7981
TV	SAMSUNG SMART TV QLED 55 2023	4	配件	7982
TV	XiaoMi Smart TV A2 55 4K HDR10	66	配件	7983
TV	XiaoMi SMART TV A2 55 4K HDR10 KM0	1	配件	7984
TV	XiaoMi SMART TV P1E 65 4K HDR10	1	配件	7985
TV	XiaoMi SMART TV P1E 65 4K HDR10 KM0	1	配件	7986
Usb線	Apple原裝 Lightning to USB Cable	1	配件	7987
Usb線	Collect Type C-Type C Cable	1	配件	7988
Usb線	Collect USB-A-Lightning Cable	2	配件	7989
Usb線	Collect USB-A-Type C Cable	4	配件	7990
Usb線	Samsung原裝 Type-C to Type-C Cable	1	配件	7991
Usb線	Samsung原裝 USB-A to USB-C Cable	1	配件	7992
Usb線	Samsung原裝 USB-C to USB-C Cable	1	配件	7993
Usb線	原裝Samsung USB線	1	配件	7994
VR	Alcatel VR	1	配件	7995
VR	Samsung Gear VR	84	配件	7996
Wifi蛋插座	Netgear DC112A	3	配件	7997
天線	Cel-fi Solo KH41-9B-333	6	配件	7998
手機固定支架	BIGBEN SMARTPHONE BIKE HOLDER	1	配件	7999
手機信號增強器	NEXTIVITY CEL-FI RSWU1	409	配件	8000
手機套	Honor 70	19	配件	8001
手機套	Honor Magic 4 Lite	5	配件	8002
手機套	Honor X8	10	配件	8003
手機套	LG K22	10	配件	8004
手機套	Samsung A01	10	配件	8005
手機套	Samsung Galaxy S10	4	配件	8006
手機套	Silicon Case	8	配件	8007
手機套	XiaoMi Redmi 9C	10	配件	8008
手機套	原裝 Samsung A146	1	配件	8009
手錶	Amazfit GTS 2 Mini	4	配件	8010

手錶	Amazfit Stratos 3	1	配件	8011
手錶	Amozfit	1	配件	8012
手錶	Apple Watch SE 40mm	26	配件	8013
手錶	Apple Watch Series 1 38mm	8	配件	8014
手錶	Apple Watch Series 1 42mm	18	配件	8015
手錶	Apple Watch Series 2 38mm	3	配件	8016
手錶	Apple Watch Series 2 42mm	8	配件	8017
手錶	Apple Watch Series 3 38mm	61	配件	8018
手錶	Apple Watch Series 3 38mm Nike	1	配件	8019
手錶	Apple Watch Series 3 42mm	24	配件	8020
手錶	Apple Watch Series 4 40mm	11	配件	8021
手錶	Apple Watch Series 4 44mm	12	配件	8022
手錶	Apple Watch Series 5 40mm	14	配件	8023
手錶	Apple Watch Series 6 40mm	20	配件	8024
手錶	Apple Watch Series 6 40mm Nike	1	配件	8025
手錶	Apple Watch Series 6 44mm Nike	1	配件	8026
手錶	Apple Watch Series 7 45mm	18	配件	8027
手錶	Apple Watch Series 8 41mm	8	配件	8028
手錶	Apple Watch Series 8 45mm	15	配件	8029
手錶	Apple Watch series 9 41mm	2	配件	8030
手錶	Apple Watch Series 9 45mm	3	配件	8031
手錶	Apple Watch Series SE 40mm	9	配件	8032
手錶	Apple Watch Series SE2 40mm	27	配件	8033
手錶	Apple Watch Series SE2 44mm	9	配件	8034
手錶	Apple Watch Ultra 49mm	2	配件	8035
手錶	Asus WI501Q	1	配件	8036
手錶	Fitbit Charge 5	1	配件	8037
手錶	FITBIT FB409	2	配件	8038
手錶	FITBIT FB417	3	配件	8039
手錶	FITBIT FB421	14	配件	8040
手錶	FITBIT FB423	1	配件	8041
手錶	Fitbit FB504	7	配件	8042
手錶	FITBIT FB505	3	配件	8043
手錶	FITBIT FB507	11	配件	8044
手錶	FITBIT FB511	6	配件	8045
手錶	FITBIT FB512	1	配件	8046
手錶	FITBIT FB523	4	配件	8047
手錶	Fitbit 手錶	1	配件	8048
手錶	FOSSIL C1NF1	1	配件	8049
手錶	FOSSIL DW10F1	9	配件	8050
手錶	FOSSIL DW2B	2	配件	8051
手錶	FOSSIL DW4A	4	配件	8052
手錶	FOSSIL DW6F1	6	配件	8053
手錶	FOSSIL DW7F1	2	配件	8054
手錶	FOSSIL DW9F2	5	配件	8055
手錶	Huawei ADS-B29	2	配件	8056
手錶	Huawei Band 6	19	配件	8057
手錶	Huawei Band 7	2	配件	8058
手錶	Huawei TER-B19S	1	配件	8059
手錶	Huawei TIA-B09	1	配件	8060
手錶	LG W150	1	配件	8061
手錶	Mi Buds 3 Pro	9	配件	8062
手錶	Mi Buds Lite 3	71	配件	8063
手錶	Mi Watch 2 Lite	1	配件	8064
手錶	Mi Watch Lite	11	配件	8065
手錶	Moto 360 2nd Gen	1	配件	8066
手錶	Moto 360 3nd Gen	1	配件	8067
手錶	Motorola Moto 360	1	配件	8068
手錶	Oppo Band OB19B1	5	配件	8069
手錶	Redmi Band 2	1	配件	8070
手錶	Redmi Buds 3	27	配件	8071
手錶	Redmi Watch 2 Lite	11	配件	8072
手錶	Redmi Watch 3	2	配件	8073
手錶	Samsung L310	1	配件	8074
手錶	Samsung R220	17	配件	8075
手錶	Samsung R350	6	配件	8076
手錶	Samsung R360	3	配件	8077
手錶	Samsung R365	13	配件	8078
手錶	Samsung R370	15	配件	8079
手錶	Samsung R375	12	配件	8080
手錶	Samsung R380	2	配件	8081

手錶	Samsung R381	1	配件	8082
手錶	Samsung R500	31	配件	8083
手錶	Samsung R700	1	配件	8084
手錶	Samsung R720	20	配件	8085
手錶	Samsung R730	21	配件	8086
手錶	Samsung R732	10	配件	8087
手錶	Samsung R750	1	配件	8088
手錶	Samsung R810	8	配件	8089
手錶	Samsung R815	2	配件	8090
手錶	Samsung R820	183	配件	8091
手錶	Samsung R825	9	配件	8092
手錶	Samsung R830	47	配件	8093
手錶	Samsung R835	25	配件	8094
手錶	Samsung R840	6	配件	8095
手錶	Samsung R850	2	配件	8096
手錶	Samsung R880	56	配件	8097
手錶	Samsung R885	62	配件	8098
手錶	Samsung R890	299	配件	8099
手錶	Samsung R895	50	配件	8100
手錶	Samsung R915	1	配件	8101
手錶	Samsung雜手錶	1	配件	8102
手錶	Sony MN2	2	配件	8103
手錶	Sony RD-0140	2	配件	8104
手錶	SONY SW2	20	配件	8105
手錶	SONY SWR 30	1	配件	8106
手錶	SONY SWR10	214	配件	8107
手錶	Sony SWR50	5	配件	8108
手錶	Spacetalk ST2-4G-1	3	配件	8109
手錶	Spacetalk W525C	22	配件	8110
手錶	Vivo Move HR	1	配件	8111
手錶	Vodafone VKW001	11	配件	8112
手錶	XiaoMi Mi Band 4	1	配件	8113
手錶	XiaoMi Mi Band 6	3	配件	8114
手錶	XiaoMi Smart Band 7	1	配件	8115
手錶	XiaoMi XMSH07HM	1	配件	8116
手錶	XiaoMi 運動手錶AMAZFIT BIP	13	配件	8117
手錶	小米智能手環	8	配件	8118
手錶	兒童手錶	2	配件	8119
手錶	雜兒童手錶	337	配件	8120
手錶	雜智能手錶	2	配件	8121
手錶	雜智能手環	9	配件	8122
火牛	5V/3A + Type C Cable	3	配件	8123
火牛	Apple原裝兩腳火牛 5W(盒)	1	配件	8124
火牛	Collect 2.4A	7	配件	8125
火牛	Gyrux兩腳5V 3A充電器	36	配件	8126
火牛	iphone原裝火牛USB 5W(盒)	2	配件	8127
火牛	iphone原裝火牛USB 5W(單)	4	配件	8128
火牛	Samsung 15W PD USB-C	3	配件	8129
火牛	Samsung原裝 15W PD Power Adapter	4	配件	8130
火牛	Samsung原裝 15W PD Power Adapter USB-C	17	配件	8131
火牛	Sturdo 3A 20W USB/Type-C	2	配件	8132
火牛	Sturdo 3A 20W USB/Type-C + Cable	2	配件	8133
火牛	Sturdo PD Fast Type-C Cable	1	配件	8134
火牛	二合一5V/3A Micro USB/Type C	5	配件	8135
充電套裝	Gyrux兩腳5V 2.1A充電器+Micro USB套裝	43	配件	8136
充電座	LG CBG-700	1	配件	8137
充電線	ALTICE CABLE 3 IN 1	1	配件	8138
充電線	ALTICE HDMI 4K CABLE	3	配件	8139
充電線	ALTICE MICRO USB CABLE 2A	1	配件	8140
充電線	Gyrux Iphone充電線	57	配件	8141
充電線	Gyrux Type C充電線	73	配件	8142
充電線	Lighting to Type C	2	配件	8143
充電線	Lighting to USB Cable	12	配件	8144
充電線	Micro USB to USB Cable	16	配件	8145
充電線	MUVIT TRAVEL CHARGER	1	配件	8146
充電線	MUVIT USB CABLE 3.0M	2	配件	8147
充電線	NEOXEO BLUETOOTH AUDIO RECEIVER	1	配件	8148
充電寶	2500mAh	1	配件	8149
充電寶	2600mAh	20	配件	8150
充電寶	Busted Bus-PD-PD10AH 10000mAh	1	配件	8151
充電寶	Dus-wich-S10W-10	1	配件	8152

充電寶	EE E1-04 2600mAh	2	配件	8153
充電寶	T2000 2000mAh	1	配件	8154
充電寶	Volt 2600mAh	1	配件	8155
平板鍵盤	OT-P360X	1	配件	8156
打印機	HP PHOTO SMART 325	3	配件	8157
有線耳機	Huawei Headphones Lite	6	配件	8158
有線耳機	JBL Tune 110	1	配件	8159
有線耳機	JBL Tune 205	1	配件	8160
有線耳機	Nokia WB101	1	配件	8161
有線耳機	Proline Echo Buds Pro	1	配件	8162
耳機	Adoc BT01	2	配件	8163
耳機	iphone 5原裝耳機	6	配件	8164
耳機	Jabra HS C015	4	配件	8165
耳機	JBL Tune 110	46	配件	8166
耳機	JBL Tune 210	20	配件	8167
耳機	Motorola雜藍芽耳機	7	配件	8168
耳機	PLANTRONICS HW111N	6	配件	8169
耳機	Samsung HS1303原裝耳機	11	配件	8170
耳機	Samsung Type C 原裝耳機	5	配件	8171
耳機	USB C to 3.5mm 耳機轉換頭	2	配件	8172
耳機	原裝 Samsung 耳機	6	配件	8173
耳機	藍牙耳機ARICULAR BTH10	442	配件	8174
耳機	藍牙耳機Auricular BHT10	5	配件	8175
耳機	藍牙耳機Gyrux G930BL	64	配件	8176
耳機	藍牙耳機Jay S T4W01	2	配件	8177
耳機	藍牙耳機Motorola S305	20	配件	8178
耳機	藍牙耳機Nokia BH-200	442	配件	8179
耳機	藍牙耳機Nokia BH-209	1	配件	8180
耳機	藍牙耳機PLANTRONICS B235	1	配件	8181
耳機	藍牙耳機Plantronics CS540	11	配件	8182
耳機	藍牙耳機Plantronics CS540/HL10	3	配件	8183
耳機	藍牙耳機Plantronics EP310	1	配件	8184
耳機	藍牙耳機Plantronics EP320	4	配件	8185
耳機	藍牙耳機Samsung G920	1	配件	8186
耳機	藍牙耳機SAVI440	9	配件	8187
耳機	雜耳機	6	配件	8188
伺服器	Huawei Esight RH2288H V3	1	配件	8189
助聽器	Nokia LOOPSET LPS-5	64	配件	8190
車充	Cellect 3.4A 18W	1	配件	8191
車充	Gyrux Car Double USB	32	配件	8192
車充	Gyrux Cargador Auto QC 3.0	9	配件	8193
車充	車充連Apple充電線	10	配件	8194
車充	車充連TYPE C充電線	5	配件	8195
車充	原裝 Samsung 車充	1	配件	8196
兩腳圓頭火牛	Gyrux Quick Charge 2.0	67	配件	8197
信號發射器	Cisco Signal Box	276	配件	8198
信號發射器	Nokia Siemens Networks	24	配件	8199
信號增強器	4G Lte Signal Booster	22	配件	8200
信號增強器	Solid Home Repeater	1323	配件	8201
屏幕保護貼	屏幕保護貼 Ipad Pro 12.9	1	配件	8202
原裝手機套	Honor 70	4	配件	8203
原裝手機套	Honor Magic 4 Lite Series PC Case	8	配件	8204
原裝手機套	Honor X8	10	配件	8205
原裝手機套 Samsung	A225	3	配件	8206
原裝手機套 Samsung	A235	3	配件	8207
原裝手機套 Samsung	A325	1	配件	8208
原裝手機套 Samsung	A326	1	配件	8209
原裝手機套 Samsung	A336	1	配件	8210
原裝手機套 Samsung	A516	1	配件	8211
原裝手機套 Samsung	A525	2	配件	8212
原裝手機套 Samsung	A536	2	配件	8213
原裝手機套 Samsung	A725	4	配件	8214
原裝手機套 Samsung	A736	3	配件	8215
原裝充電套裝 Huawei	Huawei兩腳火牛5V/2A+Micro USB線	20	配件	8216
原裝充電線 Huawei	USB A to Micro USB	8	配件	8217
原裝充電線 Huawei	二合一USB A to Micro USB/Type C	2	配件	8218
家用電話	Panasonic KX-TG6821E	1	配件	8219
家用電話	雜家電	39	配件	8220
家居wifi	Apple Airport 2	1	配件	8221
家居wifi	Apple Airport 5	1	配件	8222
家居鏡頭	D-Link DCS-5222L	2	配件	8223

家居鏡頭	D-Link DCS-930L	2	配件	8224
家居鏡頭	D-Link DCS-942L	5	配件	8225
追蹤器	Localizador APT-210	3389	配件	8226
配件	Router R101配件	1245	配件	8227
喇叭\	Google H2C	1	配件	8228
喇叭\	Motorola車用藍芽喇叭	49	配件	8229
喇叭\	SONY雜喇叭	76	配件	8230
喇叭\	VF VISOR KIT	83	配件	8231
喇叭\	車用藍芽喇叭	2	配件	8232
喇叭\	藍牙喇叭Hndx Wireless Speaker HXP230	1	配件	8233
喇叭\	藍芽喇叭MK6100	10	配件	8234
喇叭\	藍芽喇叭PLANTRONICS P610	18	配件	8235
喇叭\	雜車用藍芽喇叭	17	配件	8236
喇叭\	雜喇叭	8	配件	8237
喇叭\	雜藍芽喇叭	21	配件	8238
無線充電座	Dusted 3 in 1 Wireless Charger	6	配件	8239
無線充電座	Fun+ Wireless Charger	16	配件	8240
無線充電座	Gigastone GA-9600B	2	配件	8241
無線充電座	Gigastone GA-9660B	6	配件	8242
無線充電座	Hama 10W Fast Charger	1	配件	8243
無線充電座	Robot Wireless Charge	1	配件	8244
無線充電器	Dusted DUS-CCH-10W	1	配件	8245
無線車充	Gyrux Soperte de Auto	15	配件	8246
感應器	Multipurpose Sensor	4	配件	8247
感應器	Zipato Indoor Siren	2	配件	8248
暖手蛋	LC-C300	1	配件	8249
電力線網路轉換器	Power Line	1491	配件	8250
電子磅	Huawei Body Fat Scale	1	配件	8251
電池	I-Phone 4S電池	151	配件	8252
電池	I-Phone 5電池	41	配件	8253
電池	I-Phone 6 Plus電池	75	配件	8254
電池	I-Phone 6S Plus電池	30	配件	8255
電池	I-Phone 6電池	53	配件	8256
電池	I-Phone 7 Plus電池	125	配件	8257
電池	I-Phone 7電池	70	配件	8258
電池	I-Phone 8 Plus電池	34	配件	8259
電池	I-Phone 8電池	86	配件	8260
電池	I-Phone XR電池	35	配件	8261
電池	I-Phone XS Max電池	31	配件	8262
電池	I-Phone XS電池	33	配件	8263
電池	I-Phone X電池	21	配件	8264
電容筆	Apple Pencil	5	配件	8265
電容筆	雜電容筆	2	配件	8266
網路信號發射器	Claro Wireless Q24CL001	191	配件	8267
遙控器	Apple TV遙控器 A1962	1	配件	8268
播放器	S400I	1	配件	8269
調製解調器	Adoc V1	135	配件	8270
機頂盒	Apple TV 3	1	配件	8271
機頂盒	BT DTR-T2100	1	配件	8272
機頂盒	BT TV Box Pro	2	配件	8273
機頂盒	DB-T2200	1	配件	8274
機頂盒	DIW350	1	配件	8275
機頂盒	DS183	142	配件	8276
機頂盒	DS700	169	配件	8277
機頂盒	HSV 4033	10	配件	8278
機頂盒	HSV4035	45	配件	8279
機頂盒	LG ST-600	477	配件	8280
機頂盒	SEC IPA 1114	22	配件	8281
機頂盒	Sky IP061	1	配件	8282
機頂盒	TV Box Pro	1	配件	8283
機頂盒	ZTE ZXV10 B866V2	3	配件	8284
機頂盒	雜機頂盒	2336	配件	8285
錶帶	Apple原裝錶帶 38mm	1	配件	8286
錶帶	Apple原裝錶帶 40mm	1	配件	8287
錶帶	Apple原裝錶帶 42mm	1	配件	8288
錶帶	Apple原裝錶帶 44mm	1	配件	8289
頭戴式耳機	Audrfono Blink 400	1	配件	8290
頭戴式耳機	JBL E35	1	配件	8291
頭戴式耳機	JBL T450	1	配件	8292
頭戴式耳機	SoundMagic P11S	1	配件	8293
頭戴式藍牙耳機	JBL JR300BT	1	配件	8294

頭戴式藍牙耳機	SoundMagic P22BT	1	配件	8295
頭戴式藍牙耳機	Urbanista Seattle	1	配件	8296
鍵盤	Apple Ipad Pro 11"	1	配件	8297
鍵盤	Lenovo Chromebook Keyboard	2	配件	8298
藍牙耳機	Astrum ET340	6	配件	8299
藍牙耳機	AWEI N1	5	配件	8300
藍牙耳機	Beats Powerbeats Pro	1	配件	8301
藍牙耳機	Beats Studio 3	1	配件	8302
藍牙耳機	Beats Studio Buds	1	配件	8303
藍牙耳機	BLIK Air600	50	配件	8304
藍牙耳機	Boom Buds Go	4	配件	8305
藍牙耳機	Bose Quiet Comfort 35 II	1	配件	8306
藍牙耳機	Bose Sound Sport Free	1	配件	8307
藍牙耳機	Choetech BHT02	1	配件	8308
藍牙耳機	Dusted Aura Pro	1	配件	8309
藍牙耳機	Dusted Earp Sleep	2	配件	8310
藍牙耳機	Hama My Voice 1500	6	配件	8311
藍牙耳機	Hama My Voice 700	3	配件	8312
藍牙耳機	Hama Spirit Go	2	配件	8313
藍牙耳機	Headpods Boompods	1	配件	8314
藍牙耳機	Honor Choice Earbuds X	1	配件	8315
藍牙耳機	Honor Choice Earbuds X3	1	配件	8316
藍牙耳機	Honor Earbuds CE79	5	配件	8317
藍牙耳機	Honor Earbuds X	4	配件	8318
藍牙耳機	Honor Earbuds X5	1	配件	8319
藍牙耳機	Huawei Free Buds 3	1	配件	8320
藍牙耳機	Huawei Free Buds 4i	2	配件	8321
藍牙耳機	Huawei Free Buds Pro	2	配件	8322
藍牙耳機	Huawei Free Buds SE	1	配件	8323
藍牙耳機	Huawei FreeBuds 3i	5	配件	8324
藍牙耳機	Huawei FreeBuds Lite	2	配件	8325
藍牙耳機	Jabra Elite 7 Active	1	配件	8326
藍牙耳機	JBL Audifones Tune 115TWS	8	配件	8327
藍牙耳機	LG HBS750	1	配件	8328
藍牙耳機	Marley EM-DE021	1	配件	8329
藍牙耳機	Master Dynamic MW07	1	配件	8330
藍牙耳機	Mi True Wireless Earphones 2 Basic	1	配件	8331
藍牙耳機	Nokia BH205	2	配件	8332
藍牙耳機	Oppo Enco W51	2	配件	8333
藍牙耳機	Philips TAH1205	5	配件	8334
藍牙耳機	Philips TAT2206	8	配件	8335
藍牙耳機	Philips TAT2236	43	配件	8336
藍牙耳機	Proline Wave Pods Pro	5	配件	8337
藍牙耳機	Redmi Buds 3 Lite	27	配件	8338
藍牙耳機	Redmi Buds 4 Active	6	配件	8339
藍牙耳機	Redmi Buds Lite	1	配件	8340
藍牙耳機	Samsung HM1000	2	配件	8341
藍牙耳機	Samsung R150	4	配件	8342
藍牙耳機	Samsung R170	2	配件	8343
藍牙耳機	Samsung R180	28	配件	8344
藍牙耳機	Skullcandy S1JTW	31	配件	8345
藍牙耳機	Skullcandy S2DMW	27	配件	8346
藍牙耳機	Skullcandy S2JTW	1	配件	8347
藍牙耳機	Sony Pulse 3D	1	配件	8348
藍牙耳機	XiaoMi TWSEJ01LS	1	配件	8349
藍牙耳機	XiaoMi TWSEJ061LS	4	配件	8350
藍牙耳機	Zero Boom Pods	40	配件	8351
藍牙耳機	雜藍牙耳機	1	配件	8352
藍牙喇叭	Amazon Echo Dot 2	1	配件	8353
藍牙喇叭	BLIK One	1	配件	8354
藍牙喇叭	BLIK Rockwood	1	配件	8355
藍牙喇叭	JBL GO 2	2	配件	8356
藍芽耳機	DEFUNC HYBRID	1	配件	8357
轉換插頭	原裝 Samsung USB-C 轉換頭	4	配件	8358
轉換線	Apple原裝 Lightning to Headphone Jack Adapter	1	配件	8359
轉換線	Huawei Type C Headphone Jack Adapter	2	配件	8360
寵物飲水機	XiaoMi Smart Pet Fountain	1	配件	8361
鏡頭	Smart Homy SH-Cano3w	7	配件	8362
鏡頭	Smart Homy Wifi Indoor Cam SH-CAM04W	16	配件	8363
Network Card	21M-02	9	New	8364
Network Card	AC501	195	New	8365

Network Card	APEX880	1	New	8366
Network Card	C889	1	New	8367
Network Card	CS-12	78	New	8368
Network Card	CS-18	23	New	8369
Network Card	CS-19	2	New	8370
Network Card	DWM-222	8	New	8371
Network Card	E122	2	New	8372
Network Card	E1630	2	New	8373
Network Card	E1820	5	New	8374
Network Card	E220	9	New	8375
Network Card	E230	2	New	8376
Network Card	E270	1	New	8377
Network Card	E3251	4	New	8378
Network Card	E3730	85	New	8379
Network Card	E3735	8	New	8380
Network Card	E5251	1	New	8381
Network Card	E5832	1	New	8382
Network Card	E585	1	New	8383
Network Card	E800	12	New	8384
Network Card	E881E	21	New	8385
Network Card	GE0301	11	New	8386
Network Card	GE0441	68	New	8387
Network Card	GI0335	4	New	8388
Network Card	GI0431	3	New	8389
Network Card	Icon 225	17	New	8390
Network Card	Icon 505	800	New	8391
Network Card	Icon 7.2S	1	New	8392
Network Card	K3520	2	New	8393
Network Card	K3520Z	11	New	8394
Network Card	K3565Z	7	New	8395
Network Card	K3571Z	18	New	8396
Network Card	K3760	5	New	8397
Network Card	K3771	2	New	8398
Network Card	K3772Z	28	New	8399
Network Card	K3773	13	New	8400
Network Card	K4201	1	New	8401
Network Card	K4203Z	29	New	8402
Network Card	K4305	1	New	8403
Network Card	K4505Z	24	New	8404
Network Card	K4607Z	66	New	8405
Network Card	K5006Z	1	New	8406
Network Card	MC950D	28	New	8407
Network Card	MC996D	7	New	8408
Network Card	MD@4GB	99	New	8409
Network Card	MD@Duo	20	New	8410
Network Card	MD@EXTREME42	20	New	8411
Network Card	MD@hsupa	10	New	8412
Network Card	MD@Mini	5	New	8413
Network Card	MD@revo	198	New	8414
Network Card	MD300	2	New	8415
Network Card	MF112	14	New	8416
Network Card	MF192	10	New	8417
Network Card	MF30	11	New	8418
Network Card	MF620	1	New	8419
Network Card	MF626	2	New	8420
Network Card	MF626i	18	New	8421
Network Card	MF627	24	New	8422
Network Card	MF635	25	New	8423
Network Card	MF637	1	New	8424
Network Card	MF637U	2	New	8425
Network Card	MF652	6	New	8426
Network Card	MF662	1	New	8427
Network Card	MF668	7	New	8428
Network Card	MF668A	1	New	8429
Network Card	MF669	6	New	8430
Network Card	MF680	5	New	8431
Network Card	MF920	19	New	8432
Network Card	MT191UP	1	New	8433
Network Card	OT-Y580	2	New	8434
Network Card	R201	1	New	8435
Network Card	R203Z	1	New	8436

Network Card	R205	4	New	8437
Network Card	R208	1	New	8438
Network Card	R209Z	20	New	8439
Network Card	UM100	65	New	8440
Network Card	USB 307	4	New	8441
Network Card	X090S	15	New	8442
Network Card	X220	17	New	8443
Network Card	X221	79	New	8444
Network Card	XU870	12	New	8445
Network Card	21M-02	3	14A	8446
Network Card	AC330	1	14A	8447
Network Card	AC880E	138	14A	8448
Network Card	B3740	2699	14A	8449
Network Card	Bmobile M5L	119	14A	8450
Network Card	CS-18	1	14A	8451
Network Card	DWM-157	8	14A	8452
Network Card	DWM-222	23	14A	8453
Network Card	DWR-932	1	14A	8454
Network Card	E122	1	14A	8455
Network Card	E173	1	14A	8456
Network Card	E1762	3	14A	8457
Network Card	E2010	1	14A	8458
Network Card	E272	1	14A	8459
Network Card	E352	1	14A	8460
Network Card	E3533	1	14A	8461
Network Card	E3730	505	14A	8462
Network Card	E3735	188	14A	8463
Network Card	E510	2	14A	8464
Network Card	E5330	3	14A	8465
Network Card	E5332	2	14A	8466
Network Card	E5830	8	14A	8467
Network Card	E5836	5	14A	8468
Network Card	E583C	1	14A	8469
Network Card	E585	1	14A	8470
Network Card	E586E	1	14A	8471
Network Card	E589	5	14A	8472
Network Card	EE40	6	14A	8473
Network Card	EE70	1	14A	8474
Network Card	GE0201	44	14A	8475
Network Card	GE0301	66	14A	8476
Network Card	Icon 7.2	1	14A	8477
Network Card	K4203	10	14A	8478
Network Card	K5008Z	1	14A	8479
Network Card	L100	1	14A	8480
Network Card	L800Z	2	14A	8481
Network Card	MD@	11	14A	8482
Network Card	MD@Duo	22	14A	8483
Network Card	MD@Mini	1	14A	8484
Network Card	MD@revo	55	14A	8485
Network Card	MF100	5	14A	8486
Network Card	MF110	2	14A	8487
Network Card	MF190	1	14A	8488
Network Card	MF192	37	14A	8489
Network Card	MF193	7	14A	8490
Network Card	MF30	11	14A	8491
Network Card	MF335	2385	14A	8492
Network Card	MF50	1	14A	8493
Network Card	MF51	137	14A	8494
Network Card	MF60	4	14A	8495
Network Card	MF622	21	14A	8496
Network Card	MF635	10	14A	8497
Network Card	MF636	1	14A	8498
Network Card	MF659	1	14A	8499
Network Card	MF668A	3	14A	8500
Network Card	MF680	2	14A	8501
Network Card	MF691	1	14A	8502
Network Card	MF79	402	14A	8503
Network Card	MF821	2	14A	8504
Network Card	MF920	669	14A	8505
Network Card	MIFI 2200	22	14A	8506
Network Card	Mifi 2352	2	14A	8507

Network Card	Mifi 3352	1	14A	8508
Network Card	Olive V-ME100	158	14A	8509
Network Card	Onda DT501HS	1	14A	8510
Network Card	Onda MH505UP	2	14A	8511
Network Card	Onda MH602hs	6	14A	8512
Network Card	R203Z	1	14A	8513
Network Card	R205	3	14A	8514
Network Card	R206	4	14A	8515
Network Card	R206Z	4	14A	8516
Network Card	R207	9	14A	8517
Network Card	R208	2	14A	8518
Network Card	R209	6	14A	8519
Network Card	R210	1	14A	8520
Network Card	R219Z	7	14A	8521
Network Card	Sapphire S1	114	14A	8522
Network Card	Turbo 7	9	14A	8523
Network Card	USB-8521	20	14A	8524
Network Card	V101F	4	14A	8525
Network Card	WM66H	552	14A	8526
Network Card	X500	1	14A	8527
Network Card	X602	13	14A	8528
Network Card	XS Box Go	6	14A	8529
Network Card	XS Box Go+	2	14A	8530
Network Card	XU870	2	14A	8531
Network Card	Y600	1	14A	8532
Network Card	Y800	6	14A	8533
Network Card	Y850	1	14A	8534
Network Card	Y853	5	14A	8535
Network Card	Y854	3	14A	8536
Network Card	Y855	1	14A	8537
Network Card	Z810	1	14A	8538
Network Card	21M-02	272	A單	8539
Network Card	AC2746	410	A單	8540
Network Card	AC310U	1	A單	8541
Network Card	AC318U	36	A單	8542
Network Card	AC326U	5	A單	8543
Network Card	AC330	2	A單	8544
Network Card	AC501	2	A單	8545
Network Card	AC503	126	A單	8546
Network Card	AC753S	629	A單	8547
Network Card	AC754S	1	A單	8548
Network Card	AC875	3	A單	8549
Network Card	AC880E	534	A單	8550
Network Card	AL621	3	A單	8551
Network Card	AL720	1	A單	8552
Network Card	ALM-N245	2	A單	8553
Network Card	APEX880	52	A單	8554
Network Card	Archos G9	6	A單	8555
Network Card	B3740	275	A單	8556
Network Card	Bmobile M5L	2	A單	8557
Network Card	BP3-USB	36	A單	8558
Network Card	BT71	1	A單	8559
Network Card	C170	48	A單	8560
Network Card	C278	47	A單	8561
Network Card	C597	59	A單	8562
Network Card	C885	2	A單	8563
Network Card	C888	26	A單	8564
Network Card	C889	23	A單	8565
Network Card	Cardman 6121	7	A單	8566
Network Card	CS-10	608	A單	8567
Network Card	CS-15	571	A單	8568
Network Card	CS-17	1359	A單	8569
Network Card	CS-18	766	A單	8570
Network Card	CS-19	246	A單	8571
Network Card	DC87-0	38	A單	8572
Network Card	DWM-156	2	A單	8573
Network Card	DWM-157	3	A單	8574
Network Card	DWM-222	27	A單	8575
Network Card	DWR-932	1	A單	8576
Network Card	E122	116	A單	8577
Network Card	E153	41	A單	8578

Network Card	E1556	1	A單	8579
Network Card	E156B	4	A單	8580
Network Card	E160	92	A單	8581
Network Card	E160E	1	A單	8582
Network Card	E161	6	A單	8583
Network Card	E1612	14	A單	8584
Network Card	E1630	47	A單	8585
Network Card	E1691	5	A單	8586
Network Card	E1692	1	A單	8587
Network Card	E170	2	A單	8588
Network Card	E172	9	A單	8589
Network Card	E173	3	A單	8590
Network Card	E1750	1	A單	8591
Network Card	E1752	15	A單	8592
Network Card	E1756	64	A單	8593
Network Card	E1756C	1	A單	8594
Network Card	E176	218	A單	8595
Network Card	E1762	47	A單	8596
Network Card	E1780	2	A單	8597
Network Card	E180	89	A單	8598
Network Card	E1800	2	A單	8599
Network Card	E1803	2	A單	8600
Network Card	E1820	12	A單	8601
Network Card	E1823	1	A單	8602
Network Card	E182E	53	A單	8603
Network Card	E192	2	A單	8604
Network Card	E2010	57	A單	8605
Network Card	E220	3	A單	8606
Network Card	E226	93	A單	8607
Network Card	E230	7	A單	8608
Network Card	E270	87	A單	8609
Network Card	E272	36	A單	8610
Network Card	E3131	25	A單	8611
Network Card	E3231	11	A單	8612
Network Card	E3251	1	A單	8613
Network Card	E3351	3	A單	8614
Network Card	E352	534	A單	8615
Network Card	E353	29	A單	8616
Network Card	E3533	3	A單	8617
Network Card	E367	3	A單	8618
Network Card	E372	1	A單	8619
Network Card	E3730	196	A單	8620
Network Card	E3735	234	A單	8621
Network Card	E510	142	A單	8622
Network Card	E5220	7	A單	8623
Network Card	E5251	9	A單	8624
Network Card	E5330	6	A單	8625
Network Card	E5332	4	A單	8626
Network Card	E5830	1	A單	8627
Network Card	E5832	2	A單	8628
Network Card	E5836	11	A單	8629
Network Card	E583C	156	A單	8630
Network Card	E585	23	A單	8631
Network Card	E586	62	A單	8632
Network Card	E586E	5	A單	8633
Network Card	E587	7	A單	8634
Network Card	E589	21	A單	8635
Network Card	E670	1	A單	8636
Network Card	E800	21	A單	8637
Network Card	E870	80	A單	8638
Network Card	E880	7	A單	8639
Network Card	E881E	139	A單	8640
Network Card	EC1260	267	A單	8641
Network Card	EC168	31	A單	8642
Network Card	EC325	2	A單	8643
Network Card	EE40	80	A單	8644
Network Card	EE60	1	A單	8645
Network Card	EE70	1	A單	8646
Network Card	EE71	24	A單	8647
Network Card	FXPRI	15	A單	8648
Network Card	G3-611U	3	A單	8649

Network Card	GE0201	144	A單	8650
Network Card	GE0202	15	A單	8651
Network Card	GE0301	191	A單	8652
Network Card	GE0302	3	A單	8653
Network Card	GE0441	5	A單	8654
Network Card	GE0442	18	A單	8655
Network Card	GI0335	105	A單	8656
Network Card	GI0401	9	A單	8657
Network Card	GI0431	229	A單	8658
Network Card	GI0451	150	A單	8659
Network Card	GI0643	29	A單	8660
Network Card	H9	72	A單	8661
Network Card	H900	10	A單	8662
Network Card	Icon 210	80	A單	8663
Network Card	Icon 225	307	A單	8664
Network Card	Icon 335	98	A單	8665
Network Card	Icon 505	548	A單	8666
Network Card	Icon 515	581	A單	8667
Network Card	Icon 7.2	6	A單	8668
Network Card	Inseego M2000	1	A單	8669
Network Card	K2540	65	A單	8670
Network Card	K3520	61	A單	8671
Network Card	K3520Z	48	A單	8672
Network Card	K3565	3	A單	8673
Network Card	K3565Z	422	A單	8674
Network Card	K3570Z	299	A單	8675
Network Card	K3571Z	149	A單	8676
Network Card	K3715	133	A單	8677
Network Card	K3760	186	A單	8678
Network Card	K3770	36	A單	8679
Network Card	K3770Z	1	A單	8680
Network Card	K3771	7	A單	8681
Network Card	K3772	44	A單	8682
Network Card	K3772Z	565	A單	8683
Network Card	K3773	23	A單	8684
Network Card	K3805Z	212	A單	8685
Network Card	K3806	7	A單	8686
Network Card	K3806Z	574	A單	8687
Network Card	K4201	60	A單	8688
Network Card	K4203	11	A單	8689
Network Card	K4203Z	837	A單	8690
Network Card	K4305	37	A單	8691
Network Card	K4505	534	A單	8692
Network Card	K4505Z	42	A單	8693
Network Card	K4510	3	A單	8694
Network Card	K4510Z	18	A單	8695
Network Card	K4511	200	A單	8696
Network Card	K4606	125	A單	8697
Network Card	K4607Z	258	A單	8698
Network Card	K5006Z	23	A單	8699
Network Card	K5008Z	7	A單	8700
Network Card	L800Z	7	A單	8701
Network Card	L850V	2	A單	8702
Network Card	LG LUU-2110TI	217	A單	8703
Network Card	LM003	4	A單	8704
Network Card	LM014	1	A單	8705
Network Card	M101	1162	A單	8706
Network Card	M5350	1	A單	8707
Network Card	M7350	3	A單	8708
Network Card	M950	1	A單	8709
Network Card	MC545	169	A單	8710
Network Card	MC547	55	A單	8711
Network Card	MC551	18	A單	8712
Network Card	MC679	375	A單	8713
Network Card	MC760	50	A單	8714
Network Card	MC930D	40	A單	8715
Network Card	MC950D	616	A單	8716
Network Card	MC990D	381	A單	8717
Network Card	MC996D	149	A單	8718
Network Card	MC998D	167	A單	8719
Network Card	MD@	731	A單	8720

Network Card	MD@4GB	26	A單	8721
Network Card	MD@EXTREME42	56	A單	8722
Network Card	MD@hsupa	265	A單	8723
Network Card	MD@Mini	27	A單	8724
Network Card	MD@revo	14	A單	8725
Network Card	MD300	85	A單	8726
Network Card	MD400	85	A單	8727
Network Card	MDC502HS	5	A單	8728
Network Card	MDC833UP	1	A單	8729
Network Card	MDC835UP	4	A單	8730
Network Card	MF100	133	A單	8731
Network Card	MF102	19	A單	8732
Network Card	MF110	293	A單	8733
Network Card	MF112	205	A單	8734
Network Card	MF170	24	A單	8735
Network Card	MF180	8	A單	8736
Network Card	MF190	88	A單	8737
Network Card	MF190A	9	A單	8738
Network Card	MF192	295	A單	8739
Network Card	MF193	26	A單	8740
Network Card	MF195	111	A單	8741
Network Card	MF197	4	A單	8742
Network Card	MF30	125	A單	8743
Network Card	MF362	2	A單	8744
Network Card	MF50	2	A單	8745
Network Card	MF51	132	A單	8746
Network Card	MF525UP	3	A單	8747
Network Card	MF60	24	A單	8748
Network Card	MF61	1	A單	8749
Network Card	MF616	3	A單	8750
Network Card	MF62	66	A單	8751
Network Card	MF620	1283	A單	8752
Network Card	MF622	1164	A單	8753
Network Card	MF626	85	A單	8754
Network Card	MF626i	30	A單	8755
Network Card	MF627	293	A單	8756
Network Card	MF628	109	A單	8757
Network Card	MF63	267	A單	8758
Network Card	MF630	4	A單	8759
Network Card	MF631	451	A單	8760
Network Card	MF632	593	A單	8761
Network Card	MF633+	38	A單	8762
Network Card	MF633BP+	8	A單	8763
Network Card	MF633R	31	A單	8764
Network Card	MF635	19	A單	8765
Network Card	MF636	51	A單	8766
Network Card	MF637	22	A單	8767
Network Card	MF645	83	A單	8768
Network Card	MF65	14	A單	8769
Network Card	MF652	195	A單	8770
Network Card	MF656	3	A單	8771
Network Card	MF656A	16	A單	8772
Network Card	MF660	452	A單	8773
Network Card	MF662	11	A單	8774
Network Card	MF665C	13	A單	8775
Network Card	MF665K	14	A單	8776
Network Card	MF667	64	A單	8777
Network Card	MF668	41	A單	8778
Network Card	MF668A	53	A單	8779
Network Card	MF669	223	A單	8780
Network Card	MF670	1	A單	8781
Network Card	MF680	195	A單	8782
Network Card	MF681	1	A單	8783
Network Card	MF710	2	A單	8784
Network Card	MF730M	11	A單	8785
Network Card	MF79	74	A單	8786
Network Card	MF80	34	A單	8787
Network Card	MF820	4	A單	8788
Network Card	MF821	3	A單	8789
Network Card	MF823	1	A單	8790
Network Card	MF833	1	A單	8791

Network Card	MF90	5	A單	8792
Network Card	MF90C	4	A單	8793
Network Card	MF91	2	A單	8794
Network Card	MF920	65	A單	8795
Network Card	MF937	6	A單	8796
Network Card	MF971	11	A單	8797
Network Card	MIFI 2200	17	A單	8798
Network Card	Mifi 2352	151	A單	8799
Network Card	Mifi 2372	819	A單	8800
Network Card	Mifi 3352	496	A單	8801
Network Card	Mifi 5510	7	A單	8802
Network Card	MIFI 5792	17	A單	8803
Network Card	Mifi 7000	1	A單	8804
Network Card	Mifi 7730	2	A單	8805
Network Card	MM515	1	A單	8806
Network Card	Modem 4S USB	110	A單	8807
Network Card	MT191UP	7	A單	8808
Network Card	MT505UP	1	A單	8809
Network Card	MT825UP	2	A單	8810
Network Card	MT833UP	2	A單	8811
Network Card	MW41	65	A單	8812
Network Card	MW70VK	1	A單	8813
Network Card	Olicard 100	40	A單	8814
Network Card	Olicard145	3	A單	8815
Network Card	Olive V-ME100	1121	A單	8816
Network Card	Onda DH502hs	1	A單	8817
Network Card	Onda DT501HS	2	A單	8818
Network Card	Onda MH505UP	7	A單	8819
Network Card	Onda MH600hs	8	A單	8820
Network Card	Onda MH602hs	10	A單	8821
Network Card	OT-Y580	754	A單	8822
Network Card	p537	415	A單	8823
Network Card	PHS300	11	A單	8824
Network Card	PN51T	1	A單	8825
Network Card	QDP	1949	A單	8826
Network Card	QX610C	35	A單	8827
Network Card	R201	14	A單	8828
Network Card	R203Z	32	A單	8829
Network Card	R205	276	A單	8830
Network Card	R206	8	A單	8831
Network Card	R206Z	3	A單	8832
Network Card	R207	1	A單	8833
Network Card	R209Z	4	A單	8834
Network Card	R210	14	A單	8835
Network Card	R212	37	A單	8836
Network Card	R218T	4	A單	8837
Network Card	R219Z	82	A單	8838
Network Card	R226Z	12	A單	8839
Network Card	R600	2	A單	8840
Network Card	R720	4	A單	8841
Network Card	R872	14	A單	8842
Network Card	Turbo 21 USB	2	A單	8843
Network Card	U6T900	1	A單	8844
Network Card	U9	130	A單	8845
Network Card	UM100	1	A單	8846
Network Card	UM175	2	A單	8847
Network Card	UML290	3	A單	8848
Network Card	USB 301	68	A單	8849
Network Card	USB 302	17	A單	8850
Network Card	USB 306	302	A單	8851
Network Card	USB 307	67	A單	8852
Network Card	USB 308	170	A單	8853
Network Card	USB 551	3	A單	8854
Network Card	USB-8521	77	A單	8855
Network Card	UW921T	17	A單	8856
Network Card	V101F	1	A單	8857
Network Card	W5101	4	A單	8858
Network Card	W600	33	A單	8859
Network Card	WM66	1	A單	8860
Network Card	WM66E	101	A單	8861
Network Card	WM66H	28	A單	8862

Network Card	WU160	1	A單	8863
Network Card	X020S	42	A單	8864
Network Card	X030	86	A單	8865
Network Card	X060S	15	A單	8866
Network Card	X080S	11	A單	8867
Network Card	X090S	96	A單	8868
Network Card	X100	116	A單	8869
Network Card	X200S	57	A單	8870
Network Card	X215	4	A單	8871
Network Card	X220	745	A單	8872
Network Card	X221	32	A單	8873
Network Card	X225	16	A單	8874
Network Card	X228L	7	A單	8875
Network Card	X230	935	A單	8876
Network Card	X232	3	A單	8877
Network Card	X310	3	A單	8878
Network Card	X500	1001	A單	8879
Network Card	X515	33	A單	8880
Network Card	X520D	4	A單	8881
Network Card	X580	1	A單	8882
Network Card	X600	56	A單	8883
Network Card	X602	259	A單	8884
Network Card	X715	2	A單	8885
Network Card	X950D	347	A單	8886
Network Card	XS Box Go	24	A單	8887
Network Card	XS Box Go+	9	A單	8888
Network Card	XS Box Go+ LTE 150	2	A單	8889
Network Card	XS STICK P14	105	A單	8890
Network Card	XS Stick TV	2	A單	8891
Network Card	XS STICK W100T	4	A單	8892
Network Card	XS Stick W12	33	A單	8893
Network Card	XS Stick W14	30	A單	8894
Network Card	XS STICK W21	69	A單	8895
Network Card	XU870	230	A單	8896
Network Card	Y610	39	A單	8897
Network Card	Y800	10	A單	8898
Network Card	Y850	2	A單	8899
Network Card	Y853	38	A單	8900
Network Card	Y854	10	A單	8901
Network Card	Y855	17	A單	8902
Network Card	Y858	2	A單	8903
Network Card	Y859	26	A單	8904
Network Card	Z810	654	A單	8905
Network Card	21M-02	15	C單	8906
Network Card	AC2746	3	C單	8907
Network Card	AC310U	178	C單	8908
Network Card	AC312U	2	C單	8909
Network Card	AC313U	1	C單	8910
Network Card	AC318U	3	C單	8911
Network Card	AC319U	18	C單	8912
Network Card	AC320U	1	C單	8913
Network Card	AC330U	2	C單	8914
Network Card	AC753S	7	C單	8915
Network Card	AC760S	1	C單	8916
Network Card	AC762S	10	C單	8917
Network Card	AC763S	2	C單	8918
Network Card	AC790S	1	C單	8919
Network Card	AC875U	18	C單	8920
Network Card	AC880U	1	C單	8921
Network Card	Airbox	3	C單	8922
Network Card	AL621	1	C單	8923
Network Card	APEX880	9	C單	8924
Network Card	Archos G9	1	C單	8925
Network Card	AX225	2	C單	8926
Network Card	B3740	1	C單	8927
Network Card	BP3-USB	12	C單	8928
Network Card	C170	40	C單	8929
Network Card	C278	28	C單	8930
Network Card	C597	3	C單	8931
Network Card	C885	39	C單	8932
Network Card	C888	39	C單	8933

Network Card	C889	299	C單	8934
Network Card	CS-10	49	C單	8935
Network Card	CS-15	139	C單	8936
Network Card	CS-17	70	C單	8937
Network Card	CS-18	385	C單	8938
Network Card	CS-19	135	C單	8939
Network Card	D311	6	C單	8940
Network Card	DC87-0	16	C單	8941
Network Card	DWM-222	5	C單	8942
Network Card	E122	87	C單	8943
Network Card	E153	2	C單	8944
Network Card	E1550	2	C單	8945
Network Card	E156G	1	C單	8946
Network Card	E160	9	C單	8947
Network Card	E160E	17	C單	8948
Network Card	E1612	1	C單	8949
Network Card	E1630	6	C單	8950
Network Card	E166	2	C單	8951
Network Card	E169	3	C單	8952
Network Card	E1691	2	C單	8953
Network Card	E1692	4	C單	8954
Network Card	E169G	1	C單	8955
Network Card	E170	47	C單	8956
Network Card	E172	45	C單	8957
Network Card	E173	3	C單	8958
Network Card	E1735	1	C單	8959
Network Card	E1750	4	C單	8960
Network Card	E1750C	1	C單	8961
Network Card	E1752	16	C單	8962
Network Card	E1756	19	C單	8963
Network Card	E1756C	9	C單	8964
Network Card	E176	54	C單	8965
Network Card	E1762	29	C單	8966
Network Card	E1780	27	C單	8967
Network Card	E180	80	C單	8968
Network Card	E1800	3	C單	8969
Network Card	E181	13	C單	8970
Network Card	E1820	3	C單	8971
Network Card	E1823	21	C單	8972
Network Card	E182E	10	C單	8973
Network Card	E188	41	C單	8974
Network Card	E220	17	C單	8975
Network Card	E226	1	C單	8976
Network Card	E230	1	C單	8977
Network Card	E270	66	C單	8978
Network Card	E272	6	C單	8979
Network Card	E3131	6	C單	8980
Network Card	E3231	3	C單	8981
Network Card	E3251	2	C單	8982
Network Card	E3256	7	C單	8983
Network Card	E3351	1	C單	8984
Network Card	E352	61	C單	8985
Network Card	E353	109	C單	8986
Network Card	E3531	30	C單	8987
Network Card	E3533	47	C單	8988
Network Card	E367	2	C單	8989
Network Card	E372	13	C單	8990
Network Card	E392	1	C單	8991
Network Card	E510	5	C單	8992
Network Card	E5220	8	C單	8993
Network Card	E5251	4	C單	8994
Network Card	E5332	2	C單	8995
Network Card	E5830	3	C單	8996
Network Card	E5836	4	C單	8997
Network Card	E583C	35	C單	8998
Network Card	E585	10	C單	8999
Network Card	E586E	9	C單	9000
Network Card	E620	1	C單	9001
Network Card	E660A	27	C單	9002
Network Card	E870	5	C單	9003
Network Card	EC168	2	C單	9004

Network Card	EDG0200	11	C單	9005
Network Card	EE40	24	C單	9006
Network Card	EE70	84	C單	9007
Network Card	GC82	4	C單	9008
Network Card	GE0201	1	C單	9009
Network Card	GI0335	35	C單	9010
Network Card	GI0431	113	C單	9011
Network Card	GI0451	31	C單	9012
Network Card	GINI SPOT M1	13	C單	9013
Network Card	GT3GEMEA	3	C單	9014
Network Card	H9	129	C單	9015
Network Card	Icon 210	17	C單	9016
Network Card	Icon 225	19	C單	9017
Network Card	Icon 322	238	C單	9018
Network Card	Icon 505	45	C單	9019
Network Card	Icon 515	180	C單	9020
Network Card	Icon 7.2	4	C單	9021
Network Card	K2525	1	C單	9022
Network Card	K2540	11	C單	9023
Network Card	K3520	23	C單	9024
Network Card	K3520Z	11	C單	9025
Network Card	K3565	7	C單	9026
Network Card	K3565Z	38	C單	9027
Network Card	K3570Z	13	C單	9028
Network Card	K3571Z	9	C單	9029
Network Card	K3715	69	C單	9030
Network Card	K3760	65	C單	9031
Network Card	K3765	124	C單	9032
Network Card	K3765Z	49	C單	9033
Network Card	K3770	8	C單	9034
Network Card	K3770Z	1	C單	9035
Network Card	K3772	6	C單	9036
Network Card	K3772Z	28	C單	9037
Network Card	K3773	1	C單	9038
Network Card	K3805Z	40	C單	9039
Network Card	K3806	14	C單	9040
Network Card	K3806Z	47	C單	9041
Network Card	K4201	21	C單	9042
Network Card	K4201Z	12	C單	9043
Network Card	K4203	4	C單	9044
Network Card	K4203Z	178	C單	9045
Network Card	K4305	3	C單	9046
Network Card	K4505	73	C單	9047
Network Card	K4505Z	21	C單	9048
Network Card	K4510	28	C單	9049
Network Card	K4510Z	10	C單	9050
Network Card	K4511	39	C單	9051
Network Card	K4605	6	C單	9052
Network Card	K4606	7	C單	9053
Network Card	K4607Z	20	C單	9054
Network Card	K5006Z	4	C單	9055
Network Card	K5160	1	C單	9056
Network Card	L100	21	C單	9057
Network Card	L800Z	24	C單	9058
Network Card	L850V	2	C單	9059
Network Card	LG LUU-2110TI	10	C單	9060
Network Card	LM003	3	C單	9061
Network Card	M101	138	C單	9062
Network Card	MC545	19	C單	9063
Network Card	MC547	5	C單	9064
Network Card	MC679	12	C單	9065
Network Card	MC930D	51	C單	9066
Network Card	MC950D	608	C單	9067
Network Card	MC990D	49	C單	9068
Network Card	MC996D	20	C單	9069
Network Card	MC998D	70	C單	9070
Network Card	MD@EXTREME42	2	C單	9071
Network Card	MD@hsupa	1	C單	9072
Network Card	MD@Mini	8	C單	9073
Network Card	MD300	2	C單	9074
Network Card	MD400	52	C單	9075

Network Card	MDC835UP	7	C單	9076
Network Card	MF100	44	C單	9077
Network Card	MF110	47	C單	9078
Network Card	MF112	21	C單	9079
Network Card	MF161	4	C單	9080
Network Card	MF170	3	C單	9081
Network Card	MF180	9	C單	9082
Network Card	MF190	550	C單	9083
Network Card	MF190A	2	C單	9084
Network Card	MF192	62	C單	9085
Network Card	MF193	108	C單	9086
Network Card	MF195	7	C單	9087
Network Card	MF197	4	C單	9088
Network Card	MF30	197	C單	9089
Network Card	MF50	1	C單	9090
Network Card	MF51	17	C單	9091
Network Card	MF60	46	C單	9092
Network Card	MF61	1	C單	9093
Network Card	MF62	27	C單	9094
Network Card	MF622	59	C單	9095
Network Card	MF626	393	C單	9096
Network Card	MF626i	13	C單	9097
Network Card	MF627	1	C單	9098
Network Card	MF628	30	C單	9099
Network Card	MF63	6	C單	9100
Network Card	MF630	4	C單	9101
Network Card	MF631	97	C單	9102
Network Card	MF633+	49	C單	9103
Network Card	MF633BP+	31	C單	9104
Network Card	MF635	3	C單	9105
Network Card	MF636	366	C單	9106
Network Card	MF637	128	C單	9107
Network Card	MF64	7	C單	9108
Network Card	MF645	2	C單	9109
Network Card	MF65	11	C單	9110
Network Card	MF652	8	C單	9111
Network Card	MF653C	1	C單	9112
Network Card	MF660	21	C單	9113
Network Card	MF662	3	C單	9114
Network Card	MF665C	7	C單	9115
Network Card	MF665K	5	C單	9116
Network Card	MF667	16	C單	9117
Network Card	MF668	248	C單	9118
Network Card	MF668A	250	C單	9119
Network Card	MF669	469	C單	9120
Network Card	MF680	56	C單	9121
Network Card	MF70	1	C單	9122
Network Card	MF710	53	C單	9123
Network Card	MF730M	39	C單	9124
Network Card	MF80	5	C單	9125
Network Card	MF820	11	C單	9126
Network Card	MF821	11	C單	9127
Network Card	MF821D	1	C單	9128
Network Card	MF823	4	C單	9129
Network Card	MF831	1	C單	9130
Network Card	MF880	2	C單	9131
Network Card	MF90	26	C單	9132
Network Card	MF93D	16	C單	9133
Network Card	MF96	1	C單	9134
Network Card	MF970	10	C單	9135
Network Card	MF971	2	C單	9136
Network Card	Mifi 2352	10	C單	9137
Network Card	Mifi 2372	322	C單	9138
Network Card	Mifi 3352	4	C單	9139
Network Card	MIFI 5792	96	C單	9140
Network Card	Mifi 7000	1	C單	9141
Network Card	MT191UP	3	C單	9142
Network Card	MT833UP	2	C單	9143
Network Card	MT835UP	1	C單	9144
Network Card	MW40	3	C單	9145
Network Card	MW41TM	4	C單	9146

Network Card	Olicard 100	3	C單	9147
Network Card	Olicard145	1	C單	9148
Network Card	Olive V-ME100	21	C單	9149
Network Card	OT-Y580	411	C單	9150
Network Card	p537	1295	C單	9151
Network Card	QDP	1072	C單	9152
Network Card	QX610C	18	C單	9153
Network Card	R201	26	C單	9154
Network Card	R203Z	18	C單	9155
Network Card	R205	16	C單	9156
Network Card	R206	20	C單	9157
Network Card	R206Z	2	C單	9158
Network Card	R207	1	C單	9159
Network Card	R208	101	C單	9160
Network Card	R209Z	34	C單	9161
Network Card	R210	24	C單	9162
Network Card	R212	13	C單	9163
Network Card	R226Z	5	C單	9164
Network Card	U9	11	C單	9165
Network Card	USB 301	31	C單	9166
Network Card	USB 306	29	C單	9167
Network Card	USB 307	3	C單	9168
Network Card	USB 308	723	C單	9169
Network Card	USB-8521	110	C單	9170
Network Card	UXS1	3	C單	9171
Network Card	W600	1	C單	9172
Network Card	W800Z	22	C單	9173
Network Card	WM66E	5	C單	9174
Network Card	WM66H	2	C單	9175
Network Card	X020S	9	C單	9176
Network Card	X030	192	C單	9177
Network Card	X050	1	C單	9178
Network Card	X060S	8	C單	9179
Network Card	X080S	2	C單	9180
Network Card	X090S	16	C單	9181
Network Card	X100	13	C單	9182
Network Card	X200S	3	C單	9183
Network Card	X215	1	C單	9184
Network Card	X220	163	C單	9185
Network Card	X221	2	C單	9186
Network Card	X225	11	C單	9187
Network Card	X230	172	C單	9188
Network Card	X310	5	C單	9189
Network Card	X500	926	C單	9190
Network Card	X515	3	C單	9191
Network Card	X520D	12	C單	9192
Network Card	X600	2	C單	9193
Network Card	X602	9	C單	9194
Network Card	X715	1	C單	9195
Network Card	X950D	52	C單	9196
Network Card	XS Box Go	6	C單	9197
Network Card	XS Box Go+	3	C單	9198
Network Card	XS Box Go+ LTE	3	C單	9199
Network Card	XS Stick TV	1	C單	9200
Network Card	XS STICK W100T	3	C單	9201
Network Card	XS Stick W12	3	C單	9202
Network Card	XS Stick W14	9	C單	9203
Network Card	XS STICK W21	4	C單	9204
Network Card	Y600	9	C單	9205
Network Card	Y610	1	C單	9206
Network Card	Y800	295	C單	9207
Network Card	Y853	15	C單	9208
Network Card	Y854	12	C單	9209
Network Card	Y855	20	C單	9210
Network Card	Y858	3	C單	9211
Network Card	Z810	61	C單	9212
Router	ADOC V4	12	盒裝	9213
Router	ARCHER VR900	85	盒裝	9214
Router	B115	1	盒裝	9215
Router	B153	829	盒裝	9216
Router	B183	420	盒裝	9217

Router	B200	7	盒裝	9218
Router	B260a	2	盒裝	9219
Router	B612	117	盒裝	9220
Router	B660	7	盒裝	9221
Router	B683	1	盒裝	9222
Router	B970	3	盒裝	9223
Router	Bright Box 1 Wireless Router	1	盒裝	9224
Router	BT Smart Hub	1	盒裝	9225
Router	BT Wifi Disc	2	盒裝	9226
Router	C6300	8	盒裝	9227
Router	CG3000	4	盒裝	9228
Router	CG3100	2	盒裝	9229
Router	CISCO USC 7330	83	盒裝	9230
Router	D100	29	盒裝	9231
Router	DSL-2740	225	盒裝	9232
Router	E5180	5	盒裝	9233
Router	E8238	172	盒裝	9234
Router	E8258	137	盒裝	9235
Router	E8259	93	盒裝	9236
Router	E968	5	盒裝	9237
Router	EE HH10E	35	盒裝	9238
Router	EE HH10E(有碼)	297	盒裝	9239
Router	EE Smart Hub	1	盒裝	9240
Router	EE Smart Hub SH20A	2	盒裝	9241
Router	EE Smart Hub SH31B	3	盒裝	9242
Router	EE Smart Router	1	盒裝	9243
Router	ETS1160	3	盒裝	9244
Router	ETS1161	3	盒裝	9245
Router	ETS1162	5	盒裝	9246
Router	Fritz! Box 6890 LTE	2	盒裝	9247
Router	H500S	123	盒裝	9248
Router	HG553	68	盒裝	9249
Router	HG658	6	盒裝	9250
Router	HG659	2	盒裝	9251
Router	HHG2500	4	盒裝	9252
Router	Huawei Edge ONT	3	盒裝	9253
Router	Hybrid Connet	5	盒裝	9254
Router	IOLAPS FCT-600	1	盒裝	9255
Router	KAON AR2040	8	盒裝	9256
Router	KAON PG2141N	14	盒裝	9257
Router	KAON PG2449	2	盒裝	9258
Router	MF10	2437	盒裝	9259
Router	MF255	3	盒裝	9260
Router	MF25A	80	盒裝	9261
Router	MF293	1	盒裝	9262
Router	Movistar GPT-2541GNAC	304	盒裝	9263
Router	Netgear 2020	70	盒裝	9264
Router	Netgear 3000	5	盒裝	9265
Router	Netgear DC112A	3	盒裝	9266
Router	Netgear DG834GU	4	盒裝	9267
Router	R101	349	盒裝	9268
Router	RT880	86	盒裝	9269
Router	Sagemcom 2704N	1	盒裝	9270
Router	Teletu Onenet	4304	盒裝	9271
Router	TG589	1	盒裝	9272
Router	TG797	49	盒裝	9273
Router	TG799	15	盒裝	9274
Router	TP-LINK TD-W8960N	109	盒裝	9275
Router	TP-LINK TLWR840N	52	盒裝	9276
Router	TP-Link VX230V	1	盒裝	9277
Router	VDF4960	1	盒裝	9278
Router	Vodafone THG3000	4	盒裝	9279
Router	Vox 2.5 XDSL	77	盒裝	9280
Router	VR2100	1	盒裝	9281
Router	WF723	1059	盒裝	9282
Router	WLD71-T4	77	盒裝	9283
Router	ZTE W300	24619	盒裝	9284
Router	3G10W	15	單機	9285
Router	3G25W	1	單機	9286
Router	3G27W	7	單機	9287
Router	3G42W	1	單機	9288

Router	ACCESS Q3	1	單機	9289
Router	ADOC V4	2	單機	9290
Router	B115	2	單機	9291
Router	B153	179	單機	9292
Router	B183	412	單機	9293
Router	B200	1	單機	9294
Router	B260	1	單機	9295
Router	B68L	5	單機	9296
Router	B882	5	單機	9297
Router	B970	6	單機	9298
Router	BC-4GMCPGA	105	單機	9299
Router	Bright Box 1 Wireless Router	11	單機	9300
Router	Bright Box 2 Wireless Router	5	單機	9301
Router	Bright Box Wireless Router	2	單機	9302
Router	BT 2700HGV	1	單機	9303
Router	BT Business Hub 5	1	單機	9304
Router	BT Home Hub 2.0	1	單機	9305
Router	BT Home Hub 3.0	1	單機	9306
Router	BT Home Hub 4.0	5	單機	9307
Router	BT Home Hub 5	4	單機	9308
Router	BT Smart Hub	7	單機	9309
Router	BT Smart Hub 2	7	單機	9310
Router	C6300	1	單機	9311
Router	CG3100	1	單機	9312
Router	D100	24	單機	9313
Router	D105	1	單機	9314
Router	D-Link DSL-2780	1	單機	9315
Router	DSL-3782	1	單機	9316
Router	DV7213-BT	1	單機	9317
Router	E5180	1	單機	9318
Router	E5186S	1	單機	9319
Router	E8258	2	單機	9320
Router	E968	1	單機	9321
Router	EE HH10E	7	單機	9322
Router	EE HH10E(有碼)	27	單機	9323
Router	EE Smart Hub	7	單機	9324
Router	EE Smart Hub SH20A	1	單機	9325
Router	EE Smart Hub SH31B	2	單機	9326
Router	EE Smart Router	2	單機	9327
Router	EE Smart Wifi Disc	1	單機	9328
Router	EE Smart Wifi SW10A	1	單機	9329
Router	ETS1160	1	單機	9330
Router	ETS1162	2	單機	9331
Router	F656	28	單機	9332
Router	FAST286	65	單機	9333
Router	H500S	1	單機	9334
Router	HG553	3907	單機	9335
Router	HG556	1168	單機	9336
Router	HG633	1	單機	9337
Router	HH41NH	1	單機	9338
Router	Hybrid Connet	7	單機	9339
Router	KAON AR2040	1	單機	9340
Router	KAON PG2141N	3	單機	9341
Router	KAON PG2449	4	單機	9342
Router	Locatel Truck Pro 4G	1	單機	9343
Router	LTE 4506	5	單機	9344
Router	MBR1210C	3	單機	9345
Router	MBR1516	10	單機	9346
Router	MF10	206	單機	9347
Router	MF253	13	單機	9348
Router	MF255	4	單機	9349
Router	MF25A	5	單機	9350
Router	MF28	8	單機	9351
Router	MF283	71	單機	9352
Router	MF29	64	單機	9353
Router	MF293	5	單機	9354
Router	MF608	4	單機	9355
Router	MT992	1	單機	9356
Router	NETGEAR 1210	19	單機	9357
Router	Netgear 2020	78	單機	9358
Router	Netgear 3000	91	單機	9359

Router	Netgear VMB4000	1	單機	9360
Router	R101	69	單機	9361
Router	R520	4	單機	9362
Router	R90	2	單機	9363
Router	RL302	21	單機	9364
Router	RT880	1117	單機	9365
Router	Technicolor DGA0122NLK	1	單機	9366
Router	Teletu Onenet	2	單機	9367
Router	TG797	26	單機	9368
Router	TG799	13	單機	9369
Router	VDF4960	101	單機	9370
Router	Vodafone THG3000	2	單機	9371
Router	W35	6	單機	9372
Router	WA8021V5	2	單機	9373
Router	WF723	92	單機	9374
Router	WLD71-T4	38	單機	9375
Router	WS7100	3	單機	9376
Router	ZTE W300	633	單機	9377
Router	雜路由器	54	單機	9378