



# Shark Navigator HEPA Filter Replacement

Replace the HEPA filter

Written By: Heather Shanks



## INTRODUCTION

When cleaning the HEPA filter does not improve your vacuum's suction, it is time to replace it.

## Step 1 — HEPA Filter



- On the front of the vacuum, locate the latch on the bottom of the front vent.


## Step 2



- Press up on the latch and remove the front vent



## Step 3

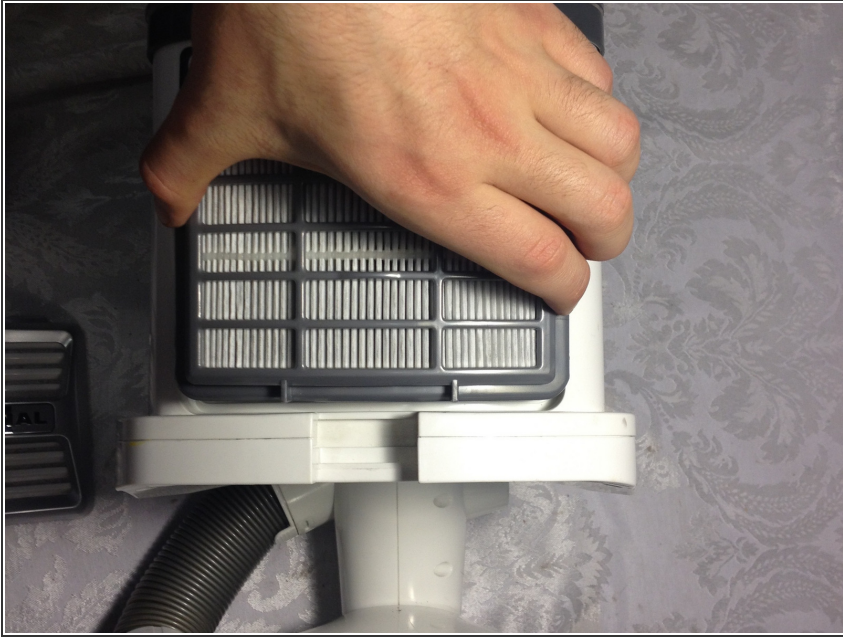

- Lift the HEPA filter out of the vacuum

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-28 06:22:29 AM.