OMO - English

Product Instructions Metal Detector for kids



Please charge the detector before using it for the first time. The indicator light flashes slowly while charging and stays on when the battery is fully charged.

Unterstützung

E-mail: service@ommohome.com







- 1) Waterproof search coil
- (2) Fixing knob and connector

3 Adjustable stem

4 Lock nut

(5) Control box

6 POWER switch

7 Battery case

Note:

- 1. Only the search coil is IP67 waterproof, the control box is not.
- 2. There is a rechargeable battery in the battery holder. If it needs to be replaced, it must be done by an adult! Children are strictly prohibited from touching the battery!

Assembly Schematic:







3 parts

Rotation lock

Complete assembly and ready to use

Parameter:

Voltage: 4.2V

Current: 35MA(0.035A) Power: 150mw(0.15W) Frequency: 3KHZ

Note:

Press and hold the \circlearrowleft button for 3 seconds to turn on or off, and short press the \circlearrowleft button once to reset.

EASY TO USE AND UNDERSTAND



Control Box




In standby mode, the balls will flash alternately;

In operating mode, the more targets there are, the closer the detector is to the targets and the stronger the signal.



Manually adjustable

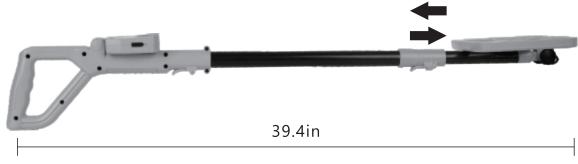

The maximum length



CONTACT INFORMATION

Website: www.ommohome.com

E-mail: service@ommohome.com

Company name: YH Consulting Limited Address: C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-ThamesStaines,

UK REP

EC

REP

Surrey, London, TW18 4AX

Email: H2YHUK@gmail.com

Tel: +44 07514-677868

Firmenname: E-CrossStu GmbH Adresse: Mainzer Landstr.69,

Frankfurt am Main, 60329

Email: e-crossstu@outlook.com

Tel: +49 069332967674