


# User Manual

## Kids Karaoke Machine



### Product Diagram

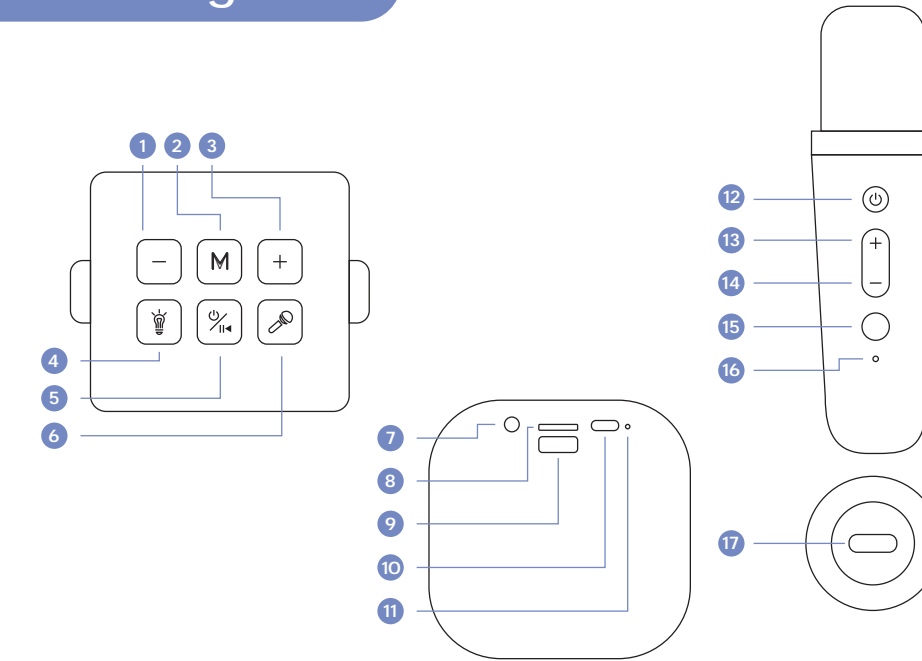

#### Speaker Controls — Top

1	— Click to turn down speaker volume Long press to switch to the previous song
2	<b>M</b> Click to switch between preloaded songs and Bluetooth mode
3	+ Click to turn speaker volume up Long press to switch to the next song
4	💡 Click to change the light effect
5	⏮️ Click to PLAY/PAUSE music Long press to POWER ON/OFF
6	🎵 Click to switch to Background Music Mode

#### Speaker Controls — Back

7	○ Headphone Jack
8	— SD Card with pre-loaded songs (if the pre-loaded songs aren't playing, press to remove and reinsert)
9	□ USB Port
10	⏻ Charging Port (Max Charging Voltage 5V/1A)
11	○ LED Indicator (Red = Charging; Blue Flashing = Low Battery; Blue Solid = ON)

#### Microphone Controls

12	🔌 Hold to turn mic ON/OFF Click to cycle between volume modes (mic volume, echo strength, music volume.) Double click to PAUSE/PLAY music
13	+ Click to increase volume of current volume mode Long press to play next song
14	— Click to decrease volume of current volume mode Long press to play previous song
15	🔑 Click to toggle between 4 voice effects Double click to enter/leave background music mode
16	○ LED Indicator (Red = Charging, Blue Flashing = Pairing Mode; Blue Solid = Paired with Speaker)
17	⏻ Charging Port (Max Charging Voltage 5V/1A)

### Speaker Instructions

#### Power ON/OFF

Press **🔌** and hold to turn the speaker **ON/OFF**.  
Click the **+/-** button to adjust speaker volume.

#### Bluetooth Mode

Turn on the speaker and press the **"M"** button to switch into Bluetooth mode. On your smartphone, tablet, or computer look for the Bluetooth device named **"Move2Play Karaoke"**.

#### Change Volume

Click the **+/-** buttons.

#### Previous / Next song

Long press the **+/-** buttons.

#### Play Pre-Loaded Music

Press the **"M"** button to toggle into "SD card mode" - If the pre-loaded songs don't start playing, remove and reinsert the SD card.

### Microphone Instructions

#### Power ON/OFF

Press **🔌** and hold to turn the mic **ON/OFF**. The mic will auto connect to the speaker when both are powered on. The mic indicator LED will flash blue until they are paired and then it will turn solid blue.

#### Adjust Microphone Volume

Click **🔌** to cycle between volume modes (mic volume, echo strength, music volume.) Click **+/-** to increase/decrease the volume of the current volume mode.

#### Background Music Mode

Double click **🔑** to turn on/off background music mode. (It removes the music vocal track).

### Charging Instructions

Charge with any USB port at 5V/1A

Indicator lights will flash red when charging and turn solid red when charged

### Troubleshooting

#### Bluetooth can't be paired

Press the **"M"** button to enter Bluetooth Mode  
Make sure the speaker isn't already paired with a different phone in range  
Try turning the speaker on/off

#### Microphone isn't working

Turn the Mic On/O  
Turn the Speaker On/OFF  
Make sure they are in range of each other -5ft

#### Speaker Isn't Playing Sound

Turn **🔌** /on the speaker  
Turn **🔌** /on the microphone  
If playing Bluetooth, check the volume on your phone

#### It's Not Playing Any Sound or Lighting Up

Charge the speaker for 15 min and then try again

#### My voice is quiet / difficult to hear

Sing directly into the top of the mic for best performance

#### My preloaded songs aren't playing

Remove and reinsert the SD card.  
Push the SD card in and it will pop out



Recommended  
Microphone  
Angle

### Song List

Wheels on the Bus • Row Your Boat • Old MacDonald • ABCs • 123s  
Comin Round the Mountain • Twinkle Little Star • Happy and You Know It  
Happy Birthday Song • You Are My Sunshine • Good Morning Fingers  
Quiet Night • Jingle Bells • Animal Sounds Song • Baa Baa Black Sheep  
Take Me Out to the Ball Game • Rock a Bye Baby • Mary Had a Lamb  
BINGO • Itsy Bitsy Spider • Five Little Ducks

### Product Warranty

Includes a one-year warranty!  
Contact [Support@move2play.com](mailto:Support@move2play.com)

#### FCC STATEMENT:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technical for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.