



Style & Sparkle Unicorn



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

School

Interactive toys to develop their imagination and encourage language development

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Bally

lam...

Toys that will stimulate their interest in different textures. sounds and colours

- ...responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to touch, reach, grasp, sit-up, crawl and toddle

want...

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

I need...

- ...challenging activities that can keep pace with my growing mind
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum based content to support what I'm learning at school


Birth-36 months





INTRODUCTION

Have a magical adventure with me, the **Style & Sparkle Unicorn** by **VTech®!** Adding stylish accessories to my horn and tail makes my star and horn light up. I like to be the star of the show! I can teach you about objects, colours and counting, or we can let our imagination flow. Let's have lots of fun together!

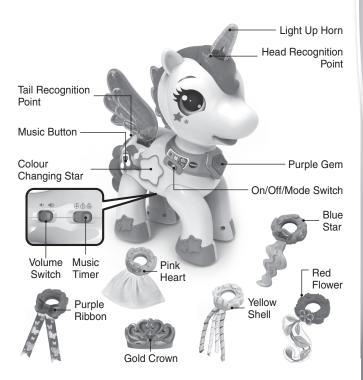

INCLUDED IN THE PACKAGE

- · Style & Sparkle Unicorn
- 6 Accessories
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this Instruction Manual as it contains important information.

Unlock the Packaging Locks:



- 1 Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

- 1. Make sure the unit is turned Off.
- Find the battery cover located on the side of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
- 3. Remove old batteries by pulling up on one end of each battery.



- Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni- MH rechargeable batteries are recommended).
- 5. Replace the battery cover and tighten the screw to secure.

WARNING: Adult assembly required for battery installation. Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in



the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. On/Off/Mode Switch

To turn the unit **On**, slide the switch to the Learning Mode or Role Play Mode position. To turn the unit **Off**, slide the switch to the **Off** position.



2. Volume Switch

Find the **Volume Switch** located on the bottom of the unicorn. To adjust the volume, slide the **Volume Switch** to the Low volume () or High volume ()) position.



3. Six Accessories

Place an accessory on the **Head** or **Tail Recognition Point** to learn about the accessory, counting, colours and more. Enjoy role play fun!



4. Recognition Points

Place an accessory on the **Head** or **Tail Recognition Point** on the unicorn to trigger fun responses and lights.



5. Light Up Horn

The **Light Up Horn** lights up in blue with the voice responses and songs.



6. Colour Changing Star

The **Colour Changing Star** lights up different colours when songs and melodies are played.



 
7. Music Button

Press the **Music Button** to play songs and melodies.



8. Music Timer

Find the **Music Timer** located on the bottom of the unicorn. Slide the **Music Timer** to select Normal Play (3), Five-Minute Timer (3) or Ten-Minute Timer (4) music setting.



9. Purple Gem

Press the **Purple Gem** to hear fun phrases, sounds and to see the unicorn's horn light up.



10.Rolling Wheels

Push the unicorn along on the wheels built into the hooves.



11.Flapping Wings

Gently flap the unicorn's wings back and forth.



12. Automatic Shut-Off

To preserve battery life, **Style & Sparkle Unicorn** will automatically shut off after several minutes without input. The unicorn can be turned on again by sliding the **On/Off/Mode Switch** to Learning Mode or Role Play Mode position.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Learning Mode

Slide the On/Off/Mode Switch to Learning Mode and place an accessory on a Head or Tail Recognition Point to hear about objects, colours, counting and fun phrases. Press the Purple Gem to hear fun facts about unicorns.



2. Role Play Mode

Slide the On/Off/Mode Switch
to Role Play Mode and place
an accessory on a Head or Tail
Recognition Point to hear phrases
for pretend play fun.

Press the **Purple Gem** to hear unicorn sounds and fun phrases when there is no accessory on either of the **Recognition Points**.



3. Music Timer

Slide the **Music Timer** to (5), then press the **Music Button** to hear sing-along songs and melodies.

Slide the **Music Timer** to (5), then press the **Music Button** to hear melodies. The melodies will play for five minutes



Slide the **Music Timer** to (b), then press the **Music Button** to hear melodies. The melodies will play for 10 minutes.

Place an accessory on the **Head** or **Tail Recognition Point** to hear fun sounds while the music is playing.

MELODY LIST

- 1. Three Little Kittens
- Sugarplum Fairy
- 3. London Bridge

SONG LYRICS

Song 1

It's going to be a magical day, We will sparkle wherever we go! Believe in ourselves, today is our day!

Song 2

Let's accessorise!
I can wear a crown, a star,
A heart, a shell, ribbons or flowers.
The combinations are endless!

Song 3

Beautiful colours everywhere, Gold, red, yellow, purple, blue and pink. We will explore and learn together, In the magical world of colours!

Song 4

Flying from here to there, Got wings on my back and colours in my hair! Oh yeah! And magic under my feet, It's really sweet! Won't you come and shine with me? Let's go!

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the product out of direct sunlight and away from any direct heat sources.
- Remove the batteries if the unit will not be in use for an extended period of time.
- Do not drop the product on a hard surface and do not expose the product to excess moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions while playing with the accessories, please remove the accessories and place them back onto the unicorn.

If the unit still isn't functioning, or if for some reason the unit stops working, please follow these steps:

- 1. Turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit back On. The unit should now be ready to use again.
- 5. If the unit still does not work, install a new set of batteries.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/ or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au

