

W16英语说明书 108*140mm 4折页 双面印刷

Tayogo®

Instruction Manual

Waterproof Mp3 Player

Model: W16



8GB memory










EN

IMPORTANT INFORMATION BEFORE USE IT

Important :Wear and take off the MP3 player rightly

picture 1

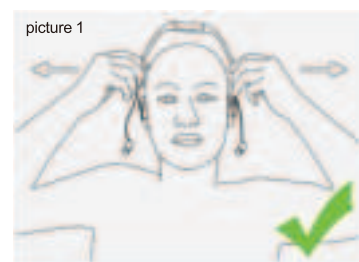


Right : Hold the ends of the headphone bone to wear and take off, see picture 1

Wrong: Hold the headphone cables and pull strongly to wear or take off , see picture 2

picture 2

picture 3

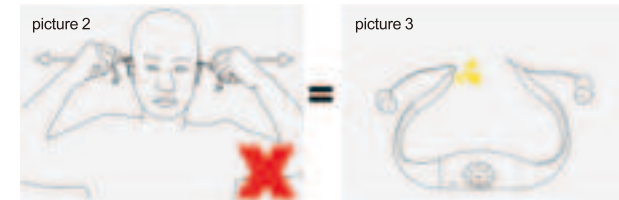

The copper wires of the headphone cables will be broken and headphone no sound, see picture3

1

EN

Noted :The headphone cable is made by slim copper wires and it will be broken if you pull the cables strongly. This will cause the headphone no sound and this problem is out of warranty.

Congratulations on purchasing your new waterproof mp3 player. We are convinced you will be satisfied with it. Please read carefully instruction before your operation.

SPECIFICATIONS:

Waterproof IPX68

Supported Formats: MP3、WMA、APE、FLAC、WAV、AAC、M4A

Memory: 8/32GB

Battery: Lion 200MAH Rechargeable

Play Time: Up to 20 hours

Dimensions (WxDxH): 12.5 x 12 x 3 CM

Weight: 32g

Accessories:


Extra ear buds, Instruction Manual, Magnetic Cable

2

EN


Two ways to wear it

Wear the headphones close to your head
Then put on a swim cap and wrap the headphones inside

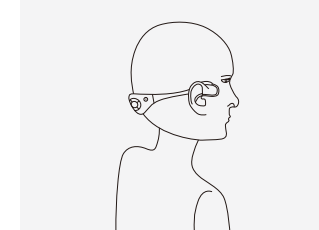



You can also wear it around your neck

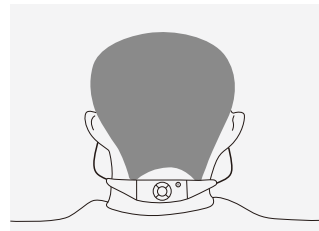


3


EN

Replace earplugs that fit you

Remove the earplugs

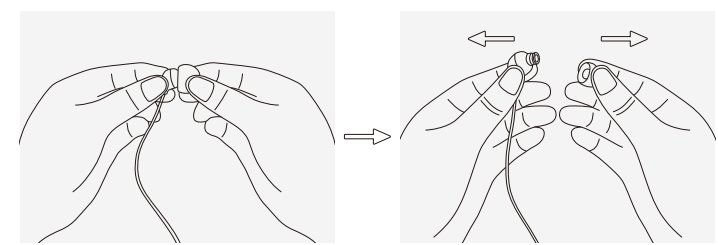

Choose the appropriate earbud size and attach it to the earphone

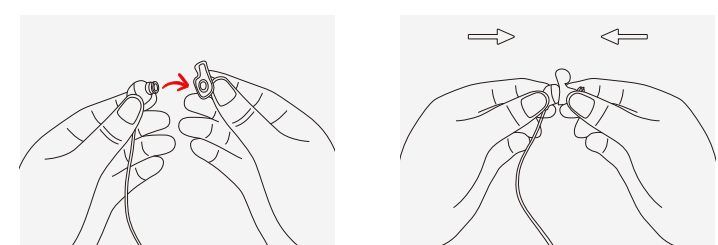

4

EN

Button Instruction:

Volume up
Press and hold switch to the FM/MP3 mode

Power/Play/Pause
Power(2S press and hold)

R: Reset

Prev.
Press to previous song
Fast backward
Press and hold

Next
Press to next song
Fast Forward
Press and hold

Volume down
/Shuffle/vorder/single repeat play (press and hold)

Tayogo®

FM Radio Mode:

Prev: Short press to the last valid radio station.

Next: Short press to the next valid radio station

Vol+: Short press the volume up.press and hold switch to the FM/MP3 mode

Vol-: short Press the volume down button.

Power/Play/Pause:
Short press play pause.press and hold 2S to turn on/off

5

EN


Operation:

Charge

Plug the PC's USB port or USB adapter (5V/1A) with the attached Magnetic cable, attach to the back of Mp3 player's charging tray. See picture below:

LED Indicator


Charging Port

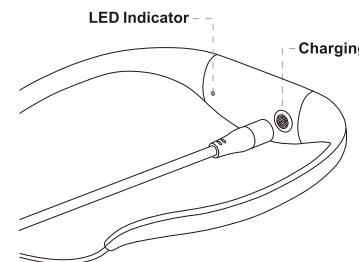

LED flash red. After full charging, LED will keep full blue.

Connect to the PC or Mac

Plug the magnetic cable to the PC or Mac and connect the Tayogo W16. The flash disk W16 will appear on the computer. Drug or copy the files to W16.

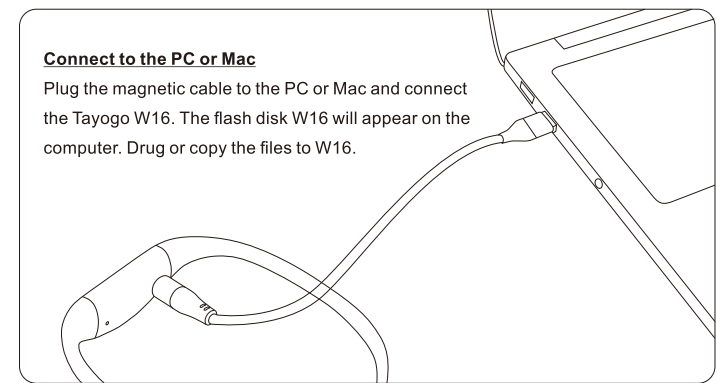

6

EN

Dongguan Gaoyue Technology Co., Ltd

Add:Unit 703 Block 13, No. 1 Jingdong Road Fenggang, Dongguan, Guangdong

E-mail:cs@tayogo.com

Website:www.tayogo.com





Download Instruction Manual online:

<https://tayogo.com/pages/tayogo-instruction-manual>

