 
 
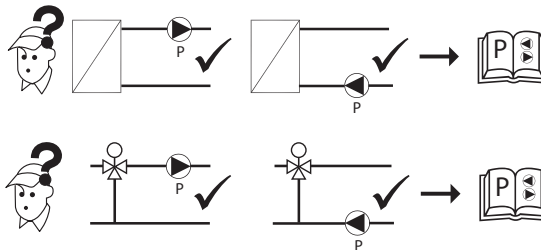
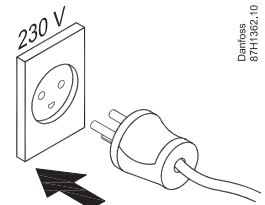 
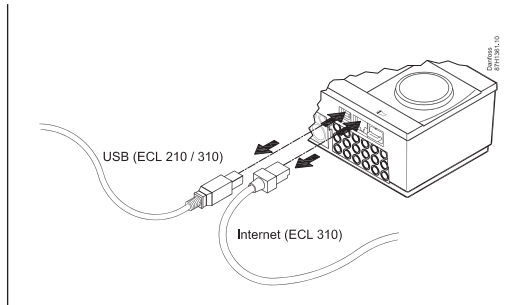 


Installation Guide

 
ECL Comfort 310, P314 (code no. 087H3841)

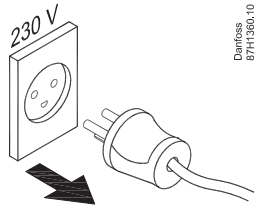

P314.4, ex. a:

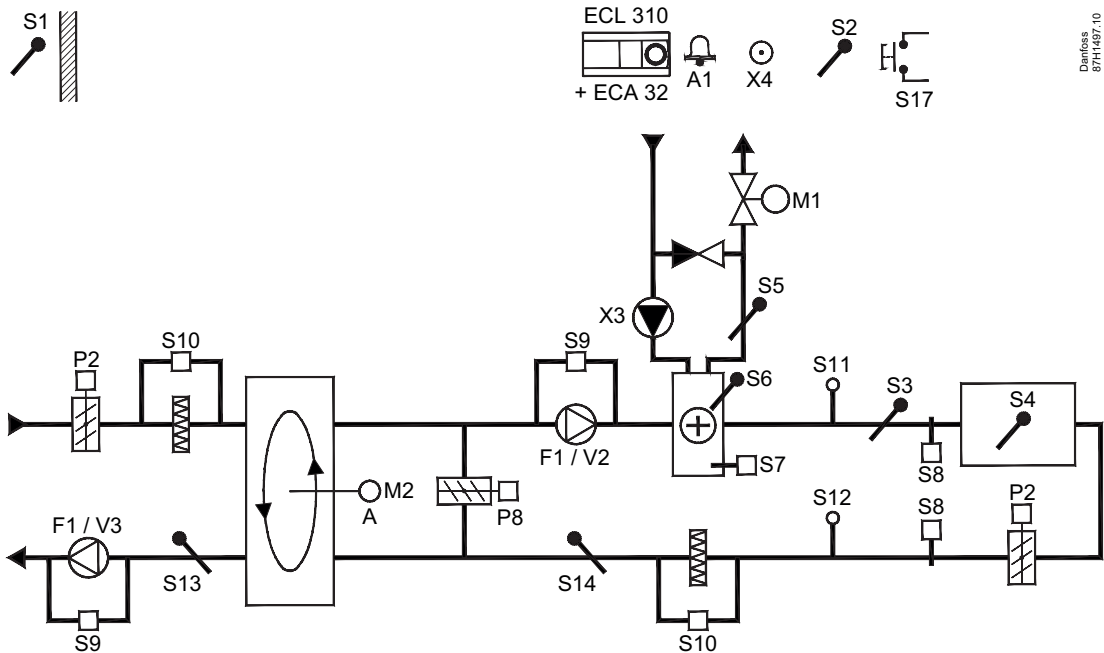


P314.4, ex. b:

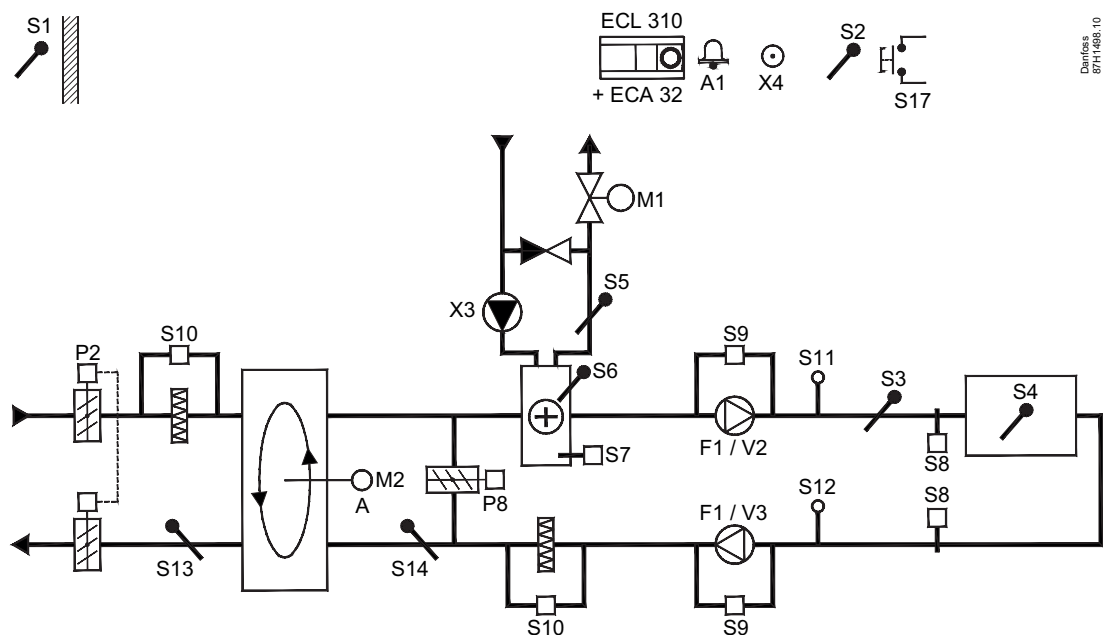


Danfoss
87H1489.10

 P314.5, ex. a:

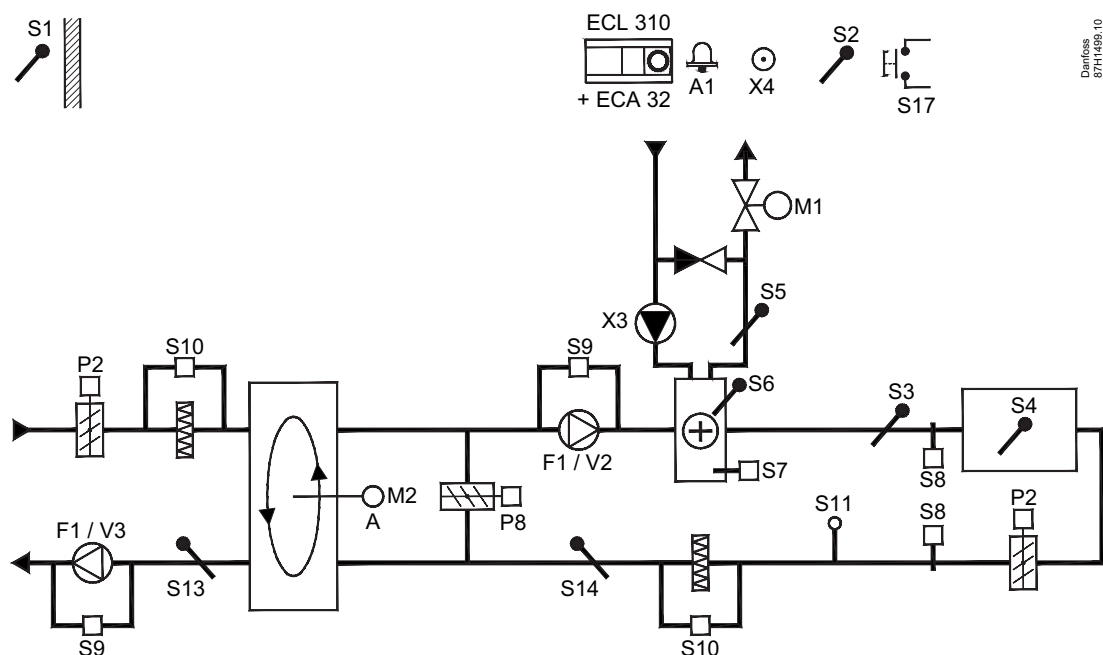


Danfoss
87H1489.10

 P314.5, ex. b:

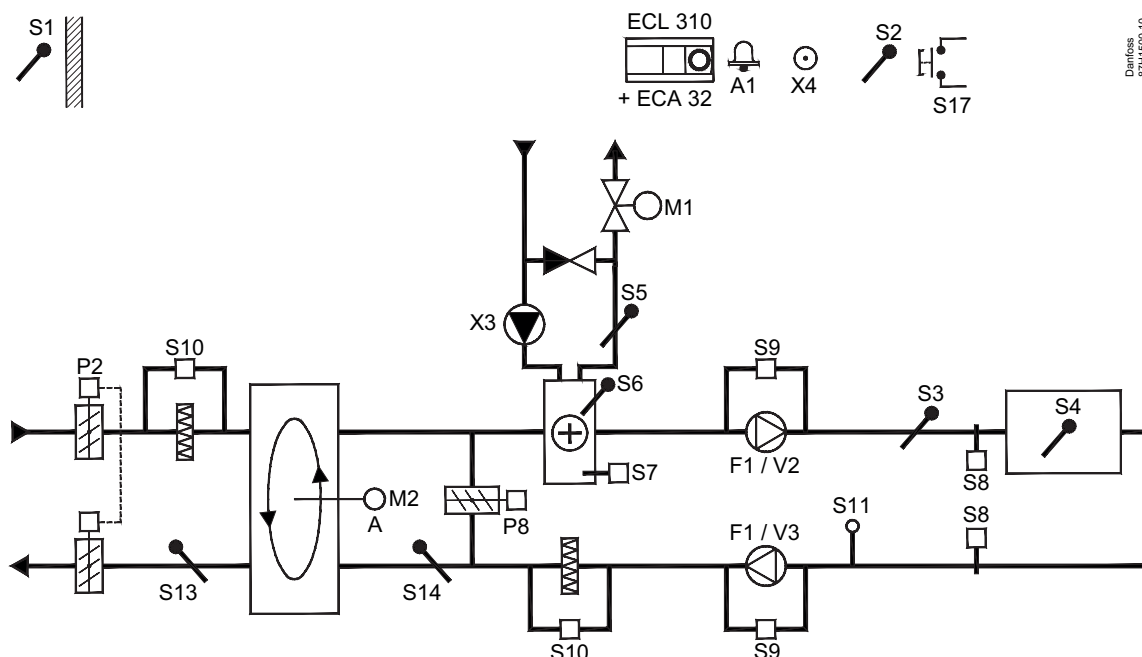


Danfoss
87H1500.10

 P314.6, ex. a:

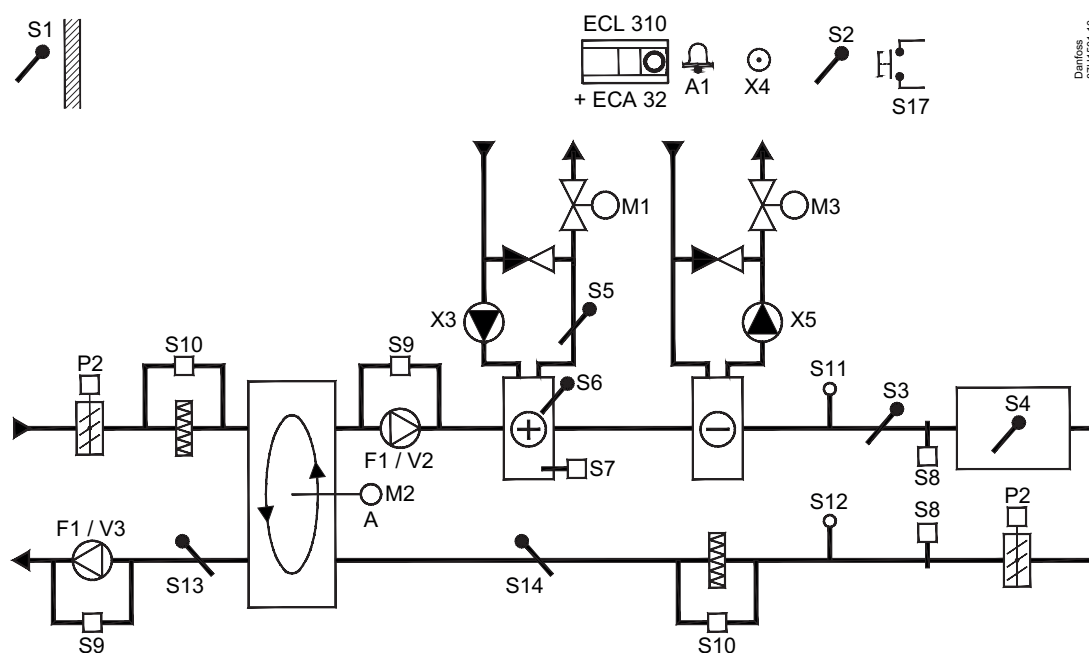


Danfoss
87H1501.10

 
P314.6, ex. b:

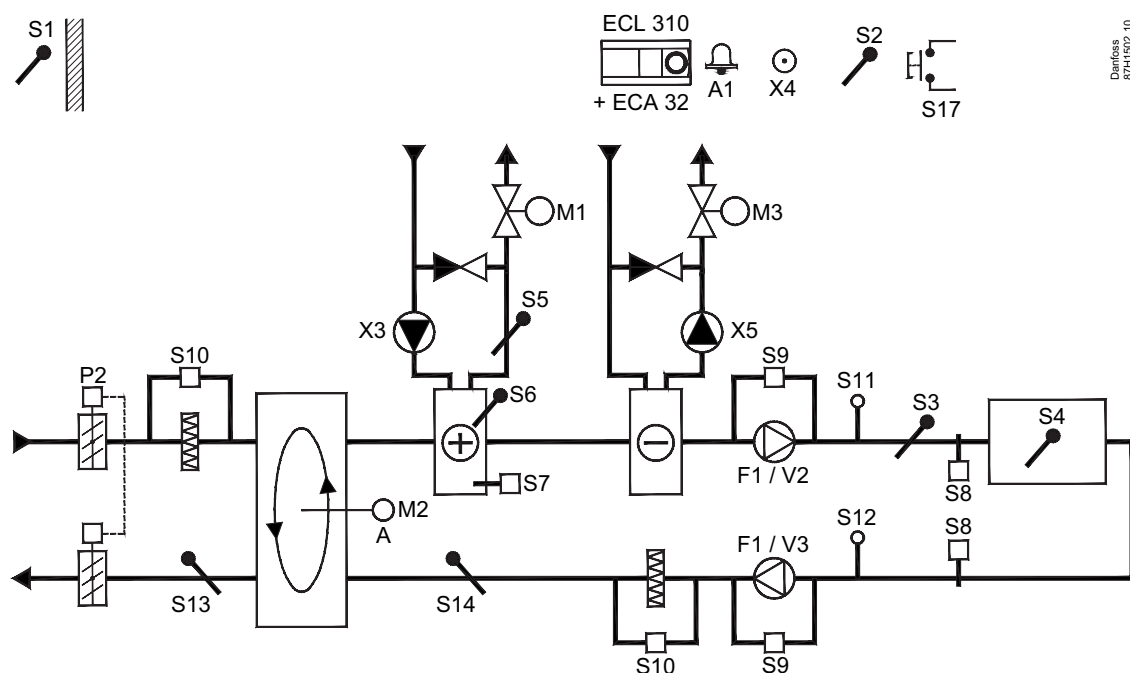

P314.7, ex. a:

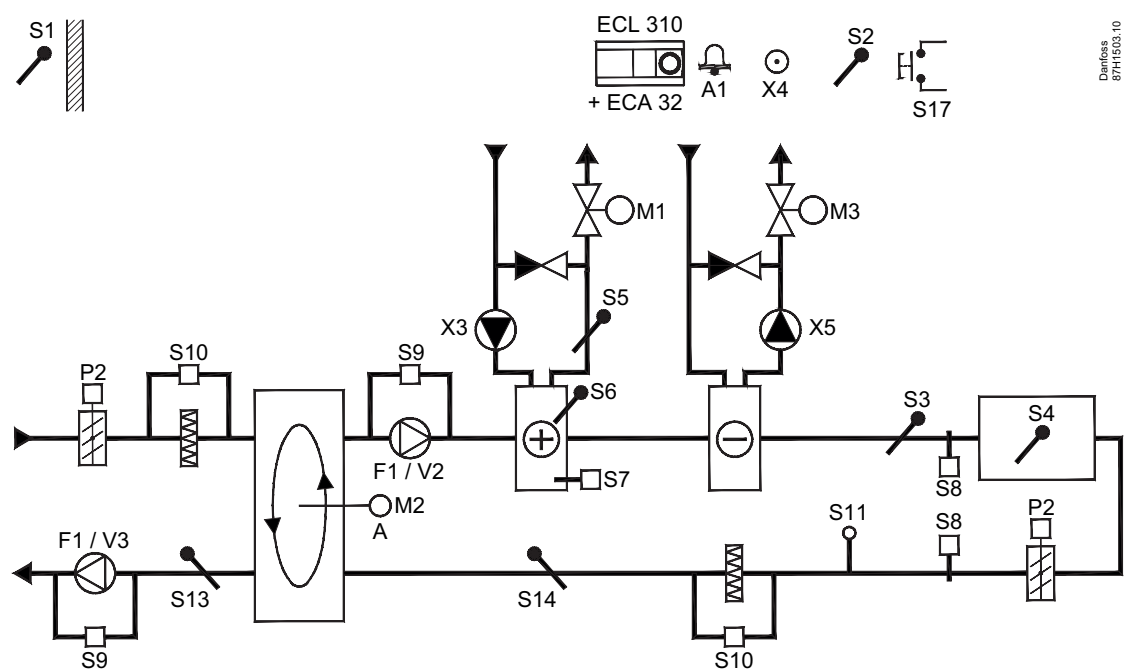 


P314.7, ex. b:

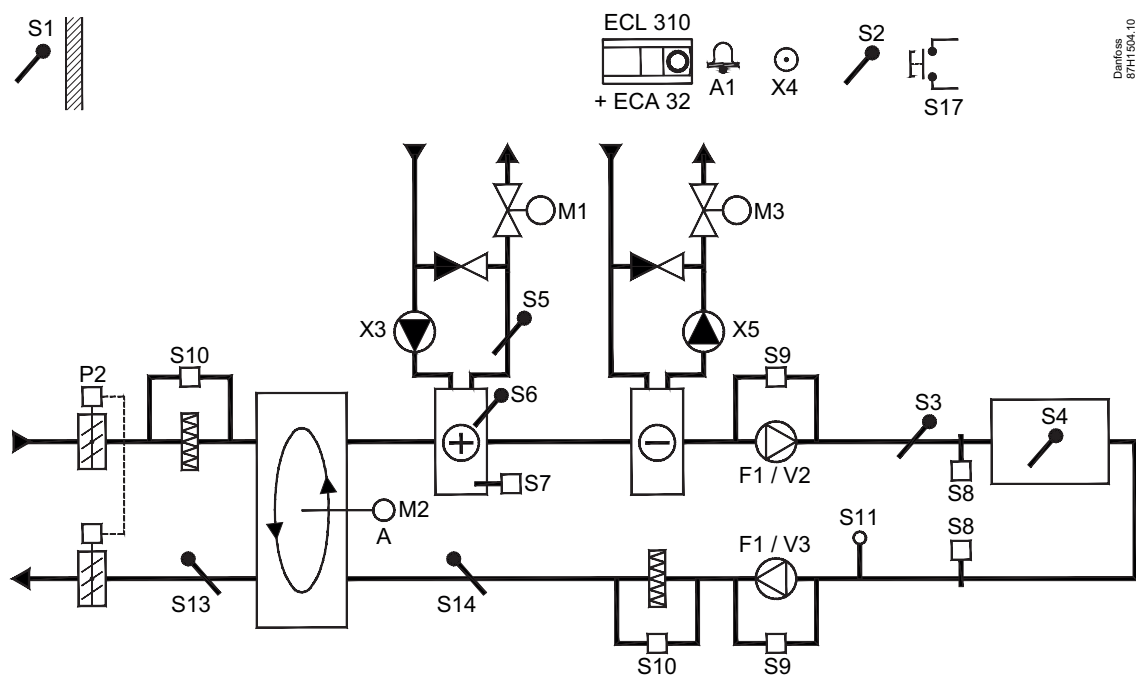


Danfoss
87H1504-10

P314.8, ex. a:

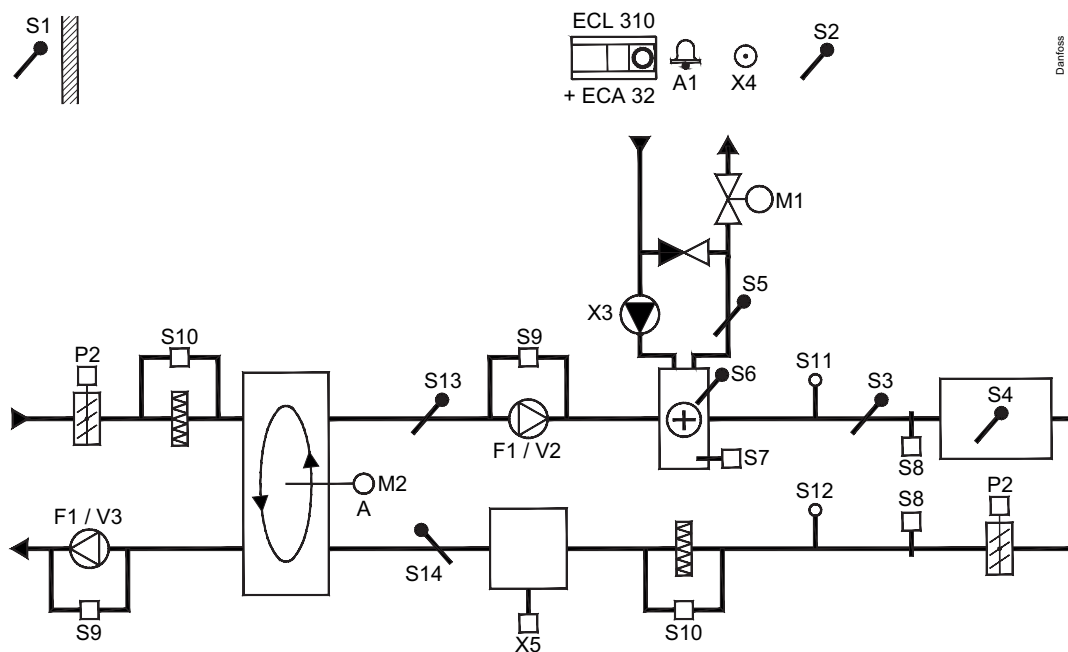


Danfoss
87H1505-10

P314.8, ex. b:

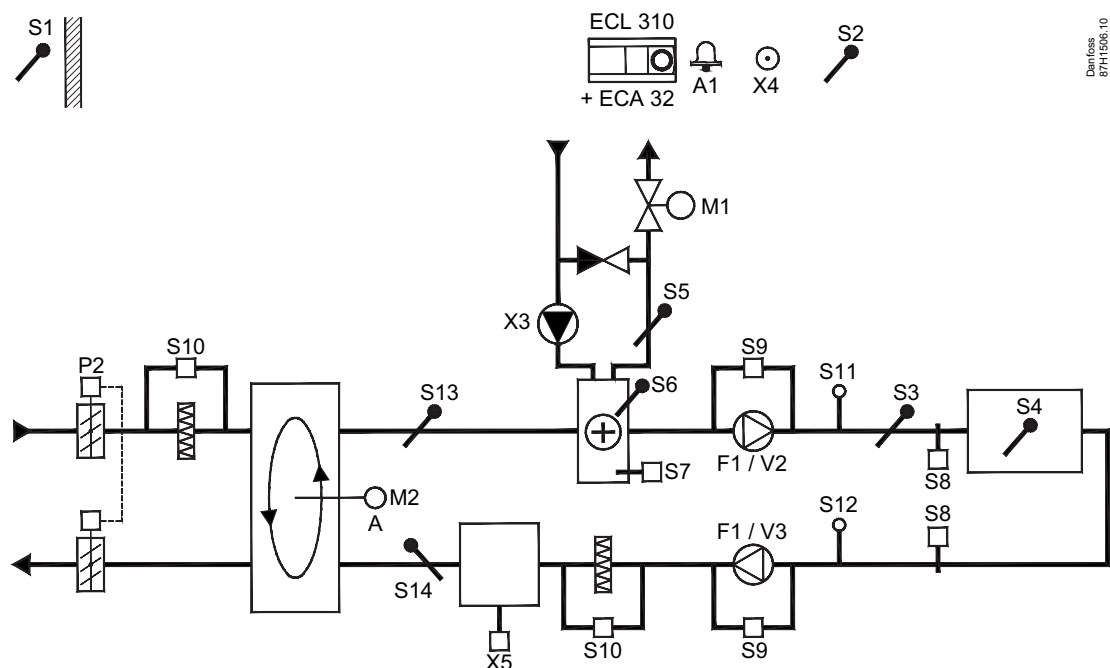


Danfoss
87H1506.10

P314.10, ex. a:

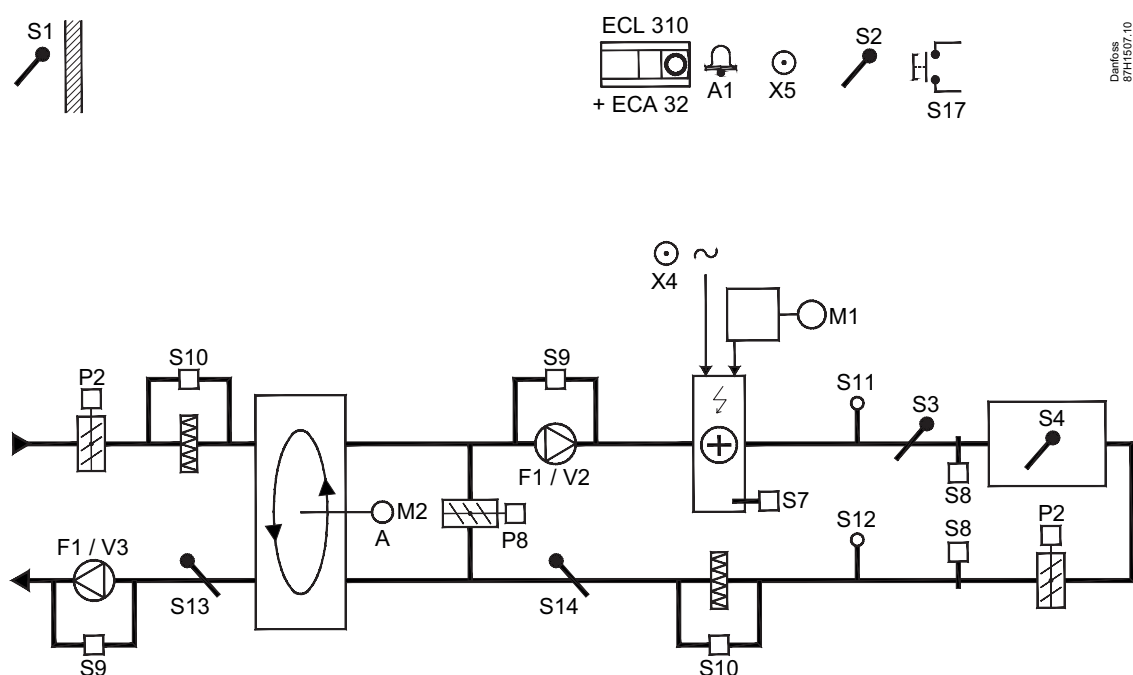


Danfoss
87H1507.10

 P314.10, ex. b:

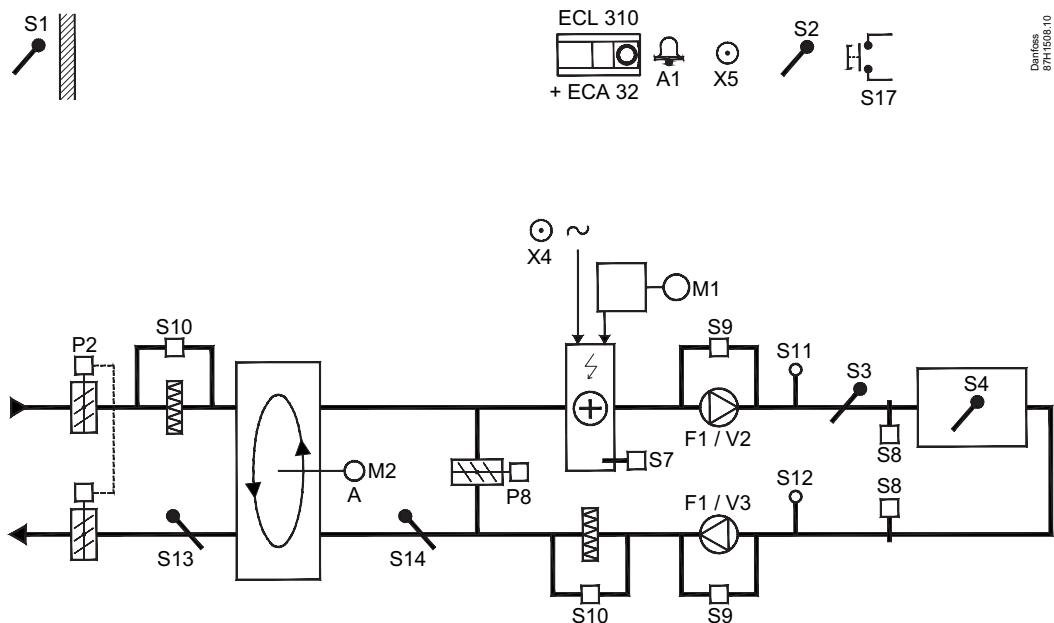


Danfoss
87H1508.10

P314.11, ex. a:

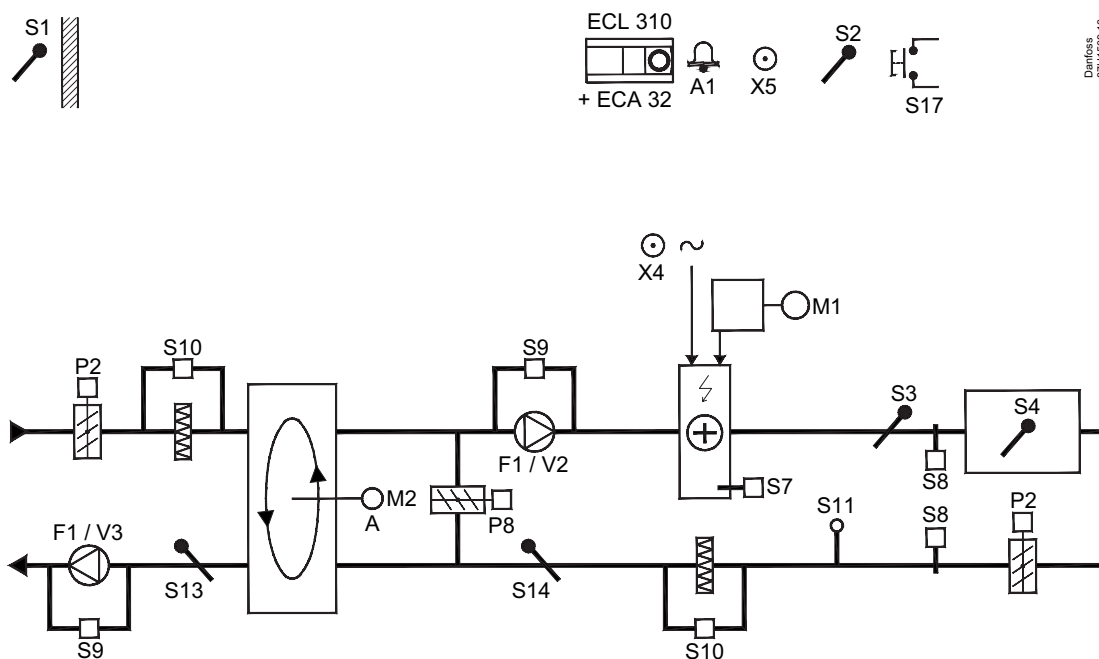

Danfoss
87H1509.10

 P314.11, ex. b:

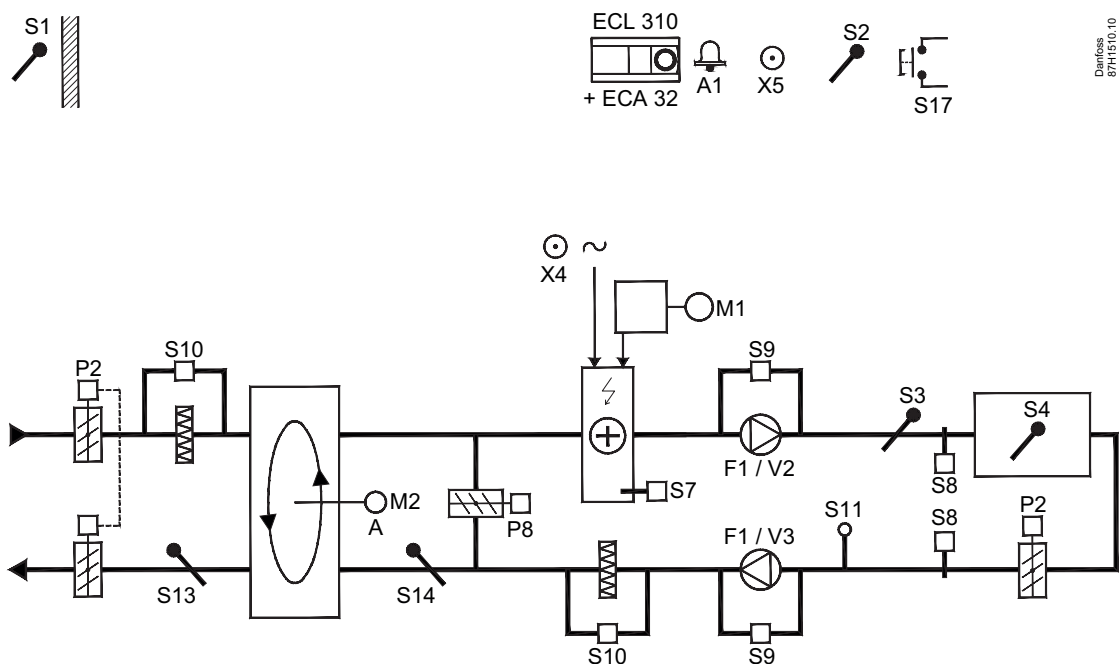


ECL 310, 24 V a.c.:

	3-point:				0 - 10 V: (ECA 32)	
	M1	M2	M3		M1	M2
P314.4	✓					✓
P314.5	✓					✓
P314.6	✓		✓			✓
P314.7	✓		✓			✓
P314.8	✓					✓
P314.10	✓					✓
P314.11	✓					✓

ECL 310, 24 V a.c.:

	ECL Comfort 310						ECA 32	
	F1	P2	X3	X4	X5		P7	P8
P314.4	✓	✓	✓	✓			✓	✓
P314.5	✓	✓	✓	✓			✓	✓
P314.6	✓	✓	✓	✓	✓		✓	
P314.7	✓	✓	✓	✓	✓		✓	
P314.8	✓	✓	✓	✓	✓		✓	
P314.10	✓	✓		✓	✓		✓	✓
P314.11	✓	✓		✓	✓		✓	✓


24 V a.c., P314:

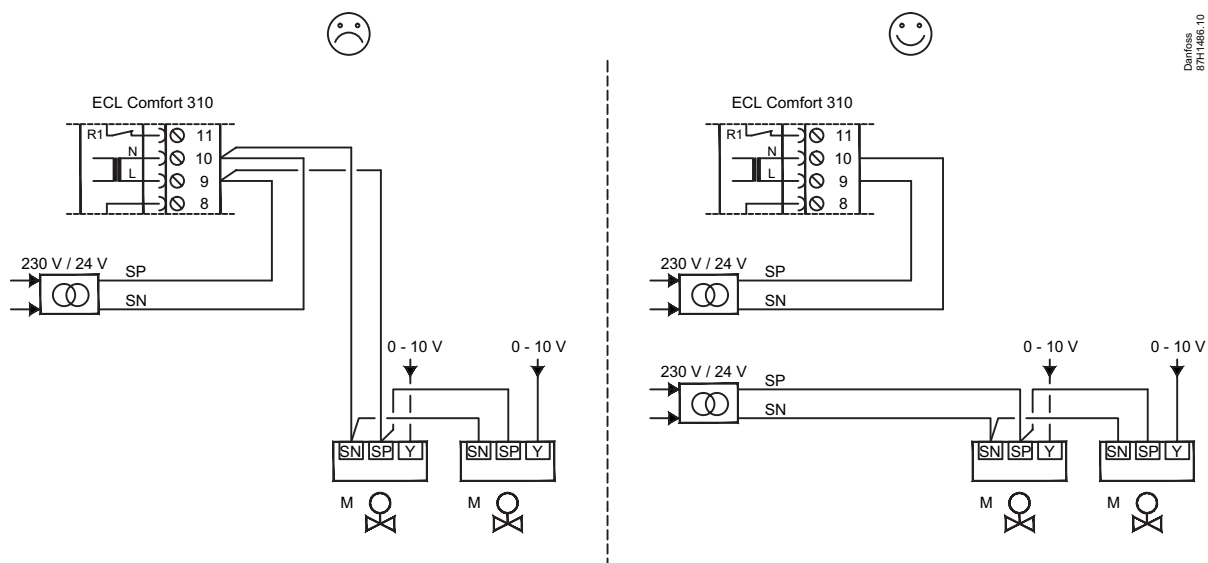


Danfoss
87H1486.10

Installation Guide, ECL Comfort 310, P314


24 V a.c., P314

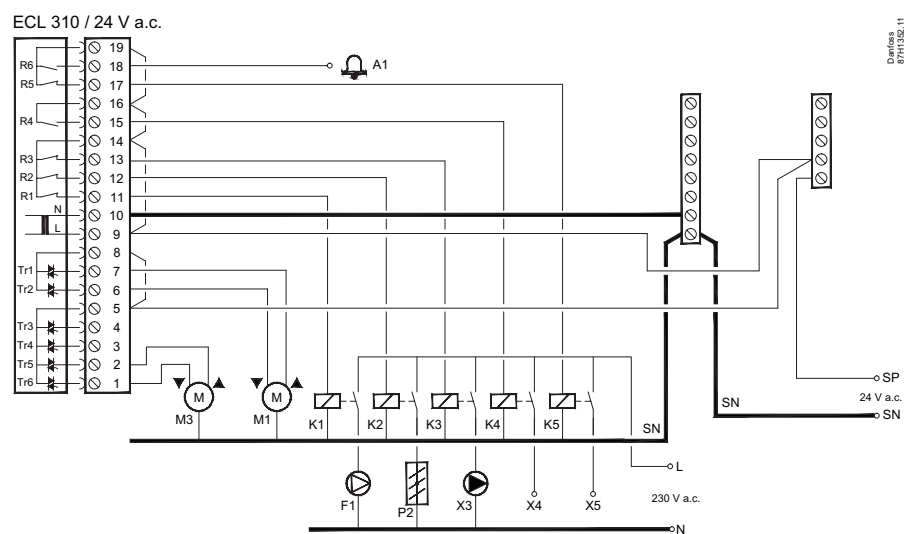


24 V a.c., P314

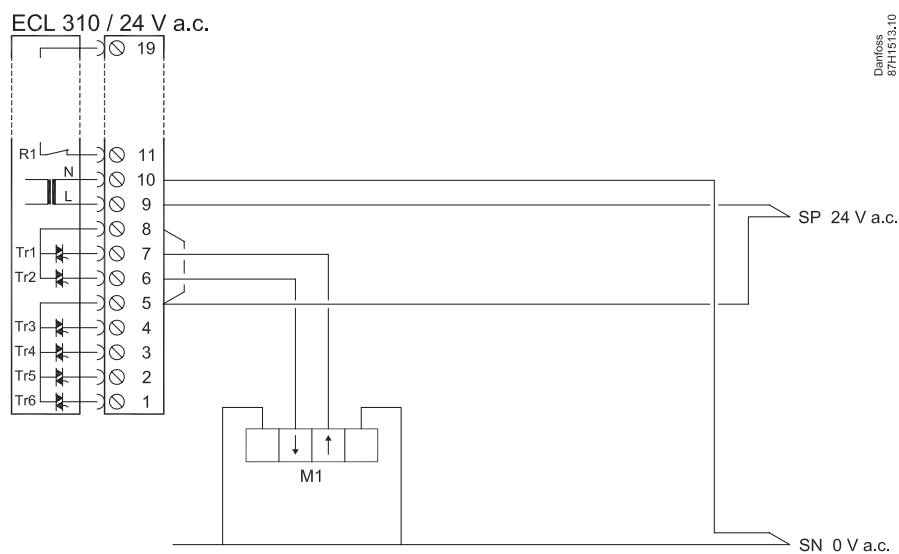 


ECA 32

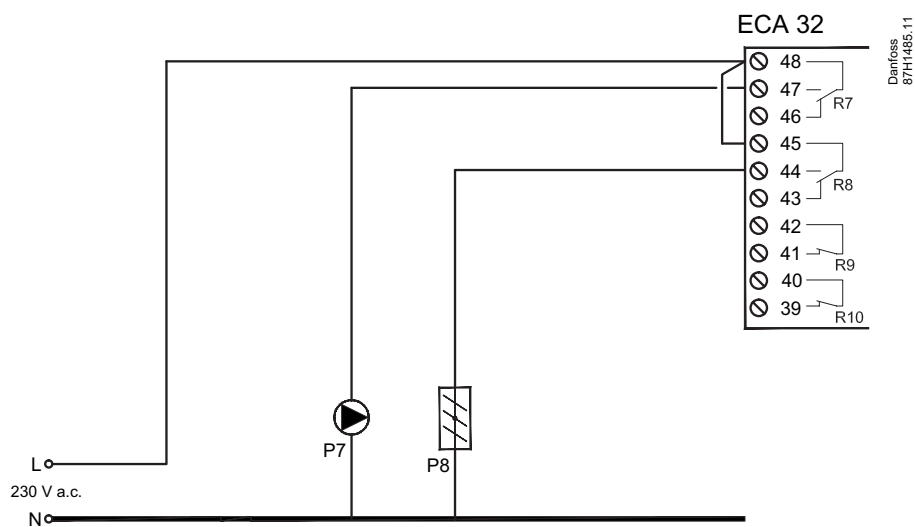

ECA 32

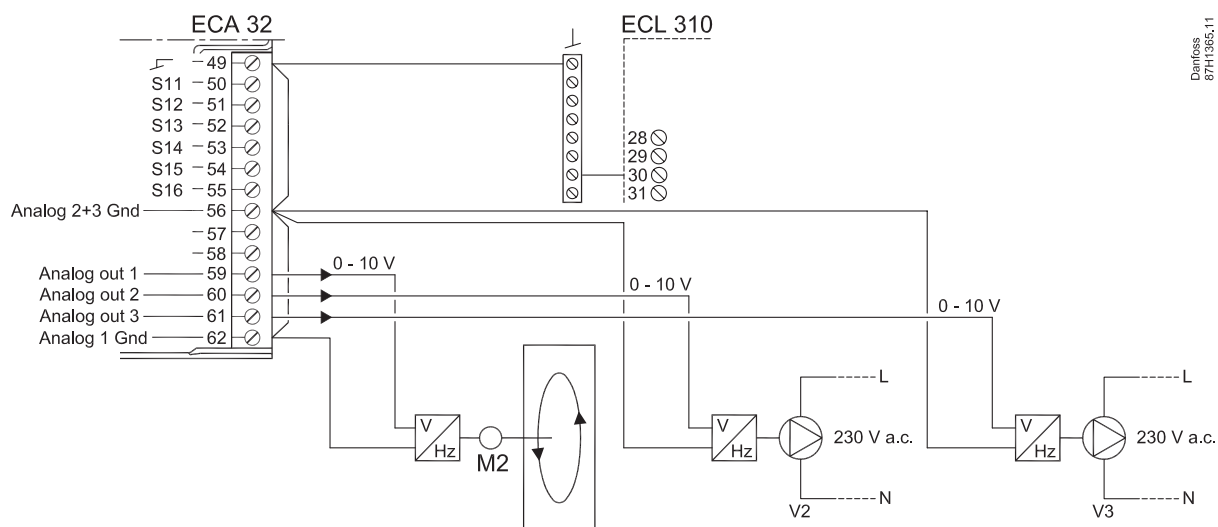 


Example:

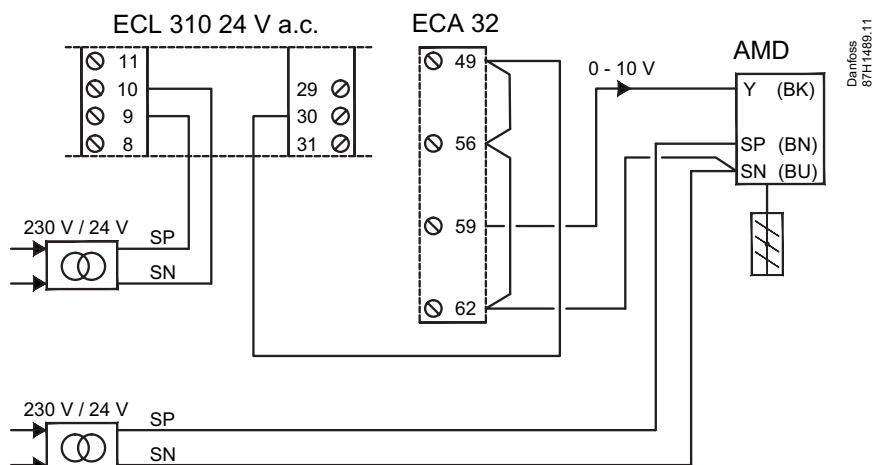 


Danfoss
87H1489.11

 Example:

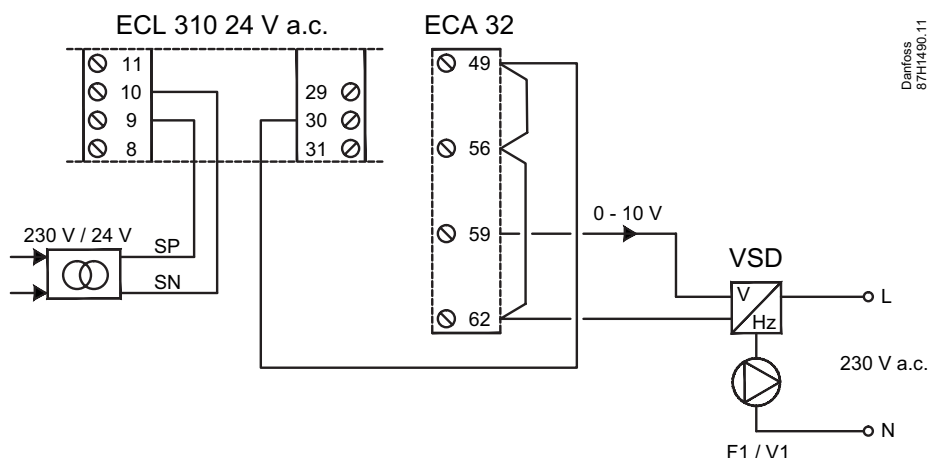

Danfoss
87H1490.11




 
Example:

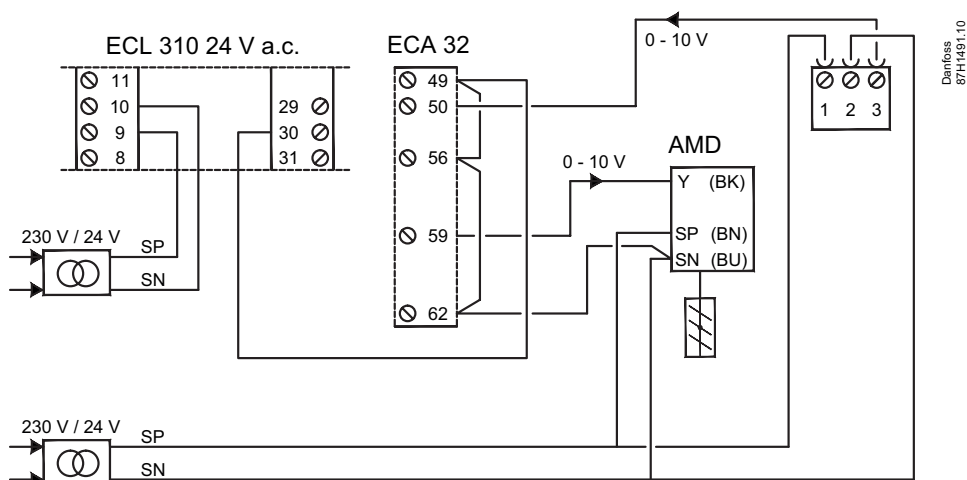



Danfoss
87H1491.10

24 V a.c. , safety thermostat

  1-step closing

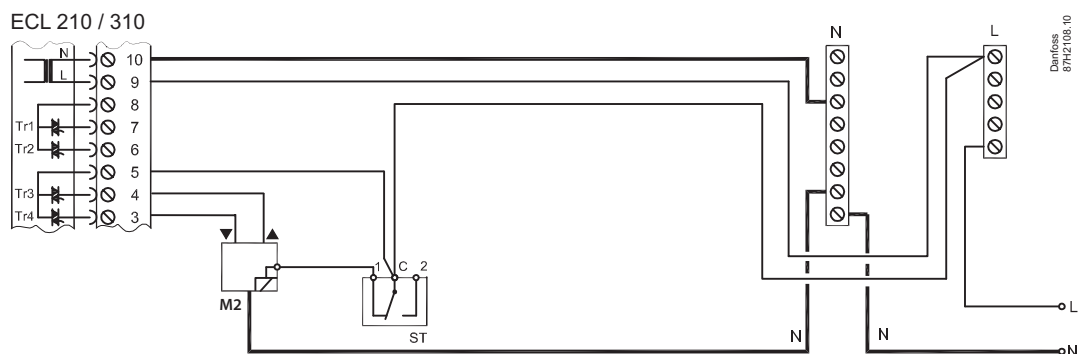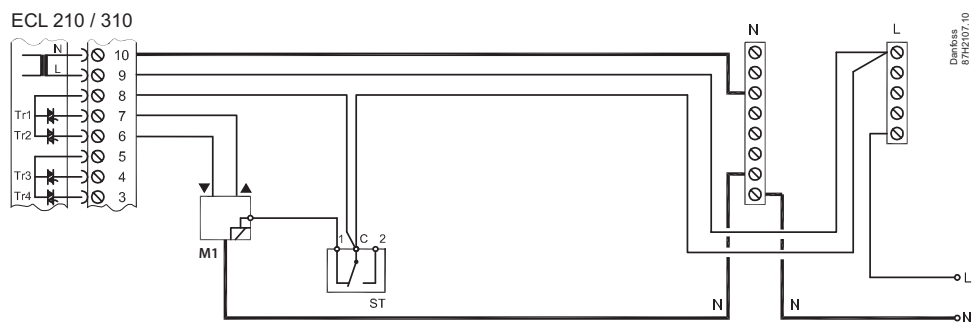
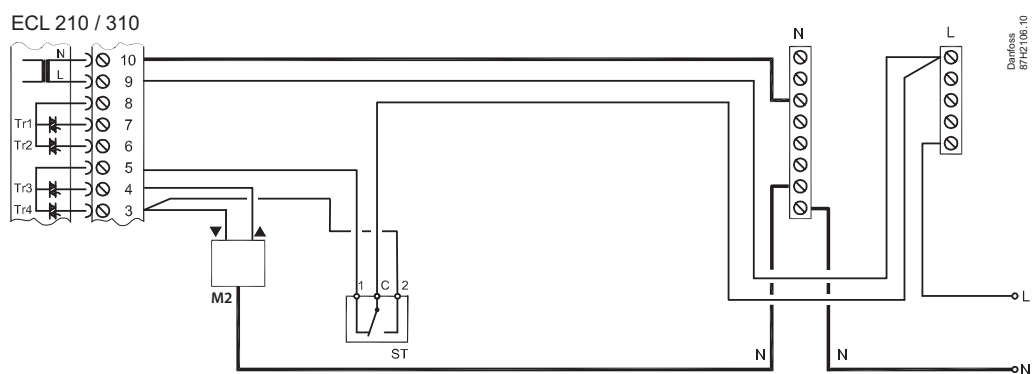
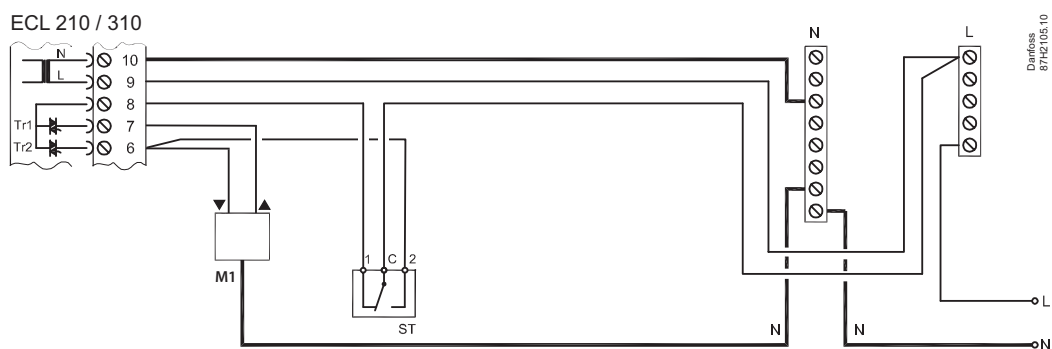


24 V a.c. , safety thermostat
2-step closing

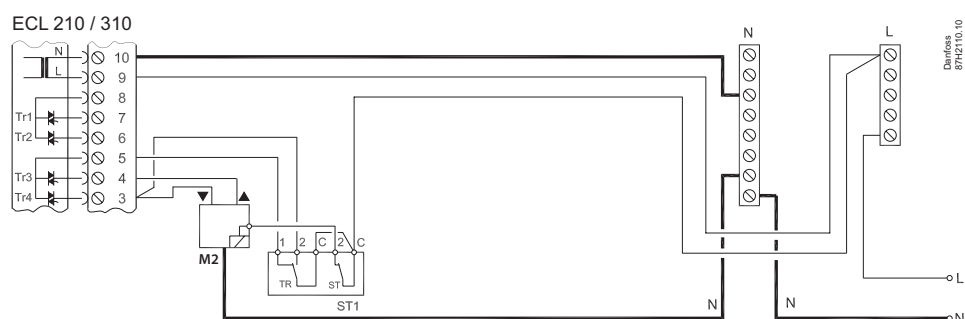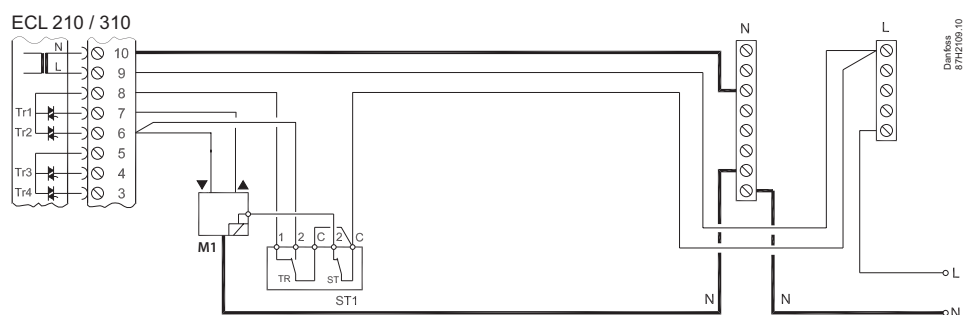


Installation Guide, ECL Comfort 310, P314

  
Pt 1000 (1000 Ω / 0 °C)

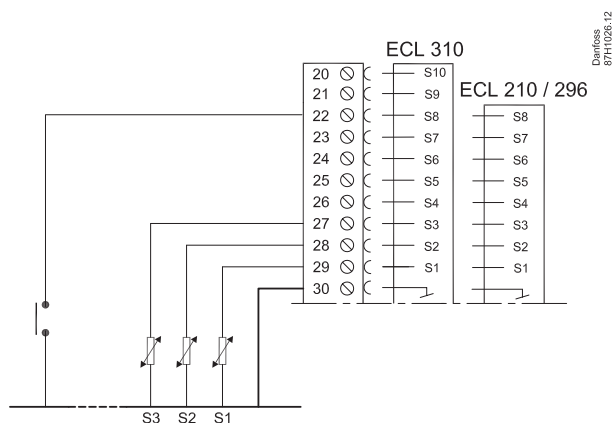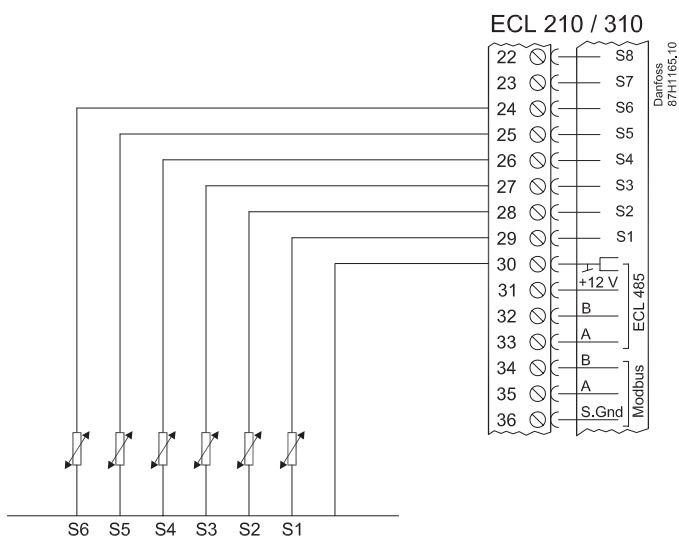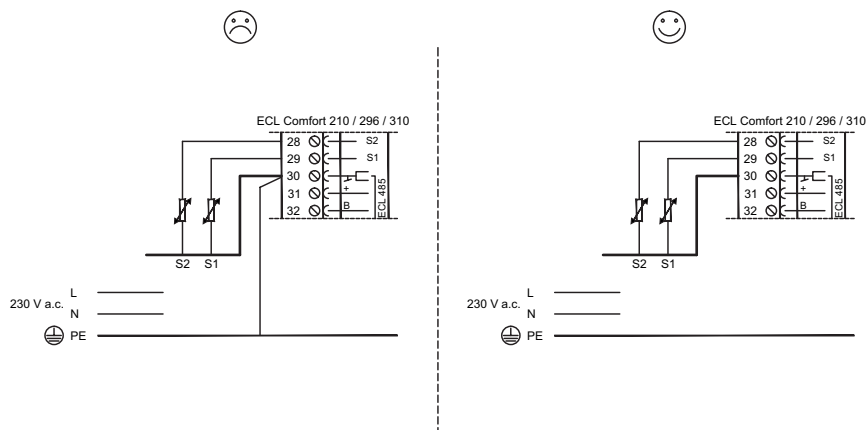


S7

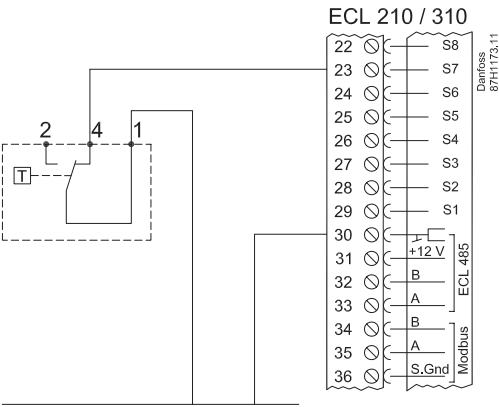

S8

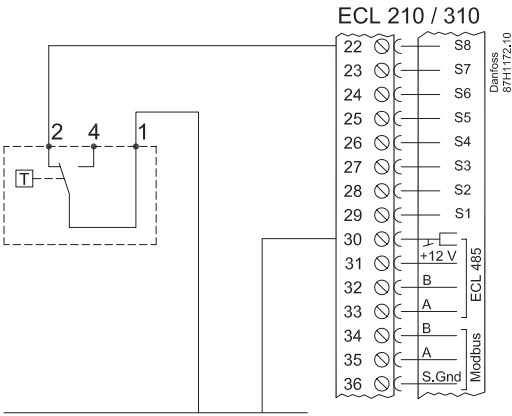 


S9 / S10


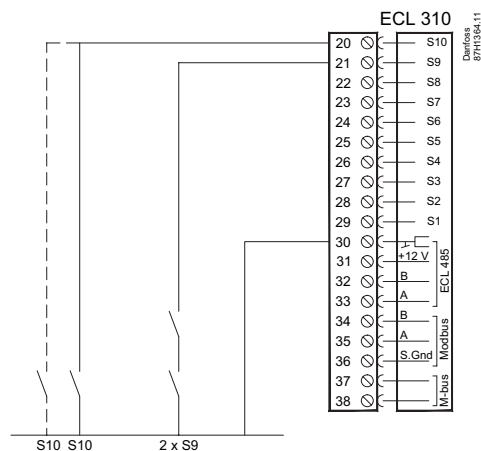


ECA 32

	S11	S12	S13	S14	S15	S16	S17
P314.4	✓	✓	✓	✓			✓
P314.5	✓		✓	✓			✓
P314.6	✓	✓	✓	✓			✓
P314.7	✓		✓	✓			✓
P314.8	✓	✓	✓	✓			
P314.10	✓	✓	✓	✓	✓		✓
P314.11	✓		✓	✓	✓		✓

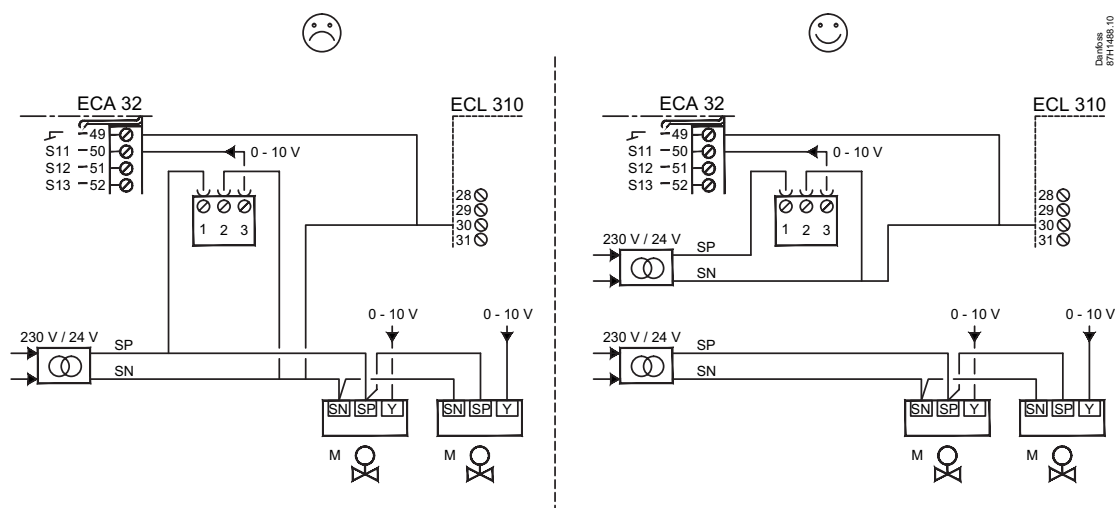


ECA 32

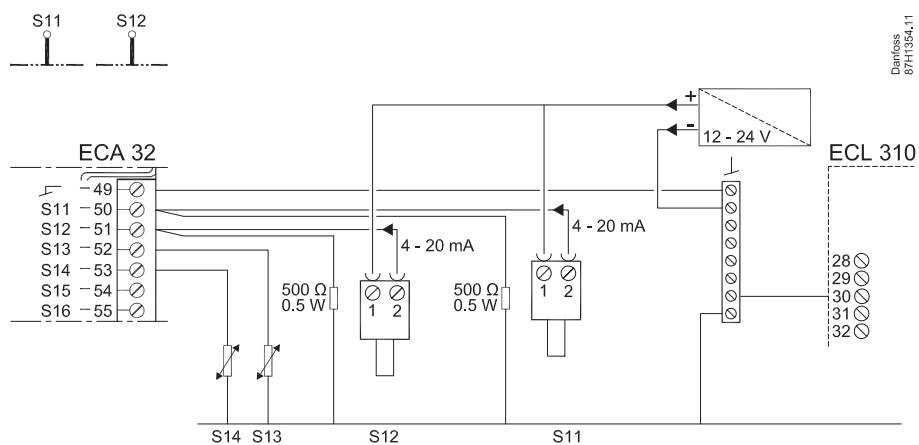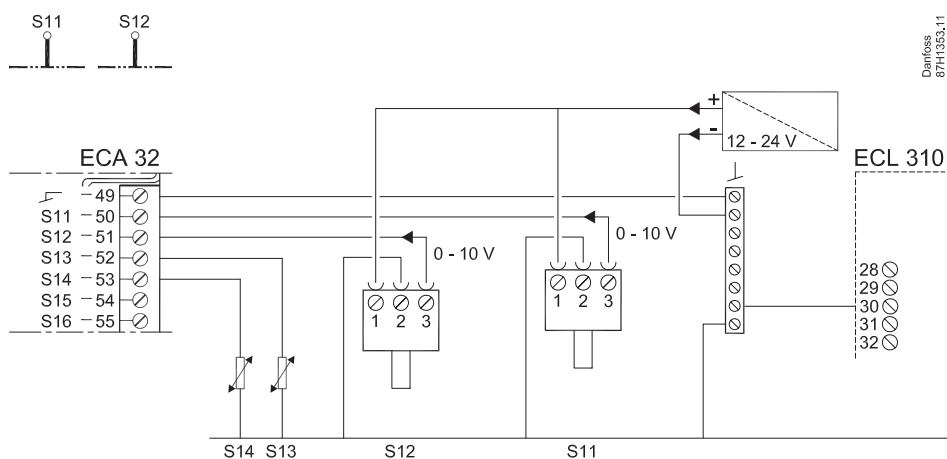


ECA 32, P314.10, P314.11

S15

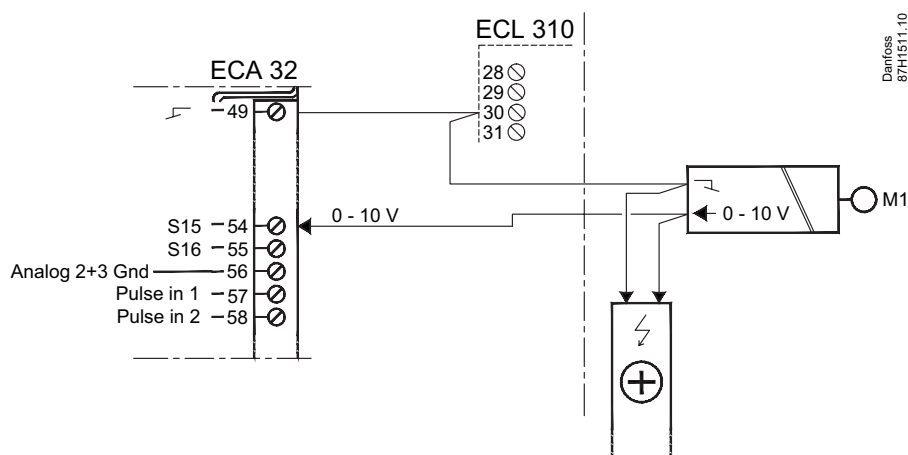


ECA 32, P314.4, P314.5, P314.6, P314.7, P314.10, P314.11


S17

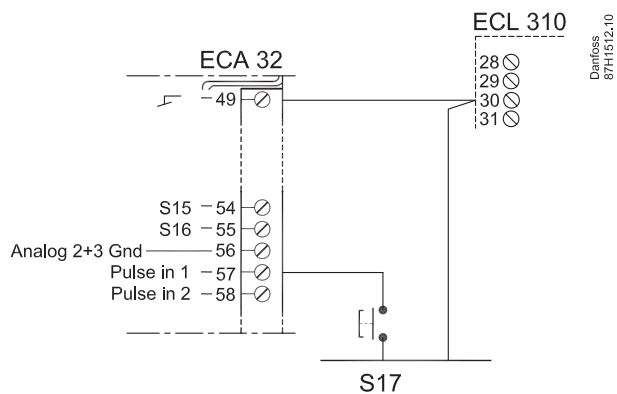


ECA 30 / 31

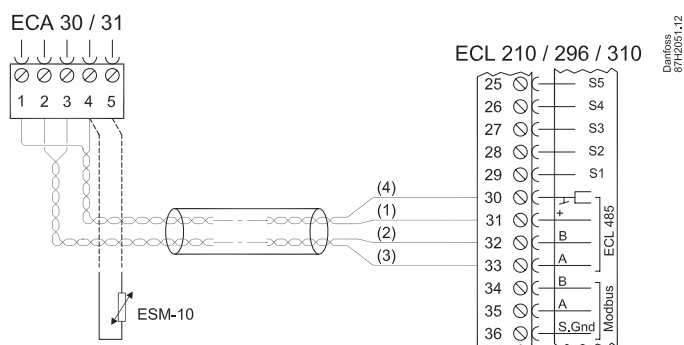


ECA 30 / 31

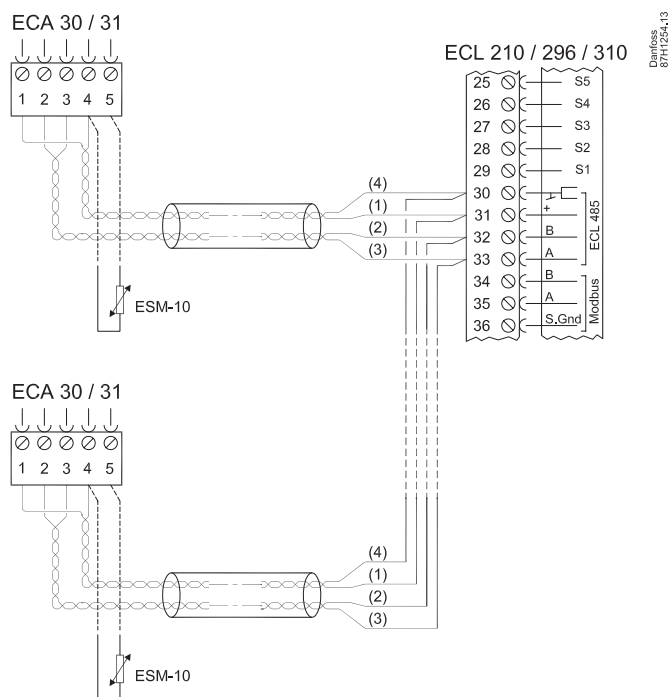 


Master / slave

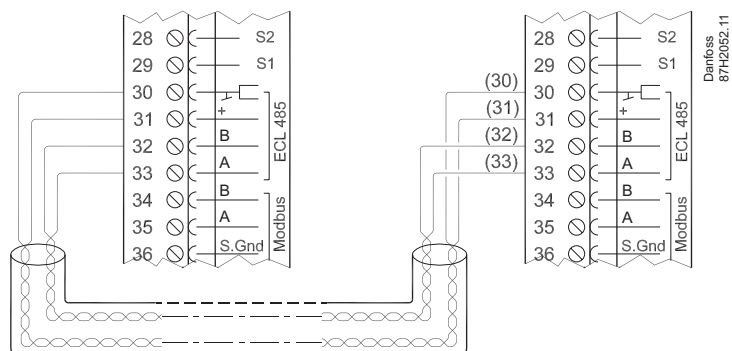


Modbus

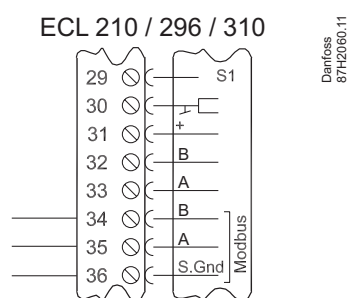


M-bus

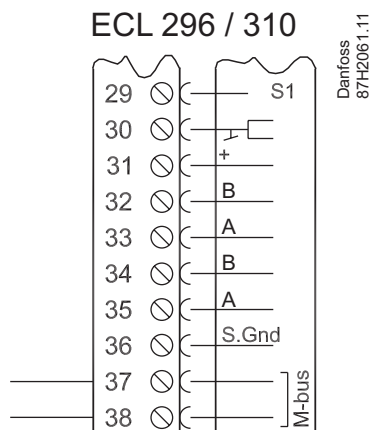 

M-bus

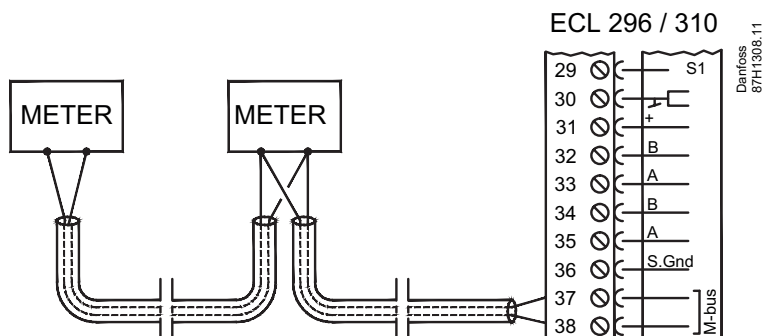 


Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

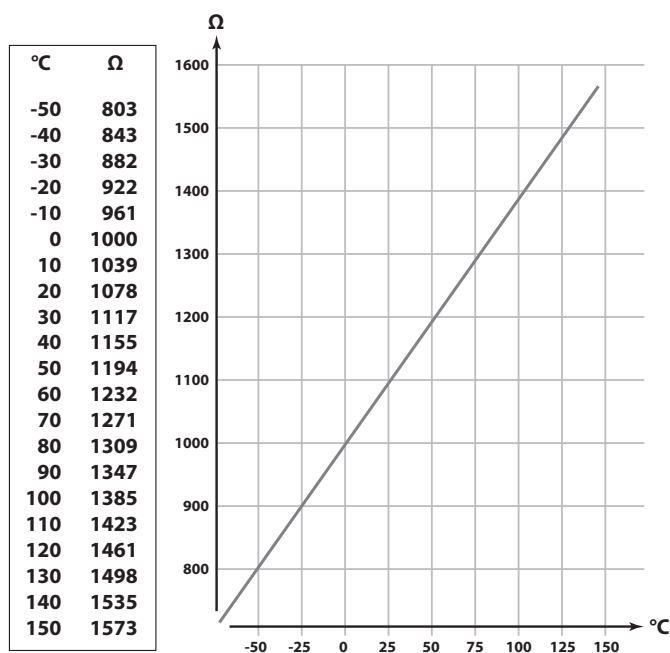 


ECA 30

 
1

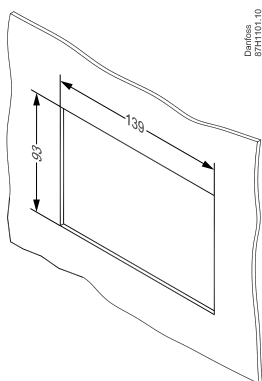


2

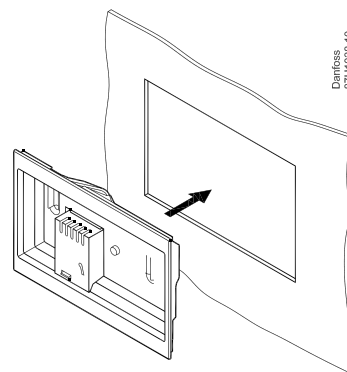 


3

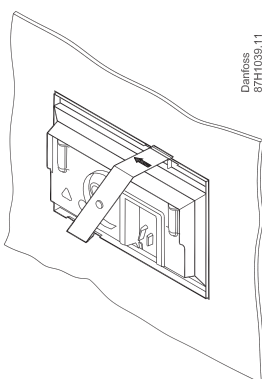 


4

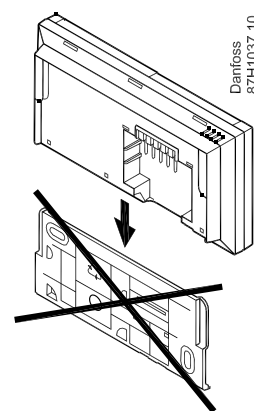 


5

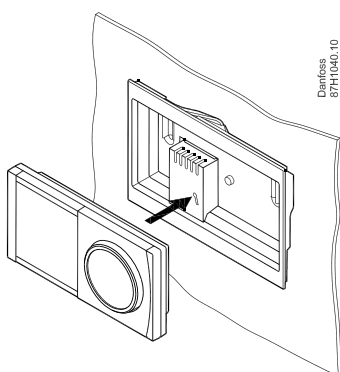 


6

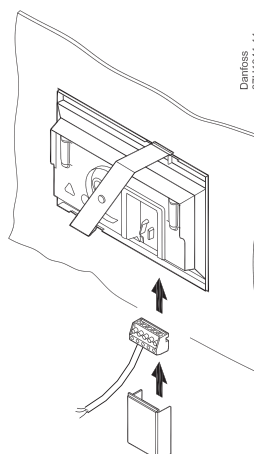 

7

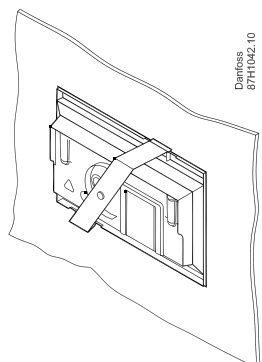 


8

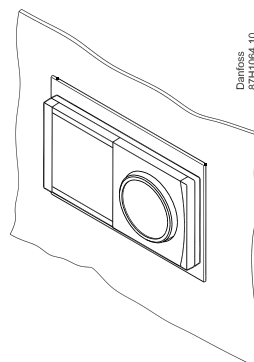 


Installation Guide, ECL Comfort 310, P314


Danfoss
87H1021.11

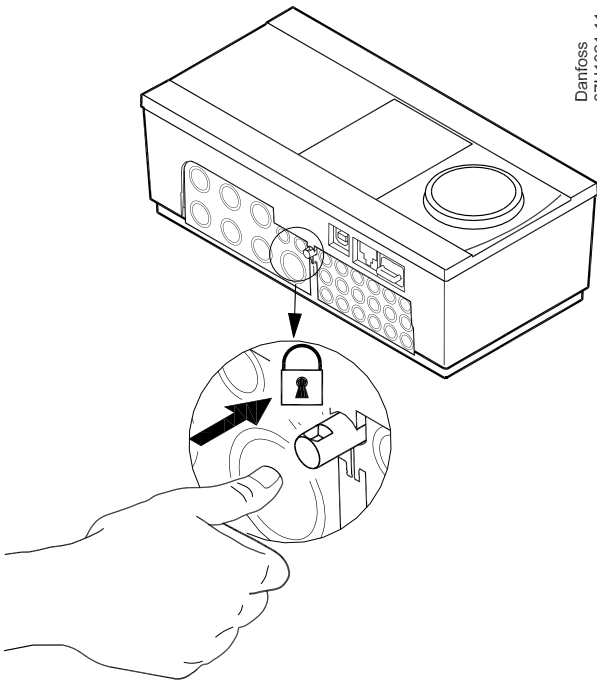


Danfoss
87H1017.11

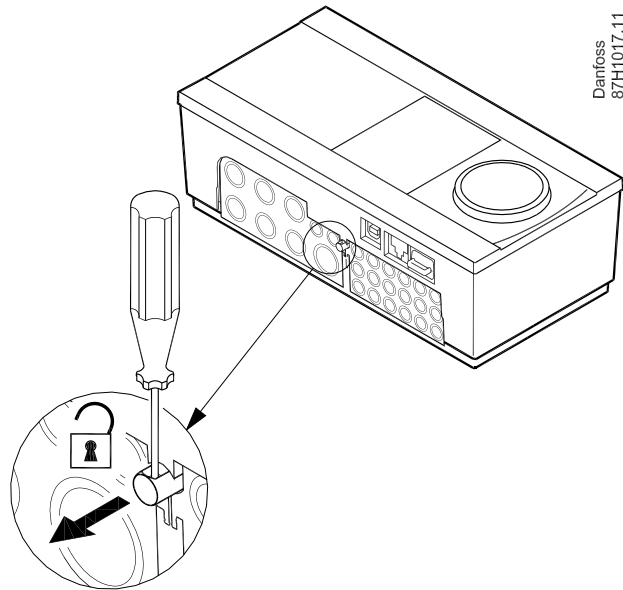

Danfoss
87H1073.11

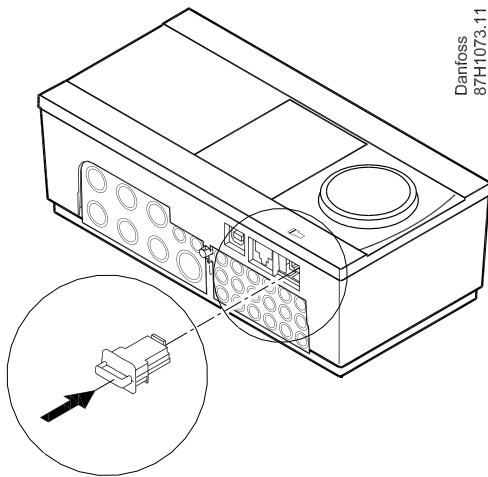

Danfoss
87H1074.11

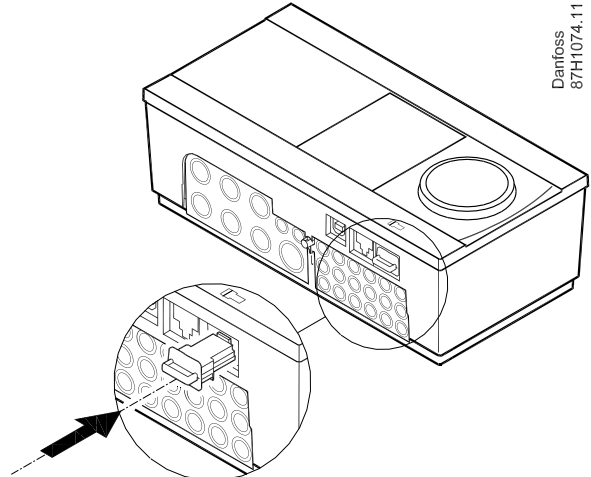 

?  **ECL Comfort 310, P314: www.heating.danfoss.com**

?  **<https://www.youtube.com/user/DanfossHeating>
-> Playlists -> How-to Videos -> District Energy installation videos**



Danfoss A/S

Heating Segment • danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without consequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.