 
 
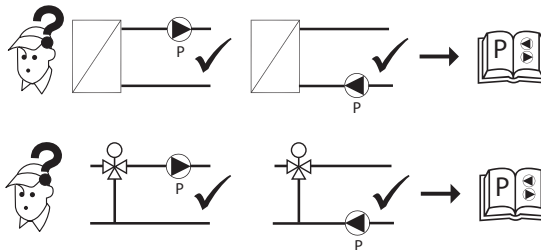
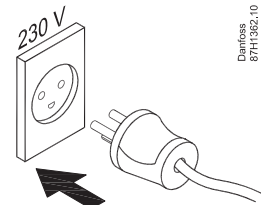 
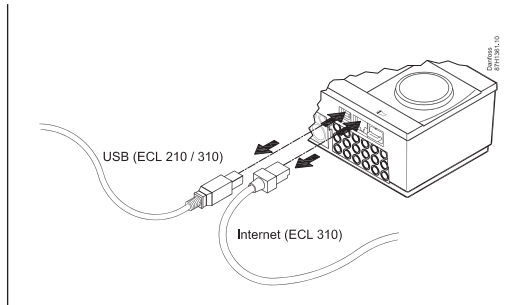 


## Installation Guide

 
# ECL Comfort 310, P314 (code no. 087H3841)

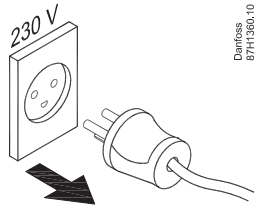

### P314.4, ex. a:

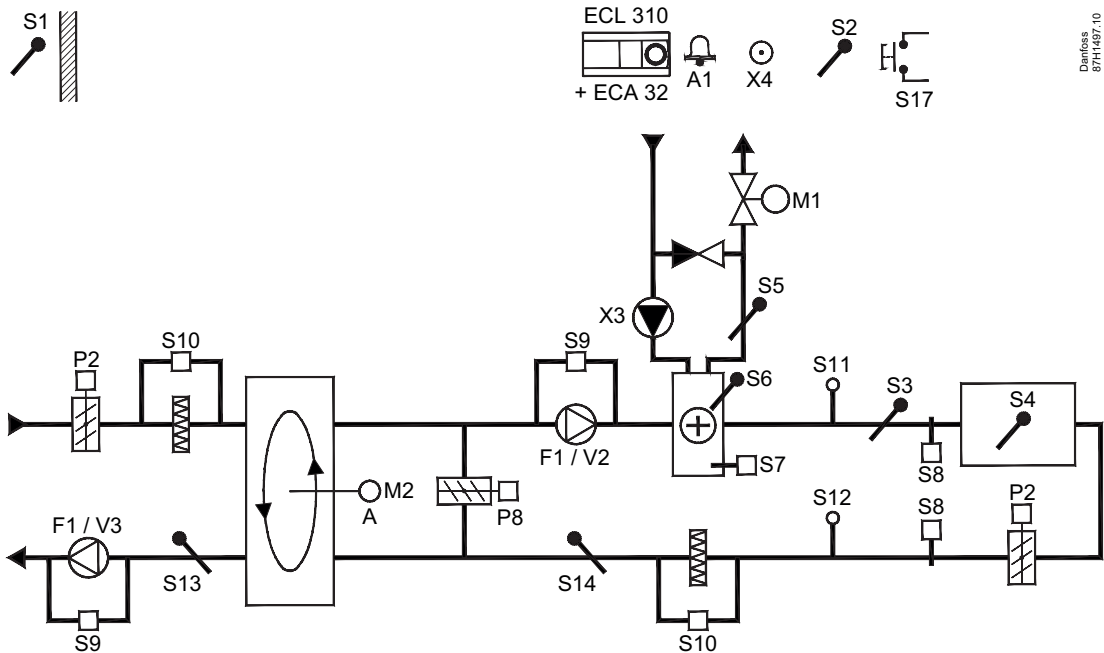


P314.4, ex. b:

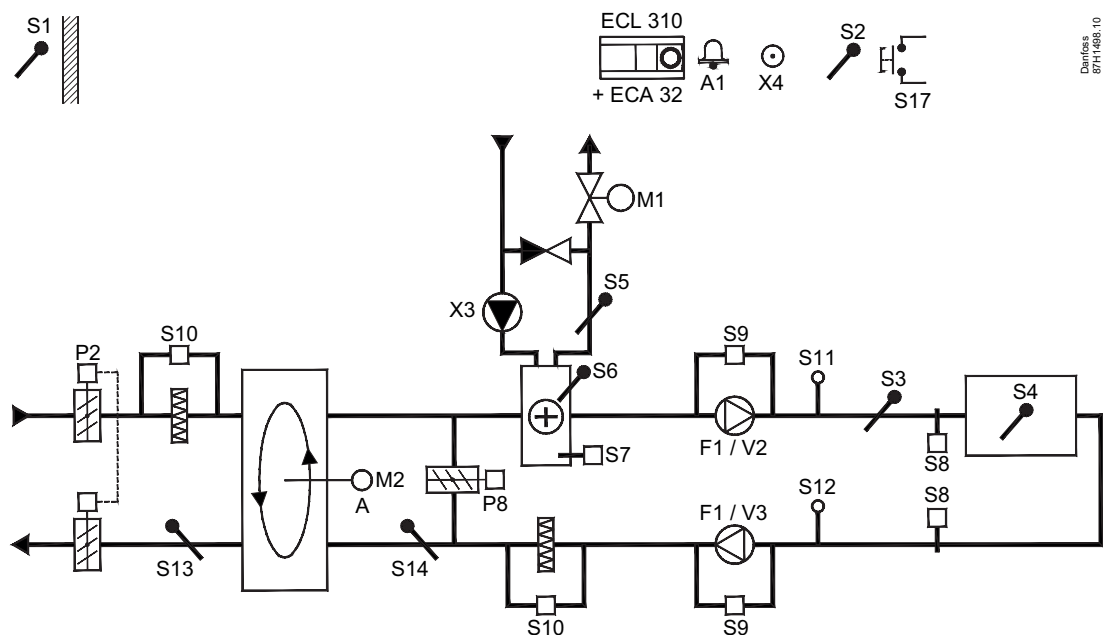


Danfoss  
87H1489.10

 P314.5, ex. a:

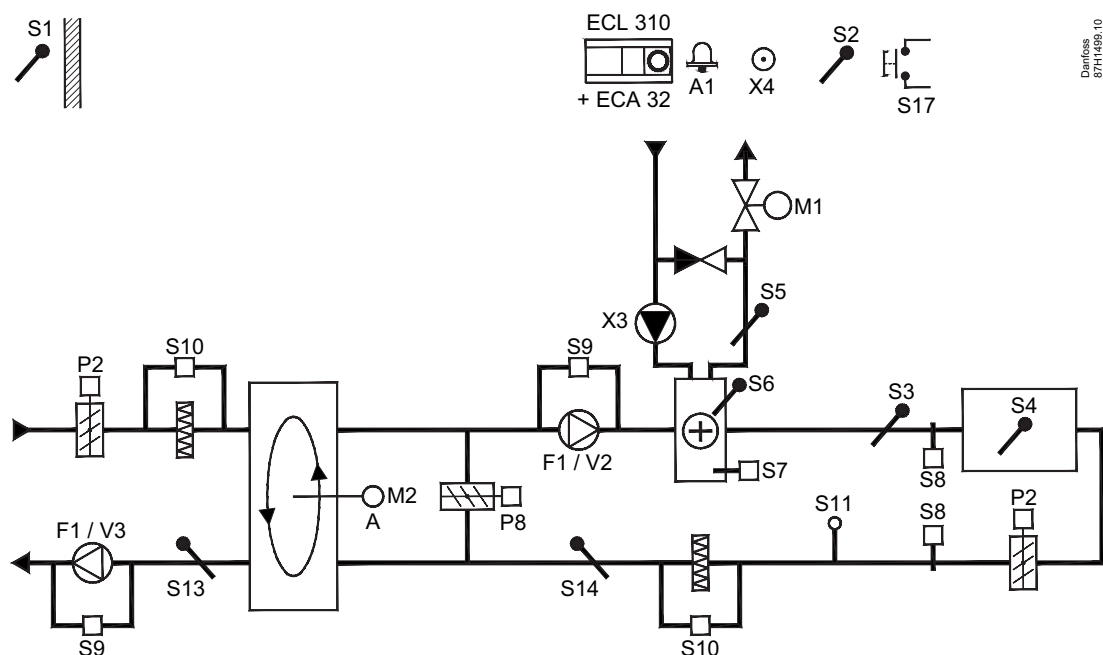


Danfoss  
87H1489.10


**P314.5, ex. b:**

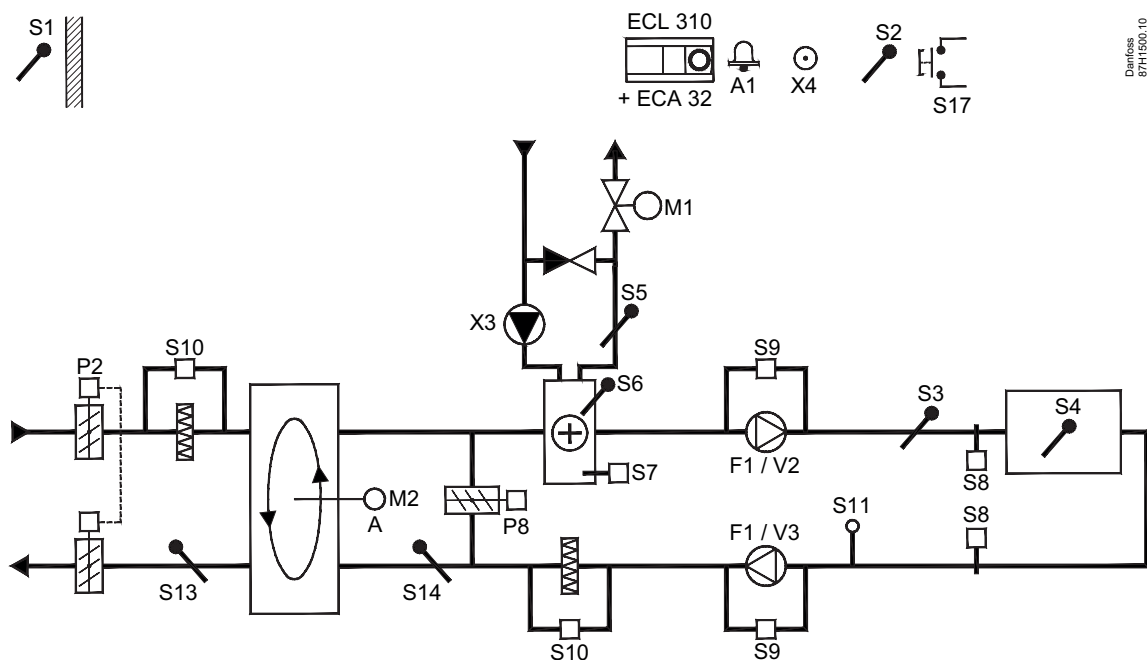 


**P314.6, ex. a:**

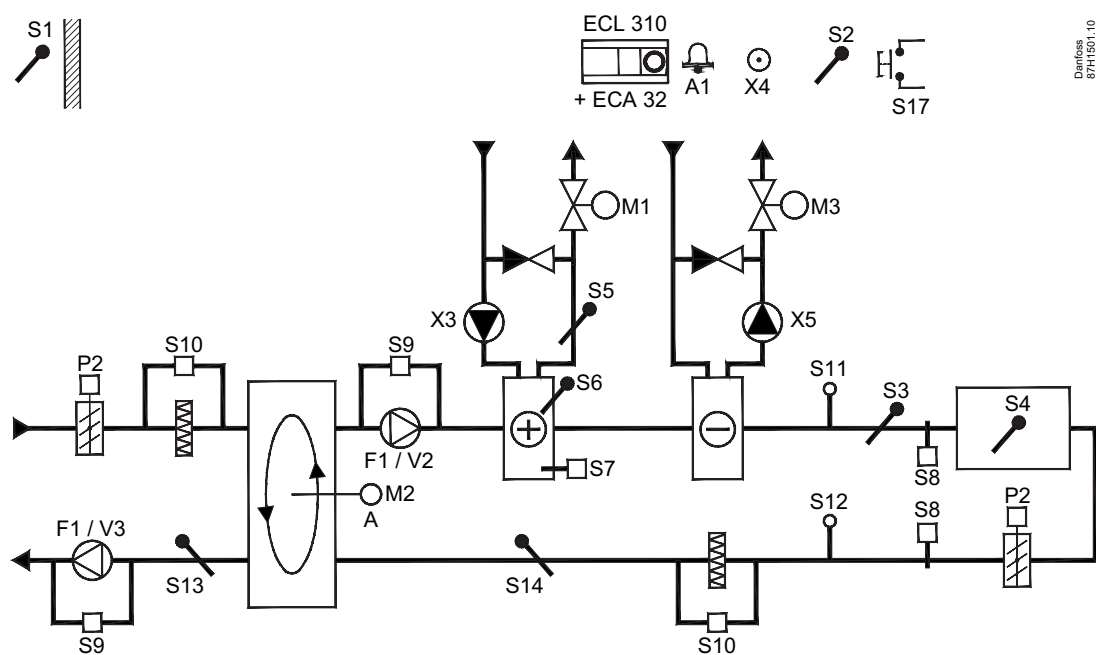 


P314.6, ex. b:

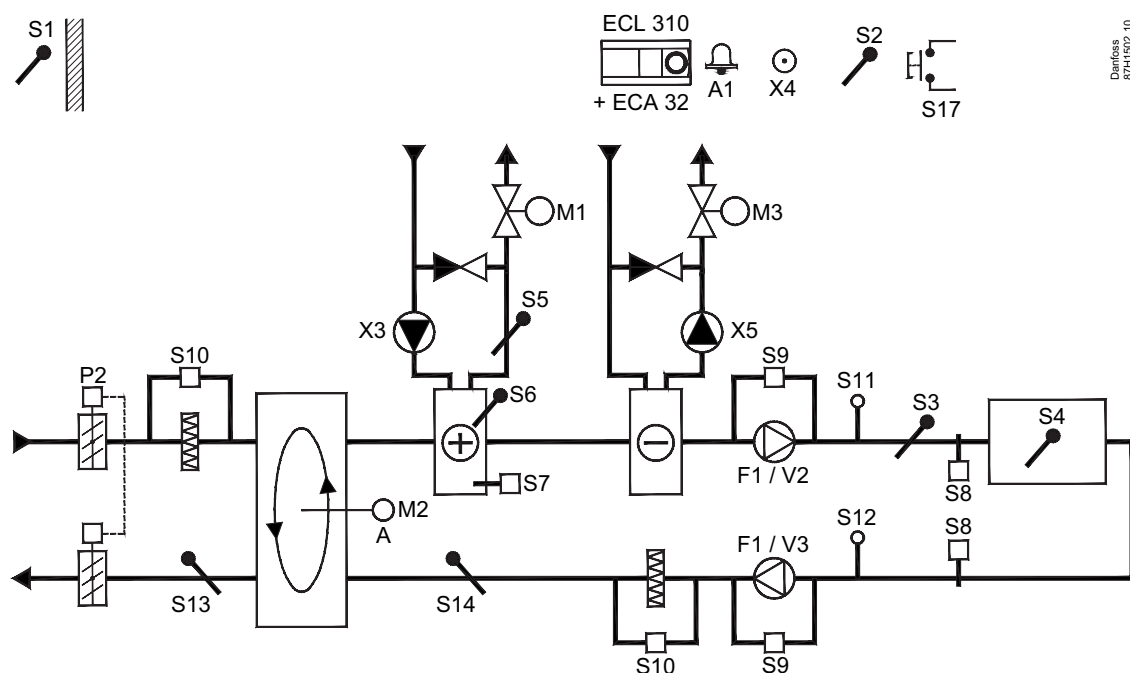 


P314.7, ex. a:

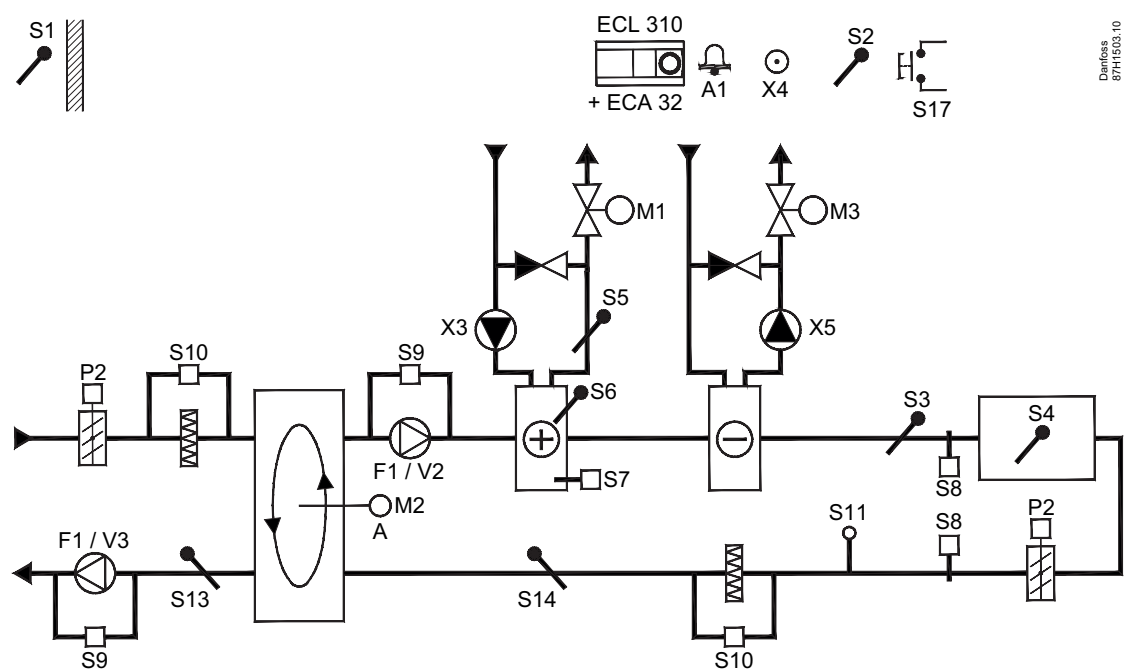 


**P314.7, ex. b:**

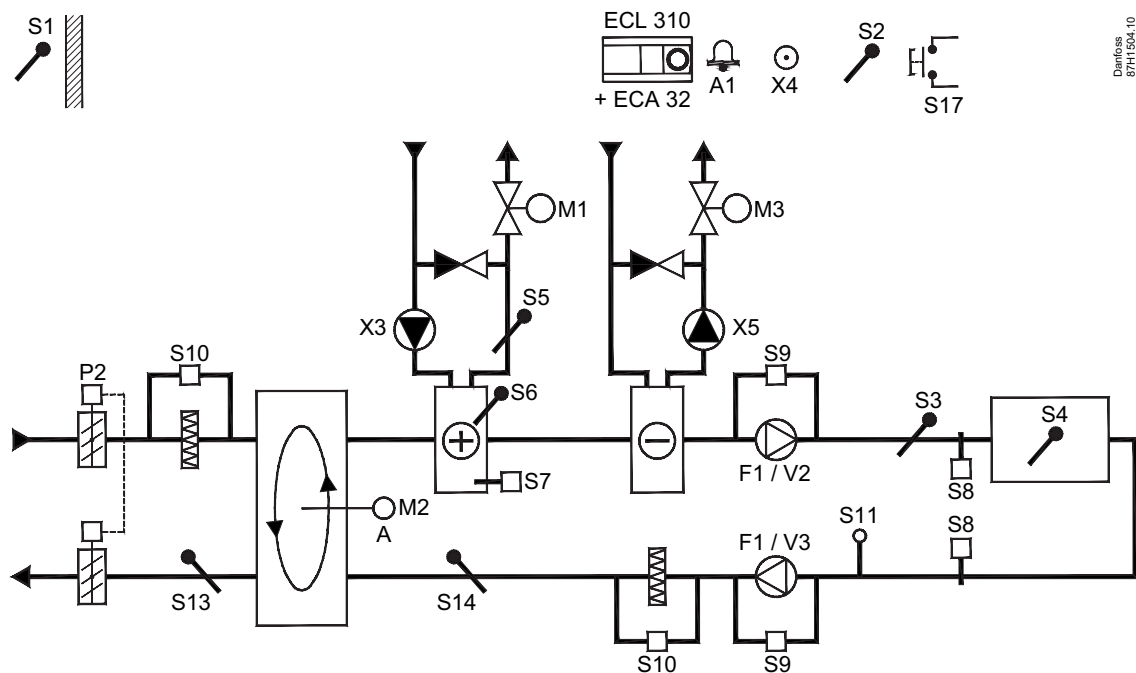 

**P314.8, ex. a:**

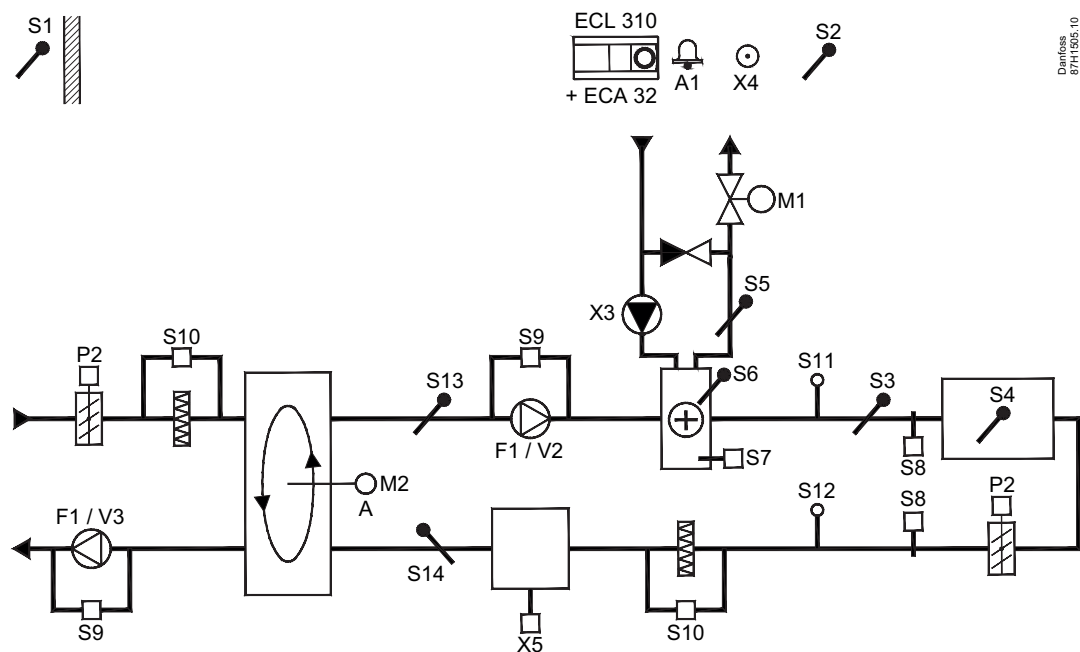 


P314.8, ex. b:

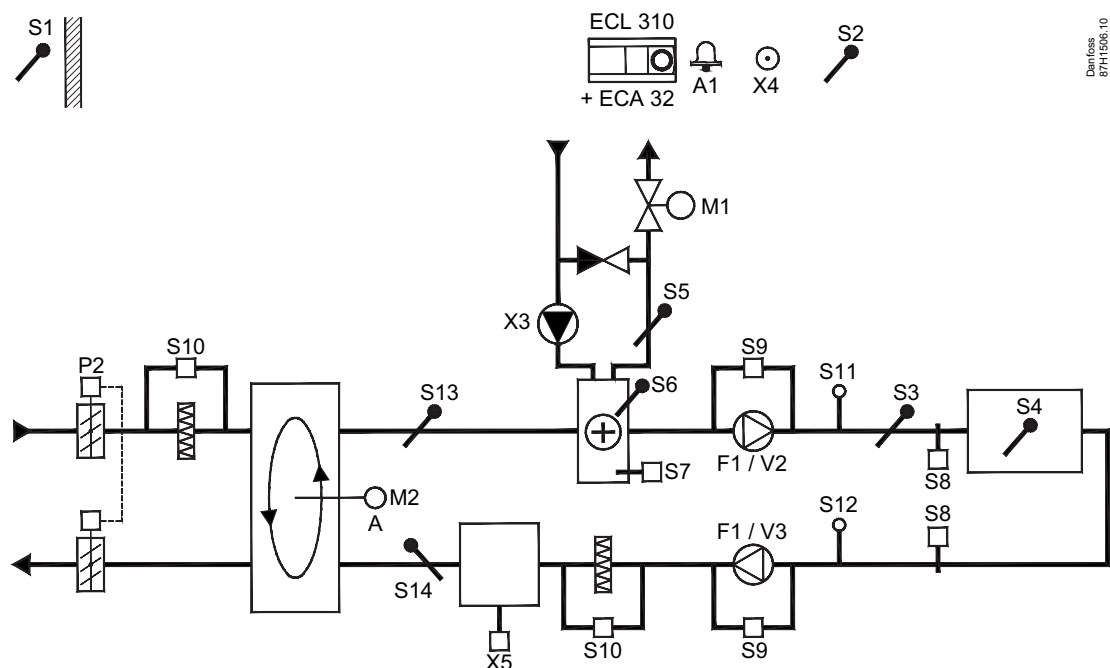


Danfoss  
87H1506.10

P314.10, ex. a:

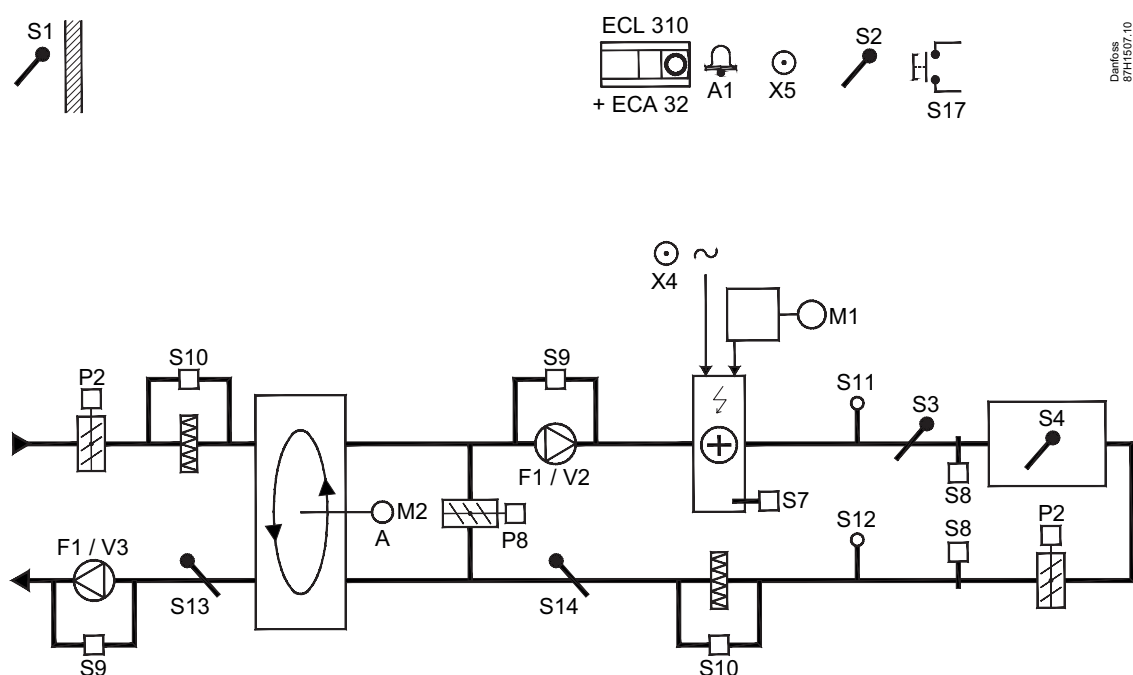


Danfoss  
87H1507.10

**P314.10, ex. b:**

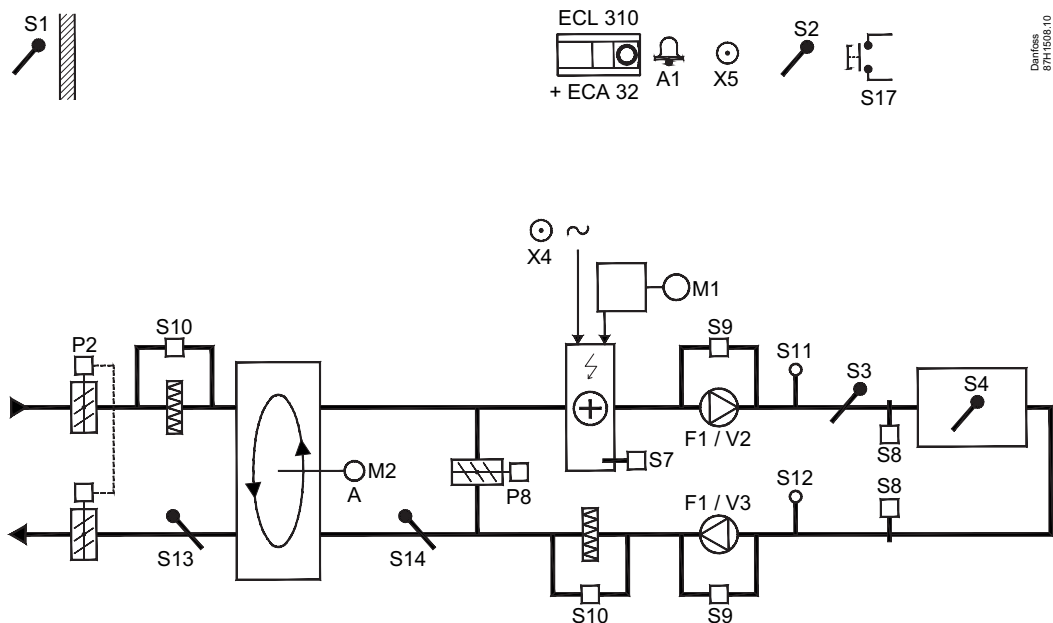


Danfoss  
87H1508.10

**P314.11, ex. a:**

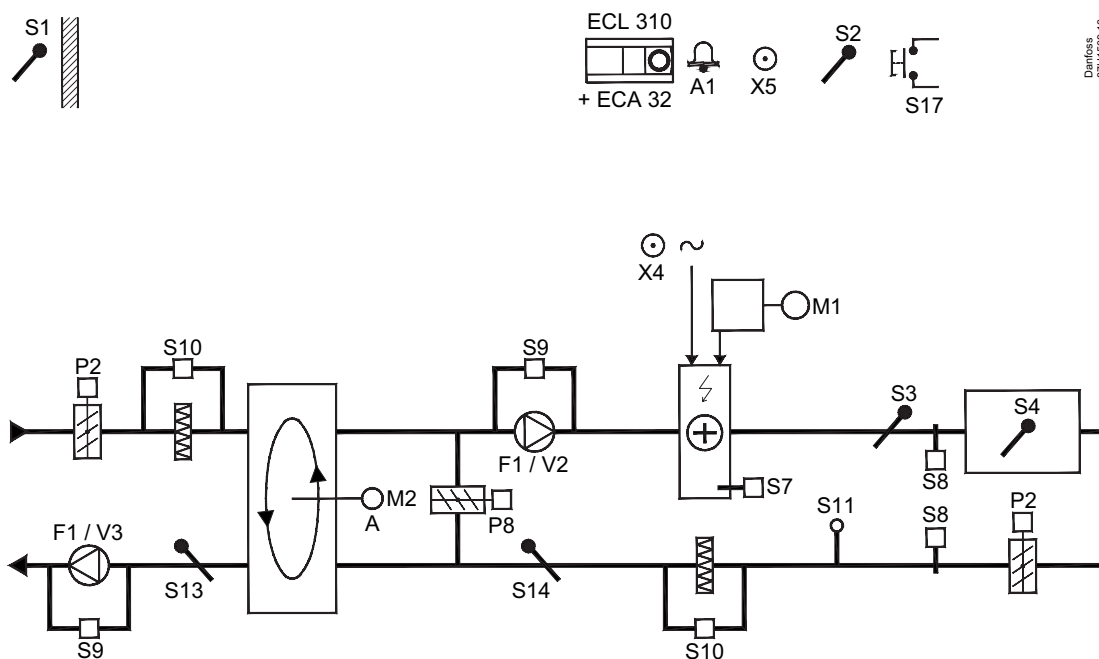

Danfoss  
87H1509.10

**P314.11, ex. b:**

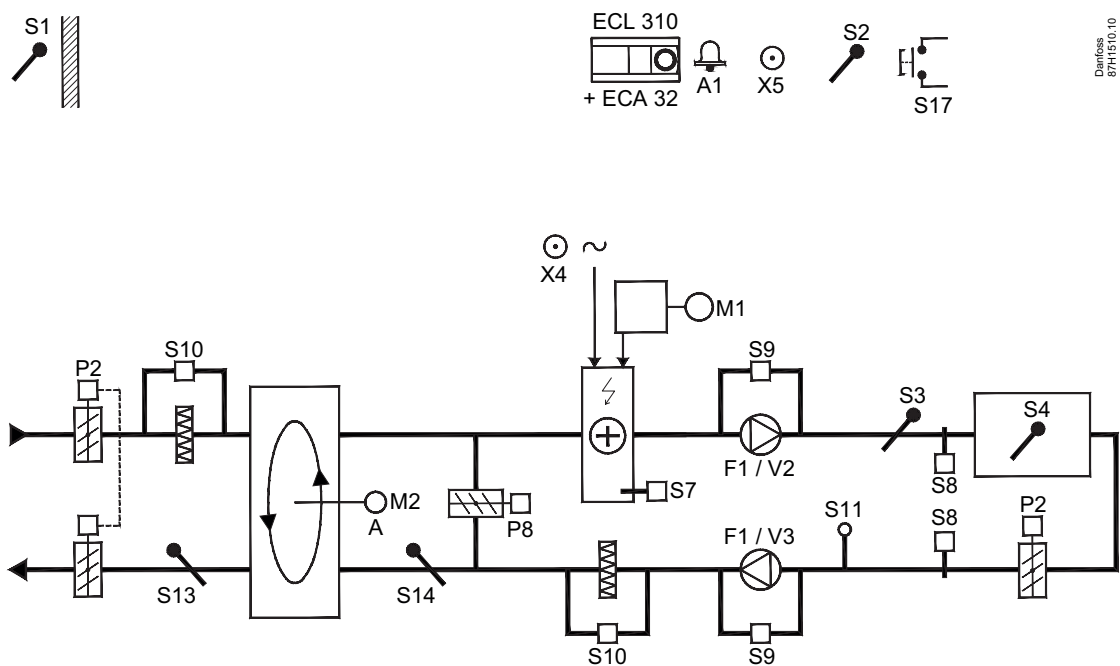 


ECL 310, 24 V a.c.:

|         | 3-point: |    |    |  | 0 - 10 V:<br>(ECA 32) |    |
|---------|----------|----|----|--|-----------------------|----|
|         | M1       | M2 | M3 |  | M1                    | M2 |
| P314.4  | ✓        |    |    |  |                       | ✓  |
| P314.5  | ✓        |    |    |  |                       | ✓  |
| P314.6  | ✓        |    | ✓  |  |                       | ✓  |
| P314.7  | ✓        |    | ✓  |  |                       | ✓  |
| P314.8  | ✓        |    |    |  |                       | ✓  |
|         |          |    |    |  |                       |    |
| P314.10 | ✓        |    |    |  |                       | ✓  |
| P314.11 | ✓        |    |    |  |                       | ✓  |

ECL 310, 24 V a.c.:


|         | ECL Comfort 310 |    |    |    |    |  | ECA 32 |    |
|---------|-----------------|----|----|----|----|--|--------|----|
|         | F1              | P2 | X3 | X4 | X5 |  | P7     | P8 |
| P314.4  | ✓               | ✓  | ✓  | ✓  |    |  | ✓      | ✓  |
| P314.5  | ✓               | ✓  | ✓  | ✓  |    |  | ✓      | ✓  |
| P314.6  | ✓               | ✓  | ✓  | ✓  | ✓  |  | ✓      |    |
| P314.7  | ✓               | ✓  | ✓  | ✓  | ✓  |  | ✓      |    |
| P314.8  | ✓               | ✓  | ✓  | ✓  | ✓  |  | ✓      |    |
|         |                 |    |    |    |    |  |        |    |
| P314.10 | ✓               | ✓  |    | ✓  | ✓  |  | ✓      | ✓  |
| P314.11 | ✓               | ✓  |    | ✓  | ✓  |  | ✓      | ✓  |

 24 V a.c., P314:

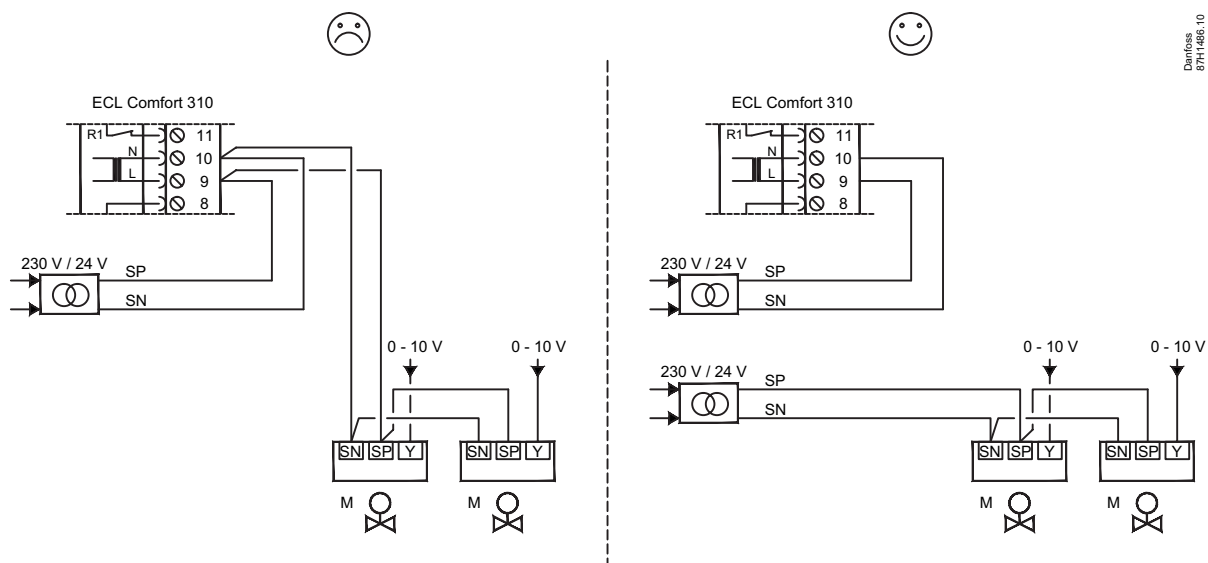


Danfoss  
87H1486.10


24 V a.c., P314

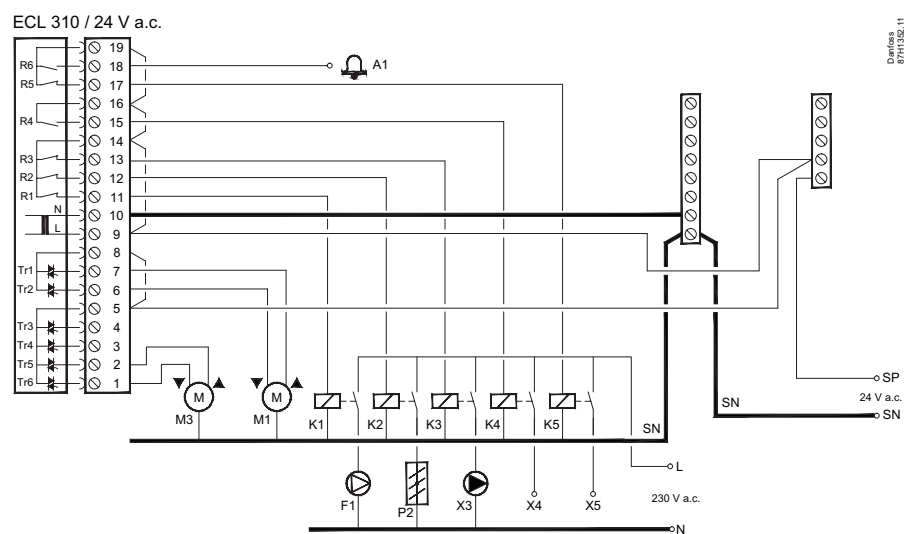


24 V a.c., P314

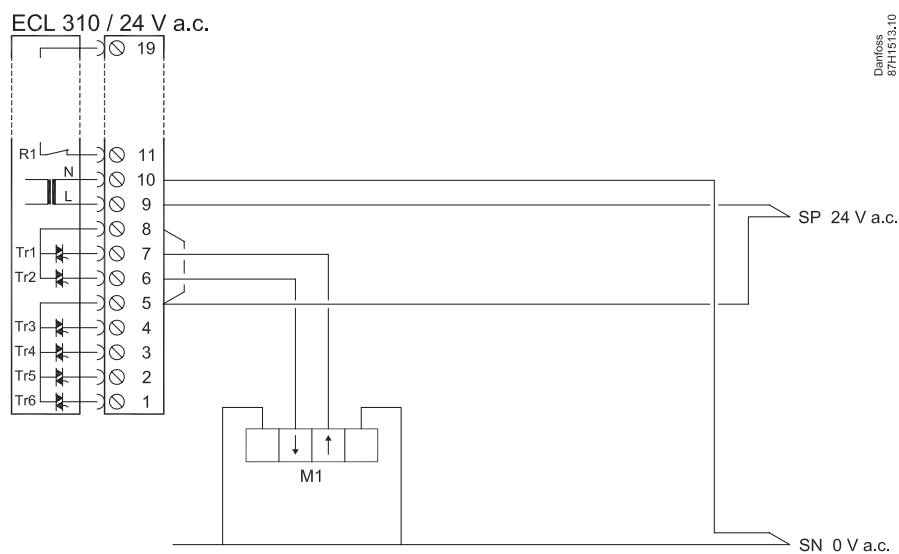 


## ECA 32

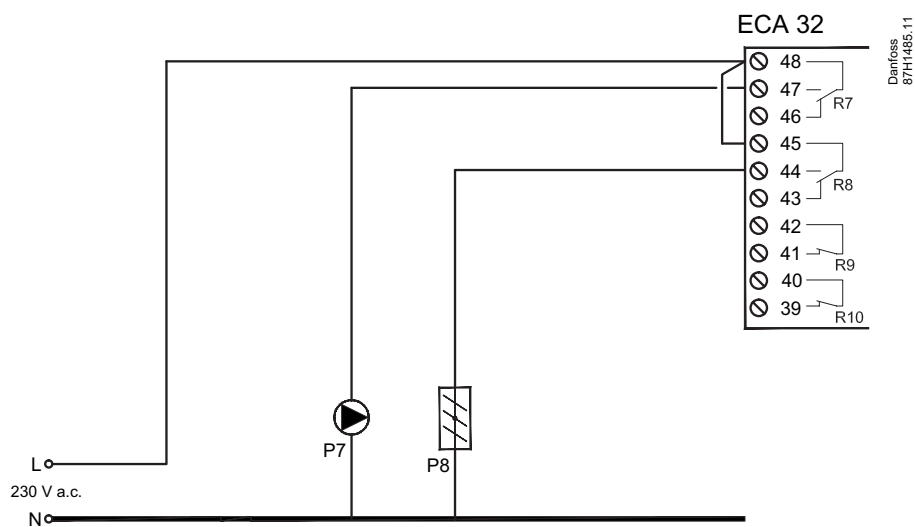


## ECA 32

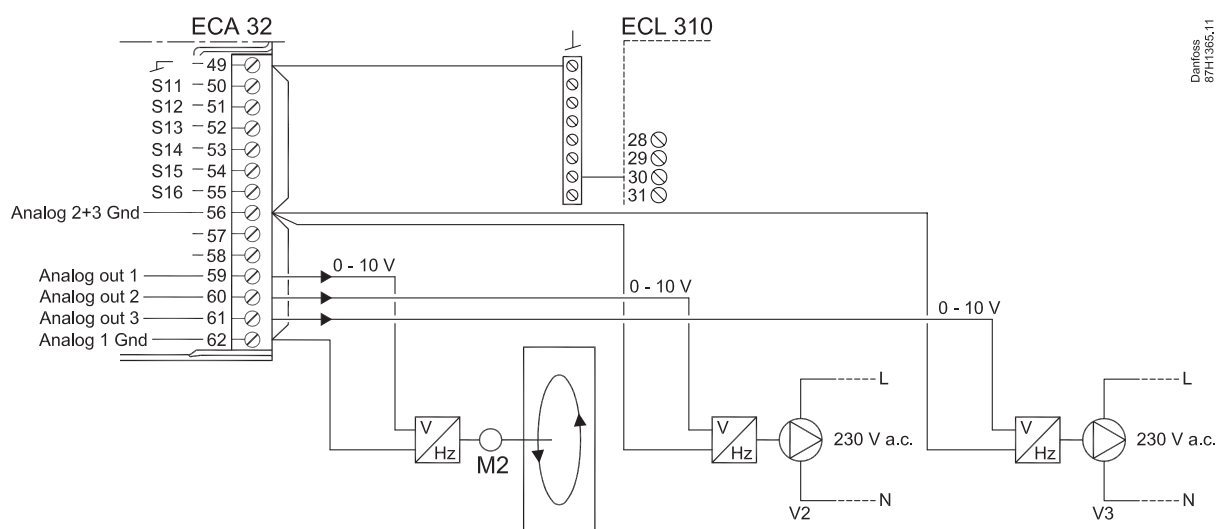


**Example:**

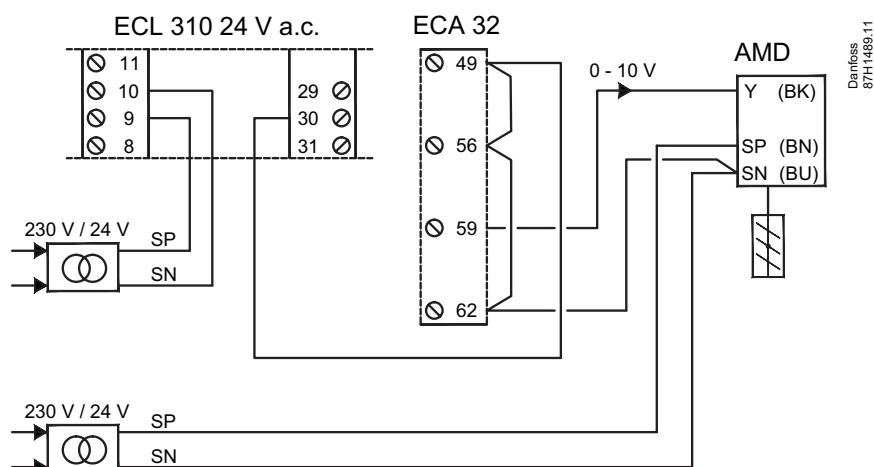

**Example:**




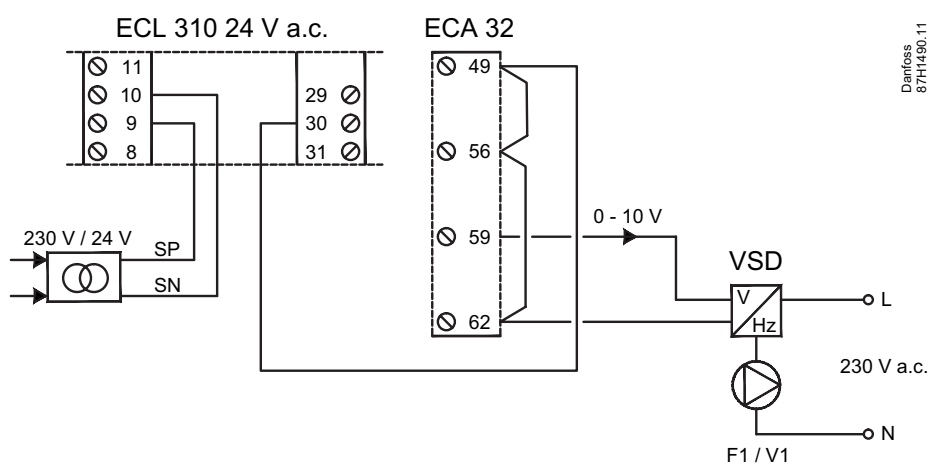


**Example:**


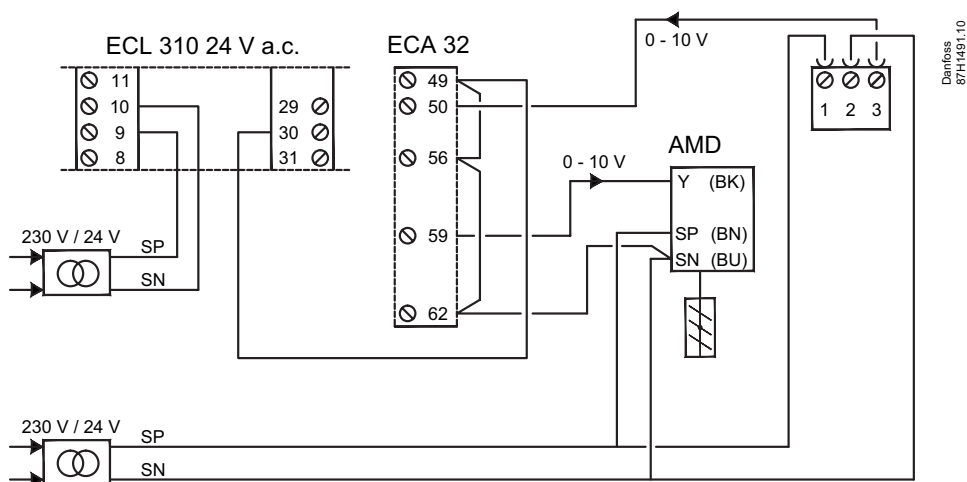


**24 V a.c. , safety thermostat**

**1-step closing**

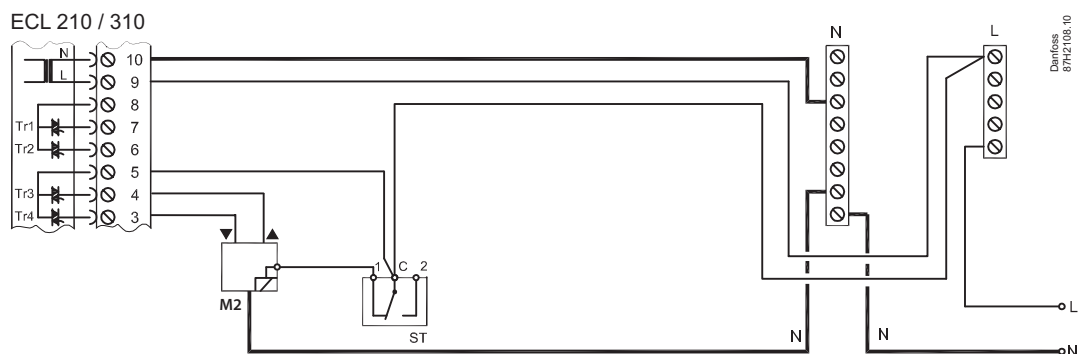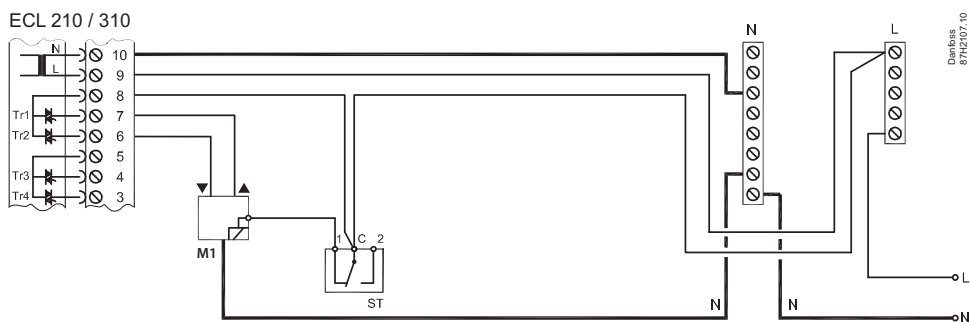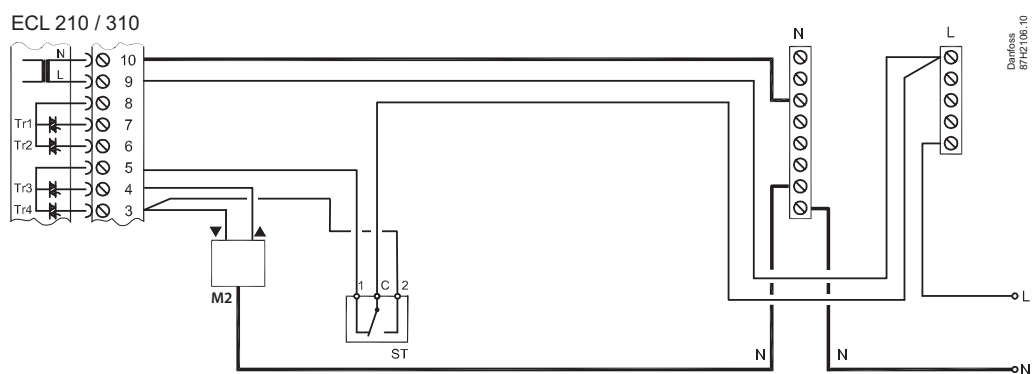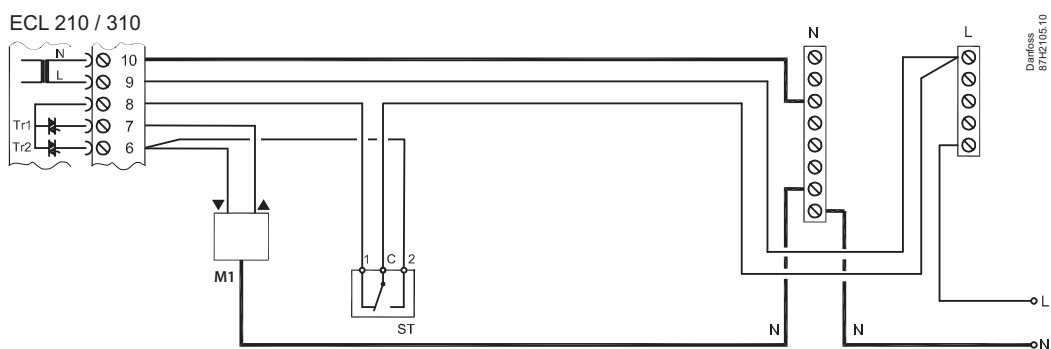


  **24 V a.c. , safety thermostat  
2-step closing**

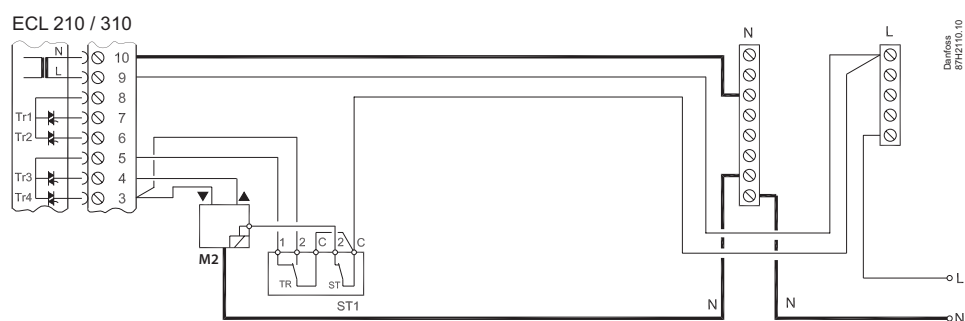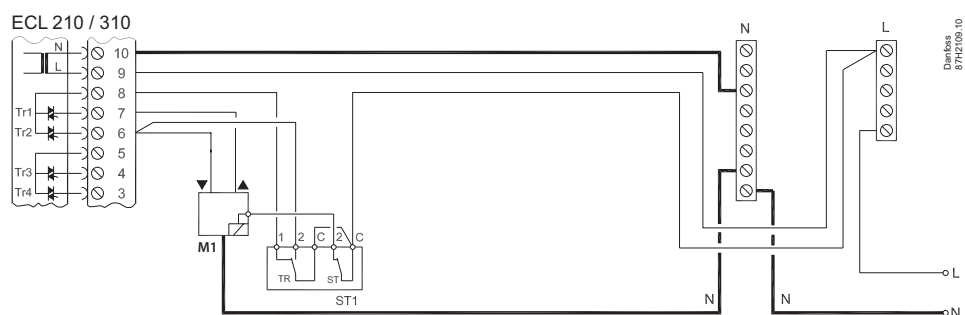


# Installation Guide, ECL Comfort 310, P314


Pt 1000 (1000 Ω / 0 °C)

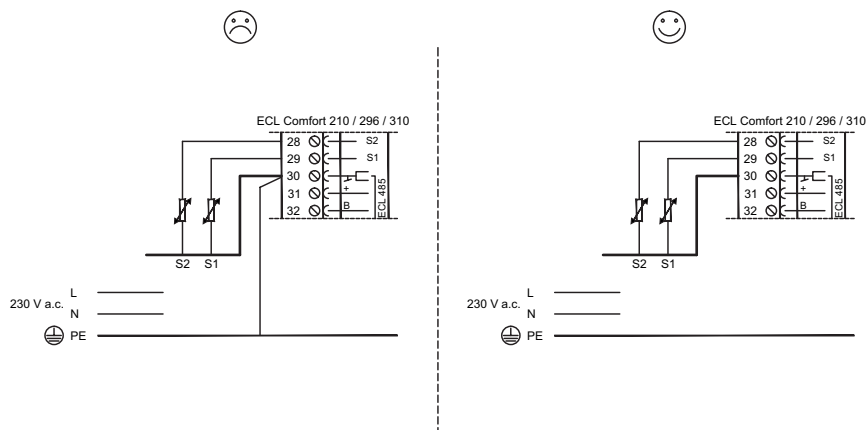

Danfoss  
87H1165.11

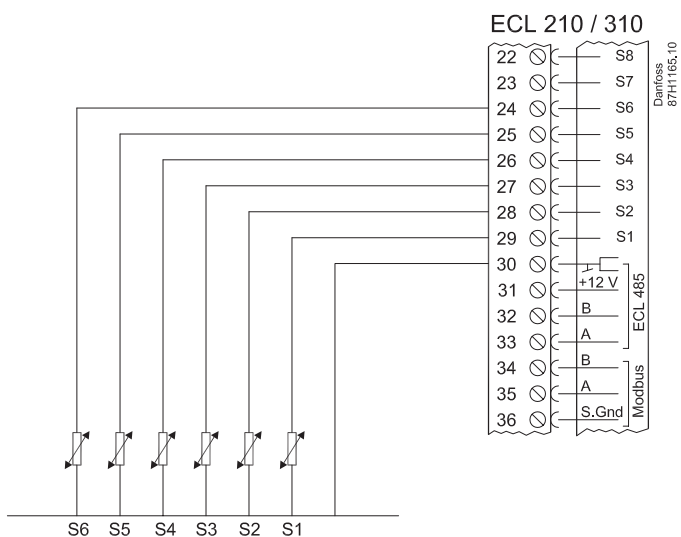 


Danfoss  
87H1165.10

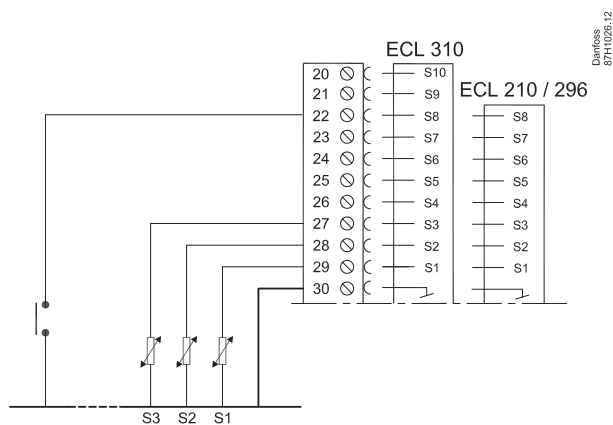 


Danfoss  
87H1026.12


S7

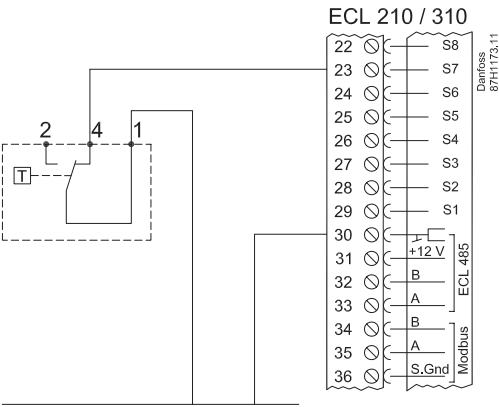

S8

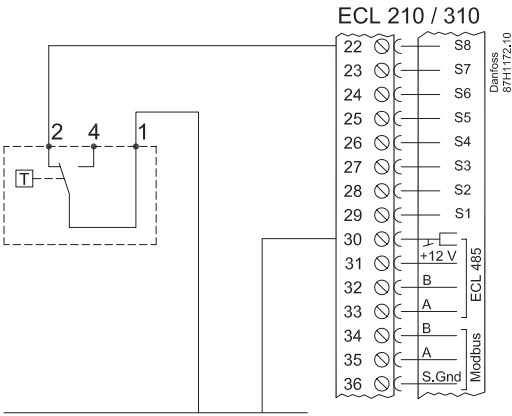 


S9 / S10

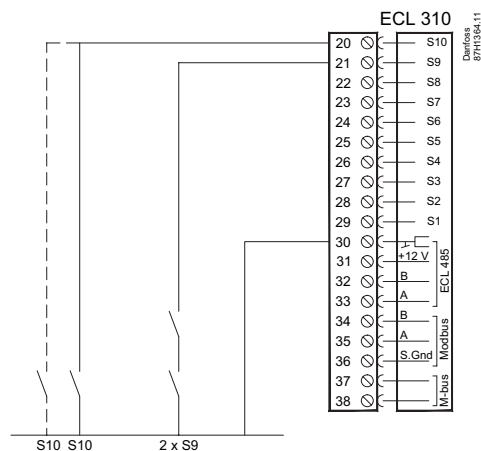


ECA 32


|         | S11 | S12 | S13 | S14 | S15 | S16 | S17 |
|---------|-----|-----|-----|-----|-----|-----|-----|
| P314.4  | ✓   | ✓   | ✓   | ✓   |     |     | ✓   |
| P314.5  | ✓   |     | ✓   | ✓   |     |     | ✓   |
| P314.6  | ✓   | ✓   | ✓   | ✓   |     |     | ✓   |
| P314.7  | ✓   |     | ✓   | ✓   |     |     | ✓   |
| P314.8  | ✓   | ✓   | ✓   | ✓   |     |     |     |
|         |     |     |     |     |     |     |     |
| P314.10 | ✓   | ✓   | ✓   | ✓   | ✓   |     | ✓   |
| P314.11 | ✓   |     | ✓   | ✓   | ✓   |     | ✓   |

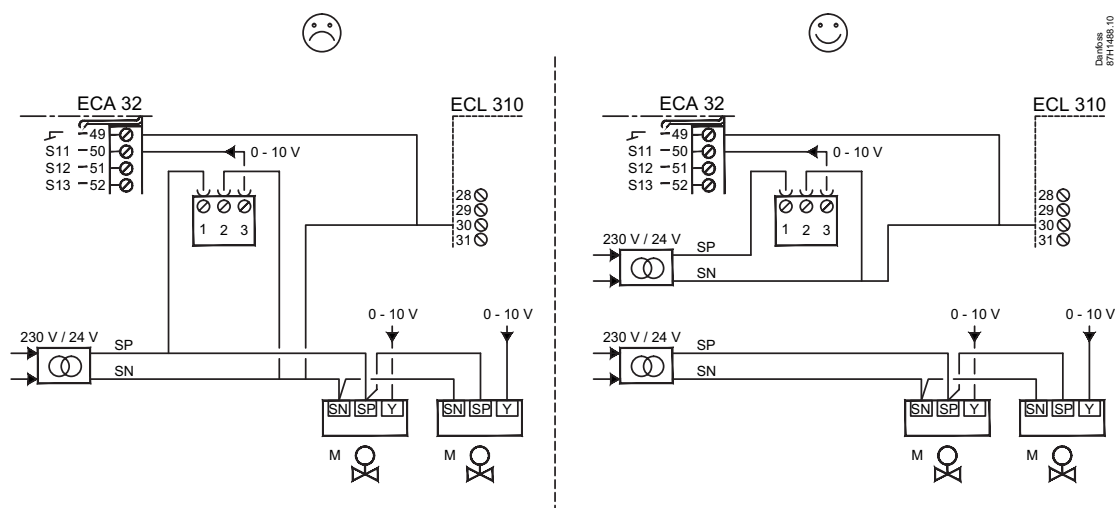

ECA 32

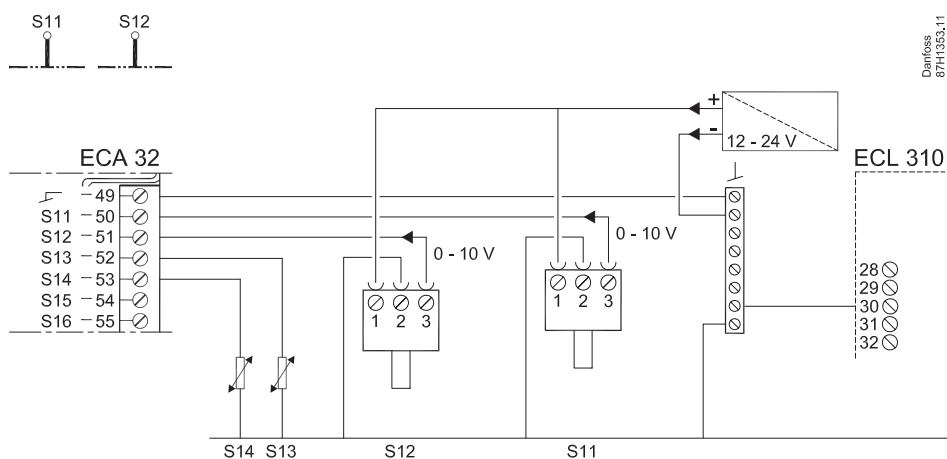


Danfoss  
87H1353,11

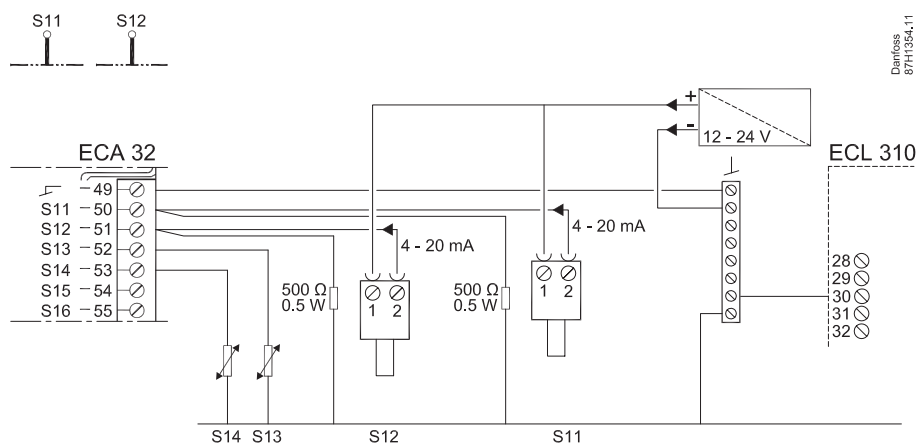 

Danfoss  
87H1354,11


**ECA 32, P314.10, P314.11**

 **S15**

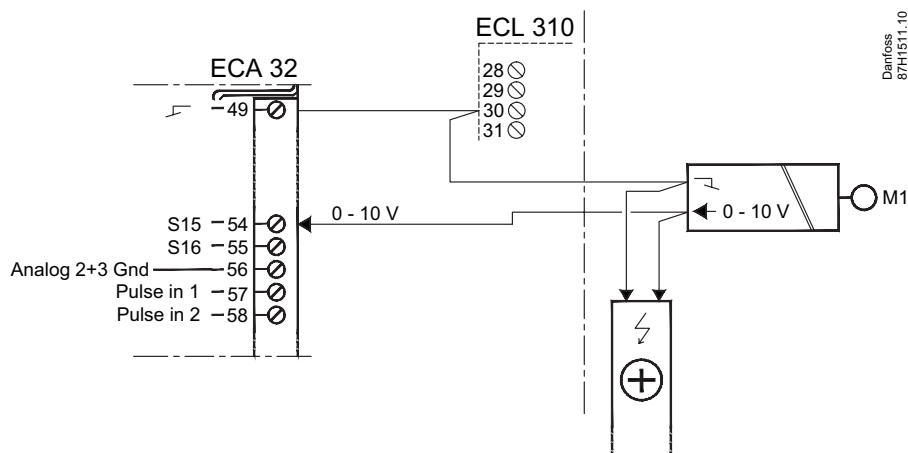


**ECA 32, P314.4, P314.5, P314.6, P314.7, P314.10, P314.11**


**S17**

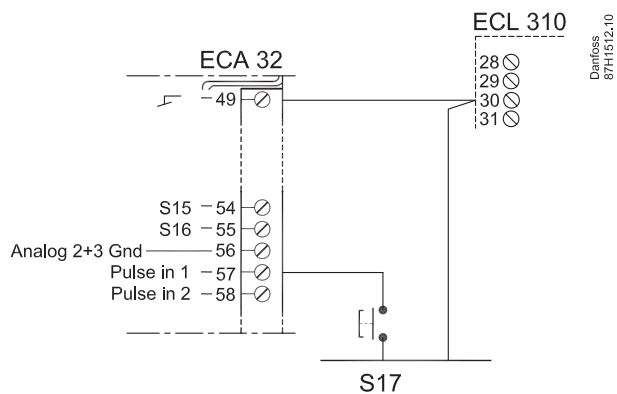


**ECA 30 / 31**

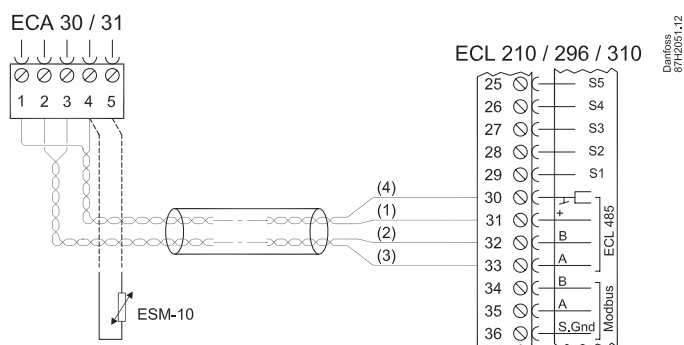

**ECA 30 / 31**

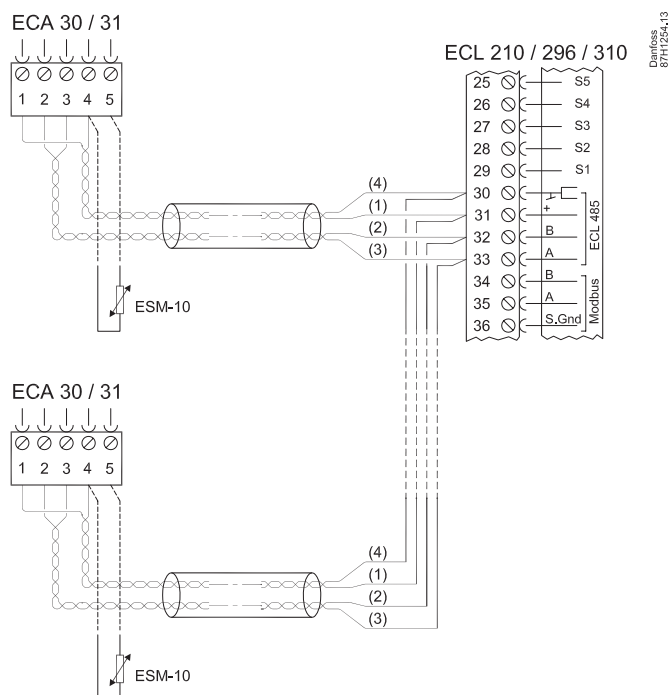


## Master / slave

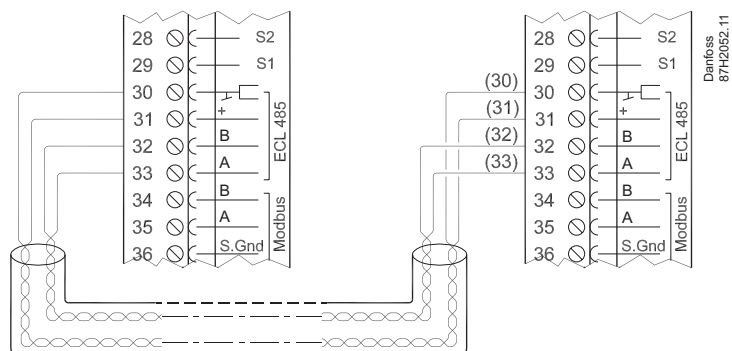


## Modbus
 
### ECL 210 / 296 / 310

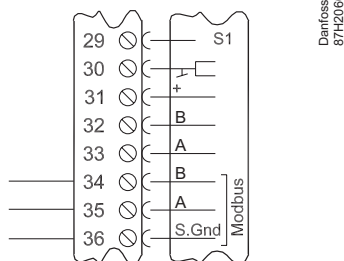


## M-bus

 
### ECL 296 / 310

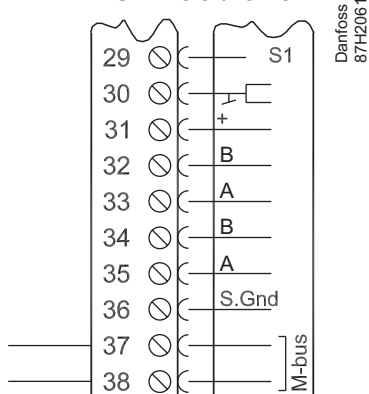

## M-bus

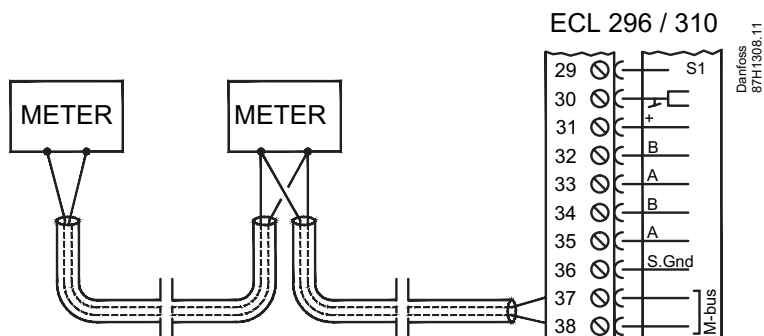 


Pt 1000 (IEC 751B, 1000  $\Omega$  / 0 °C)

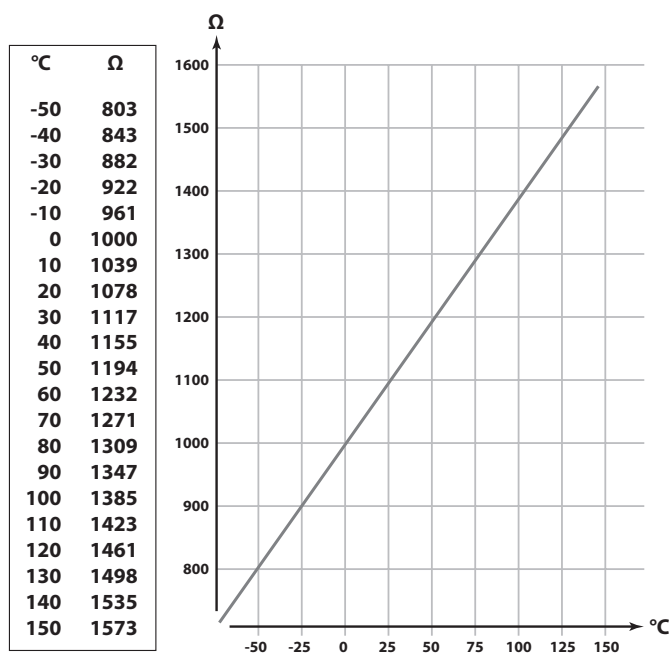


ECA 30


1

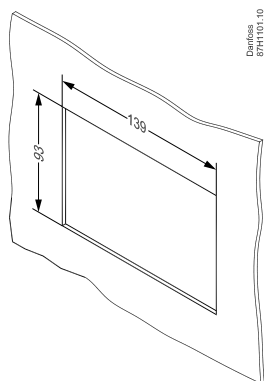


2

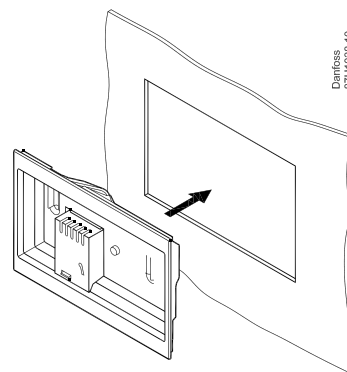 


3

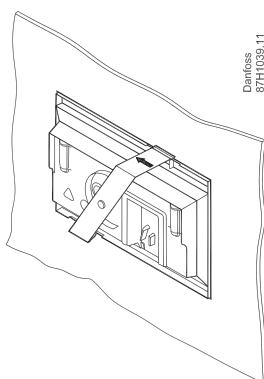


4

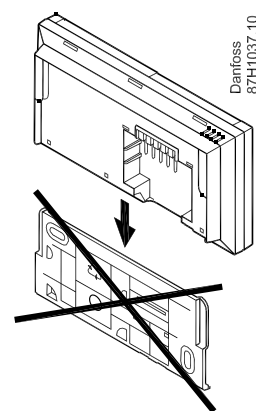 


5

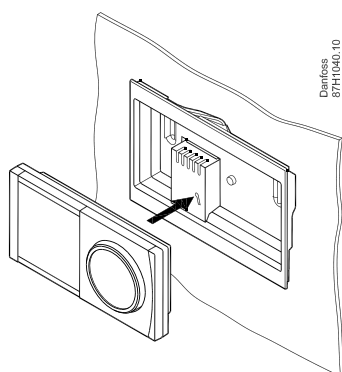


6

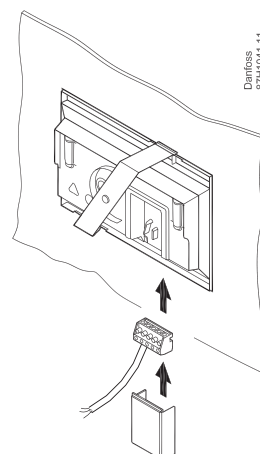 

7

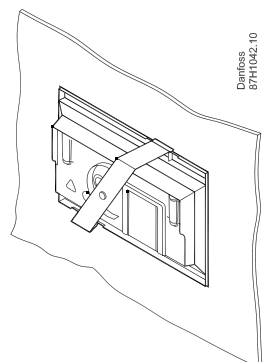


8

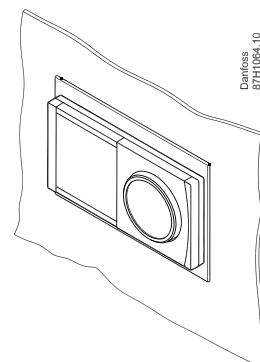 


# Installation Guide, ECL Comfort 310, P314


Danfoss  
87H1021.11

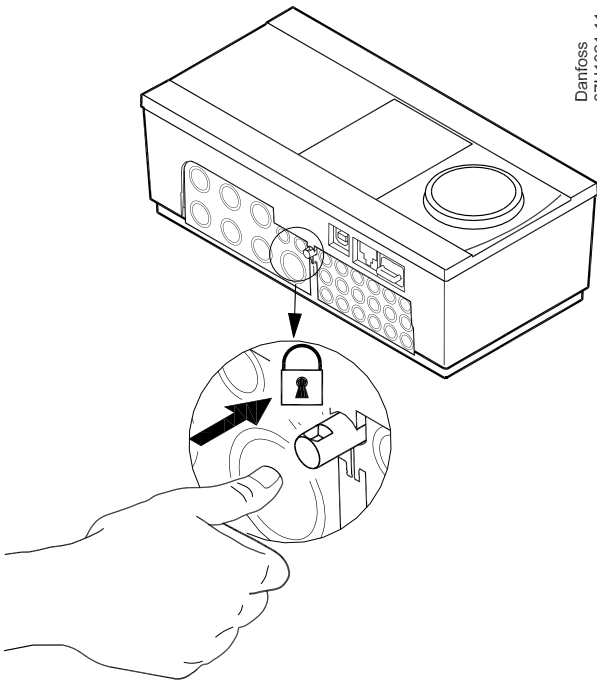


Danfoss  
87H1017.11

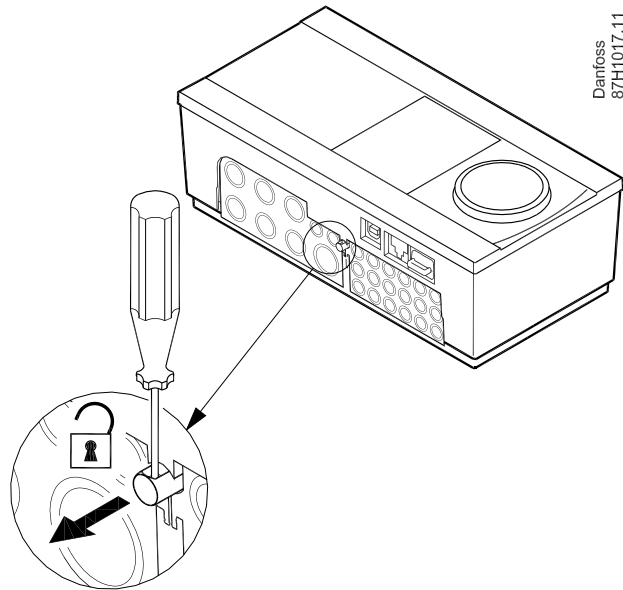

Danfoss  
87H1073.11

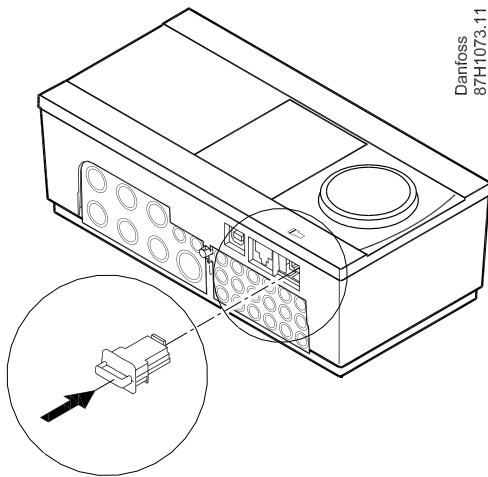


Danfoss  
87H1074.11

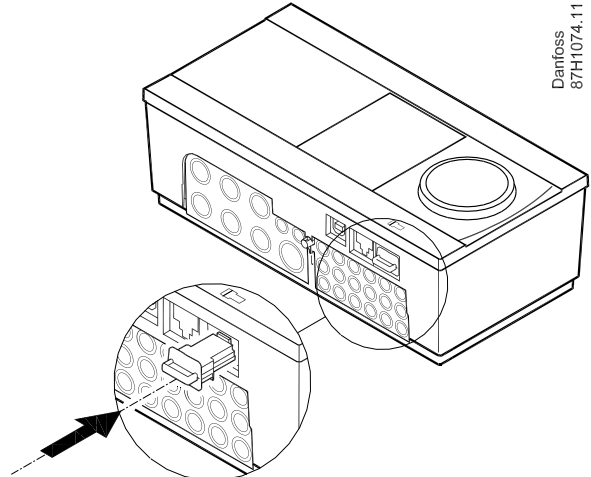 

?  **ECL Comfort 310, P314: [www.heating.danfoss.com](http://www.heating.danfoss.com)**

?  **<https://www.youtube.com/user/DanfossHeating>  
-> Playlists -> How-to Videos -> District Energy installation videos**

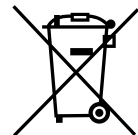

**Danfoss A/S**

Heating Segment • [danfoss.com](http://danfoss.com) • +45 7488 2222 • E-Mail: [heating@danfoss.com](mailto:heating@danfoss.com)

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without substantial changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.