

SAFEGUARDS AND PRECAUTIONS

This guide outlines basic safeguards in using your flowtoys. The information presented cannot cover all possible circumstances that may occur. In using any flowtoy, the user understands that common sense and caution cannot be built into the product, and must be provided by him/herself. Please read all instructions before using your toys.

1. Flowtoys are intended for practice, play, performance and meditation. Do not use for any other purpose.
2. Do not use products under the influence of alcohol or drugs. Consult prescription labels to determine if a particular drug would impair your judgment or reflexes. If so, do not use this product.
3. Stay alert and use common sense. Do not use this product when tired or distracted. Be aware when in the presence of fragile or breakable objects.

BEFORE USE: Check for damaged parts before using any product. Ensure caps, connectors and battery doors are fully secured. Most flowtoys are made of individual pieces that can separate during use if not properly assembled.

GENERAL CARE: Repair or replace damaged or worn parts before use. Do not use damaged products.

REGULAR MAINTENANCE: Maintain all Flowtoys products with care. Store in a clean, dry environment. Avoid unnecessary exposure to sunlight: UV rays will weaken most plastics over time.

WARNING: This product is not intended for use by children age 14 and under.



WARNING! LITHIUM ION BATTERY SAFETY PRECAUTIONS

You must read these safety instructions and warnings before using or charging your batteries.

Vision clubs use rechargeable lithium ion batteries. Lithium ion batteries might cause damages like leaking, fire or explosion when misused or defective. Failure to read and follow the below instructions may result in fire, personal injury and damage to property if charged or used improperly or if defective. Please read carefully and be aware!

- Always charge in an isolated area, away from other flammable materials like wood or carpet. Never charge batteries unattended.
- Please double check your charger to assure it is operating correctly at the beginning of every charge cycle. If your charger or battery becomes hot, balloons/swells, emits smoke or smells unusual, **STOP CHARGING IMMEDIATELY**. Observe the battery for 15 minutes in a safe area outside of any building or vehicle and away from any combustible material to assure that it does not ignite, and contact us.
- Some microUSB chargers may have technical deficiencies that may cause them to charge Li-ion batteries incorrectly or at an improper rate. It is your responsibility solely to assure the charger you purchased works properly. Always monitor charging process to assure batteries are being charged properly.
- Do NOT disassemble or modify the battery. Vibration, puncture, contact with metals, exposure to liquid or tampering with the battery can cause it to fail. The battery contains safety and protection devices, which, if damaged, may cause the battery to generate heat, explode, ignite, or short circuit. Severe injury may occur.
- Store in a cool, dry place. Never store or charge batteries in extreme temperatures, such as a hot car; near heat sources or fire; or in pressurized or very cold environments.
- Keep away from children.
- If the battery leaks and the fluid gets into your eye, do not rub your eye. Rinse well with water and immediately seek medical care. If left untreated, the battery fluid could cause damage to the eye.

FOREVER FLOW WARRANTY

Within 2 years: If your vision club is not physically damaged through unintended use (e.g. fire, water, run over by car), replacements are free. Shipping not included. If your vision club is physically damaged, replacements are half price on the part.

 
 
 
Lifetime: If it's a battery issue, there's a \$42 battery replacement fee. All other issues will be half price replacement on the relevant part.

If the tips in this guide do not keep your flowtoys working for years to come, please contact us at support@flowtoys.com.

** Flowtoys reserves the right to refuse coverage to anyone abusing this warranty. Please contact us before sending in your product, or it may be returned to sender.*



VISION CLUBS

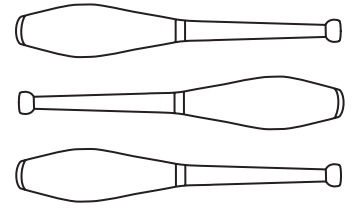

You are now the proud owner of vision clubs! We are very excited for all the good times you're going to enjoy with them. This brief guide shows you how to charge your clubs and there's the stuff on the other side, coz lawyers said to include them ;)

You can refer to the flowOS **pocket guide** for a quick overview on navigating your modes and features. For in-depth instructions on how to navigate, group, save to favorites and more, visit flowtoys.com/product-support

If you'd like to replace your club parts with shiny new parts at any point, you can find club caps, knobs, handles and bodies on flowtoys.com. Your vision clubs come with a lifetime warranty and amazing customer care. Please see warranty details on the back page. If you have any questions or issues with your clubs, please email us at support@flowtoys.com, or join and post on the "flowtoys connect" Facebook group.

POWER

To charge: There is a microUSB jack under the cap - peel the cap off your club and charge with a standard microUSB cable. Club should turn on and begin "breathing" in its charge-level color. The indicator light turns off when your clubs are charged to save power.

Your club takes approx. 3-4 hours to fully charge, but 90% of the charge happens in 2.5 hours. If you leave your club on as it charges for a moodlight, it may take longer to fully charge depending on the mode. Bright modes may prevent full charge, or even deplete the battery, while plugged into the charger.

Checking your battery charge level: When off, press and hold the button. The light will blink a color indicating your charge level - ranging from red to green - until you let go. Your battery may be low when you first receive your lights - if so, please charge before use.

Red = really low, less than 10% left

Orange = OK, maybe 50% left

Yellow = should last a while, 50-90%

Green = good to go! 90% or more

Note: Colors are approximate. Runtimes vary greatly with different modes.

Low battery mode: When the battery gets low, the club will exhibit a dim red flicker for awhile, so your club doesn't go totally dark immediately.

Dead battery indicator: If your light blinks red and turns off, the battery is totally out of juice. Time to power up again.

SAFEGUARDS AND PRECAUTIONS

This guide outlines basic safeguards in using your flowtoys. The information presented cannot cover all possible circumstances that may occur. In using any flowtoy, the user understands that common sense and caution cannot be built into the product, and must be provided by him/herself. Please read all instructions before using your toys.

1. Flowtoys are intended for practice, play, performance and meditation. Do not use for any other purpose.
2. Do not use products under the influence of alcohol or drugs. Consult prescription labels to determine if a particular drug would impair your judgment or reflexes. If so, do not use this product.
3. Stay alert and use common sense. Do not use this product when tired or distracted. Be aware when in the presence of fragile or breakable objects.

BEFORE USE: Check for damaged parts before using any product. Ensure caps, connectors and battery doors are fully secured. Most flowtoys are made of individual pieces that can separate during use if not properly assembled.

GENERAL CARE: Repair or replace damaged or worn parts before use. Do not use damaged products.

REGULAR MAINTENANCE: Maintain all Flowtoys products with care. Store in a clean, dry environment. Avoid unnecessary exposure to sunlight; UV rays will weaken most plastics over time.

WARNING: This product is not intended for use by children age 14 and under.

⚠ WARNING! LITHIUM ION BATTERY SAFETY PRECAUTIONS

You must read these safety instructions and warnings before using or charging your batteries.

Vision clubs use rechargeable lithium ion batteries. Lithium ion batteries might cause damages like leaking, fire or explosion when misused or defective. Failure to read and follow the below instructions may result in fire, personal injury and damage to property if charged or used improperly or if defective. Please read carefully and be aware!

- Always charge in an isolated area, away from other flammable materials like wood or carpet. Never charge batteries unattended.

- Please double check your charger to assure it is operating correctly at the beginning of every charge cycle. If your charger or battery becomes hot, balloons/swells, emits smoke or smells unusual, **STOP CHARGING IMMEDIATELY.** Observe the battery for 15 minutes in a safe area outside of any building or vehicle and away from any combustible material to assure that it does not ignite, and contact us.

- Some microUSB chargers may have technical deficiencies that may cause them to charge Li-ion batteries incorrectly or at an improper rate. It is your responsibility solely to assure the charger you purchased works properly. Always monitor charging process to assure batteries are being charged properly.

- Do NOT disassemble or modify the battery. Vibration, puncture, contact with metals, exposure to liquid or tampering with the battery can cause it to fail. The battery contains safety and protection devices, which, if damaged, may cause the battery to generate heat, explode, ignite, or short circuit. Severe injury may occur.

- Store in a cool, dry place. Never store or charge batteries in extreme temperatures, such as a hot car, near heat sources or fire; or in pressurized or very cold environments.

- Keep away from children.
- If the battery leaks and the fluid gets into your eye, do not rub your eye. Rinse well with water and immediately seek medical care. If left untreated, the battery fluid could cause damage to the eye.

FOREVER FLOW WARRANTY

Within 2 years: If your vision club is not physically damaged through unintended use (e.g. fire, water, run over by car), replacements are free. Shipping not included. If your vision club is physically damaged, replacements are half price on the part.

 
 
Lifetime: If it's a battery issue, there's a \$42 battery replacement fee. All other issues will be half price replacement on the relevant part.

If the tips in this guide do not keep your flowtoys working for years to come, please contact us at support@flowtoys.com.

** Flowtoys reserves the right to refuse coverage to anyone abusing this warranty. Please contact us before sending in your product, or it may be returned to sender.*

2021.10

VISION CLUBS

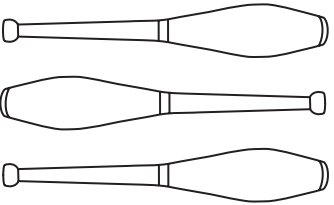

You are now the proud owner of vision clubs! We are very excited for all the good times you're going to enjoy with them. This brief guide shows you how to charge your clubs and there's the stuff on the other side, coz lawyers said to include them :)

You can refer to the flowOS **pocket guide** for a quick overview on navigating your modes and features. For in-depth instructions on how to navigate, group, save to favorites and more, visit flowtoys.com/product-support

If you'd like to replace your club parts with shiny new parts at any point, you can find club caps, knobs, handles and bodies on flowtoys.com. Your vision clubs come with a lifetime warranty and amazing customer care. Please see warranty details on the back page. If you have any questions or issues with your clubs, please email us at support@flowtoys.com, or join and post on the "flowtoys connect" Facebook group.

POWER

To charge: There is a microUSB jack under the cap - peel the cap off your club and charge with a standard microUSB cable. Club should turn on and begin "breathing" in its charge-level color. The indicator light turns off when your clubs are charged to save power.

Your club takes approx. 3-4 hours to fully charge, but 90% of the charge happens in 2.5 hours. If you leave your club on as it charges for a moodlight, it may take longer to fully charge depending on the mode. Bright modes may prevent full charge, or even deplete the battery, while plugged into the charger.

Checking your battery charge level: When off, press and hold the button. The light will blink a color indicating your charge level - ranging from red to green - until you let go. Your battery may be low when you first receive your lights - if so, please charge before use.

Red = really low, less than 10% left

Orange = OK, maybe 50% left

Yellow = should last a while, 50-90%

Green = good to go! 90% or more

Note: Colors are approximate. Runtimes vary greatly with different modes.

Low battery mode: When the battery gets low, the club will exhibit a dim red flicker for awhile, so your club doesn't go totally dark immediately.

Dead battery indicator: If your light blinks red and turns off, the battery is totally out of juice. Time to power up again.