



3061



有线键盘用户手册

Magnetic Switches Mechanical Keyboard
User Manual

 
快速开始指南 ►
Quick Start Guide

感谢您购买及使用本产品



为了给您带来更好的使用体验，在使用产品前请仔细阅读本说明书，并请妥善保管，以便日后参观。

产品概览

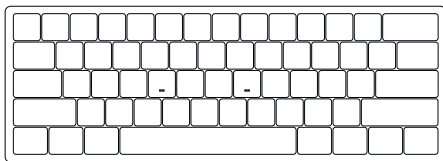

系统需求

Windows®XP / Vista / 7 / 8 / 10或更高版本


安装步骤

将键盘USB连接线插入电脑的USB接口即可开始使用。

指示灯

状态	指示灯位置	指示方式
舒适模式	E键键位	白灯亮1S后恢复同背光颜色
灵敏模式	R键键位	白灯亮1S后恢复同背光颜色
游戏模式	T键键位	白灯亮1S后恢复同背光颜色
自定义模式	Y键键位	白灯亮1S后恢复同背光颜色
Caps	独立指示灯1	白灯常亮
锁WIN	独立指示灯2	白灯常亮

 3061S HE 组合键功能

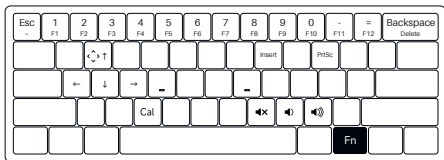

Fn+	Esc	~
	1 - 0	F1 - F10
	-	F11
	=	F12
	Backspace	Delete


Fn+	W	上/下/左/右
	I	Insert
	P	PrtSc
	C	计算器
	M	静音

Fn+	<	音量减弱
	>	音量增强
	W	将W A S D与 ↑ ↓ ← → 键对调

调整按键行程快捷键

Fn+E	舒适模式 - 行程按下2mm，抬起2mm
Fn+R	灵敏模式 - 行程按下0.5mm，抬起2mm
Fn+T	游戏模式 - 行程按下0.5mm，抬起2mm+火力模式
Fn+Y	自定义模式 - 驱动自定义轴行程通道，行程按下2mm，抬起2mm

 3061S HE 系统功能 (Windows)

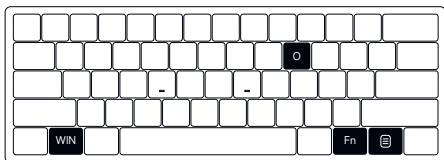

锁Win键
Fn + 左Win

WIN系统 ⇌ MAC系统
长按 Fn + O 3秒

恢复出厂设置
长按左Win + Win 5S

3061S HE 系统功能 (Mac)



Fn+	1	降低显示屏亮度
	2	增加显示屏亮度
	3	= 开放任务控制
	4	呼出Siri
	7	上一曲


Fn+	8	播放/暂停
	9	下一曲
	0	= 静音
	-	调低音量
	=	调高音量

左 Win Option

左 Alt Command

右 Alt Command

 3061S HE 灯光调节

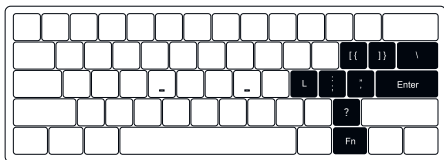

Fn+	Enter	常亮（默认）、呼吸、霓虹、光波、涟漪、繁星点点、川流不息、如影随形、聚合、正弦波、彩泉涌动、百花争艳、一石二鸟、峰回路转、斜风细雨、雨滴、流星、踏雪无痕、极光、层出不穷、
	[	灯光变暗
	]	灯光变亮
	\	= 在所有灯效RGB彩光模式下，调节灯光颜色致7色单色+RGB循环
	;	灯光速度变慢
	,	灯光速度变快
	L	灯光关闭/开启
	?	切换灯效方向

按键/灯光自定义说明和调用说明

1. 键盘按键/灯光自定义可配合驱动进行
2. 键盘灯光可搭配驱动实现音乐律动
3. 请在我司官网下载“Akko Cloud”驱动
4. 驱动下载地址www.akkogear.com

AKKO保修和服务声明

1. Akko为中国大陆的客户提供一个保修。对于其他地区，请联系您的卖家（Akko分销商）以了解具体的保修政策。
2. 如果保修期到期，客户需要支付维修费用。如果用户喜欢自己修理键盘，Akko也会提供说明。用户应对自行修复过程中发生的任何损失承担全部责任。
3. 由于私自拆卸产品、使用不当和安装不当而导致的缺陷不在保修范围内。
4. 官方售后服务时间为每周一至周五上午10:00至下午18:00
节假日以国家法定节日休息为准。
5. 退货和保修政策在不同的平台上可能有所不同，并在购买时取决于具体的经销商。

公司：深圳银宸科技有限公司

地址：深圳市宝安区松岗街道碧头第一工业区朗碧路33号

电话：0755-23216420

网址：www.akkogear.com

产地：中国·深圳

Company: Shenzhen Yincheng Technology Co., Ltd

Address: 33 Langbi Rd, Bitou First Industrial Zone, Bao'an District, Shenzhen, China



WARNING:
Water and Beverages can't be
poured into the Keyboard.

 


中国制造 / Made in China

注意 事项

人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等，键盘为电子产品
请按照电子产品保护方式爱惜使用。

Packing List

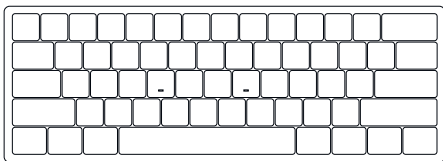

Minimum System Requirement

Windows®XP / Vista / 7 / 8 / 10 or higher version

Connectivity Method

Connect the keyboard to your computer by plugging in the USB cable into an available USB-A port to start using it.

LED Indicator Overview

Description	Position	Indicator
Comfort Mode	LED for Key E	White light stays on for 1 seconds and then follow the backlit
Sensitive Mode	LED for Key R	White light stays on for 1 seconds and then follow the backlit
Game Mode	LED for Key T	White light stays on for 1 seconds and then follow the backlit
Custom Mode	LED for Key Y	White light stays on for 1 seconds and then follow the backlit
Caps	Independent LED Indicator 1	Steady white
Lock Win	Independent LED Indicator 2	Steady white

3061S HE HotKeys



Fn+	Esc	~
	1 - 0	F1 - F10
	-	F11
	=	F12
	Backspace	Delete


Fn+	W	↑ ↓ ← →
	I	Insert
	P	PrtSc
	C	Calculator
	M	Mute

Fn+	<	Decrease Volume
	>	Increase Volume
	W	Swap W A S D with ↑ ↓ ← →
	=	

Shortcuts to Adjust Travel Distance

Fn+E	Comfort Mode - Comfort Mode - Actuation Point = 2mm
Fn+R	Sensitive Mode - Actuation Point = 0.5mm, Reset Point = 2mm
Fn+T	Game Mode - Actuation Point = 0.5mm + Rapid Trigger 0.1mm Sensitivity
Fn+Y	Custom Mode - Customize Switch Actuation Point through MonsGeek Driver

 3061S HE System Commands (Windows)

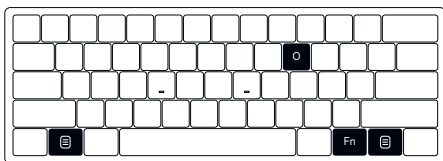


Lock Windows Key
Press Fn and Left Win Key

WIN System	⇐	MAC System
Hold down Fn and press O Key for 3s		

Restore Factory Settings
Hold down Left Win Key and press right [] for 5s

 3061S HE System Commands (Mac)

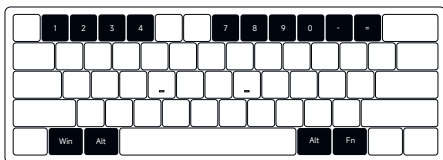

Fn+	1	Decrease display brightness
	2	Increase display brightness
	3	= Open mission control
	4	Activate Siri
	7	Skip back (Audio)


Fn+	8	Pause/Play (Audio)
	9	Skip forward (Audio)
	0	= Mute
	-	Volume down
	=	Volume up

Left Win Option

Left Alt Command

Right Alt Command

 3061S HE Backlight Settings

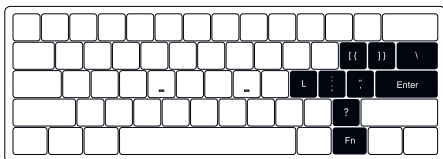

Fn+	Enter	Effect 1 — Effect 19
	[	Dim
	]	Bright
	\	= This shortcut allows you to set the backlight color to 7 single color with RGB loop effect
	;	Slower Animation
	,	Faster Animation
	L	Light Off/On
	?	Switch light effects animation directions

Key Remapping/LED Effects/Customized Actuation Setup Instruction

1. Fundamental features such as key/lighting effects customization can be programmed with Akko Cloud Driver.
2. Hall effect switches related functions are programmable in Akko Cloud Driver. Please check for the latest firmware and driver for optimized gaming experiences and new features.
3. Users can download the driver via en.akkogear.com.

AKKO Warranty and Service Statement

1. Akko provides One-Year warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
3. Defects resulting from disassembly of our product, improper usage and incorrect installation are not covered by warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

Company: Shenzhen Yinchon Technology Co., Ltd

Address: 33 Langbi Rd, Bitou Community 1st Industrial Zone, Bao'an District, Shenzhen, China

Tel: 0755-23216420

Website: www.akkogear.com

Origin: Shenzhen, China



WARNING:
Water and Beverages can't be
poured into the Keyboard.



中国制造 / Made in China

Precautions

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.



www.akkogear.com



@akkogear



Akko艾酷时尚外设



扫描关注官方微博