 


xiaomi Smart Camera 3 PTZ Version User Manual



Read this manual carefully before use, and retain it for future reference.

Product Overview

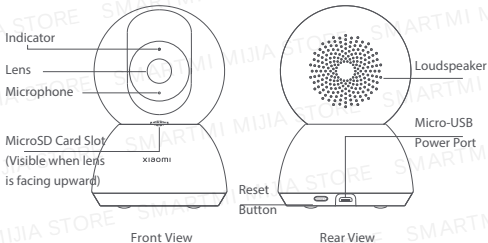

Package Contents: Xiaomi Smart Camera 3 PTZ Version User Manual, charging cable, wall mounting kit, user manual, warranty notice

Installation

 
You can place the Xiaomi Smart Camera 3 PTZ Version on horizontal surfaces, such as desks, dining tables, and coffee tables. You can also mount it on a wall.

Mounting the camera on a wall:


1. First use a pencil to mark the positions for the base mounting holes on the wall, then drill two holes at the marked positions. The diameter of each hole is approximately 6 mm, and the depth is approximately 30 mm.




2. Insert a plastic wall plug into each drilled hole.

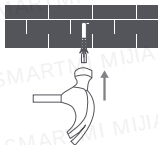

 3. Place the side of the base with arrows facing forward, and then align the holes. Insert the screws and then tighten them into the wall plugs with a Phillips head screwdriver.

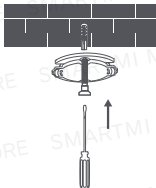

 4. Align the grooves on the bottom of the camera with the raised part on the base, and then turn it clockwise until it locks into place.

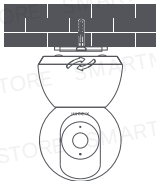

 Notes:

The wall must be able to support at least three times the total weight of the camera.

 Warning

 
To prevent possible injury, the camera must be securely fixed to the ceiling or wall according to the installation instructions.

How to Use

- Installing a microSD card


Make sure the camera is turned off. Push the lens upward to reveal the microSD card slot. Insert the microSD card into the card slot with its contact points facing downward.

Note: Please unplug the security camera before inserting or removing the MicroSD card. Please use a genuine MicroSD card manufactured by a qualified supplier, with a reading/writing speed of no less than U1/Class 10. (Maximum support capacity is 256GB, only FAT32 format is supported. MicroSD cards larger than 64GB may need to be formatted to FAT32 in Settings> Storage Settings on the camera plug-in page of the Xiaomi Home/Xiaomi Home App before they can be used)

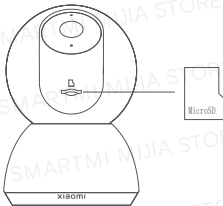

Turning on the camera

 Plug the charging cable into Micro-USB power port on the back, the camera automatically turns on, and the indicator quickly blinks orange.

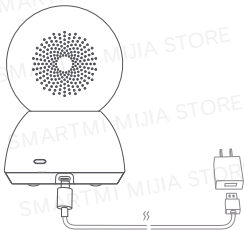

Note: When the camera is working, do not turn the lens of the camera nor force it to rotate. If the positioning of the lens is inaccurate, please calibrate it in the Mi Home/Xiaomi Home app.

- Indicator

Blue: Connected successfully/Working properly

Blinking blue: Network error

Quickly blinking orange: To be connected

Slowly blinking orange: Updating

Connect with Mi Home/Xiaomi Home App

This product works with Mi Home/Xiaomi Home app*. Control your device with Mi Home/Xiaomi Home app.

To use this product, it is a must to download and install the Mi Home/Xiaomi Home app. Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search "Mi Home/Xiaomi Home" in the app store to download and install it.



6723CBFE

Make sure your phone has connected to the 2.4 GHz Wi-Fi.

Open Mi Home/Xiaomi Home app, tap "+" on the upper right, and then follow prompts to add your device.

* The app is referred to as Xiaomi Home app in Europe (except for Russia). The name of the app displayed on your device should be taken as the default.

Note: The version of the app might have been updated, please follow the instructions based on the current app version.

Make sure the camera turns on and the network connection is stable during connecting. The indicator is quickly blinking orange when waiting for a connection, and turns into blue once the camera is successfully connected.

- Restoring factory settings

If the network connection or the Xiaomi Account that the camera is paired with has been changed, you need to restore the factory settings. Press and hold the reset button for about three seconds. Once the indicator starts quickly blinking orange, the factory settings have been restored successfully. Then you can reconnect the camera with the app.

Note: Restoring factory settings will not delete the content on the microSD card.

Note : The adapter will be included when sending the package. Because this product is a Chinese version, please change the country to "China" when connecting the "MI HOME" APP, and the language can be set according to the local country. If your Mi Home account have connected to other devices in other regions, then it cannot be connected to China devices at the same time!!

How does the access the Mi Home App?

Set 1 : Click "Profile" , Enter "Additional settings"


Set 2 : Click "Region" , Change the Country to "Chinese mainland" , The language can be set according to the language of your country

Set 3 : Tap "+" at the upper right corner , Select "Scan"

Set 4 : Click "Device Reset" , (press and hold the reset button for about 7 seconds , and the reset will be successful when you hear the voice prompt) Set 5 : "Select wireless connection"

Set 6 : Operate according to the prompts on the page

 Set 7 : Wait for the binding to be successful.

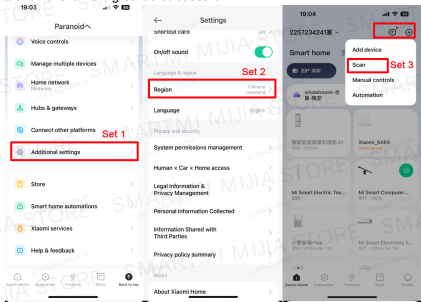

Reset device

Xiaomi Outdoor Camera CW300

After the camera is powered on, press and hold the reset button for 3 seconds until the indicator light keeps orange and a voice prompts reset successfully.



Set 4

Device reset

Next

Set room

房间名

+ Create a new room

Set name

Xiaomi Outdoor Camera CW300

Additional settings



Display large cards on the homepage



1/5

Next

2/5

Next

3/5

Next

Select Wi-Fi network

This device only supports 2.4GHz Wi-Fi

Set 5

22224444

Select Wi-Fi network

Enter the Wi-Fi password

Entering the Wi-Fi password (Wi-Fi password) is one of the most important factors for failure, please double-check the Wi-Fi password.

Passwords must contain at least eight characters.

Connect to device



Connect to device 14%

Bring phone closer to device

Upload information to device

Connect the device to the network

Real-time Surveillance

In the app, you can view the real-time surveillance, adjust the sharpness of the image, adjust the horizontal and vertical angles, capture and record, and make calls.

Infrared Night Vision

As the ambient light dims, the camera can automatically switch to night vision mode. With the built-in infrared lights, it can clearly capture video in the dark.

Playback

The playback feature of the camera is only available when a compatible microSD card is installed or the cloud storage service is purchased.

Tap the playback button in the plugin of the Mi Home/Xiaomi Home app, then drag the timeline to select the time period you want to playback. Variable speed playback is supported.

Home Surveillance Assistant

- When the home surveillance assistant is enabled, the camera will record videos if it detects human movement and changes in real-time within its surveilled area. Then you will get the app push notification. (Human movement detection can be enabled after the cloud storage service is purchased and activated.) You can enable or disable the home surveillance assistant in the Mi Home/Xiaomi Home app.
- You can set 24-hour, daytime, nighttime, custom period surveillance, alert sensitivity and alert time intervals, etc.



Video Sharing

In the app, you can select the device sharing option in the settings menu to share the camera with others. Users you share the camera with need to download the app and sign in with their Xiaomi Account.

Note:

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

Do not cover the vent, this device is not intended to be used on soft supports. The marking information is located at the bottom of device.

⋮ The symbol indicates DC voltage.

Precautions

- The operating temperature range for this camera is between -10°C and 45°C. Do not use the camera in environments with temperatures above or below the specified range.
- The camera is a precision electronic product. In order to ensure its normal operation, do not install the camera in environments with high humidity levels nor allow water to get into it.
- To improve the camera's performance, do not place its lens facing or next to a reflective surface, such as glass windows or white walls, as this will cause the image to appear overly bright in areas close to the camera and darker in areas further away, or cause the camera to produce white images.
- Make sure the camera is installed in an area with a strong Wi-Fi signal. Do not place the camera near the objects that may affect its Wi-Fi signal, such as metal objects, microwave ovens.
- Under normal use of condition, this equipment should be kept a separation distance of at least 20 cm between the antenna and the body of the user.
- The wiring containing the socket into which you want to plug the camera must be comply with the applicable standards and laws of the country and must pass periodically inspected and must be provided with surge protection.
- To ensure safe and reliable operation of the equipment, use a quality power adapter that complies with the relevant safety standards, such as EN 62368-1, and equipped with protection against overvoltage, overheating, short circuit and overload.

WEEE Information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a

designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

EU Declaration of Conformity



Hereby, Xiaomi Communications Co., Ltd. declares that the radio equipment type Xiaomi Smart Camera C300 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of available can be found following internet address: <http://www.mi.com/global/service/support/declaration.html>

Specifications

Name: Xiaomi Smart Camera 3 PTZ Version

Model: MJSXJ15CM

Item Dimensions: 119 × 78 × 78 mm

Operating Temperature: -10°C to 45°C

Storage: MicroSD card (up to 256 GB)

Net Weight: 281 g

Input: 5 V 1A

Resolution: 2960 × 1666

Video Codec: H.265

Wireless Connectivity: Wi-Fi IEEE 802.11 b/g/n 2.4 GHz Wi-

Fi Operation Frequency: 2412 – 2472 MHz

Wi-Fi Maximum Output Power: <20 dBm

Manufactured for: Xiaomi Communications Co., Ltd.

Manufactured by: Shanghai Imilab Technology Co., Ltd.

(a Mi Ecosystem company)

Address: Room 001A, Floor 11, Block 1, No. 588 Zixing Road,

Minhang District, Shanghai, China

For further information, please go to www.mi.com

MIJIA STORE SMARTMI MIJIA STORE SMARTMI MIJIA STORE
MIJIA STORE SMARTMI MIJIA STORE SMARTMI MIJIA STORE
MIJIA STORE SMARTMI MIJIA STORE SMARTMI MIJIA STORE
MIJIA STORE SMARTMI MIJIA STORE SMARTMI MIJIA STORE
MIJIA STORE SMARTMI MIJIA STORE SMARTMI MIJIA STORE
MIJIA STORE SMARTMI MIJIA STORE SMARTMI MIJIA STORE
MIJIA STORE SMARTMI MIJIA STORE SMARTMI MIJIA STORE
MIJIA STORE SMARTMI MIJIA STORE SMARTMI MIJIA STORE
MIJIA STORE SMARTMI MIJIA STORE SMARTMI MIJIA STORE
MIJIA STORE SMARTMI MIJIA STORE SMARTMI MIJIA STORE

