

Instruction Manual

DIGITAL COIN COUNTING BANK

FEATURES

LCD DISPLAY

COIN SLOT




ADD COIN BUTTON

SUBTRACT COIN BUTTON

(Press and hold the +/- button for 3 seconds until the display flashes to adjust the number on the display)

BATTERY INSTALLATION

1. Adult supervision is recommended when installing batteries.
2. We recommend using alkaline batteries for best performance.
3. The battery compartment is located underneath the lid. Unscrew to open.
4. Insert 2 “AAA” batteries in the polarity direction shown on the diagram to the right.
5. Once batteries are installed, screw the cap back in place.
6. Attach the lid to the bank by rotating clockwise.

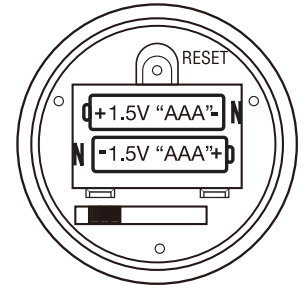

NOTE: When the LCD display starts to fade, this means it is time to change the batteries. The display memory only stays on for 15 seconds after the batteries are removed. Ensure that you have 2 new “AAA” batteries ready before removing the old batteries.

USING YOUR BANK

ADDING COINS: Push coins through the slot one coin at a time. The LCD display will blink showing the value of each coin that is put in. Once blinking stops, the total amount in the bank will reappear.

ALTERNATE WAY TO ADD COINS: Remove the lid and add coins directly into the bank. Reattach the lid and use the + function to manually adjust the value. Press and hold the + button to speed up this process.

SUBTRACTING COINS: Remove the lid and take coins out. Reattach the lid and use the – function to manually adjust the value. Press and hold the – button to speed up this process.

RESETTING THE LCD DISPLAY: Insert the end of a paperclip or similar object into the reset hole on the underside of the lid.

CARING FOR YOUR BANK

Clean with a slightly damp cloth. Never soak or submerge in water.

Store in a cool, dry location away from sunlight.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

BATTERY WARNING:

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard(carbon-zinc), or rechargeable (nickel-cadmium) batteries.
3. Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
4. Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire – they may leak or explode
5. Only use manufacturer specified battery(ies), charger(s) and/or adapter, if applicable, specified by the manufacturer.
6. Always use, replace, and recharge (if applicable) batteries under adult supervision.
7. As with all small objects, the battery used with this product should be kept out of reach of young children who still put things in their mouths.

KEEP THIS INSTRUCTION MANUAL FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.