


Hello !




INNIOASIS Y1

MP3 Music Player

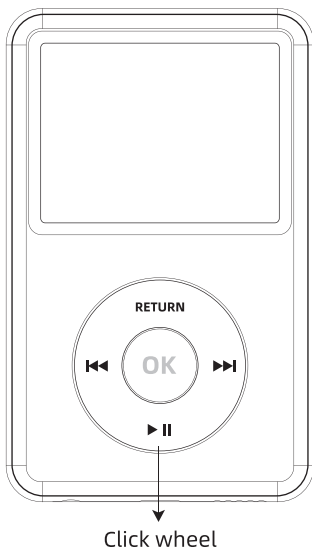

3.5mm audio output

Speaker

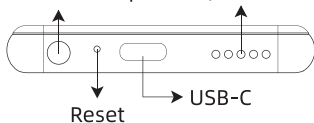



How to transfer music to the player

1. Connect Y1 player to your computer with the included USB-C cable
2. Short press OK on Y1 player to confirm "Turn on USB storage"
3. Click "This PC" on your computer's desktop, you will find a USB drive added to the list of devices and drives.
4. Copy the music that has been downloaded on the computer and paste it into this newly added USB drive.

Tips: If you turn on USB storage, some apps you're running will stop and may be unavailable until you turn off USB storage.

Home

List all functional options of the Y1 player, including: Now Playing, Music, Audiobook, FM Radio, Photos, Bluetooth, Settings, Shuffle Quick. The following actions are available on the click wheel.

| Key | Action | Result |
|--|---------------------|------------------------------|
|  | Swipe clockwise | Scroll down or right options |
| | Swipe Anticlockwise | Scroll up or left options |
| OK /  | Short press | Confirm selected option |

Now Playing

Quickly enter the playback interface to view the currently playing song or audiobook. The following actions are available on the click wheel.

| Key | Action | Result |
|---|---------------------|--|
|  | Short press | Prev song / Exit A-B repeat |
| | Long press | Rewind |
|  | Short press | Next song / Exit A-B repeat |
| | Long press | Forward |
| RETURN | Short press | Back to prev-level |
|  | Short press | Play / Pause |
| | Long press | Activate / Exit A-B repeat |
|  | Swipe clockwise | Volume + |
| | Swipe Anticlockwise | Volume - |
| OK /  | Short press | Switch between song info and lyrics |
| | Long press | Activate bookmark (available for audiobook only) |

FAQ

1) How to shuffle?

In "Setting - Shuffle", switch the status to "ON".

2) How to get list loop?

In "Setting - Repeat", switch the status to "List loop".


3) How did shuffle and repeat work together?

| Shuffle | Repeat | Result |
|---------|-------------|---|
| On | Off | Shuffle in the current playlist or folder, stop after all songs are played |
| | List loop | Shuffle in the current playlist or folder, continue to shuffle after all songs are played |
| | Single loop | Loop the current track |
| Off | Off | Play sequentially in the current playlist or folder, stop after all songs are played |
| | List loop | Play sequentially in the current playlist or folder, continue to sequential play after all songs are played |
| | Single loop | Loop the current track |

4) How to view lyrics?

In the Now playing window, short press OK to switch to lyrics display. Short press again to return to the song information display.

5) How to use A-B repeat?

- ① When playing a song or audiobook, long long press ►|| to activate A-B Repeat, and set the current time node as point A.
- ② At this time, the logo  will be displayed on the top right of the screen, and B? Flash for waiting to set point B. Long press ►|| again to set point B.

Since then, it will be repeated between A-B. During A-B repetition, long press ►|| to exit.

Tips:

- The same second cannot be set to both point A and point B.
- To change the clip of A-B repeat, first resume to normal playing, and then operate ① and ② again.
- During A-B repeat, you can still do: Return, pause/play, forward/rewind, previous song/next song. It should be noted that the previous/next song will exit A-B repeat.



6) Can I add a bookmark to audiobooks?

Yes. When playing the audiobooks, long press OK key in the middle of the click wheel to pop up the dialog box, and then confirm to add to bookmark. All created bookmarks are preserved in Audiobook --- Bookmark lists.

7) Is the player equipped with an equalizer and how to use it?

Yes. Y1 is equipped with EQ. You can go to Settings -- Equalizer to select your favorite preset style, or long press the OK key to activate the customized EQ.

Music

| Key | Action | Result |
|--|---------------------|----------------------------------|
|  | Swipe clockwise | Scroll down or right options |
| | Swipe Anticlockwise | Scroll up or left options |
| OK /  | Short press | Confirm selected track or option |
| | Long press | Activate shortcut menu |

About shortcut menu

Long press the OK key in all folders under Music to pop up a shortcut menu for file management:

- **Multi Select**-- Select music / file one by one.
- **All Select**-- One-click to select all music / files in the current folder.
- **Delete File**-- Delete the selected music.
- **Add to Playlist 1,2,3...**-- Add selected music to target playlist.

About Playlist




Y1 Player allows you to add, delete, rename playlists. Long press the OK button in the playlist folder to pop up the shortcut menu, and then select the operation you want.


- **New Playlist**--add a new playlist, the default name of the new playlist is Playlist 6, 7....

- **Delete Playlist**—delete the current playlist.
- **Rename** -- Rename the current playlist.

About Search



Y1 Player allows you to search for a target track or album by part or all of the song title. Click “Search” and enter some or all of the song names in the pop-up input box to preview the search results above the input box. For more operations, please refer to the table below

| Shuffle | Repeat | Result |
|---|---------------------|--|
|  | Short press | backspace - deletes one character per press |
| | Long press | backspace - deletes multiple characters in a row |
|  | Short press | Space - Enter a space each time you press |
| | Long press | Space - Enter multiple spaces in a row |
|  | Swipe clockwise | Scroll down or right options |
| | Swipe Anticlockwise | Scroll up or left options |

| Shuffle | Repeat | Result |
|---|-------------|--|
| OK /  | Short press | Enter the current character |
| | Long press | Enter the current character continuously |
| RETURN | Short press | Close the input box and return to search results |

In search results page, long press the OK key to pop up a shortcut menu, which allows you to select all or multiple tracks and add them to the target playlist.

Audiobook

| Key | Action | Result |
|--|---------------------|---------------------------------|
| RETURN | Short press | Back to prev-level |
|  | Swipe clockwise | Scroll down or right options |
| | Swipe Anticlockwise | Scroll up or left options |
| OK /  | Long press | Confirm selected book or option |
| | Short press | Activate shortcut menu |

books stored in the device's Audiobook folder are recognized as audio books. Audiobooks stored elsewhere will be recognized as music.

About shortcut menu.

Long press the OK key in all folders under Audiobook to pop up a shortcut menu for file management:

- **MultiSelect**--select music / file one by one.
- **All Select**--one-click to select all book / files in the current folder.
- **Delete File**--delete selected music.

About Bookmart lists

In the audiobook playback interface, long

press the OK button to activate the bookmark function, and all created bookmarks are saved in this list. Long press the OK key in the bookmark list to pop up a shortcut menu, allowing you to select all, multi select, and delete bookmarks.

About Settings

Note: this settings under Audiobook are only available for playing audiobooks.

- **Shuffle**-- enable/disable shuffle mode
- **Repeat**-- enable/disable loop playback
- **Speed**-- Adjust playback speed, Options include: Slow, Normal, Fast, Fastest.
- **Time off** -- Set stop playback time, Options include: Off, 10min, 20min, 30min, 60min.

FAQ:

1) How to add a bookmark

When playing the audiobooks, press the OK key in the middle of the click wheel to pop up the dialog box, and then confirm to add to bookmark. All created bookmarks are preserved in Audiobook --- Bookmark lists.





2) Why didn't I find the audio books uploaded to the device?

To avoid confusion between music files and audiobooks, only books stored in audiobooks folder will be recognized as audiobooks by default. Books stored elsewhere will be

recognized as music. Therefore, make sure you upload the audiobooks to the audiobooks folder.

Tips: encrypted audiobooks cannot be recognized, such as .m4b, aax file.

FM Radio

| Key | Action | Result |
|---|---------------------|---|
|  | Short press | Prev channel |
|  | Short press | Next channel |
| RETURN | Short press | Back to prev-level |
| | Long press | Activate shortcut menu |
|  | Short press | Play / Pause |
|  | Swipe clockwise | Volume + / Scroll down or right options & frequency |
| | Swipe Anticlockwise | Volume - / Scroll down or right options & frequency |
| OK /  | Short press | Activate manual search / add to (remove from) channel list |

About shortcut menu

In the radio broadcast window, long press RETURN key to pop up the shortcut menu:

- **Play** -- Play the current channel
- **Pause** -- Pause playback.
- **Channel List** --List all saved channels for auto search and manual search.

- **Frequency Range** --Change frequency area, options included: America, Asia, Australia, Europe, Japan.
- **Re-search Channel**-- Start Auto Channel Search.
- **Audio output** -- Change the audio output mode: Headset, Speaker. Short press OK key to switch.
- **Record FM**-- Turn on radio recording.

FAQ:

1) Is wired headset required as antenna to use FM radio.

Yes, you must connect a wired headset to start FM Radio

2) Is Bluetooth headphone available for radio?

Of course. It is recommended that you plug in a wired headset and start FM before connecting your Bluetooth headset. Because the default audio output terminal of the player is the last connected device.





3) How to search for a station manually.

In the FM window, short press the OK key to call up the manual channel search, and then slide the click wheel counterclockwise or clockwise to adjust the frequency to the best. To save the channel, short press OK key again.

4) Can I record FM and how?






Long press the RETURN key to activate the shortcut menu, then select Record FM to start recording the current station. At this point, the upper left corner of the FM window displays a flashing recording logo. To save the recording, short press the OK key and confirm to save.

Photo

| Key | Action | Result | |
|--|---------------------|---------------------------------------|---------------------------------|
| | | In Folder and Photo List Window | In Folder and Photo List Window |
|  | Short press | Prev folder or file | Prev picture |
|  | Short press | Next folder or file | Next picture |
| RETURN | Short press | Back to pre-level | Back to pre-level |
| | Long press | Back to home window | Back to home window |
|  | Swipe clockwise | Scroll down or right option and file | Switch down or right picture |
| | Swipe Anticlockwise | Scroll down or right options and file | Switch up or left picture |
| OK /  | Short press | Confirm selected option or file | Exit picture browsing |
| | Long press | Activate shortcut menu | Activate shortcut menu |

About shortcut menu

In the folder and picture list window and picture browsing window, long press the OK key to activate the shortcut menu. You can use it to:

-  **Delete** -- Delete the selected folder / file / picture.
-  **MultiSelect** -- Activate the multiple selection function and select files one by one.
-  **All Select** -- Select all folders or files at once.
-  **Rename** -- Rename the current folder or file.
-  **As Wallpaper** -- Set the current picture as desktop or global wallpaper.

FAQ:

1) Why do I get a very blurry desktop background when I set the picture as wallpaper?

First make sure your picture pixels are greater than 480 x 360, and then set Settings -- Wallpaper -- Ground glass to off.

2) What image formats are compatible with the player?

Both .PNG and .JPG are available.



3) Can I edit the picture?

Only rename is available, no picture editing option is provided.

4) How to operate the input keyboard when renaming?

Please refer to "About Search" in the Music chapter.

Bluetooth

| Key | Action | Result |
|---|---------------------|--|
| RETURN | Short press | Back to prev-level |
|  | Swipe clockwise | Scroll down or right options |
| | Swipe Anticlockwise | Scroll up or left options |
| OK /  | Short press | Confirm option / Connect or Disconnect |
| | Long press | Activate shortcut menu |

FAQ:

1) How to connect or disconnect devices?

Connect: After enabling Bluetooth, all available Bluetooth devices around will be listed

under other devices. Swipe the click wheel counterclockwise or clockwise to locate the target device, and then short press OK key to pair and connect with the device.

Disconnect: Swipe the click wheel counterclockwise or clockwise to locate the connected device in My Device. Short press OK key and confirm to disconnect the device.



2) How to remove a device from my device list?

Swipe the click wheel counterclockwise or clockwise to locate the target device in My Device. Long press OK key and confirm to remove the device.

3) How to refresh the device list?

Turn Bluetooth off and back on.

Settings

| Key | Action | Result |
|---|---------------------|------------------------------|
| RETURN | Short press | Back to prev-level |
|  | Swipe clockwise | Scroll down or right options |
| | Swipe Anticlockwise | Scroll up or left options |
| OK /  | Short press | Switch & confirm set value |

- **About** -- view device information
- **Shuffle** - (only for music) shuffle on or off. Short press the OK key to switch.
- **Repeat** - (only for music) Change the loop mode: off, list loop, single loop. Short press the OK key to switch.
- **Backlight** -- Adjust backlight time: 10s, 15s, 30s, 45s, 60s, 2m, 5m, Always. Short press the OK key to switch. Short press the OK key to switch.
- **Brightness** - Adjust screen brightness by sliding the click wheel clockwise or Counterclockwise.
- **Display Battery** -- Select whether to display the battery percentage in the title bar.
- **Timed shutdown**-- Set the time of timed shutdown, options included: off, 10min,

20min, 30min, 60min, 90min, 120min. Short press the OK key to switch.

- **Shutdown**-- Power off

- **Equalizer** -- Provide 10 preset style: Normal, Classical, Dance, Flat, Folk, Heavy Metal, Hip Hop, Jazz, Pop, Rock. And allow customization of EQ.

Tips: The currently running style is marked with green, and the style being located is marked with light blue.

- **Wallpaper**-- Change the wallpaper of the device desktop or global.

Note: Setting "Ground glass" to "On" can blur the wallpaper.

- **Key tone** -- Enable or disable key tone. Short press the OK key to switch.

- **Key vibration** -- Enable or disable key vibration. Short press the OK key to switch.

- **Date & Time** -- Set date, time, time format, etc.

- **Language** -- Set the language of the device.

- **Factory Reset** -- Reset the device to factory settings.

Warning: all saved files on the device will be deleted. Please be careful.

FAQ:

1) How to use custom EQ?

Navigate to any preset style under Settings--Equalizer, and long press the OK key to activate the customized EQ. Then press ►► to switch to the band to be adjusted. And swipe ● clockwise or anticlockwise to change the value of this band. If you are not satisfied with the current customization, you can select "Reset" to restore to the default state.

Shuffle Quick

Quickly select a song randomly and start music playing.

Specification

Bluetooth version: 4.2

Product Size: 3.8 x 2.4 x 0.3 inch

Weight: 2.3 oz

Screen Size: 2.4 inch (480 x 360 pix)

Battery Capacity: 1250mAh

Charging Time: 90 Minutes

Storage: 64GB

Music Playtime: 25-35 hours

Music format: MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, MP2, AMR, MID, M4R, MMF, WV, AIF, AIFF, AU, RA, MKA, AC3, CAF

Photos format: JPG, PNG

FM Receiving Frequency: 87.5 MHz ~ 108 MHz

Warranty

Thank you for purchasing our products. You will enjoy the following services when using this product.

Warranty period: Within one year from the date of sale.

Warranty scope: Limited to the product host.

Warranty terms:

① Within 1 year after purchase, failure or damage caused by product quality problems can be replaced for free or full refund.

② Accessories are not included in the warranty, such as USB cable, earphones, etc., but if quality problems occur within 7 days after purchase, they can be replaced for free.

③ The following conditions are not covered by the warranty

- Out of the warranty period.
- It has been disassembled or repaired privately by the customer.
- Man-made damage, accidental damage or deformation.
- Failure caused by installation and use in abnormal environments such as high temperature, high pressure, and humidity..
- Damage caused by natural disasters such as lightning strikes, floods, and earthquakes.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following suggestions:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. **RF Exposure Information:** The device has been evaluated to meet general RF exposure requirements.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment.

This equipment should be installed and operated with minimum distance 5mm between the radiator and your body.

Contact us:

Email: innioasis-csc@hotmail.com

Online support:

<https://www.facebook.com/innioasis/>

For more videos on G1 operation, please visit:

<https://www.facebook.com/innioasis/>



We promise to reply you as soon as possible within 24 hours.