

Noise Pop Buds



Please refer to this manual before using the product

TABLE OF CONTENTS

• Package Contents	01
• Specifications	02
• Power and Pairing	03
• Reset and Sizing	04
• Charging	05
• Controls	06
• Warranty	08
• Safety	09

PACKAGE CONTAINS



Noise Pop Buds



Charging Case



USB Type-C charging Cable x 1



Extra Ear-tips (S x 1/L x 1)

EARBUD SPECIFICATIONS

Earbud weight: 4g (each)

Speaker driver size: 10mm

Supported profiles: A2DP/AVRCP/HFP/SPP/AVDTP

Bluetooth version: 5.3

Earbud charging time: Up to 60 minutes

Working voltage: 5V

Standby time: Up to 120 hours

Playtime: Up to 8 hours at 70% volume

Bluetooth range: 10m

Waterproof rating: IPX5

Working temperature: 0-45°C

CHARGING CASE SPECIFICATIONS

Charging case weight: 35g

Charging port: Type-C

The number of earbud charges from the case: 5.2 times

Case charging time: Up to 90 minutes

Total playtime with charging case: Up to 50 hours

POWER ON

The earbuds will automatically turn on, when you open the charging case and take earbuds out.


POWER OFF

The earbuds will automatically turn off once placed inside the charging case.

PAIRING

- Open the charging case and take the earbuds out.
- Select 'Add Device' and select Noise Pop Buds from the list of devices.
- Your Noise Pop Buds are now paired with your device and ready to use.

Note: Your Noise Pop Buds will automatically connect to the last paired device as soon as you take them out of the charging case.

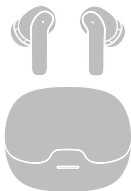

Power On



Power Off

RESET

- Make sure your earbuds are fully charged.
- Regardless of whether the earphones are connected to a device or not, press and hold the left and right earphones at the same time for 10 seconds to restore the factory settings; the red and white lights will stay on for 5 seconds and go out.
- Place the buds inside the charging case and repeat the pairing process.

CHOOSING YOUR EAR TIP SIZE

Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear tips. Follow the images and chart to learn how to wear earbuds in the right manner.



CHARGING

Earbuds

Place both earbuds inside the case to charge them.

Indication (on case)

- Solid White LED  Charging

Charging Case

Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.

Indication (on case)

- ○ ○ ○ Flashing White LED  Charging
- Solid White LED  Fully Charged

CONTROLS



Play/Pause

Tap either earbud twice



Tap twice



Tap twice



Previous Song

Tap the left earbud thrice



Tap thrice



Next Song

Tap the right earbud thrice



Tap thrice



Volume Up

Tap the right earbud once



Tap once



Volume Down

Tap the left earbud once



Tap once

CONTROLS



Answer Call / End Call
Tap either earbud twice



• •
Tap twice



• •
Tap twice



Reject Call
Touch and hold either earbud
for 2 seconds



—
Touch and hold



—
Touch and hold



Voice Assistant
Tap either earbud four times



• • • •
Tap four times



• • • •
Tap four times



Gaming Mode
Touch and hold either earbud
for 2 seconds



—
Touch and hold



—
Touch and hold

WARRANTY

The warranty covers your Noise product, including accessories against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund related queries, please refer to the terms and conditions mentioned in our online return policy section on www.gonoise.com.

REGISTER YOUR WARRANTY

www.gonoise.com/pages/warranty-registration



SUPPORT AND SERVICE



1 YEAR LIMITED WARRANTY



SCAN ME

CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.com

SAFETY FOR YOU AND YOUR NOISE POP BUDS

Follow these tips and you & your Noise Pop Buds will be happy together for a very longtime.



Do not expose the earbuds to liquids, moisture or humidity as they have electronics and battery inside.



Don't try to disassemble your earbuds. There are no user serviceable parts inside it.



Don't use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.



Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.



Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.



Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PCs



Do not expose the earbuds to extremely high or low temperature as this may damage the battery or even deform the plastic parts.



Never listen to music at high volume or you may permanently damage your hearing.



Don't throw the earbuds in a fire to dispose it. The internal battery may explode.



Pay attention to your surroundings and never wear any earphones while riding, driving or walking in traffic.

noise