

SHARPER IMAGE[®]

ADJUSTABLE LAPTOP DESK BY SHARPER IMAGE

Item No. 210197

User Guide



Thank you for purchasing the Adjustable Laptop Desk. Please read this manual thoroughly before operating this device.

INSTRUCTIONS FOR USE

NOTE: There is a small Mouse Tray that clips to the side of the desk.

Unfolding the Laptop Desk

• Adjust Joint A:


- Press and hold the button on Joint A and rotate to the desired angle.
- Ensure each button dial is set to the same number.
- The button will push back out once the lower leg is locked into place.

• Adjust Joints B & C:

- Repeat the process with Joints B and C until the desired angles are reached on the middle and upper legs.
- Ensure the button dial is the same number for both Joint B buttons and the same for Joint C buttons.
- The button will push back out once the lower leg is locked into place.

• Ensure Evenness:

- To ensure the lap desk is even, make sure that the buttons for each joint are locked at the same number.

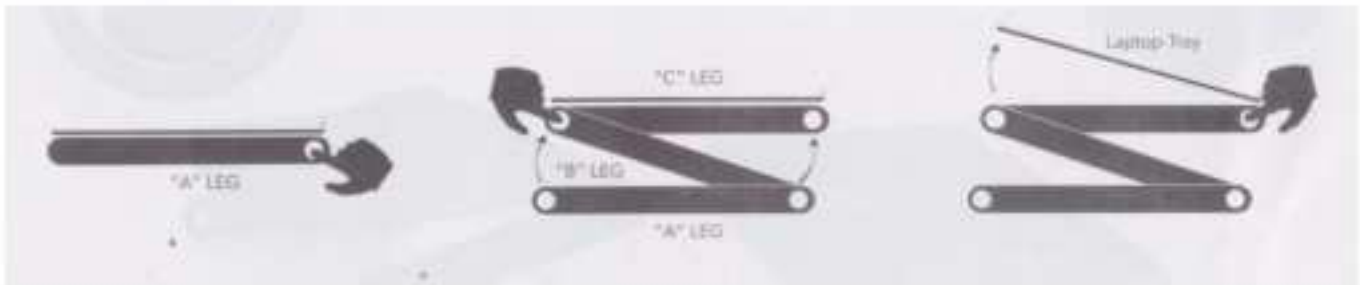


FOLDING THE LAPTOP DESK TO ORIGINAL POSITION

• Adjust Joint C:

- Press and hold the button on Joint C until the upper leg sits even with the laptop tray.
- The button will push back out once the lower leg is locked into place.

• Adjust Joints B & A:

- Repeat the process with Joints B and A until the desired angles are reached and the middle and lower legs are even with each other.

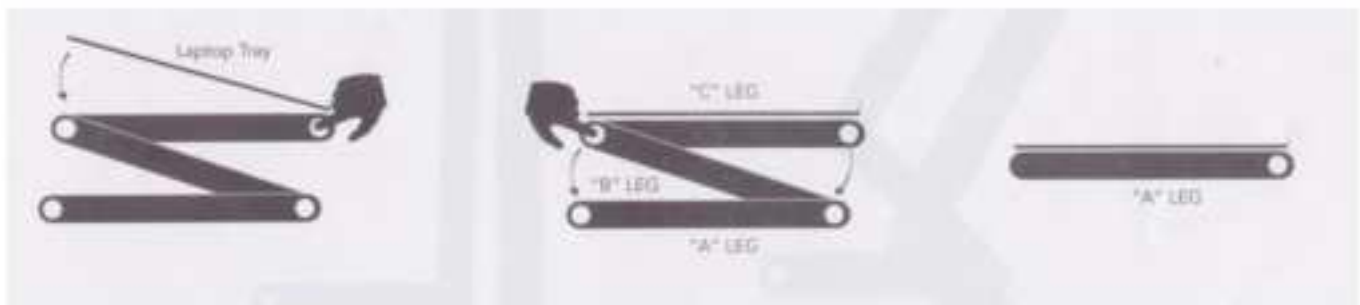

SAFETY GUIDELINES

- Do not place a laptop or other items on the desk until all legs are locked into place and the top is level.
- Ensure all joint angles are set with matching number dials for the corresponding joints.
- Do not exceed 33 lbs.
- Always adjust and set up starting from the lower leg, then the middle leg, and finally the laptop tray.
- When folding down, follow the order: laptop tray, middle leg, and then lower leg.
- If adjustments can't be made, ensure the button is pressed in all the way.
- Package contains small parts and is not intended for small children

WARRANTY AND CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.