




PORTABLE AIR CONDITIONER

Model# 048-TL-PAC10K / 12K / 14K

⚠ CAUTION! WARNING: Do not use this device before reading these instructions.

USER'S MANUAL

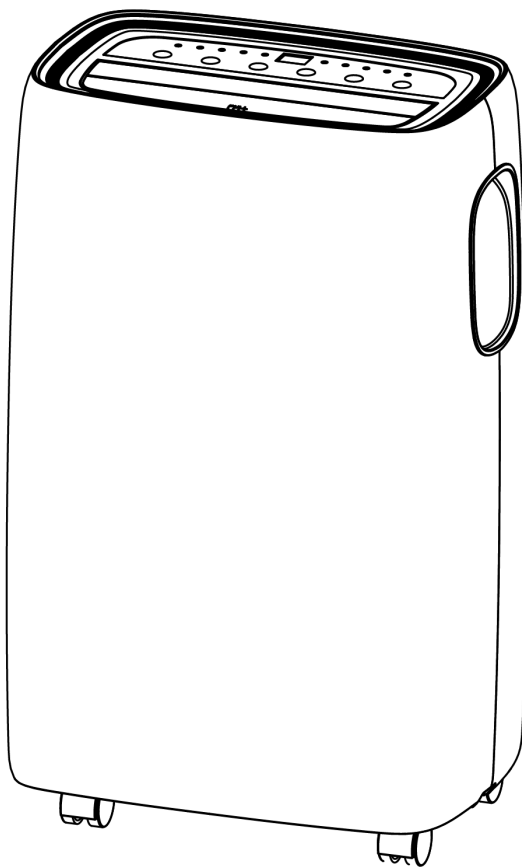

NOTICE:

If your package is missing parts or you are having issues with assembly, please call Belleze Furniture directly at (909)-595-5901. The Belleze Furniture customer service team will address any questions or concerns you may have. Have this manual open and ready for reference.

CUSTOMER SERVICE:

909-595-5901

9:00AM - 6:00PM PST (Monday - Friday)

manufacturer@dellaproductsusa.com

www.dellaproductsusa.com

Table of Contents

Warnings & Precautions	03
Technical Specification	04
Parts and Features	05
Installation guide	07
Control Panel	12
Remote Control	14
Care and Maintenance	17
Troubleshooting	19
Error Code Chart	20

When using electrical appliances, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USE

1. To disconnect, turn off the unit and then unplug the power cord.
2. Close supervision is necessary if the appliance is used by or near children.
3. Do not attempt to repair or replace any part of this appliance unless it is specifically recommended in this manual. Contact dealer, seller, a qualified electrician, or an authorized service center to repair the product.
4. Do not immerse cord, plug, or the appliance in water or other liquid.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. See warranty to return for examination, repair, or electrical or mechanical adjustment. Appliance serviced only by authorized agent.
6. The use of accessory attachments (not recommended or sold by the manufacturer) may cause fire, electric shock or injury.
7. Do not use outdoors.
9. Do not use appliance for anything other than intended use.
10. Always place this unit on a solid and level surface.
11. Do not cover the air inlet or vents.
12. Do not use extension cord. This appliance is for household use only.
13. This unit must be connected to a grounded power supply.
14. Do not place the appliance near any heat source.
15. Do not use this appliance near flammable gases or liquids or other combustibles.
16. Make sure the power cord is plugged firmly and completely into the outlet.
17. Be sure to remove all packaging material before using the appliance.
18. Immediately unplug the product if the appliance is making unusual sounds or is emitting smoke or odor.
19. Always turn off and unplug the appliance if not used for extended period of time.

SAVE THESE INSTRUCTIONS

Specifications

Model Number	048-TL-PAC10K	048-TL-PAC12K	048-TL-PAC14K
Dimensions (W x D x H)	17.32"x12.79"x27.36"	17.52"x14.76"x28.35"	17.52"x14.76"x28.35"
Net Weight	55.11 lb	59.52 lb	68.34 lb
Gross Weight	70.55 lb	74.96 lb	85.98 lb
Power Rating	1120 W	1250 W	1430 W
Voltage	115 V	115 V	115 V
Frequency	60 Hz	60 Hz	60 Hz
Capacity	10000 Btu/h	12000 Btu/h	14000 Btu/h

Parts & Features

A. Air Outlet Grill

B. Control Panel

C. Carrying Handle

D. Casters / Wheels

E. Air Filter


F. Power Cord

G. Continuous Drainage Outlet

H. Air Exhaust

I. Manual Drainage Outlet

J. Air Intake Grill

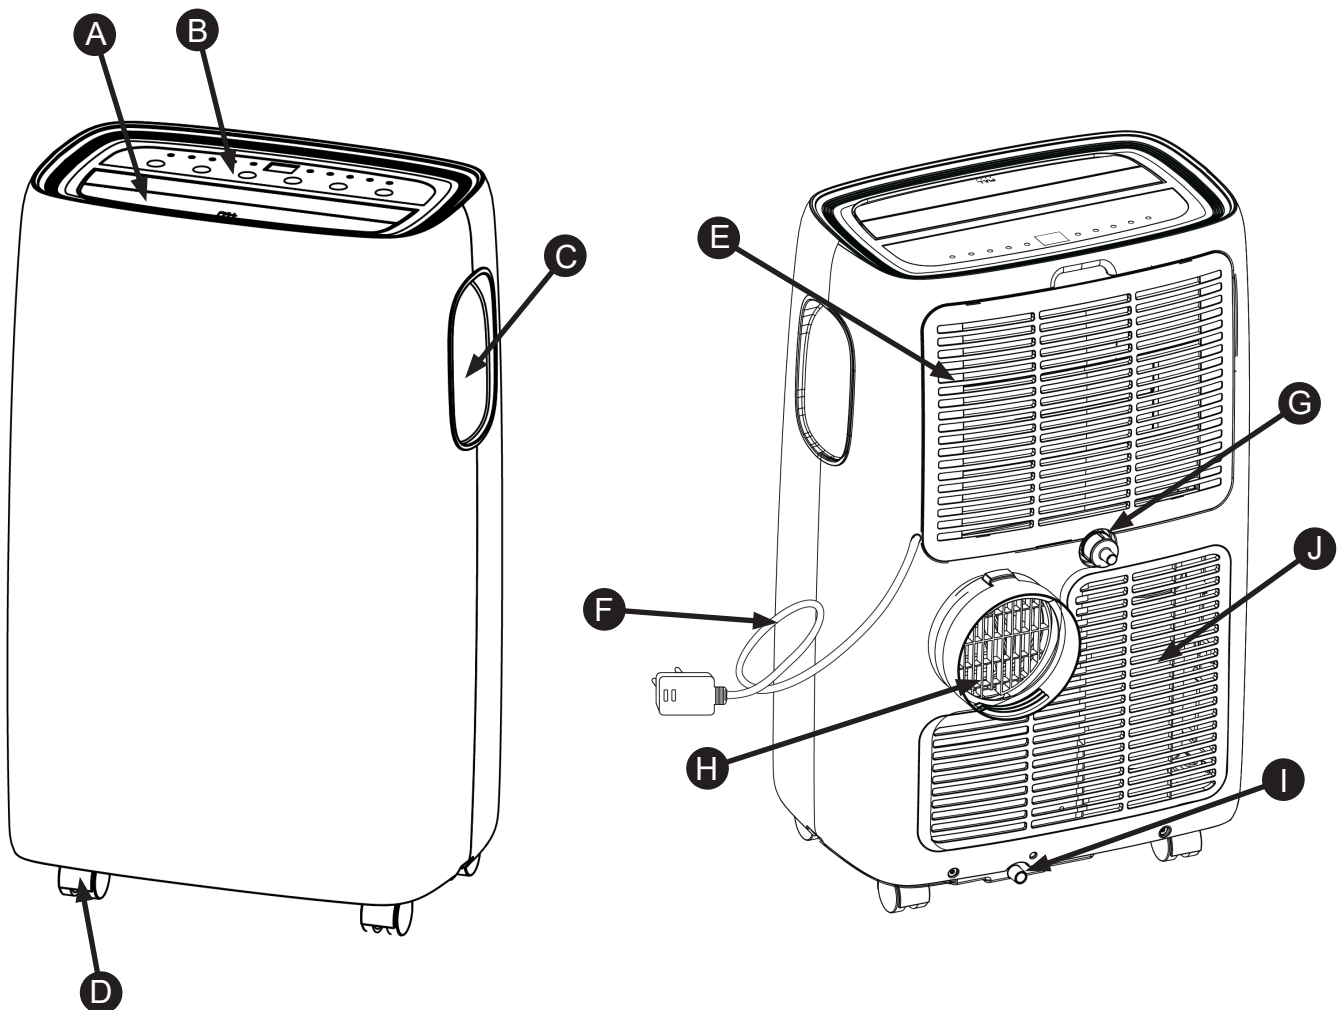

¹ Only for 048-TL-PAC10K

Parts & Features

K. Window Kit Adapter

L. Window Kit Adapter Extension

M. Remote Control

N. Screws

O. Drain Hose ¹

P. Exhaust Hose

Q. Window Sliding Kit

R. Rubber Plug

 
S. Exhaust Host Connector

T. Foam Seal Type 1

U. Foam Seal Type 2



K



L




M




N




O

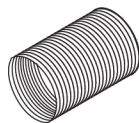

P

 


Q

 


R



 S



T

 

U

Installation Guide

Placing the Unit

Place the unit on smooth level surface.

Allow at least 12" of clearance around the unit.

Plug the unit to a grounded power socket.

Place the unit near window for exhaust installation.

NOTE:

This unit is intended for indoor use only.

This unit works best in enclosed area.



 
 
 

⚠ CAUTION! WARNING: Keep the unit away from direct sunlight.

Exhaust Installation

1. Extend either end of the exhaust hose and screw the hose to the exhaust connector.
2. Screw the other end to the window kit adapter and the adapter extension.
3. Slide and lock the exhaust hose connector end into the air exhaust on the unit.
4. Affix the window kit adapter into the window sliding kit.

NOTE:

Make sure there is no sharp bends or sags on the exhaust hose

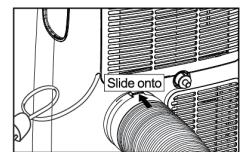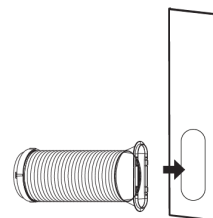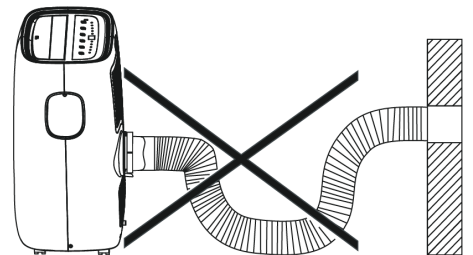

Installation Guide

Window Sliding Kit Installation


Your window sliding kit is designed to fit most standard window.

Cut the window sliding kit if the window width is shorter than the minimum length of the sliding kit.

NOTE:


Cutting the window kit will reduce the maximum length it can extend.

Slide the window slider kit panels together and screw to lock the panels in place.

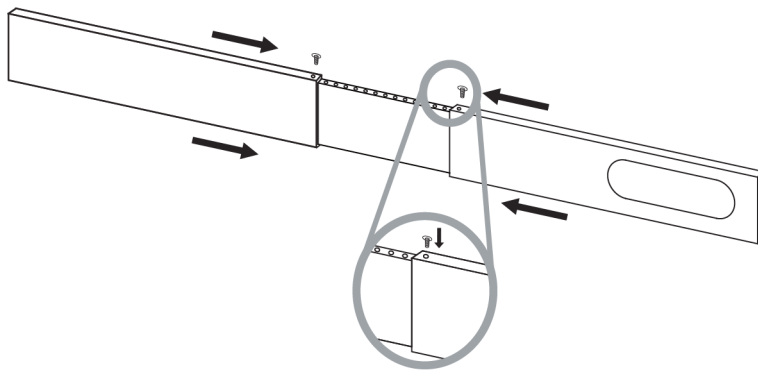


Install the sliding kit on the window

1. Slide open the window sash and place the window sliding kit on the window stool / against the window jamb. Adjust the length of the sliding kit accordingly. Lock the sliding kit by screwing down the two screw on it.
2. Close the window sash against the window sliding kit.

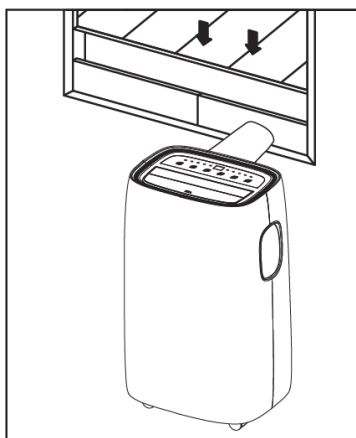

Top Hung Window

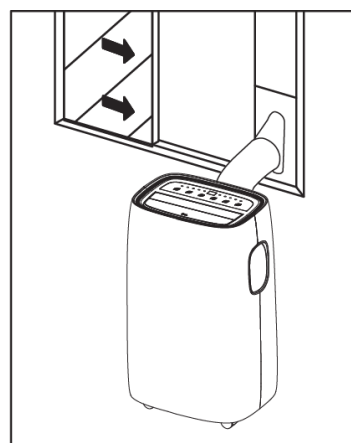


Sliding Sash Window

Installation Guide

Foam Seal Installation (Optional)

1. Cut the foam seal type 1 (adhesive type) to the proper length and attach them to the window and the window stool / window jamb.
2. Attach the window sliding kit to the window.
3. Close the window against the window sliding kit.
4. Cut the foam seal type 2 to an appropriate length and seal the open gap.

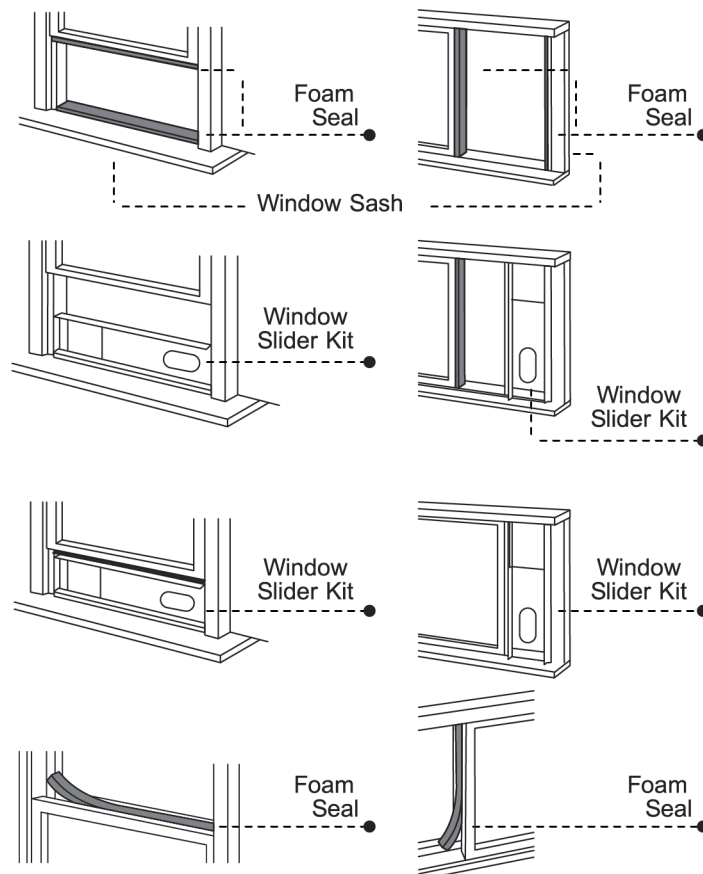

Installation Guide

Drain Hose Installation





Water need to be drain for "DRY" mode operation.

To install drain hose,

1. Unscrew the drain cap from the drain outlet.
2. Connect one end of the drain hose to the drain outlet, then lead the other end into a drain that is lower than the drain outlet.

NOTE:

Make sure the drain height and the drain hose is not higher than that of the drain outlet.

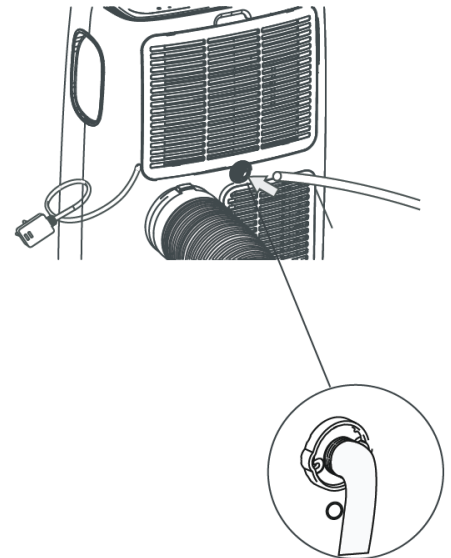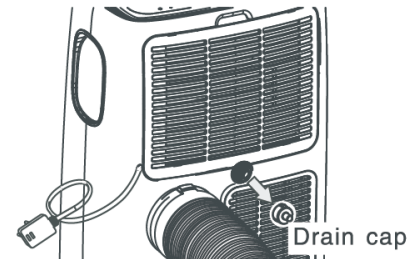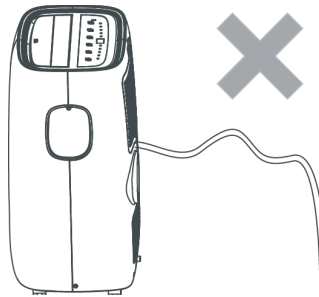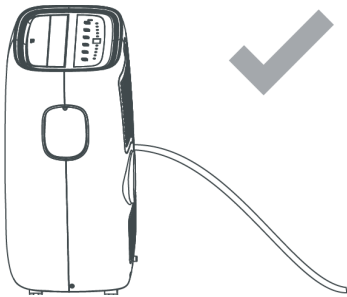


Installation Guide

Grounding

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock.

For additional safety, the power cord features an integrated circuit breaker. Test and reset the buttons are provided on the plug case.


The circuit breaker should be tested periodically by pressing the TEST button. If it does not cause the circuit breaker to trip, or if the RESET button will not stay engaged, unplug the unit immediately and contact your service technician.

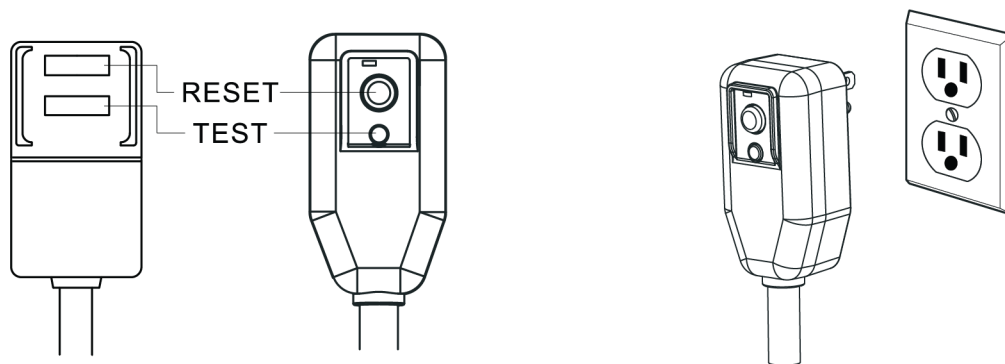

⚠ CAUTION! WARNING: Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded.

⚠ CAUTION! WARNING: DO NOT modify the plug provided with the product if it does not fit the outlet. Have a proper outlet installed by a qualified electrician.

User Instruction

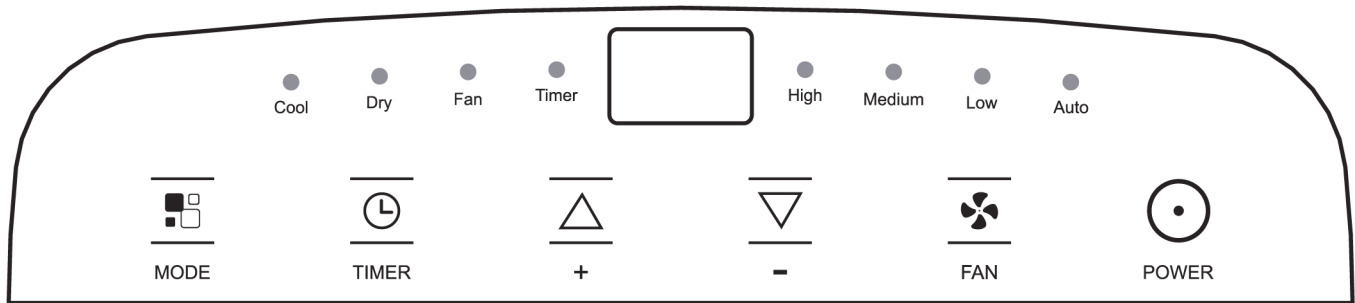

Power ON / OFF

Plug the unit into a grounded socket. The screen will display "--" and turn into stand by mode.

Press the POWER button once to turn the unit on.

Press the POWER button once more to turn the unit off.

⚠ CAUTION! WARNING: DO NOT unplug the unit when it is still "ON"

Cool Mode

Press MODE button when the machine is turned on until the cool mode indicator is lit.

Press the FAN button to choose the fan speed. The fan speed indicator will lit.

You can choose between "high", "medium", "low", or "auto" fan speed.

Press the  and  button to set to desired temperature.

Dry Mode

Press the MODE button until the dry mode indicator is lit.

The screen will display code "dH".

At the same time, the "auto" fan speed indicator will also lit.

NOTE: Fan speed cannot be adjusted in this mode.

Fan Mode



Press the MODE button until the Fan mode indicator is lit. In this mode, you can select fan speed to "high", "med", or "low".

The screen will also displays "≡≡" for high speed, "= =" for medium speed, and "— —" for low speed.

NOTE: AUTO cannot be selected in this mode.



User Instruction

Start Up Timer


Press the TIMER button when the unit is in stand by mode (plugged into power but have not power on). The time indicator and the number of hours on the screen will flash. Tap or hold  or  to change the delay start timer in 0.5 hour increments up to 10 hours, and then 1 hour increments up to 24 hours. After 5 seconds, the timer indicator and the display will stop flashing. The unit will count down the time until startup. To cancel setting, press the timer button again, and the timer indicator will turn off.

NOTE: The unit will start working using the mode previously set.

Shut Down Timer

Press the TIMER button when the unit is powered on. The time indicator and the number of hours on the screen will flash. Tap or hold  or  to change the delay start timer in 0.5 hour increments up to 10 hours, and then 1 hour increments up to 24 hours. After 5 seconds, the timer indicator and the display will stop flashing. The unit will count down the time until shut down. To cancel setting, press the timer button again, and the timer indicator will turn off.

User Instruction

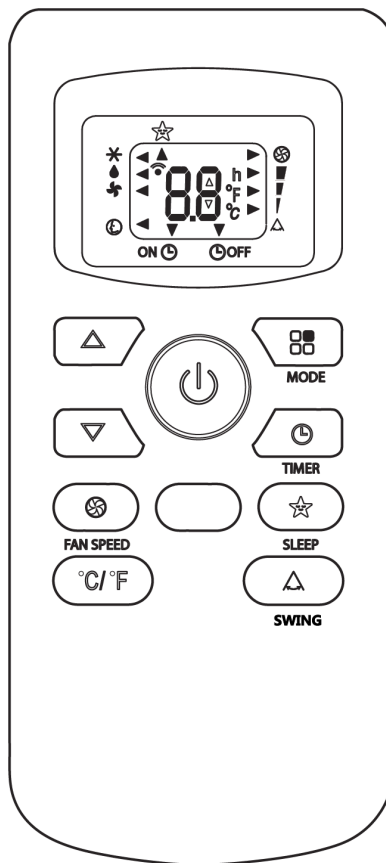

Insert or Replace Batteries on Remote Control

Remove the cover on the back of the remote control; Replace the old batteries with two new AAA 1.5V batteries.

Replace the cover.

NOTE: Remove the batteries if the remote control is not use for an extended period of time.

⚠ CAUTION! WARNING: DO NOT mix old and new batteries.

⚠ CAUTION! WARNING: DO NOT mix alkaline batteries, carbon-zinc batteries, or rechargeable batteries.

Using the Remote Control

Point the remote control at the control panel on the unit. The remote control must be less than 16.4ft (5m) away from the unit (without obstacles between the remote control and the unit).

The buttons on the remote control mimics the same control function as that on the control panel.

User Instruction

Power ON / OFF



Plug the unit into a grounded socket. The screen will display “— —” and turn into stand by mode.


Press the POWER button on the remote control once to turn the unit on.

Press the POWER button once more on the remote control to turn the unit off.

 **CAUTION! WARNING:** DO NOT unplug the unit when it is still “ON”

Cool Mode


Press MODE  button when the machine is turned on until the arrow pointed to .

Press the FAN speed  button to choose the fan speed. The arrow will point at fan speed indicator on the right.

You can choose between “high”, “med”, “low”, or “auto” fan speed.

Press the  and  button to set to desired temperature



Dry Mode

Press the MODE  button until the arrow pointed to .

At the same time, the fan speed indicator arrow will pointed to “low”.

NOTE: Fan speed cannot be adjusted in this mode.

Fan Mode

Press the MODE  button until the arrow pointed to . In this mode, you can select fan speed to “high”, “med”, or “low” by pressing the FAN SPEED  button.

NOTE: You cannot select auto fan speed in this mode.


Auto Mode

Press the MODE  button until the arrow pointed to .

Press the FAN SPEED  button to choose between “high”, “medium”, “low”, and “auto” fan speed.

NOTE: The unit will automatically run in fan mode if the room temperature is below 73°F (23°C) and cool mode if the room temperature is above 73°F (23°C).

Sleep Mode

When the unit is in Cool, Auto, or Dry mode, you can press the SLEEP  button on the remote control to make the unit run in sleep mode. In this mode, the fan speed will be set to “low” automatically.



In Cool mode, the selected temperature will increase by 1°F every 60 minutes for 2 hours after sleeping mode is selected. The new temperature will be maintained for 6 hours, and the unit will switch into stand by mode after.




In Auto and Dry mode, the temperature will be set automatically and fan speed will be kept in “low”

NOTE: you cannot use Sleep mode when using Fan mode.

User Instruction

Start up Timer




Press the TIMER  button when the unit is in stand by mode (pugged into power but have not powered on) and the arrow is pointed at "ON".


Press the  and  button to make the desire setting. Confirm the setting by pressing the TIMER  button again. The time will display on the screen and the "h" symbol will flash.

To cancel the setting, press the TIMER  button again and the time indicator will turn off.

Shut down Timer

Press the TIMER  button when the unit powered on and the arrow is pointed at " OFF".

Press the  and  button to make the desire setting. Confirm the setting by pressing the TIMER  button again. The time countdown will display on the screen.

To cancel the setting, press the TIMER  button again and the time indicator will turn off.

Swing Function

Press the SWING button to enable the air deflector swing function. Press the SWING button again to disable the swing function.

°C/°F function

Press the °C/°F button to switch between degree Celsius and degree Fahrenheit.

User Instruction

Care and Maintenance

Draining the unit:

Condensate will residue inside the unit when operate. Condensate need to be drained to keep the unit working.


Continue Drainage

Drain hose can be installed on the unit to continue drainage.
See drain hose installation for installation instruction.

Manual Drainage

1. Unplug the unit and move the unit to a suitable drain location.
2. Uncap the drain cap from the bottom drain outlet to drain.

NOTE: Error code "Ft" will appears on the display if the water tank is full.

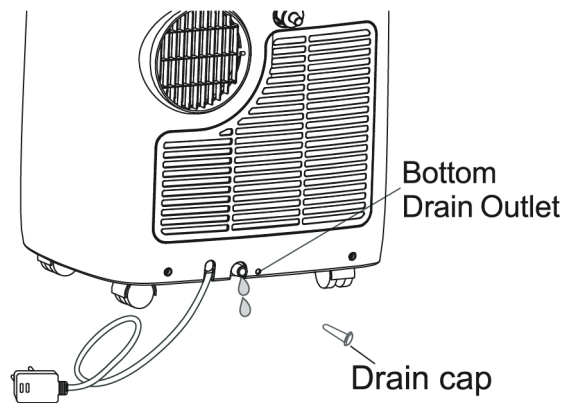

Clearing the unit housing:

Clean the surface with a damp cloth and dry it with a soft towel.

⚠ CAUTION! WARNING: DO NOT use harsh cleaners, was, or polish on the unit. Be sure to dry the unit, excess water may cause damage to the unit.

⚠ CAUTION! WARNING: Unplug the power cord before cleaning.

User Instruction

Clearing the filter:


To keep your air conditioner working efficiently, you should clean the filters every week of operation.

Grasp the upper panel tab and take off the filter behind the grill on the back panel as shown in the figure to the right.

Wash the filter using liquid dish-washing detergent and warm water.

Rinse filter thoroughly. Gently shake excess water from the filter. Be sure filter is thoroughly dry before replacing. You may also vacuum the filter.

Replace the filter after the filter is dry.

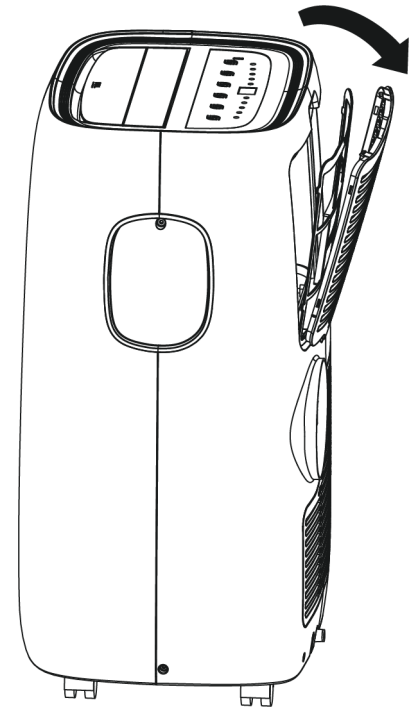

Storage:

If the unit will not be used for an extended period of time:

1. Drain the water tank completely. Leave the drain outlet unplugged for longer time and allow all water to drain. Once the tank is completely drained and no more water flows out, reinstall the rubber plug and cap.
2. Remove and clean the filter, allow it to dry completely, then reinstall it.
3. Remove the batteries from the remote control.
4. Store the air conditioner in a cool, dry place.

Avoid exposure to direct sunlight, extreme temperature, and/or excessive dust.

Before using the unit again:

1. Make sure the filter and drain cap are in place.
2. Make sure the power cord is in good condition and without any cracks or damage.
3. Place new batteries in remote control.
4. Install the unit as described in the installation instruction.

Trouble shooting

Problem	Possible Reasons	Solutions
Unit does not work	No Power	Make sure the unit is plugged into a grounded power socket
	Electrical Protection	Check the house fuse / circuit breaker box.
	Water tank is full	Drain the tank and reset setting.
	Power Failure	A 3 mins protective time delay may prevent the unit to operate after a power failure.
Unit does not cool properly	Not enough time for the unit to cool the area	Allow the unit to operate for a sufficient time to cool the room
	Airflow is restricted	Make sure nothing is blocking the air inlet / exhaust vent
	Dirty filter	Clean the filter
	The setting is too high	Lower the desired temperature using the control panel
	Hot air getting into the room	The unit works best in an enclosed area
	Room temperature is too high	Allow the unit to operate for a sufficient time to cool the room
Unit runs too much	The room is too large	Make sure the capacity of your unit is adequate for the room size
	Doors or windows are open	Make sure to close all openings

Error Code Chart

Error Code	Description	Solution
Lt	Low Temperature	Wait until the unit finish defrosting
PF	Probe Failure	Damaged Sensor, contact customer service
Ft	Full water tank	Empty the water tank

