



ELARI FixiTime 3

User Guide

EN

Package Contents:

- FixiTime3 watch
- USB cable with charging cradle
- User manual

Learn more about The Fixies:



 


Your FixiTime3

Front view

1. Power button: Press and hold for 3 seconds to turn the watch On/Off
2. Camera/SOS button
Short press for camera, long press for SOS
3. Back button: Press to return to the home/start screen

Back view

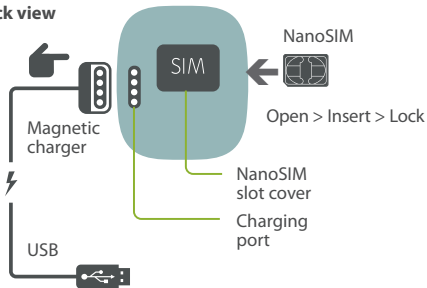

Before Starting

Follow the requirements for correct operation

- Make sure to turn off your device before installing the SIM
- Insert your nanoSIM into the slot
- Switch on the display for voice command, 2G data transmission and incoming calls
- Chose more than 30 MB/2G data plan

Download App:

App requires iOS 7.0 or later and Android 4.0 or later

For Android: download the app «Elari SafeFamily»
on Google Play Store

For iOS: download the app «Elari SafeFamily»
on App Store



App Registration:

Registration Steps

- Open downloaded App and tap «Register» to start registration
- By clicking «Register», you are indicating that you have read and agree to the Terms of Use and Privacy Policy

Note:

Please make sure you enter a valid e-mail address and correct verification code sent to your e-mail.

Pairing watch with Phone:

Start pairing

- After the registration is complete, tap «Add Watch» and scan QR code on the back cover of this manual to complete pairing.
- Alternatively, click the «Input» key in the right top corner and enter the pairing (found below the QR code) to complete the pairing

Warning:

- Keep the device away from any liquids that may contain minerals that can rust electronic circuits.
- Do not store the device in extreme temperatures.
- Do not use or store device in dusty and dirty areas.
- Do not drop, knock, or shake device. Rough handling can disrupt internal circuit boards and fine mechanical parts.


Two-way Communication

Go to your Phonebook to choose a contact to call. Press power button to end a call.




Voice Message

To access your «Voice mail», long press «Voice» icon to send a voice message, release.

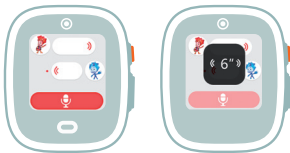

Pedometer

Track the number of steps you take during the day.

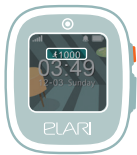

SOS


Long press the SOS button for three seconds to send a SOS message. Parents will be alarmed and informed about their kids' position. Once SOS alarm is activated, they will receive 15 seconds voice record.



Safe zones

Go to «Settings» and select «Safe zones». Tap on the map to select circular zone with 200 to 2000 m radius. Safety reminder will be received right after the watch crosses the borders of the Safe zone.

To prevent false alarms, the safety reminder will only be received if the watch gets GPS positioning after exiting the Safe zone.

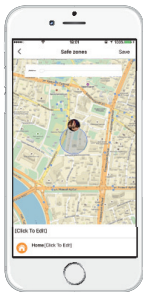

Class mode

All functions are disabled except SOS signal and time while the «Class mode» is on.



Making friends

Choose the friends mode on the main interface. Shake slightly the device to find people who wear the same device within 10 m from you.



Alarm

Parents can set time on the App to remind their kids to start or finish their tasks.



Arithmetic game

The watch contains an arithmetic game with three levels of difficulty, that can stimulate children's mathematical potential.



Change the theme

- Press the main interface for three seconds to switch between themes
- Swipe left/right to choose the theme
- Click confirm to set a theme you prefer

