



Install Cisco ISE

- [Install Cisco ISE Using CIMC, on page 1](#)
- [Run the Setup Program of Cisco ISE, on page 3](#)
- [Verifying the Cisco ISE Installation Process, on page 6](#)
- [Install Cisco ISE on a Cisco SNS Appliance Using NFS, on page 7](#)

Install Cisco ISE Using CIMC

This section lists the high-level installation steps to help you quickly install Cisco ISE:

Before you begin

- Ensure that you have met the [System Requirements](#) as specified in this guide.
- (Optional; required only if you are installing Cisco ISE on virtual machines) Ensure that you have created the virtual machine correctly.

See the following topics for more information:

- [Configure a VMware Server](#)
- [Install Cisco ISE on KVM](#)
- [Create a Cisco ISE Virtual Machine on Hyper-V](#)
- (Optional; required only if you are installing Cisco ISE on SNS hardware appliances) Ensure that you set up the Cisco Integrated Management Interface (CIMC) configuration utility to manage the appliance and configure BIOS. See the following document for more information:
 - For SNS 3500 series appliances, see [Cisco SNS-3500 Series Appliance Hardware Installation Guide](#).
 - For SNS-3600 series appliances, see [Cisco SNS-3600 Series Appliance Hardware Installation Guide](#).
 - For SNS-3700 series appliances, see [Cisco SNS-3700 Series Appliance Hardware Installation Guide](#).

Step 1

If you are installing Cisco ISE on a:

- Cisco SNS appliance: Install the hardware appliance. Connect to CIMC for server management.

- Virtual Machine: Ensure that your VM is configured correct.

Step 2 Download the Cisco ISE ISO image.


- a) Go to <http://www.cisco.com/go/ise>. You must already have valid Cisco.com login credentials to access this link.
- b) Click **Download Software for this Product**.

The Cisco ISE image comes with a 90-day evaluation license already installed, so you can begin testing all Cisco ISE services when the installation and initial configuration is complete.

Step 3 Boot the appliance or the virtual machine.

- Cisco SNS appliance:
 - a. Connect to CIMC and log in using the CIMC credentials.
 - b. Launch the KVM console.
 - c. Choose Virtual Media > Activate Virtual Devices.
 - d. Choose Virtual Media > Map CD/DVD and select the ISE ISO image and click Map Device.
 - e. Choose Macros > Static Macros > Ctrl-Alt-Del to boot the appliance with the ISE ISO image.
 - f. Press F6 to bring up the boot menu. A screen similar to the following one appears:

Figure 1: Selection of Boot Device

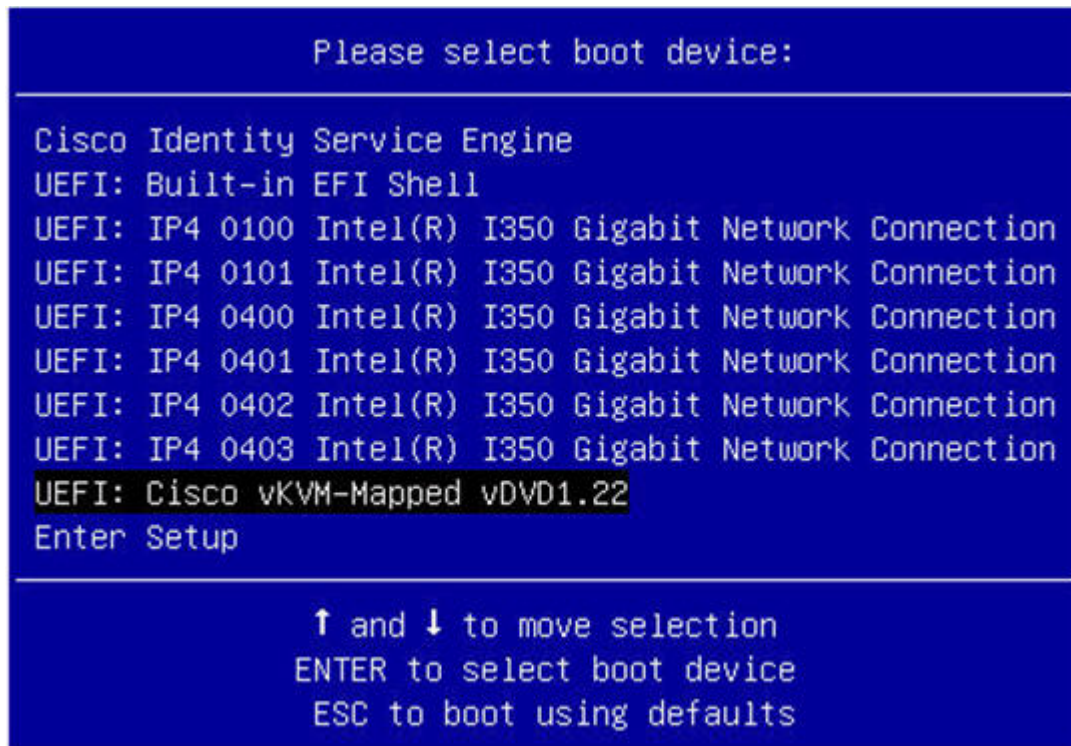

Note

- If the SNS appliances are placed in a remote location (for example, data centers), to which you do not have any physical access and need to perform CIMC install from remote servers, it might take long hours for installation. We recommend that you copy the ISO file on a USB drive and use that in the remote location to speed up the installation process.
- Cisco ISE installation using CIMC may be affected by network speed, network stability, TCP segmentation, or other factors of the operating system. This may impact the speed and the time taken (approximately 30 minutes) for Cisco ISE installation.

- Virtual Machine:

- a. Map the CD/DVD to an ISO image. A screen similar to the following one appears. The following message and installation menu are displayed.

```
Welcome to the Cisco Identity Services Engine Installer
Cisco ISE Version: 3.1.0.xxx
```

```
Available boot options:
```

```
Cisco ISE Installation (Serial Console)
Cisco ISE Installation (Keyboard/Monitor)
System Utilities (Serial Console)
System Utilities (Keyboard/Monitor)
```

Step 4 At the boot prompt, press **1** and **Enter** to install Cisco ISE using a serial console.

If you want to use a keyboard and monitor, use the arrow key to select the **Cisco ISE Installation (Keyboard/Monitor)** option. The following message appears.

```
*****
Please type 'setup' to configure the appliance
*****
```

Step 5 At the prompt, type **setup** to start the Setup program. See [Run the Setup Program of Cisco ISE, on page 3](#) for details about the Setup program parameters.

Step 6 After you enter the network configuration parameters in the Setup mode, the appliance automatically reboots, and returns to the shell prompt mode.

Step 7 Exit from the shell prompt mode. The appliance comes up.

Step 8 Continue with [Verifying the Cisco ISE Installation Process, on page 6](#).

Run the Setup Program of Cisco ISE

This section describes the setup process to configure the ISE server.

The setup program launches an interactive command-line interface (CLI) that prompts you for the required parameters. An administrator can use the console or a dumb terminal to configure the initial network settings and provide the initial administrator credentials for the ISE server using the setup program. This setup process is a one-time configuration task.



Note If you are integrating with Active Directory (AD), it is best to use the IP and subnet addresses from a dedicated Site created specifically for ISE. Consult with the staff in your organization responsible for AD and retrieve the relevant IP and subnet addresses for your ISE nodes prior to installation and configuration.



Note It is not recommended to attempt offline installation of Cisco ISE as this can lead to system instability. When you run the Cisco ISE installation script offline, the following error is shown:

Sync with NTP server failed' Incorrect time could render the system unusable until it is re-installed. Retry? Y/N [Y]:

Choose **Yes** to continue with the installation. Choose **No** to retry syncing with the NTP server.

It is recommended to establish network connectivity with both the NTP server and the DNS server while running the installation script.

To run the setup program:

Step 1 Turn on the appliance that is designated for the installation.

The setup prompt appears:

```
Please type 'setup' to configure the appliance
localhost login:
```

Step 2 At the login prompt, enter **setup** and press **Enter**.

The console displays a set of parameters. You must enter the parameter values as described in the table that follows.

Note The eth0 interface of ISE must be statically configured with an IPv6 address if you want to add a Domain Name Server or an NTP Server with an IPv6 address.

Table 1: Cisco ISE Setup Program Parameters

Prompt	Description	Example
Hostname	Must not exceed 19 characters. Valid characters include alphanumeric (A–Z, a–z, 0–9), and the hyphen (-). The first character must be a letter. Note We recommend that you use lowercase letters to ensure that certificate authentication in Cisco ISE is not impacted by minor differences in certificate-driven verifications. You cannot use "localhost" as hostname for a node.	isebeta1
(eth0) Ethernet interface address	Must be a valid IPv4 or Global IPv6 address for the Gigabit Ethernet 0 (eth0) interface.	10.12.13.14/ 2001:420:54ff:4::458:121:119
Netmask	Must be a valid IPv4 or IPv6 netmask.	255.255.255.0/ 2001:420:54ff:4::458:121:119/122

Prompt	Description	Example
Default gateway	Must be a valid IPv4 or Global IPv6 address for the default gateway.	10.12.13.1 / 2001:420:54ff:4::458:1
DNS domain name	Cannot be an IP address. Valid characters include ASCII characters, any numerals, the hyphen (-), and the period (.).	example.com
Primary name server	Must be a valid IPv4 or Global IPv6 address for the primary name server.	10.15.20.25 / 2001:420:54ff:4::458:118
Add/Edit another name server	Must be a valid IPv4 or Global IPv6 address for the primary name server.	(Optional) Allows you to configure multiple name servers. To do so, enter y to continue.
Primary NTP server	Must be a valid IPv4 or Global IPv6 address or hostname of a Network Time Protocol (NTP) server. Note Ensure that the primary NTP server is reachable.	clock.nist.gov / 10.15.20.25 / 2001:420:54ff:4::458:117
Add/Edit another NTP server	Must be a valid NTP domain.	(Optional) Allows you to configure multiple NTP servers. To do so, enter y to continue.
System Time Zone	Must be a valid time zone. For example, for Pacific Standard Time (PST), the System Time Zone is PST8PDT (or Coordinated Universal Time (UTC) minus 8 hours). Note Ensure that the system time and time zone match with the CIMC or Hypervisor Host OS time and time zone. System performance might be affected if there is any mismatch between the time zones. Note We recommend that you set all the Cisco ISE nodes to the UTC time zone. This time zone setting ensures that the reports, logs, and posture agent log files from the various nodes in your deployment are always synchronized with regard to the time stamps.	UTC (default)
Username	Identifies the administrative username used for CLI access to the Cisco ISE system. If you choose not to use the default (admin), you must create a new username. The username must be three to eight characters in length and comprise of valid alphanumeric characters (A–Z, a–z, or 0–9).	admin (default)
Password	Identifies the administrative password that is used for CLI access to the Cisco ISE system. You must create this password in order to continue because there is no default password. The password must be a minimum of six characters in length and include at least one lowercase letter (a–z), one uppercase letter (A–Z), and one numeral (0–9).	MyIseYPass2

Note When you create a password for the administrator during installation or after installation in the CLI, do not use the \$ character in your password, unless it is the last character of the password. If it is the first or one of the subsequent characters, the password is accepted, but cannot be used to log in to the CLI.

If you inadvertently create such a password, reset your password by logging into the console and using the CLI command, or by getting an ISE CD or ISO file. Instructions for using an ISO file to reset the password are explained in the following document: <https://www.cisco.com/c/en/us/support/docs/security/identity-services-engine/200568-ISE-Password-Recovery-Mechanisms.html>

After the setup program is run, the system reboots automatically.

Now, you can log in to Cisco ISE using the username and password that was configured during the setup process.

Verifying the Cisco ISE Installation Process

To verify that you have correctly completed the installation process:

- Step 1** When the system reboots, at the login prompt enter the username you configured during setup, and press **Enter**.
- Step 2** Enter a new password.
- Step 3** Verify that the application has been installed properly by entering the **show application** command, and press **Enter**. The console displays:

```
ise/admin# show application
<name>          <Description>
ise             Cisco Identity Services Engine
```

Note The version and date might change for different versions of this release.

- Step 4** Check the status of the ISE processes by entering the **show application status ise** command, and press **Enter**. The console displays:

```
ise/admin# show application status ise
```

ISE PROCESS NAME	STATE	PROCESS ID
Database Listener	running	14890
Database Server	running	70 PROCESSES
Application Server	running	19158
Profiler Database	running	16293
ISE Indexing Engine	running	20773
AD Connector	running	22466
M&T Session Database	running	16195
M&T Log Collector	running	19294
M&T Log Processor	running	19207
Certificate Authority Service	running	22237
EST Service	running	29847
SXP Engine Service	disabled	
Docker Daemon	running	21197
TC-NAC Service	disabled	
Wifi Setup Helper Container	not running	
pxGrid Infrastructure Service	disabled	
pxGrid Publisher Subscriber Service	disabled	
pxGrid Connection Manager	disabled	
pxGrid Controller	disabled	

```
PassiveID WMI Service           disabled
PassiveID Syslog Service        disabled
PassiveID API Service           disabled
PassiveID Agent Service         disabled
PassiveID Endpoint Service      disabled
PassiveID SPAN Service          disabled
DHCP Server (dhcpd)             disabled
DNS Server (named)              disabled

ise/admin#
```

Install Cisco ISE on a Cisco SNS Appliance Using NFS

This section describes how to install Cisco ISE on a Cisco SNS appliance using a Network File System (NFS) server.

Before you begin

- Ensure that you have met the System Requirements as specified in this guide.
- Ensure that you set up the Cisco Integrated Management Interface (CIMC) configuration utility to manage the appliance and configure BIOS. See the following documents for more information:
 - For SNS-3600 series appliances, see [Cisco SNS-3600 Series Appliance Hardware Installation Guide](#).
 - For SNS-3700 series appliances, see [Cisco SNS-3700 Series Appliance Hardware Installation Guide](#).

-
- | | |
|----------------|---|
| Step 1 | Download the Cisco ISE ISO image from http://www.cisco.com/go/ise . |
| Step 2 | Connect to CIMC and log in using the CIMC credentials. |
| Step 3 | Choose Compute > Remote Management > Virtual Media > Add New Mapping . |
| Step 4 | In the Add New Mapping window, enter the details of the NFS server, and then click Save . |
| Step 5 | In the Current Mappings window, ensure that the Status of the added mapping is shown as OK . |
| Step 6 | Launch the KVM console. |
| Step 7 | Choose Power > Power Cycle System . |
| Step 8 | Click Confirm . |
| Step 9 | Press F6 to enter the boot menu. |
| Step 10 | In the Select Boot Device window, choose UEFI: Cisco CIMC-Mapped vDVD2.00 , and press Enter .
After the server completes the booting process, Cisco ISE installation menu is displayed. |
| Step 11 | Choose Cisco ISE Installation (Keyboard/Monitor) to proceed with the installation. |
-

