

Multi-channel Modular Power System

IT2702/2704 Series User Manual



Model: IT2702/IT2704

Version: V1.0/03,2024



Notices

© Itech Electronic, Co., Ltd. 2024
No part of this manual may be
reproduced in any form or by any
means (including electronic storage
and retrieval or translation into a foreign
language) without prior permission and
written consent from Itech Electronic,
Co., Ltd. as governed by international
copyright laws.

Manual Part Number

IT2702

Revision

1st Edition: March. 8, 2024 Itech Electronic, Co., Ltd.

Trademarks

Pentium is U.S. registered trademarks of Intel Corporation.

Microsoft, Visual Studio, Windows and MS Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries and regions.

Warranty

The materials contained in this document are provided "as is", and is subject to change, without prior notice, in future editions. Further, to the maximum extent permitted by applicable laws. ITECH disclaims all warrants, either express or implied, with regard to this manual and any information contained herein, including but not limited to the warranties implied of merchantability and fitness for a particular purpose. ITECH shall not be held liable for errors or for incidental or indirect damages in connection with the furnishing, use or application of this document or of any information contained herein. Should ITECH and the user enter into a separate written agreement with warranty terms covering the materials in this document that conflict with these terms, the warranty terms in the separate agreement shall prevail.

Technology Licenses

The hardware and/or software described herein are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

Restricted permissions of the U.S. government. Permissions for software and technical data which are authorized to the U.S. Government only include those for custom provision to end users. ITECH provides this customary commercial license in software and technical data pursuant to FAR 12.211 (Technical Data) and 12.212 (Computer Software) and DFARS 252.227-7015 (Technical Data — Commercial Items) and DFARS 227.7202-3 (Rights in Commercial Computer Software or Computer Software Documentation).

Safety Notices

CAUTION

A CAUTION sign denotes a hazard. It calls attention to an operating procedure or practice that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.

WARNING

A WARNING sign denotes a hazard. It calls attention to an operating procedure or practice that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.



A NOTE sign denotes important hint. It calls attention to tips or supplementary information that is essential for users to refer to.



Quality Certification and Assurance

We certify that IT2700 series power supply meets all the published specifications at time of shipment from the factory.

Warranty

ITECH warrants that the product will be free from defects in material and workmanship under normal use for a period of one (1) year from the date of delivery (except those described in the Limitation of Warranty below).

For warranty service or repair, the product must be returned to a service center designated by ITECH.

- The product returned to ITECH for warranty service must be shipped PREPAID. And ITECH will pay for return of the product to customer.
- If the product is returned to ITECH for warranty service from overseas, all the freights, duties and other taxes shall be on the account of customer.

Limitation of Warranty

This Warranty will be rendered invalid if the product is:

- Damaged resulting from customer-wired circuits or customer-supplied parts or accessories;
- Modified or repaired by customer without authorization;
- Damaged resulting from customer-wired circuits or use in an environment not designated by us;
- The product model or serial number is altered, deleted, removed or made illegible by customer;
- Damaged as a result of accidents, including but not limited to lightning, moisture, fire, improper use or negligence.

Safety Symbols

===	Direct current		ON (power)
\sim	Alternating current	0	OFF (power)
}	Both direct and alternating current	ф	Power-on state
	Chassis (earth ground) symbol.	Д	Power-off state
Ť	Earth (ground) terminal	H	Reference terminal
<u>A</u>	Caution	+	Positive terminal
	Warning (refer to this manual for specific Warning or Caution information)	_	Negative terminal



A chassis terminal	-	-
--------------------	---	---

Safety Precautions

The following safety precautions must be observed during all phases of operation of this instrument. Failure to comply with these precautions or specific warnings elsewhere in this manual will constitute a default under safety standards of design, manufacture and intended use of the instrument. ITECH assumes no liability for the customer's failure to comply with these precautions.

WARNING

- Do not use the instrument if it is damaged. Before operation, check the casing to see whether it cracks. Do not operate the instrument in the presence of inflammable gasses, vapors or dusts.
- The instrument is provided with a power cord during delivery and should be connected to a socket with a protective earth terminal, a junction box or a three-phase distribution box. Before operation, be sure that the instrument is well grounded.
- Check all marks on the instrument before connecting the instrument to power supply.
- Use electric wires of appropriate load. All loading wires should be capable of bearing maximum short-circuit of electronic load without overheating. If there are multiple loads, each pair of the load power cord must be carry out the full rated short-circuit output current of the power securely.
- Ensure the voltage fluctuation of mains supply is less than 10% of the working voltage range in order to reduce risks of fire and electric shock.
- Do not install alternative parts on the instrument or perform any unauthorized modification.
- Do not use the instrument if the detachable cover is removed or loosen.
- To prevent the possibility of accidental injuries, be sure to use the power adapter supplied by the manufacturer only.
- We do not accept responsibility for any direct or indirect financial damage or loss of profit that might occur when using the instrument.
- This instrument is used for industrial purposes, do not apply this product to IT power supply system.
- Never use the instrument with a life-support system or any other equipment subject to safety requirements.

WARNING

SHOCK HAZARD Ground the Instrument. This product is provided with a protective earth terminal. To minimize shock hazard, the instrument must be connected to the AC mains through a grounded power cable, with the ground wire firmly connected to an electrical ground (safety ground) at the power outlet or distribution box. Any interruption of the protective



(grounding) conductor or disconnection of the protective earth terminal will cause a potential shock hazard that could result in injury or death.

- Before applying power, verify that all safety precautions are taken. All
 connections must be made with the instrument turned off, and must be
 performed by qualified personnel who are aware of the hazards involved.
 Improper actions can cause fatal injury as well as equipment damage.
- SHOCK HAZARD, LETHAL VOLTAGES This product can input the dangerous voltage that can cause personal injury, and the operator must always be protected from electric shock. Ensure that the input electrodes are either insulated or covered using the safety covers provided, so that no accidental contact with lethal voltages can occur.
- Never touch cables or connections immediately after turning off the instrument. Verify that there is no dangerous voltage on the electrodes or sense terminals before touching them.

CAUTION

- Failure to use the instrument as directed by the manufacturer may render its protective features void.
- Always clean the casing with a dry cloth. Do not clean the internals.
- Make sure the vent hole is always unblocked.

Environmental Conditions

The instrument is designed for indoor use and an area with low condensation. The table below shows the general environmental requirements for the instrument.

Environmental Conditions	Requirements
Operating temperature	0°C∼40°C
Operating humidity	20% \sim 80%(non-condensation)
Storage temperature	-10°C∼70 °C
Altitude	Operating up to 2,000 meters
Installation category	II.
Pollution degree	Pollution degree 2



To make accurate measurements, allow the instrument to warm up for 30 min.

Regulatory Markings







This symbol indicates the time period during which no hazardous or toxic substances are expected to leak or deteriorate during normal use. The expected useful life of the product is 10 years. The product can be used safely during the 10-year Environment Friendly Use Period (EFUP). Upon expiration of the EFUP, the product must be immediately recycled.

Waste Electrical and Electronic Equipment (WEEE) Directive



2002/96/EC Waste Electrical and Electronic Equipment (WEEE) Directive

This product complies with the WEEE Directive (2002/96/EC) marking requirement. This affix product label indicates that you must not discard the electrical/electronic product in domestic household waste.

Product Category

With reference to the equipment classifications described in the Annex 1 of the WEEE Directive, this instrument is classified as a "Monitoring and Control Instrument". To return this unwanted instrument, contact your nearest ITECH office.



Compliance Information

Complies with the essential requirements of the following applicable European Directives, and carries the CE marking accordingly:

- Electromagnetic Compatibility (EMC) Directive 2014/30/EU
- Low-Voltage Directive (Safety) 2014/35/EU

Conforms with the following product standards:

EMC Standard

IEC 61326-1:2012/ EN 61326-1:2013 123

Reference Standards

CISPR 11:2009+A1:2010/ EN 55011:2009+A1:2010 (Group 1, Class A)

IEC 61000-4-2:2008/ EN 61000-4-2:2009

IEC 61000-4-3:2006+A1:2007+A2:2010/ EN 61000-4-

3:2006+A1:2008+A2:2010

IEC 61000-4-4:2004+A1:2010/ EN 61000-4-4:2004+A1:2010

IEC 61000-4-5:2005/ EN 61000-4-5:2006

IEC 61000-4-6:2008/ EN 61000-4-6:2009

IEC 61000-4-11:2004/ EN 61000-4-11:2004

- 1. The product is intended for use in non-residential/non-domestic environments. Use of the product in residential/domestic environments may cause electromagnetic interference.
- 2. Connection of the instrument to a test object may produce radiations beyond the specified limit.
- 3. Use high-performance shielded interface cable to ensure conformity with the EMC standards listed above.

Safety Standard

IEC 61010-1:2010/ EN 61010-1:2010



Content

Quality Cer	tification and Assurance	
•		
•	of Warranty	
	bols	
	autions	
•	ntal Conditions	
•	Markings	
	trical and Electronic Equipment (WEEE) Directive	
Compliance	Information	V
Chapter1	Quick Reference	
1 1 Drief Ind	troduction	_
	anel Introduction	
	nel Introduction	
1.3 Real Pa		
Chapter2	Inspection and Installation	10
2.1 Unnack	ing and Transportation	10
-	g the Shipment	
•	ent Size Introduction	
	g the Instrument	
	wer Module Installation	
	ck Mounting	
	ting the Power Cord	
	ting the Power Cordting the Power Cordting the Power Cord	
2.6 Connec	ting rest lines (Optional)	1c
Chapter3	Getting Started	22
3.1 Power-o	on the Instrument	22
	Control	
	B Interface	
	N Interface	
	N Interface	
	•	
Chapter4	Technical Specifications	27
4.1 Suppler	nental characteristics	27
	chnical parameters	
	Mainframe Specifications	
	Mainframe Specifications	
_		
IT27557		60
Chapter5	Appendix	62
•	••	
Specificatio	ns of Red and Black Test Lines	62



Chapter1 Quick Reference

This chapter introduces the front and rear panels of the IT2700 series multichannel power system to ensure that you can quickly understand the appearance, structure, and wiring of the power system and other usage functions before operating the power system, which will help you to better use this series of instruments.

1.1 Brief Introduction

IT2702/IT2704 series multi-channel modular power system brings ultra-high power density. The 1U main frame can include up to 8 modules (200W each) or 4 modules (500W each). The IT2702 main frame can be equipped with bidirectional DC power supplies, DC power supplies or regenerative loads. And the IT2704 main frame can be equipped with regenerative loads. Different modules can be grouped and synchronized. They have built-in LAN, USB, CAN, digital I/O and free PC software. It can be widely used in ATE integration in R&D, design verification and manufacturing of DC-DC, communication power supplies, power component, electronic products, PCBA, battery simulation and test, chips BMS chips etc.

Features

- ATE systems for R&D, design verification and manufacturing
- Compact size: 1U single unit outputs up to 8 channels
- Flexible modular system: mix and match various modules
- 2 frame (1U), 3 module types (DC power supply, bidirectional power supply, regenerative load)
- Free PC software, display 8-channel output
- Support Web control, use common browser to realize all functions
- The electrically isolated source load module supports 8 modules in masterslave parallel connection up to 2kW
- Load function: support CC, CV, CP, CR, CC+CV, CR+CV, CP+CV, CC+CR, AUTO,BSIM (battery simulation)
- Power supply function: Supports CV/CC/CP loop and internal resistance setting
- Bidirectional power supply module supports resistance setting in load mode
- All modules are wide-range modules
- Single module voltage up to 150V, current up to 30A, power up to 500W
- Supports synchronous control between different frames, no upper limit of channels
- Rich trigger output and input, support step trigger output, can trigger other modules (acquisition, oscilloscope, data recording, etc.)
- Up to 50kHz external data recording function to improve test efficiency
- Measurement functions: multi-output/single-output display, oscilloscope, data record display, supports average, minimum and maximum values of V/I/P, and calculates P. Ah and Wh for all outputs
- Output functions: list function, arbitrary waveform, swept sine wave, arbitrary wave sequence, constant dwell arbitrary wave, load transient,



battery simulation*1, battery test, OCP and OPP test*2, output on/off serialization, Watchdog, support output coupling

- Full protection: OVP, UVP, OCP, OPP, OTP, UCP, Foldback, supports protection coupling
- Modules has anti-reverse connection function, built-in relay, and supports anti-discharge and anti-surge functions
- AC input: adaptive 100-380 V ac single phase
- Built-in LAN, USB-TMC, USB-VCP, CAN, digital I/O, data import and export by USB and supports SCPI protocol

Models and Options

The IT2702 main frame can be equipped with up to eight 200W modules or four 500W modules, which can be bidirectional power supply modules, DC power supplies modules, or regenerative load modules. The detailed model list is shown in the table below.


The IT2704 main frame can be equipped with up to eight 200W modules or four 500W modules. This frame can only be used with regenerative load modules, and does not support playing with power supply modules.

The detailed model list is shown in the table below:

Voltage	Current	Power	DC power supply	Bidirectional power supply	Regenerative load
30V	15A	200W	IT27134	IT27334	IT27534
	30A	500W	IT27154	IT27354	IT27554
60V	10A	200W	IT27135	IT27335	IT27535
	20A	500W	IT27155	IT27355	IT27555
150V	5A	200W	IT27137	IT27337	IT27537
	10A	500W	IT27157	IT27357	IT27557

1.2 Front Panel Introduction

The IT2702 series power system is non-display panel models with the front panel shown below.

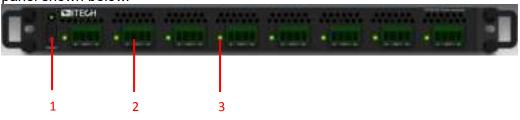

- 1 Power switch
- 2 Output terminals and remote measurement terminals corresponding to channels
- 3 Channel Status Indicator

^{*1} only available for bidirectional power supply modules only *2 only available for load modules



1.3 Rear Panel Introduction

The rear panel of the IT2700 series is shown below.



- 1 Status indicator
- 3 USB interface (U disk) 4 LAN interface
- 5 IO terminals and CAN 6 USB interface interface
- 7 AC power input
- 2 LAN-Reset key



Chapter2 Inspection and Installation

2.1 Unpacking and Transportation

Unpacking

For cabinet products, they are packaged in wooden boxes at the factory. After you receive them, please refer to the unpacking instructions provided with the box for disassembly; for products packaged in cartons, please use appropriate tools for unpacking.

It is recommended to keep the complete transport packaging for the lifetime of the device for relocation or return to the manufacture for repair.

Transportation

If you need to transport non-cabinet products, you must pay attention to the following to ensure the safety of equipment and personnel.

CAUTION

- Before moving, make sure that the cabinet or stand where the equipment will be placed has been fixed and meets the load-bear- ing conditions to avoid tilting and collapsing, causing personnel to be injured, and equipment broken.
- Due to the weight of the product, transport by hand should be avoided where possible. If unavoidable, carry it with two people and holding the product shell and not external parts (such as han-dles, electrodes, knobs, etc.).
- When carrying, be prepared to bear the weight to avoid sprains or being crushed by heavy objects.
- Use suitable safety clothing, especially safety shoes, when carrying the equipment, as due to its weight a fall can have serious consequences.

After unpacking the cabinet product, if you need to move it to other places, you must pay attention to the following matters to ensure the safety of equipment and personnel.

CAUTION

- The cabinet product is very heavy. Before moving to another loca-tion, confirm whether the ground load is in compliance.
- During the process of moving the cabinet, it is recommended that two
 or more people cooperate and push it slowly and at a constant speed.
 If you encounter a pit, you need to pay special attention. It is forbidden
 to push it quickly, otherwise it will easily cause excessive inertia and
 cause the casters at the bottom of the cabinet to jam and the cabinet
 to fall.
- It is not advisable to push down the slope to prevent the cabinet from falling down due to the shift of the center of gravity. It is rec-ommended



to use a forklift or crane to move the cabinet.

- ITECH 27U and 37U cabinets are equipped with hoisting rings as standard on the top. It is recommended to use a crane equipped with a four-leg hoisting belt structure for horizontal hoisting and moving, and ensure that the four hoisting belts are the same length to avoid cabinet skew during movement. As shown below.
- After moving to the destination, please lock the four casters to se-cure the cabinet.
- The cabinet should be placed on a level ground. It is forbidden to place the cabinet on a slopedground.



2.2 Verifying the Shipment

Open the package and check the articles within package box before operation. In case of any non-conformity, missing or appearance wearing, please contact ITECH immediately.

The package box should comprise:

Device name	Quantity	Model	Remarks	
Multi-channel power system	x1	IT2702/IT 2704	For the specific models included in this series, refer to 1.1 Brief Introduction.	
Power Cord	x1	-	Depending on the instrument model. For details, see 2.4 Connecting the Power Cord.	
USB cable	x1	-	This is used when the USB interface is used for starting up remote operation.	
LAN cable	x1	-	Used to connect between	




			instruments
Calibration Certificate	x1	-	Test report before delivery





After confirming that package contents are consistent and correct, please appropriately keep package box and related contents. The package requirements should be met when the instrument is returned to factory for repair.

2.3 Instrument Size Introduction

  
The instrument should be installed at well-ventilated and rational-sized space. Please select appropriate space for installation based on the power supply size.

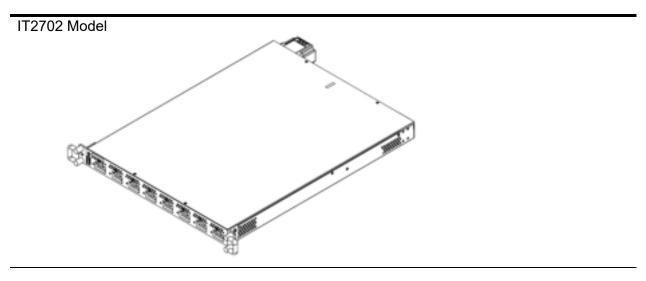







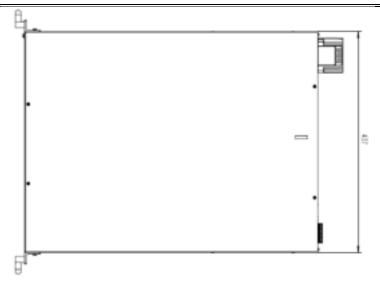

2.4 Installing the Instrument

2.4.1 Power Module Installation

CAUTION

The information in this section applies if you have purchased an IT2700 mainframe without the power modules installed, or if you are adding a power module to the mainframe.

Turn the mainframe off and disconnect the power cord beforeinstalling or removing power modules. Observe all standard electrostatic discharge precautions before handling electronic components.

Preparation before installation


The screws used for removing the top cover and mounting the module are M3 type screws, so please prepare the corresponding Phillips screwdriver in advance.

Installation Step


Remove the top cover.

Loosen the screws in the locations shown below to remove the top cover.



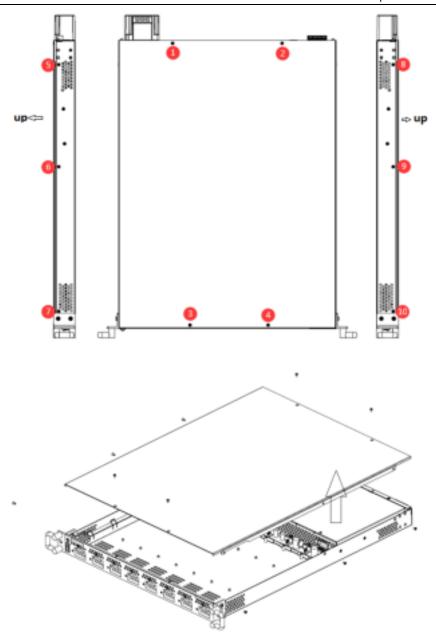


2. Remove the plastic plugs from the terminals corresponding to the module.

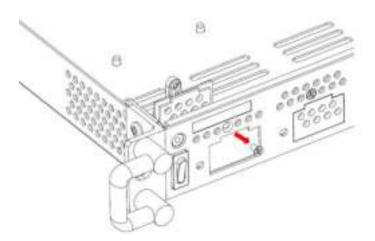


3. Place the power modules into the corresponding slot.




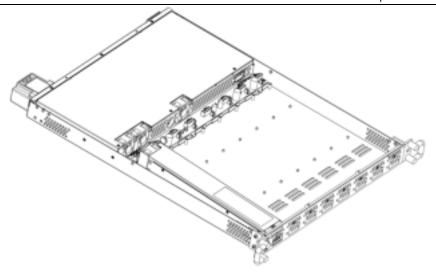

4. Set screws on both ends of the locking module.

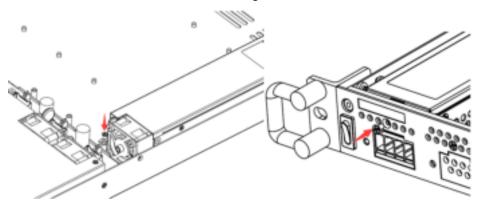


5. Connecting the module wire harness.

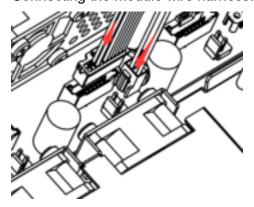

The location of the power modules wire harness connection inside the mainframe determines their front panel output and programming channel assignments. For example, modules installed in channel 1 will be connected to the wire harness for output1 . Modules installed in channel 4 will be connected to the wire harness for output4.

6. Finish the installation. Install the top cover, as shown as below.



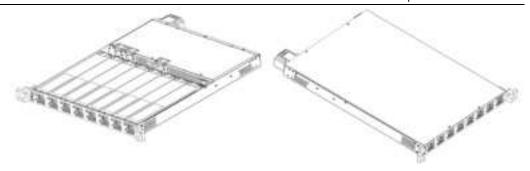


2.4.2 Rack Mounting


Power System can be mounted on a standard 19" rack. ITECH provides user with IT-E157A/IT-E157B mounting rack, as an optional mount kit.


the details of cabinet mounting please refer to the "IT-E157 User Manual".

IT-E157A: Select this kit when the instrument is mounted on the ITECH cabinet.

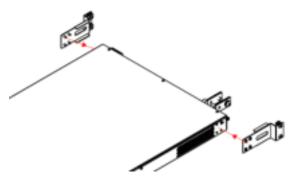

  
The dimensions of the instrument after installation are shown below.








 IT-E157B: Select this kit when the instrument is mounted on another cabinet, this kit can be adjusted to the depth according to the cabinet.

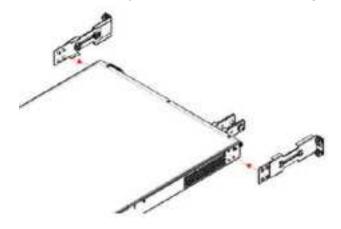

The dimensions of the instrument after installation are shown below.

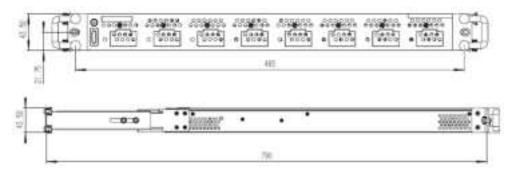

2.5 Connecting the Power Cord

Connect power cord of standard accessories and ensure that the power supply is under normal power supply.

Before connecting the power cord

To prevent electric shock and damage to the instrument, observe the following precautions.

WARNING

- Before connecting power cord, be sure to confirm that the power voltage matches with the rated input voltage of the instrument.
- Before connecting power cord, be sure to switch off the instrument. Verify that there is no dangerous voltage on the connection terminals.
- To avoid fire or electric shock, Make sure to use the power cord supplied by ITECH.
- Be sure to connect the power cord to the AC distribution box with protective grounding. Do not use terminal board without protective grounding.
- Do not use an extended power cord without protective grounding, otherwise the protection function will fail.
- Ensure that the power cord connection terminals are either insulated or covered by the supplied protective cover so that no accidental contact with lethal voltage can occur.



CAUTION


Safety agency requirements dictate that there must be a way to physically disconnect the AC mains cable from the unit. A disconnect device, either a switch or circuit breaker must be provided in the final installation. The disconnect device must be close to the equipment, be easily accessible, and be marked as the disconnect device for this equipment.

Connecting the power cord

The standard power cord specifications for this series is show as follow:



Connecting Method:

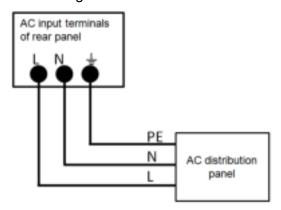

First connect one end of the AC power cord to the AC input terminal on the rear panel of this instrument. When connecting, you need to connect the fire wire, zero wire, and ground wire to the corresponding terminals on the device. Loosen the screws before insertion, and lock the screws after insertion.

Connect the plug on the other end of the power cord to your AC 220V power source. Connect the three terminals brown to line (L), black to neutral (N), and yellow-green to ground (PE) on the other end of the power cord to your AC distribution panel.

AC Power Input Level

The input of this series of instruments only supports single-phase wiring (L/ N/ PE), and the voltage can support $100V\sim380V$, $50\sim60Hz$.

When it is necessary to connect to 380V power supply, users can connect L1/L2/PE or L2/L3/PE in three-phase power supply.

2.6 Connecting Test Lines (Optional)

Test lines are not standard accessories of the instrument. Please select optional red and black test lines for individual sales based on the maximum current value. For specifications of test lines and maximum current values, refer to "Specifications of Red and Black Test Lines" in "Appendix".

Copyright ©ITECH Electronic Co., Ltd.



WARNING

- Before connecting test lines, be sure to switch off the instrument.
 Power switch is in Off position. Otherwise, contact with output terminals in rear panel may cause electrical shock.
- To avoid electrical shock, before testing, please make sure the rating values of the testing lines, and do not measure the current that higher than the rating value. All test lines shall be capable of withstanding the maximum short circuit output current of the power supply without causing overheat.
- If several loads are provided, each pair of load wires shall safely withstand the rated short circuit output current of the power supply under full load.
- Always use test lines provided by ITECH to connect the equipment.
 If test lines from other factories are used, please check that the test line can withstand maximum current.

Specification for Test Cables


Test cables are not standard accessories for the instrument. Please select optional red and black test cables for individual sales based on the maximum current value. For specifications of test cables and maximum current values, refer to A.1 Specifications of Red and Black Test Cables for more information.

Connecting the DUT (Local Measurement)

The instrument supports two kinds of wiring methods with the DUT: local measurement and remote measurement (SENSE). The default test mode is local measurement.

Please confirm that the Remote Sense function in the menu is set to Off, otherwise the instrument will report an error in the present connection mode.

The connection diagram is shown as follow:

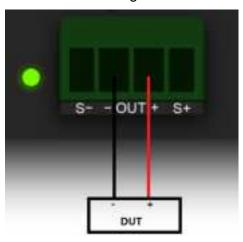

- 1. Confirm that the power switch is in the OFF position and verify that there is no dangerous voltage on the connection terminals.
- 2. Remove the output terminals cover of the power system.



3. Loosen the screws of the output terminals and connect the red and black test cables to the output terminals. Re-tighten the screws.

When maximum current that one test cable can withstand fails to meet the rated current, use multiple pieces of red and black test cables. For example, the maximum current is 1,200A, then 4 pieces of 360A red and black cables are required.

- 4. Thread the red and black test cables through the output terminals cover of the power system and install the cover.
- 5. (Optional) According to the actual situation of DUT, connect the grounding terminal on the front panel of the instrument to the DUT to ensure the safe grounding.
 - For the location information, see 1.2 Front Panel Introduction.
- 6. Connect the other end of the red and black cables to the DUT. The positive and negative poles must be properly connected and fastened when wiring.

Connecting the DUT (Remote Sensing)


Remote measurement is available for the following scenarios:

When the DUT consumes large current or the wires are too long, there is a voltage drop on the wires between DUT and output terminals of the power system.

To maximize measurement accuracy, the power system provides the remote measurement terminals S+ and S- on the rear panel, which can be used to measure the terminal voltage of the DUT.

When the power system is used for battery testing in actual applications, the voltage drop of the wire will lead to voltage inconsistency of both ends and inconsistency of the cutoff voltage of power system and the actual voltage of battery, resulting in inaccurate measurement.

The connection diagram and steps of remote measurement are as follows:

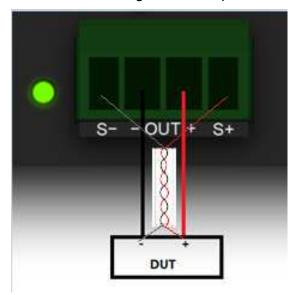

- 1. Confirm that the power switch is in the OFF position and verify that there is no dangerous voltage on the connection terminals.
- 2. Remove the output terminals cover of the power system.



- 3. Refer to the wiring diagram and connect the Vs+ and Vs- with armored twisted-pair cables. Loosen the screws of the output terminals and connect the red and black test cables to the output terminals. Re-tighten the screws.
 - When maximum current that one test cable can withstand fails to meet the rated current, use multiple pieces of red and black test cables. For example, the maximum current is 1,200A, then 4 pieces of 360A red and black cables are required.
- 4. Thread the red and black test cables through the output terminals cover of the power system and install the cover.
- 5. (Optional) According to the actual situation of DUT, connect the grounding terminal on the rear panel of the instrument to the DUT to ensure the safe grounding.
 - For the location information, see 1.2 Front Panel Introduction.
- 6. Connect the other end of the remote sense cables to the DUT.
- 7. Connect the other end of the red and black cables to the DUT. The positive and negative poles must be properly connected and fastened when wiring.
- 8. Power on the instrument and turn on the Sense function of the instrument.



Chapter3 Getting Started

The IT2702 series are instruments without an operator panel and there are two ways for the user to operate the instrument:

PV2700 Demo Software

The PV2700 Demo software is the free host computer software provided with the IT2700 series. Users can install it on the computer and use the software to operate the instrument after connecting the instrument communication.

If the user chooses this operation method, please refer to the PV2700 User Manual for detailed functions and operation methods.

IT2700 Web Control:

This series instrument comes standard with a LAN communication interface, and Web remote control can be realized by through LAN communication.

If users choose this operation method, please refer to the *IT2700 Web Control Manual*.

3.1 Power-on the Instrument

A successful selftest indicates that the purchased power product meets delivery standards and is available for normal usage.

Before operation, please confirm that you have fully understood the safety instructions.

Precautions

To prevent electric shock and damage to the instrument, please observe the following precautions.

WARNING

- Before connecting power cord, be sure to confirm that the power voltage matches with the supply voltage.
- Before connecting power cord, be sure to switch off the instrument.
 Verify that there is no dangerous voltage on the terminals before touching them.
- To avoid fire or electric shock, make sure to use the power cord supplied by ITECH.
- Be sure to connect the main power socket to the power outlet with protective grounding. Do not use terminal board without protective grounding.
- Do not use an extended power cord without protective grounding, otherwise the protection function will fail.
- Ensure that the input electrodes are either insulated or covered using the safety covers provided, so that no accidental contact with lethal voltages can occur.
- If you notice strange sounds, unusual odors, fire, or smoke around or from inside the instrument, flip the POWER switch to the (O) side to



turn the instrument off, or remove the power cord plug from the outlet. The detachable power cord may be used as an emergency disconnecting device. Removing the power cord will disconnect AC input power to the unit.

 
CAUTION

Safety agency requirements dictate that there must be a way to physically disconnect the AC mains cable from the unit. A disconnect device, either a switch or circuit breaker must be provided in the final installation. The disconnect device must be close to the equipment, be easily accessible, and be marked as the disconnect device for this equipment.

Power Switch Introduction

User can press the power switch of IT2700 series instrument directly to turn on or turn off the instrument.

The status of Power switch is as follows.



Turning the POWER Switch On

Check that the power cord is connected properly.

Flip the POWER switch to the (|) side to turn the instrument on. The front panel display will light up after a few seconds. The indicator corresponding to the channel will blink.

Turning the POWER Switch Off

Flip the POWER switch to the (O) side to turn the instrument off.

After you turn the POWER switch off, wait at least 10 seconds after the fan stops before you turn the POWER switch back on.

3.2 Remote Control

This series power system comes standard with three communication interfaces: USB, LAN and CAN, you can choose one of them to communicate with your computer.

3.2.1 USB Interface

Use cables with both USB ends to connect with IT7800 and PC. All functions are programmable over the USB.

The USB488 interface capabilities are described below:

- The interface is 488.2 USB488 interface.
- The interface accepts REN_CONTROL, GO_TO_LOCAL, and



LOCAL LOCKOUT requests.

• The interface accepts MsgID = TRIGGER USBTMC command message and forwards TRIGGER requests to the function layer.

The USB488 device functions are described below:

- The device understands all mandatory SCPI commands.
- The device is SR1 capable.
- The device is RL1 capable.
- The device is DT1 capable.

3.2.2 LAN Interface

When the user connect PC through LAN interface, the following is required to use the LAN interface. The LAN interface complies with the LXI standard.

Under the web control mode, the instrument and computer must communicate through the LAN interface. The default IP address is **192.168.200.100** for the first time, users can use the default IP address.

Connect Interface

Connect the LAN interface of power supply to the computer with a reticle. The gateway address should be consistent with that of the PC, and the IP address should be at the same network segment with the PC's IP address.

For the first time, it is recommended that you first use USB communication to modify the IP address of the instrument by sending commands. You can also directly modify the IP address of your computer and the same network segment of the instrument.

Using Web Server

The instrument has a built-in Web server for monitoring and controlling the instrument through a Web browser in PC.

To use the Web server, connect the instrument and PC over LAN interface and enter the instrument's IP address into the address bar at the top of your PC's Web browser, you can access the front panel control functions including the LAN configuration parameters.

1. The format of the address entered in the address bar of the browser is http:// 192.168.200.100. The specific IP address is subject to the actual instrument settings. The initial IP address is 192.168.200.100. If the IP address has been changed before, you can reset it by pressing the LAN-Reset button on the rear panel.

The opened page is displayed as follows:





You can select different pages by clicking the buttons shown in the navigation bar on the left side of the window. The detailed descriptions are as follows.

- Home: Web home interface, displays the model and appearance of the instrument:
- Information: Displays the serial number of the instrument and more system information as well as LAN configuration parameters;
- Web Control: Enables the Web control to begin controlling the instrument. This page allows you to monitor and control the instrument; For a detailed description of control operations, refer to the corresponding manual IT2700 Web Control Manual.
- LAN Configuration: Reconfigure the LAN parameters;
- Manual: Go to the ITECH official website and view or download the relevant documents.
- Upload: Performs a system upgrade.

Click **CONNECT** to connect the PC with the instrument, then click

Select File to select the system upgrade installation package (for example, IT2700-U-V000.001.029all.itech), and then click **UPLOAD** performs the upgrade operation. After the upgrade is complete, the instrument needs to be restarted.

3.2.3 CAN Interface

The CAN interface is located on the rear panel of the instrument and is connected to the computer using a CAN communication cable.

Definition of CAN Pins

The definition of CAN pins are as follows.


Pins	Description
Н	CAN_H
L	CAN_L




CAN Troubleshooting

If you meet some problems when communicating with PC by CAN interface, please check the following items:

 - PC and the instrument must have the same baud rate.
- Ensure you have used the correct communication cable (CAN_H, CAN_L). Please pay attention that some cable may not have a correct internal wiring even it is with an appropriate plug.
- The interface cable is correctly connected (CAN_H to CAN_H, CAN_L to CAN_L).
- If the communication signal is poor or unstable, it is recommended to con- nect a 120 Ω terminating resistance.
 - The connection diagram of a single device is as below.



The connection diagram of multiple devices is as below.

 



Chapter4 Technical Specifications

This chapter will introduce the main technical parameters of IT7800, such as rated voltage/current/power and so on. Besides, this part will introduce the working environment and storage temperature.



All the below parameters are subject to change without prior notice from ITECH.

4.1 Supplemental characteristics

Recommended calibration frequency: once a year

Cooling style: fans

4.2 Main technical parameters

IT2702 Mainframe Specifications

	Voltage	1-Phase 100V∼380V
AC Input	Frequency	50/60Hz
Maximum input apparent power	2.3kVA	
Maximum input current	12.5	5Aac
Efficiency (1)	95	5%
Power factor	0.	99
DC current Offset	≤0.	2A
ITHD	≤3	3%
Communication interface	USB/LAN/C	AN/digital-IO
Command Response Time	0.1	ms
Max-channel	8	3
Working temperature	0~4	40℃
Storage temperature	-10℃~70℃	
Protection class	IP20	
Isolation (output to ground)	3500)Vdc
Cooling style	fans	



Dimension (mm)	437mm(W)*43.5mm(H)*580mm(D)(Main Frame size) 437mm(W)*43.5mm(H)*648.5mm(D)(include handle and cover)
Weight(net)	9kg

(1) AC current will be limited to 12.5Aac and power limiting may occur at low inputvoltage.Example: AC input voltage is single phase 100Vac, power limit is:P=100Vac*12.5Aac=1250VA

IT2704 Mainframe Specifications

112104 Mailliaille	Opecifications	
AO Immid	Voltage	Single phase 100V∼380V
AC Input	Frequency	50/60Hz
Max. apparent power	1.8kVA	
Max. input current (1)	12.5Aac	
Max. efficiency	9	5%
Power Factor	0	.99
DC component	≤(0.2A
Current harmonics	≤3%	
Standard Interface	USB/LAN/CAN/Digit-IO	
Command Response Time	0.1ms	
Max. Channel		8
Working Temperature	0~	40℃
Storage Temperature	-10℃~70℃	
IP	IP20	
Isolation DC to GND	3500Vdc	
Cooling	Air	
Dimension(mm)	437mm(W)*43.5mm(H)*580mm(D)(Main Frame size) 437mm(W)*43.5mm(H)*648.5mm(D)(include handle and cover)	



Weight(Main Frame)

(1) AC current will be limited to 12.5Aac and power limiting may occur at low input voltage. Example: AC input voltage is single phase 100Vac, power limit is:P=100Vac*12.5Aac=1250VA

IT27134

Model	IT27134 DC power supply	
Rated value	Voltage	0∼30V
	Current	0∼15A
	Power	0∼200W
	Series internal resistance (CV Priority)	0∼1Ω
	Voltage	0.001V
	Current	0.001A
Setup Resolution	Power	0.01W
	Series internal resistance (CV Priority)	0.0001Ω
	Voltage	0.0001V
Read Back Resolution	Current	0.0001A
	Power	0.01W
	Voltage	≤0.02% + 0.02%FS
Setup Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
	Series internal resistance (CV Priority)	≤1%FS
Read Back Accuracy	Voltage	≤0.02% + 0.02%FS
	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
Voltage ripple ⁽¹⁾	Vpeak	≤30mVpp
	Vrms	≤5mV
Setup Temperature	Voltage	≤20ppm/ °C



		iecinical Specifications
Coefficient	Current	≤30ppm /°C
Read Back Temperature	Voltage	≤20 ppm/℃
Coefficient	Current	≤30ppm/ ℃
Rise Time(no load)	Voltage	≤10ms
Rise Time(full load)	Voltage	≤20ms
Fall Time(no load)	Voltage	≤0.5s
Fall Time(full load)	Voltage	≤50ms
Transient Response Time (2)	Voltage	≤1ms
	Voltage	≤0.005% + 0.005%FS
Line Regulation	Current	≤0.015% + 0.015%FS
	Voltage (3)	≤0.005% + 0.005%FS
Load Regulation	Current	≤0.015% + 0.015%FS
	OCP	15.3A
Output protection	OVP	30.6V
	OPP	204W
Remote Sense Compensation Voltage	≤3V	
Isolation DC to GND	800Vdc	
Working Temperature	0~40℃	
Storage Temperature	-10℃~70℃	
IP	IP20	
Cooling	Air	
Dimension (mm)	320mm*50mm*40mm	
Weight(net)	0.6kg	

- (1) Ripple peak and RMS doubled for voltages 0.5V and below
- (2) 10% rated current to 90% rated current
- (3) Under sense mode
- (4) Voltage rise time from 10% to 90% of rated voltage and voltage fall time from 90% to 10% of rated voltage



IT27135

Model	IT27135 DC power supply	
Rated value	Voltage	0∼60V
	Current	0∼10A
	Power	0∼200W
	Series internal resistance (CV Priority)	0∼1Ω
	Voltage	0.001V
	Current	0.001A
Setup Resolution	Power	0.01W
	Series internal resistance (CV Priority)	0.0001Ω
	Voltage	0.0001V
Read Back Resolution	Current	0.0001A
	Power	0.01W
	Voltage	≤0.02% + 0.02%FS
	Current	≤0.05% + 0.05%FS
Setup Accuracy	Power	≤0.1% + 0.2%FS
	Series internal resistance (CV Priority)	≤1%FS
	Voltage	≤0.02% + 0.02%FS
Read Back Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
V-14(1)	Vpeak	≤60mVpp
Voltage ripple (1)	Vrms	≤10mV
Setup Temperature	Voltage	≤20 ppm/℃
Coefficient	Current	≤30ppm/°C
Read Back Temperature	Voltage	≤20 ppm/℃
Coefficient	Current	≤30ppm/°C
Rise Time(no load)	Voltage	≤10ms
Rise Time(full load)	Voltage	≤20ms



		.
Fall Time(no load)	Voltage	≤0.5s
Fall Time(full load)	Voltage	≤50ms
Transient Response	Voltage	≤1ms
Time 2	Voltage	≤0.005% + 0.005%FS
Line Regulation	Current	≤0.015% + 0.015%FS
	Voltage ⁽³⁾	≤0.005% + 0.005%FS
Load Regulation	Current	≤0.015% + 0.015%FS
	OCP	10.2A
Output protection	OVP	61.2V
	OPP	204W
Remote Sense Compensation Voltage	≤6V	
Isolation DC to GND	800Vdc	
Working Temperature	0~40℃	
Storage Temperature	-10℃~70℃	
IP	IP20	
Cooling	Air	
Dimension (mm)	320mm*50mm*40mm	
Weight(net)	0.6kg	

- (1) Ripple peak and RMS doubled for voltages 0.5V and below
- (2) 10% rated current to 90% rated current
- (3) Under sense mode
- (4) Voltage rise time from 10% to 90% of rated voltage and voltage fall time from 90% to 10% of rated voltage

IT27137

Model	IT27137 DC power supply	
Rated value	Voltage	0∼150V
	Current	0∼5A
	Power	0∼200W

32



Series internal resistance (CV Priority)	0∼1Ω
Voltage	0.01V
Current	0.001A
Power	0.01W
Series internal resistance (CV Priority)	0.0001Ω
Voltage	0.0001V
Current	0.0001A
Power	0.01W
Voltage	≤0.02% + 0.02%FS
Current	≤0.05% + 0.05%FS
Power	≤0.1% + 0.2%FS
Series internal resistance (CV Priority)	≤1%FS
Voltage	≤0.02% + 0.02%FS
Current	≤0.05% + 0.05%FS
Power	≤0.1% + 0.2%FS
Vpeak	≤150mVpp
Vrms	≤30mV
Voltage	≤20 ppm/℃
Current	≤30ppm/°C
Voltage	≤20 ppm/℃
Current	≤ 3 0ppm/℃
Voltage	≤10ms
Voltage	≤20ms
Voltage	≤0.5s
Voltage	≤50ms
Voltage	≤1ms
Voltage	≤0.005% + 0.005%FS
	Voltage Current Power Series internal resistance (CV Priority) Voltage Current Power Voltage Current Power Series internal resistance (CV Priority) Voltage Current Power Voltage Current Voltage Current Voltage Current Voltage Current Voltage



	Current	≤0.015% + 0.015%FS
Load Regulation	Voltage (3)	≤0.005% + 0.005%FS
	Current	≤0.015% + 0.015%FS
	OCP	5.1A
Output protection	OVP	153V
	OPP	204W
Remote Sense Compensation Voltage	≤15V	
Isolation DC to GND	800Vdc	
Working Temperature	0~40℃	
Storage Temperature	-10℃~70℃	
IP	IP20	
Cooling	Air	
Dimension (mm)	320mm*50mm*40mm	
Weight(net)	0.6kg	

- (1) Ripple peak and RMS doubled for voltages 0.5V and below
- (2) 10% rated current to 90% rated current
- (3) Under sense mode
- (4) Voltage rise time from 10% to 90% of rated voltage and voltage fall time from 90% to 10% of rated voltage

IT27154

Model	IT27154 DC power supply	
Rated value	Voltage	0∼30V
	Current	0~30A
	Power	0∼500W
	Series internal resistance (CV Priority)	0∼1Ω
Setup Resolution	Voltage	0.001V
	Current	0.001A
	Power	0.01W
	Series internal resistance (CV Priority)	0.0001Ω
Read Back Resolution	Voltage	0.0001V



	_	Technical Specifications
	Current	0.0001A
	Power	0.01W
	Voltage	≤0.02% + 0.02%FS
	Current	≤0.05% + 0.05%FS
Setup Accuracy	Power	≤0.1% + 0.2%FS
	Series internal resistance (CV Priority)	≤1%FS
	Voltage	≤0.02% + 0.02%FS
Read Back Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
(4)	Vpeak	≤30mVpp
Voltage ripple (1)	Vrms	≤5mV
Setup Temperature	Voltage	≤20 ppm/℃
Coefficient	Current	≤30 ppm/°C
Read Back Temperature	Voltage	≤20 ppm/°C
Coefficient	Current	≤30ppm/°C
Rise Time(no load)	Voltage	≤10ms
Rise Time(full load)	Voltage	≤20ms
Fall Time(no load)	Voltage	≤0.5s
Fall Time(full load)	Voltage	≤50ms
Transient Response	Voltage	≤1ms
	Voltage	≤0.005% + 0.005%FS
Line Regulation	Current	≤0.015% + 0.015%FS
Load Regulation	Voltage (3)	≤0.005% + 0.005%FS
	Current	≤0.015% + 0.015%FS
	OCP	30.6A
Output protection	OVP	30.6V
	OPP	510W



Remote Sense Compensation Voltage	≤3V
Isolation DC to GND	800Vdc
Working Temperature	0~40°C
Storage Temperature	-10℃~70℃
IP	IP20
Cooling	Air
Dimension (mm)	320mm*100mm*40mm
Weight(net)	1.0kg

- (1) Ripple peak and RMS doubled for voltages 0.5V and below
- (2) 10% rated current to 90% rated current
- (3) Under sense mode
- (4) Voltage rise time from 10% to 90% of rated voltage and voltage fall time from 90% to 10% of rated voltage

Model	IT27155 DC power supply	
	Voltage	0∼60V
	Current	0∼20A
Rated value	Power	0∼500W
	Series internal resistance (CV Priority)	0∼1Ω
	Voltage	0.001V
	Current	0.001A
Setup Resolution	Power	0.01W
	Series internal resistance (CV Priority)	0.0001Ω
	Voltage	0.0001V
Read Back Resolution	Current	0.0001A
	Power	0.01W
	Voltage	≤0.02% + 0.02%FS
Setup Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS



Technical Specifica		
	Series internal resistance (CV Priority)	≤1%FS
	Voltage	≤0.02% + 0.02%FS
Read Back Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
Voltage ripple (1)	Vpeak	≤60mVpp
voltage ripple	Vrms	≤10mV
Setup Temperature	Voltage	≤20ppm/ °C
Coefficient	Current	≤30ppm/ ℃
Read Back Temperature	Voltage	≤20ppm/℃
Coefficient	Current	≤30ppm/ ℃
Rise Time(no load)	Voltage	≤10ms
Rise Time(full load)	Voltage	≤20ms
Fall Time(no load)	Voltage	≤0.5s
Fall Time(full load)	Voltage	≤50ms
Transient Response Time (2)	Voltage	≤1ms
	Voltage	≤0.005% + 0.005%FS
Line Regulation	Current	≤0.015% + 0.015%FS
	Voltage (3)	≤0.005% + 0.005%FS
Load Regulation	Current	≤0.015% + 0.015%FS
	OCP	20.4A
Output protection	OVP	61.2V
	OPP	510W
Remote Sense Compensation Voltage	≤6V	
Isolation DC to GND	800Vdc	
Working Temperature	0~40℃	
Storage Temperature	-10℃~70℃	
IP	IP20	



Cooling	Air	
Dimension (mm)	320mm*100mm*40mm	
Weight(net)	1.0kg	

- (1) Ripple peak and RMS doubled for voltages 0.5V and below
- (2) 10% rated current to 90% rated current
- (3) Under sense mode
- (4) Voltage rise time from 10% to 90% of rated voltage and voltage fall time from 90% to 10% of rated voltage

Model	IT27157 DC power supply	
	Voltage	0∼150V
	Current	0∼10A
Rated value	Power	0∼500W
	Series internal resistance (CV Priority)	0∼1Ω
	Voltage	0.01V
	Current	0.001A
Setup Resolution	Power	0.01W
	Series internal resistance (CV Priority)	0.0001Ω
	Voltage	0.0001V
Read Back Resolution	Current	0.0001A
	Power	0.01W
	Voltage	≤0.02% + 0.02%FS
	Current	≤0.05% + 0.05%FS
Setup Accuracy	Power	≤0.1% + 0.2%FS
	Series internal resistance (CV Priority)	≤1%FS
	Voltage	≤0.02% + 0.02%FS
Read Back Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
Malkana atau La (4)	Vpeak	≤150mVpp
Voltage ripple (1)	Vrms	≤30mV



1		reclinical Specifications
Setup Temperature	Voltage	≤20ppm/ °C
Coefficient	Current	≤30ppm/°C
Read Back Temperature	Voltage	≤20ppm/ °C
Coefficient	Current	≤30ppm/°C
Rise Time(no load)	Voltage	≤10ms
Rise Time(full load)	Voltage	≤20ms
Fall Time(no load)	Voltage	≤0.5s
Fall Time(full load)	Voltage	≤50ms
Transient Response Time (2)	Voltage	≤1ms
	Voltage	≤0.005% + 0.005%FS
Line Regulation	Current	≤0.015% + 0.015%FS
	Voltage ⁽³⁾	≤0.005% + 0.005%FS
Load Regulation	Current	≤0.015% + 0.015%FS
	OCP	10.2A
Output protection	OVP	153V
	OPP	510W
Remote Sense Compensation Voltage	≤15V	
Isolation DC to GND	800Vdc	
Working Temperature	0~40°C	
Storage Temperature	-10℃~70℃	
IP	IP20	
Cooling	Air	
Dimension (mm)	320mm*100mm*40mm	
Weight(net)	1.0kg	

- (1) Ripple peak and RMS doubled for voltages 0.5V and below
- (2) 10% rated current to 90% rated current
- (3) Under sense mode
- (4) Voltage rise time from 10% to 90% of rated voltage and voltage fall time from 90% to 10% of rated voltage



Model	IT27334 Bidirectional DC power supply	
	Voltage	0∼30V
	Current	-15A∼15A
	Power	-200W~200W
Rated value -	Series internal resistance (CV Priority)	0~1Ω
	Load internal resistance (CC Priority)	0.02Ω~200Ω
	MOV (Sink mode)	0.3V at 15A
	Voltage	0.001V
	Current	0.001A
Setup Resolution	Power	0.01W
	Series internal resistance (CV Priority)	0.0001Ω
	Load internal resistance (CC Priority)	0.01Ω
	Voltage	0.0001V
Read Back Resolution	Current	0.0001A
	Power	0.01W
	Voltage	≤0.02% + 0.02%FS
	Current	≤0.05% + 0.05%FS
Setup Accuracy	Power	≤0.1% + 0.2%FS
	Series internal resistance (CV Priority)	≤1%FS
	Load internal resistance (CC Priority) (1)	(Vin/Rset)*0.5%+0.5%FS
	Voltage	≤0.02% + 0.02%FS
Read Back Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
Voltage ripple (2)	Vpeak	≤30mVpp
	Vrms	≤5mV
Setup Temperature	Voltage	≤20 ppm/℃
Coefficient	Current	≤30ppm/°C



		Technical Specification
Read Back Temperature	Voltage	≤20ppm /°C
Coefficient	Current	≤30 ppm/℃
Rise Time(no load)	Voltage	≤10ms
Rise Time(full load)	Voltage	≤20ms
Fall Time(no load)	Voltage	≤10ms
Fall Time(full load)	Voltage	≤10ms
Transient Response Time	Voltage	≤1ms
	Voltage	≤0.005% + 0.005%FS
Line Regulation ——	Current	≤0.015% + 0.015%FS
Lord Degulation	Voltage (4)	≤0.005% + 0.005%FS
Load Regulation	Current	≤0.015% + 0.015%FS
	OCP	-15.3A or 15.3A
Output protection	OVP	30.6V
	OPP	-204W or 204W
Remote Sense Compensation Voltage	≤3∨	
Isolation DC to GND	800Vdc	
Working Temperature	0~40℃	
Storage Temperature	-10℃~70℃	
IP	IP20	
Cooling	Air	
Dimension (mm)	320mm*50mm*40mm	
Weight(net)	0.6kg	

- (1) The voltage/current input is no less than 10%FS.
- (2) Ripple peak and RMS doubled for voltages 0.5V and below
- (3) 10% rated current to 90% rated current
- (4) Under sense mode
- (5) Voltage rise time from 10% to 90% of rated voltage and voltage fall time from 90% to 10% of rated voltage



Model	IT27335 Bidirectional DC power supply	
	Voltage	0∼60V
	Current	-10A∼10A
	Power	-200W~200W
Rated value	Series internal resistance (CV Priority)	0∼1Ω
	Load internal resistance (CC Priority)	$0.06\Omega{\sim}600\Omega$
	Min. operating voltage (Sink mode)	0.6V at 10A
	Voltage	0.001V
	Current	0.001A
Setup Resolution	Power	0.01W
	Series internal resistance (CV Priority)	0.0001Ω
	Load internal resistance (CC Priority)	0.01Ω
	Voltage	0.0001V
Read Back Resolution	Current	0.0001A
	Power	0.01W
	Voltage	≤0.02% + 0.02%FS
	Current	≤0.05% + 0.05%FS
Setup Accuracy	Power	≤0.1% + 0.2%FS
	Series internal resistance (CV Priority)	≤1%FS
	Load internal resistance (CC Priority) (1)	(Vin/Rset)*0.5%+0.5%FS
	Voltage	≤0.02% + 0.02%FS
Read Back Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
(1)	Vpeak	≤60mVpp
Voltage ripple ⁽²⁾	Vrms	≤10mV
Setup Temperature	Voltage	≤20ppm /℃
Coefficient	Current	≤30ppm /℃



		reclinical Specification
Read Back Temperature	Voltage	≤20ppm /℃
Coefficient	Current	≤30 ppm/℃
Rise Time(no load)	Voltage	≤10ms
Rise Time(full load)	Voltage	≤20ms
Fall Time(no load)	Voltage	≤10ms
Fall Time(full load)	Voltage	≤10ms
Transient Response Time	Voltage	≤1ms
	Voltage	≤0.005% + 0.005%FS
Line Regulation ———	Current	≤0.015% + 0.015%FS
Lood Dogwleties	Voltage (4)	≤0.005% + 0.005%FS
Load Regulation ———	Current	≤0.015% + 0.015%FS
	OCP	-10.2A or 10.2A
Output protection	OVP	61.2V
	OPP	-204W or 204W
Remote Sense Compensation Voltage	≤6V	
Isolation DC to GND	800Vdc	
Working Temperature	0~40℃	
Storage Temperature	-10℃~70℃	
IP	IP20	
Cooling	Air	
Dimension (mm)	320mm*50mm*40mm	
Weight(net)	0.6kg	

- (1) The voltage/current input is no less than 10%FS.
- (2) Ripple peak and RMS doubled for voltages 0.5V and below
- (3) 10% rated current to 90% rated current
- (4) Under sense mode
- (5) Voltage rise time from 10% to 90% of rated voltage and voltage fall time from 90% to 10% of rated voltage



Model	IT27337 Bidirectional DC power supply	
	Voltage	0∼150V
	Current	-5A∼5A
	Power	-200W~200W
Rated value	Series internal resistance (CV Priority)	0∼1Ω
	Load internal resistance (CC Priority)	0.3Ω~3000Ω
	Min. operating voltage (Sink mode)	1.5V at 5A
	Voltage	0.01V
	Current	0.001A
Setup Resolution	Power	0.01W
	Series internal resistance (CV Priority)	0.0001Ω
	Load internal resistance (CC Priority)	0.01Ω
	Voltage	0.0001V
Read Back Resolution	Current	0.0001A
	Power	0.01W
	Voltage	≤0.02% + 0.02%FS
	Current	≤0.05% + 0.05%FS
Setup Accuracy	Power	≤0.1% + 0.2%FS
	Series internal resistance (CV Priority)	≤1%FS
	Load internal resistance (CC Priority) (1)	(Vin/Rset)*0.5%+0.5%FS
	Voltage	≤0.02% + 0.02%FS
Read Back Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
Voltage ripple ⁽²⁾	Vpeak	≤150mVpp
	Vrms	≤30mV
Setup Temperature	Voltage	≤20ppm /°C
Coefficient	Current	≤30ppm/ ℃



Read Back Temperature	Voltage	≤20ppm /°C
Coefficient	Current	≤30 ppm/℃
Rise Time(no load)	Voltage	≤10ms
Rise Time(full load)	Voltage	≤20ms
Fall Time(no load)	Voltage	≤10ms
Fall Time(full load)	Voltage	≤10ms
Transient Response Time	Voltage	≤1ms
	Voltage	≤0.005% + 0.005%FS
Line Regulation ——	Current	≤0.015% + 0.015%FS
	Voltage (4)	≤0.005% + 0.005%FS
Load Regulation ——	Current	≤0.015% + 0.015%FS
	OCP	-5.1A or 5.1A
Output protection	OVP	153V
	OPP	-204W or 204W
Remote Sense Compensation Voltage	≤15V	
Isolation DC to GND	800Vdc	
Working Temperature	0~40°C	
Storage Temperature	-10℃~70℃	
IP	IP20	
Cooling	Air	
Dimension (mm)	320mm*50mm*40mm	
Weight(net)	0.6kg	

- (1) The voltage/current input is no less than 10%FS.
- (2) Ripple peak and RMS doubled for voltages 0.5V and below
- (3) 10% rated current to 90% rated current
- (4) Under sense mode
- (5) Voltage rise time from 10% to 90% of rated voltage and voltage fall time from 90% to 10% of rated voltage



Model	IT27354 Bidirectional DC power supply	
	Voltage	0∼30V
	Current	-30A∼30A
	Power	-500W~500W
Rated value	Series internal resistance (CV Priority)	0∼1Ω
	Load internal resistance (CC Priority)	0.01Ω~100Ω
	Min. operating voltage (Sink mode)	0.3V at 30A
	Voltage	0.001V
	Current	0.001A
Setup Resolution	Power	0.01W
	Series internal resistance (CV Priority)	0.0001Ω
	Load internal resistance (CC Priority)	0.01Ω
	Voltage	0.0001V
Read Back Resolution	Current	0.0001A
	Power	0.01W
	Voltage	≤0.02% + 0.02%FS
	Current	≤0.05% + 0.05%FS
Setup Accuracy	Power	≤0.1% + 0.2%FS
	Series internal resistance (CV Priority)	≤1%FS
	Load internal resistance (CC Priority) (1)	(Vin/Rset)*0.5%+0.5%FS
	Voltage	≤0.02% + 0.02%FS
Read Back Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
Voltage ripple (2)	Vpeak	≤30mVpp
Voltage ripple (2)	Vrms	≤5mV
Setup Temperature	Voltage	≤20ppm /℃
Coefficient	Current	≤30ppm /℃



		recrifical Specification
Read Back Temperature	Voltage	≤20ppm /°C
Coefficient	Current	≤30ppm/°C
Rise Time(no load)	Voltage	≤10ms
Rise Time(full load)	Voltage	≤20ms
Fall Time(no load)	Voltage	≤10ms
Fall Time(full load)	Voltage	≤10ms
Transient Response Time	Voltage	≤1ms
	Voltage	≤0.005% + 0.005%FS
Line Regulation ———	Current	≤0.015% + 0.015%FS
	Voltage (4)	≤0.005% + 0.005%FS
Load Regulation ———	Current	≤0.015% + 0.015%FS
	OCP	-30.6A or 30.6A
Output protection	OVP	30.6V
	OPP	-510W or 510W
Remote Sense Compensation Voltage	≤3V	
Isolation DC to GND	800Vdc	
Working Temperature	0~40℃	
Storage Temperature	-10℃~70℃	
IP	IP20	
Cooling	Air	
Dimension (mm)	320mm*100mm*40mm	
Weight(net)	1.0kg	

- (1) The voltage/current input is no less than 10%FS.
- (2) Ripple peak and RMS doubled for voltages 0.5V and below
- (3) 10% rated current to 90% rated current
- (4) Under sense mode
- (5) Voltage rise time from 10% to 90% of rated voltage and voltage fall time from 90% to 10% of rated voltage



Model	IT27355 Bidirectional DC power supply	
	Voltage	0∼60V
	Current	-20A∼20A
	Power	-500W~500W
Rated value	Series internal resistance (CV Priority)	0~1Ω
	Load internal resistance (CC Priority)	0.03Ω~300Ω
	Min. operating voltage (Sink mode)	0.6V at 20A
	Voltage	0.001V
	Current	0.001A
Setup Resolution	Power	0.01W
	Series internal resistance (CV Priority)	0.0001Ω
	Load internal resistance (CC Priority)	0.01Ω
	Voltage	0.0001V
Read Back Resolution	Current	0.0001A
	Power	0.01W
	Voltage	≤0.02% + 0.02%FS
	Current	≤0.05% + 0.05%FS
Setup Accuracy	Power	≤0.1% + 0.2%FS
	Series internal resistance (CV Priority)	≤1%FS
	Load internal resistance (CC Priority) (1)	(Vin/Rset)*0.5%+0.5%FS
	Voltage	≤0.02% + 0.02%FS
Read Back Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
Voltage ripple (2)	Vpeak	≤60mVpp
voltage ripple -	Vrms	≤10mV
Setup Temperature	Voltage	≤20ppm/ °C
Coefficient	Current	≤30ppm/ ℃



		<u> </u>
Read Back Temperature	Voltage	≤20ppm /℃
Coefficient	Current	≤30ppm /°C
Rise Time(no load)	Voltage	≤10ms
Rise Time(full load)	Voltage	≤20ms
Fall Time(no load)	Voltage	≤10ms
Fall Time(full load)	Voltage	≤10ms
Transient Response Time	Voltage	≤1ms
Line Downleifer	Voltage	≤0.005% + 0.005%FS
Line Regulation ———	Current	≤0.015% + 0.015%FS
Land Damidation	Voltage (4)	≤0.005% + 0.005%FS
Load Regulation ———	Current	≤0.015% + 0.015%FS
	OCP	-20.4A or 20.4A
Output protection	OVP	61.2V
	OPP	-510W or 510W
Remote Sense Compensation Voltage	≤6V	
Isolation DC to GND	800Vdc	
Working Temperature	0~40°C	
Storage Temperature	-10℃~70℃	
IP	IP20	
Cooling	Air	
Dimension (mm)	320mm*100mm*40mm	
Weight(net)	1.0kg	

- (1) The voltage/current input is no less than 10%FS.
- (2) Ripple peak and RMS doubled for voltages 0.5V and below
- (3) 10% rated current to 90% rated current
- (4) Under sense mode
- (5) Voltage rise time from 10% to 90% of rated voltage and voltage fall time from 90% to 10% of rated voltage



Model	IT27357 Bidirectional DC power supply	
	Voltage	0∼150V
	Current	-10A∼10A
	Power	-500W~500W
Rated value	Series internal resistance (CV Priority)	0~1Ω
	Load internal resistance (CC Priority)	0.15Ω~1500Ω
	Min. operating voltage (Sink mode)	1.5V at 10A
	Voltage	0.01V
	Current	0.001A
Setup Resolution	Power	0.01W
	Series internal resistance (CV Priority)	0.0001Ω
	Load internal resistance (CC Priority)	0.01Ω
	Voltage	0.0001V
Read Back Resolution	Current	0.0001A
	Power	0.01W
	Voltage	≤0.02% + 0.02%FS
	Current	≤0.05% + 0.05%FS
Setup Accuracy	Power	≤0.1% + 0.2%FS
	Series internal resistance (CV Priority)	≤1%FS
	Load internal resistance (CC Priority) (1)	(Vin/Rset)*0.5%+0.5%FS
	Voltage	≤0.02% + 0.02%FS
Read Back Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
V-14(2)	Vpeak	≤150mVpp
Voltage ripple (2)	Vrms	≤30mV
Setup Temperature	Voltage	≤20ppm/ ℃
Coefficient	Current	≤30ppm/°C



		Technical Specification
Read Back Temperature	Voltage	≤20ppm /°C
Coefficient	Current	≤30 ppm/℃
Rise Time(no load)	Voltage	≤10ms
Rise Time(full load)	Voltage	≤20ms
Fall Time(no load)	Voltage	≤10ms
Fall Time(full load)	Voltage	≤10ms
Transient Response Time	Voltage	≤1ms
5	Voltage	≤0.005% + 0.005%FS
Line Regulation ——	Current	≤0.015% + 0.015%FS
Load Degulation	Voltage (4)	≤0.005% + 0.005%FS
Load Regulation	Current	≤0.015% + 0.015%FS
	OCP	-10.2A or 10.2A
Output protection	OVP	153V
	OPP	-510W or 510W
Remote Sense Compensation Voltage	≤15V	
Isolation DC to GND	800Vdc	
Working Temperature	0~40℃	
Storage Temperature	-10℃~70℃	
IP	IP20	
Cooling	Air	
Dimension (mm)	320mm*100mm*40mm	
Weight(net)	1.0kg	

- (1) The voltage/current input is no less than 10%FS.
- (2) Ripple peak and RMS doubled for voltages 0.5V and below
- (3) 10% rated current to 90% rated current
- (4) Under sense mode
- (5) Voltage rise time from 10% to 90% of rated voltage and voltage fall time from 90% to 10% of rated voltage



Model	IT27534 Programmable DC Load	
	Voltage	0.03V~30V
	Current	0∼15A
	Power	0~200W
Rated value	Resistance	0.02Ω~200Ω
rtates raise	Min. operating voltage	0.3V at 15A
	Input leakage current	0.001A
	Voltage	0.001V
Setup Resolution	Current	0.001A
Octup (Coolution	Power	0.01W
	Resistance	0.01Ω
Read Back	Voltage	0.0001V
Read Back Resolution	Current	0.0001A
Nesolution	Power	0.01W
	Voltage	≤0.02% + 0.02%FS
0-4 4	Current	≤0.05% + 0.05%FS
Setup Accuracy	Power	≤0.1% + 0.2%FS
	Resistance (1)	(Vin/Rset)*0.5%+0.5%FS
	Voltage	≤0.02% + 0.02%FS
Read Back Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
Setup Temperature	Voltage	≤20ppm /°C
Coefficient	Current	≤30ppm /°C
Read Back Temperature	Voltage	≤20ppm /°C
Coefficient	Current	≤30ppm /°C
0	Rising slope	15A/ms
Current Slope	Falling slope	15A/ms
1: 5 1:	Voltage	≤0.005% + 0.005%FS
Line Regulation	Current	≤0.015% + 0.015%FS
Land Day 1.5	Voltage (2)	≤0.005% + 0.005%FS
Load Regulation	Current	≤0.015% + 0.015%FS
Isc	Current	15.75A
In mark 12 12 4 2 4 4	OCP	15.3A
Input protection	OVP	30.6V



	OPP	204W
Input OVP		31.5V
Remote Sense		
Compensation		≤3V
Voltage		
Isolation DC to GND		800Vdc
Working Temperature		0~40℃
Storage Temperature		-10℃~70℃
IP		IP20
Cooling		Air
Dimension (mm)	320	0mm*50mm*40mm
Weight(net)		0.6kg

- (1) The voltage/current input is not less than 10%FS.
- (2) Under sense mode

Model	IT27535 Programmable DC Load	
	Voltage	0.06V~60V
	Current	0∼10A
	Power	0∼200W
Rated value	Resistance	0.06Ω~600Ω
	Min. operating	0.6V at 10A
	voltage	o.ov at 10A
	Input leakage	0.001A
	current	0.00 17 (
	Voltage	0.001V
Setup Resolution	Current	0.001A
Cotap i toosiation	Power	0.01W
	Resistance	0.01Ω
Read Back	Voltage	0.0001V
Resolution	Current	0.0001A
	Power	0.01W
	Voltage	≤0.02% + 0.02%FS
Setup Accuracy	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
	Resistance (1)	(Vin/Rset)*0.5%+0.5%FS
Read Back Accuracy	Voltage	≤0.02% + 0.02%FS



	Current	≤0.05% + 0.05%FS
	Power	≤0.1% + 0.2%FS
Setup Temperature	Voltage	≤20ppm/°C
Coefficient	Current	≤30ppm/°C
Read Back Temperature	Voltage	≤20ppm/°C
Coefficient	Current	≤30ppm/°C
Current Slope	Rising slope	10A/ms
Current Slope	Falling slope	10A/ms
Line Regulation	Voltage	≤0.005% + 0.005%FS
Line Negulation	Current	≤0.015% + 0.015%FS
Load Regulation	Voltage (2)	≤0.005% + 0.005%FS
Load Negulation	Current	≤0.015% + 0.015%FS
Isc	Current	10.5A
	OCP	10.2A
Input protection	OVP	61.2V
	OPP	204W
Input OVP		63V
Remote Sense		
Compensation		≤6V
Voltage		
Isolation DC to GND	800Vdc	
Working Temperature	0~40℃	
Storage Temperature	-10℃~70℃	
IP	IP20	
Cooling	Air	
Dimension (mm)	320mm*50mm*40mm	
Weight(net)	0.6kg	

- (1) The voltage/current input is not less than 10%FS.
- (2) Under sense mode

Model	IT27537 Programmable DC Load	
	Voltage	0.150V∼150V
	Current	0∼5A
Rated value	Power	0∼200W
	Resistance	0.3Ω~3000Ω



, itean		Technical Speci		
	Min. operating voltage	1.5V at 5A		
	Input leakage current	0.001A		
	Voltage	0.01V		
	Current	0.001A		
Setup Resolution	Power	0.01W		
	Resistance	0.01Ω		
	Voltage	0.0001V		
Read Back Resolution	Current	0.0001A		
Resolution	Power	0.01W		
	Voltage	≤0.02% + 0.02%FS		
	Current	≤0.05% + 0.05%FS		
Setup Accuracy	Power	≤0.1% + 0.2%FS		
	Resistance ⁽¹⁾	(Vin/Rset)*0.5%+0.5%FS		
	Voltage	≤0.02% + 0.02%FS		
Read Back Accuracy	Current	≤0.05% + 0.05%FS		
	Power	≤0.1% + 0.2%FS		
Setup Temperature -	Voltage	≤20 ppm/℃		
Coefficient	Current	≤30ppm/℃		
David David Tamananahan	Voltage	≤20ppm/°C		
Read Back Temperature - Coefficient	Current	≤30ppm/°C		
	Rising slope	5A/ms		
Current Slope	Falling slope	5A/ms		
	Voltage	≤0.005% + 0.005%FS		
Line Regulation	Current	≤0.015% + 0.015%FS		
	Voltage (2)	≤0.005% + 0.005%FS		
Load Regulation	Current	≤0.015% + 0.015%FS		
Isc	Current	5.25A		
Input protection	OCP	5.1A		



	OVP	153V		
	OPP	204W		
Input OVP		156V		
Remote Sense Compensation Voltage		≤15V		
Isolation DC to GND		800Vdc		
Working Temperature	0~40℃			
Storage Temperature		-10℃~70℃		
IP		IP20		
Cooling		Air		
Dimension (mm)	320	0mm*50mm*40mm		
Weight(net)		0.6kg		

- (1) The voltage/current input is not less than 10%FS.
- (2) Under sense mode

Model	IT27554 Programmable DC Load					
	Voltage	0.03V~30V				
	Current	0∼30A				
	Power	0∼500W				
Rated value	Resistance	0.01Ω~100Ω				
	Min. operating voltage	0.3V at 30A				
	Input leakage current	0.001A				
	Voltage	0.001V				
	Current	0.001A				
Setup Resolution	Power	0.01W				
	Resistance	0.01Ω				
Read Back	Voltage	0.0001V				



		Technical Spe			
Resolution	Current	0.0001A			
	Power	0.01W			
	Voltage	≤0.02% + 0.02%FS			
	Current	≤0.05% + 0.05%FS			
Setup Accuracy	Power	≤0.1% + 0.2%FS			
	Resistance (1)	(Vin/Rset)*0.5%+0.5%FS			
	Voltage	≤0.02% + 0.02%FS			
Read Back Accuracy	Current	≤0.05% + 0.05%FS			
	Power	≤0.1% + 0.2%FS			
Setup Temperature	Voltage	≤20ppm/ °C			
Coefficient	Current	≤30ppm/ °C			
Read Back Temperature	Voltage	≤20ppm/ °C			
Coefficient	Current	≤30ppm/°C			
	Rising slope	30A/ms			
Current Slope	Falling slope	30A/ms			
	Voltage	≤0.005% + 0.005%FS			
Line Regulation	Current	≤0.015% + 0.015%FS			
	Voltage (2)	≤0.005% + 0.005%FS			
Load Regulation	Current	≤0.015% + 0.015%FS			
Isc	Current	31.5A			
	OCP	30.6A			
Input protection	OVP	30.6V			
	OPP	510W			
Input OVP		31.5V			
Remote Sense Compensation Voltage	≤3V				
Isolation DC to GND		800Vdc			
Working Temperature	0~40℃				
Storage Temperature	-10℃∼70℃				



IP	IP20
Cooling	Air
Dimension (mm)	320mm*100mm*40mm
Weight(net)	1.0kg

- (1) The voltage/current input is not less than 10%FS.
- (2) Under sense mode

127333						
Model	IT27555 Programmable DC Load					
	Voltage	0.06V∼60V				
	Current	0~20A				
	Power	0∼500W				
Rated value	Resistance	$0.03\Omega{\sim}300\Omega$				
	Min. operating voltage	0.6V at 20A				
	Input leakage current	0.001A				
	Voltage	0.001V				
	Current	0.001A				
Setup Resolution	Power	0.01W				
	Resistance	0.01Ω				
	Voltage	0.0001V				
Read Back Resolution	Current	0.0001A				
	Power	0.01W				
	Voltage	≤0.02% + 0.02%FS				
	Current	≤0.05% + 0.05%FS				
Setup Accuracy	Power	≤0.1% + 0.2%FS				
	Resistance (1)	(Vin/Rset)*0.5%+0.5%FS				
	Voltage	≤0.02% + 0.02%FS				
Read Back Accuracy	Current	≤0.05% + 0.05%FS				
	Power	≤0.1% + 0.2%FS				



Setup Temperature	Voltage	≤20 ppm/°C			
Coefficient	Current	≤30ppm/°C			
Read Back Temperature	Voltage	≤20 ppm/°C			
Coefficient	Current	≤30ppm/°C			
	Rising slope	20A/ms			
Current Slope	Falling slope	20A/ms			
	Voltage	≤0.005% + 0.005%FS			
Line Regulation	Current	≤0.015% + 0.015%FS			
	Voltage (2)	≤0.005% + 0.005%FS			
Load Regulation	Current	≤0.015% + 0.015%FS			
Isc	Current	21.0A			
	OCP	15.3A			
Input protection	OVP	61.2V			
	OPP	510W			
Input OVP		63V			
Remote Sense Compensation Voltage		≤6V			
Isolation DC to GND		800Vdc			
Working Temperature		0~40℃			
Storage Temperature	-10℃~70℃				
IP	IP20				
Cooling		Air			
Dimension (mm)	32	0mm*100mm*40mm			
Weight(net)	1.0kg				

- (1) The voltage/current input is not less than 10%FS.
- (2) Under sense mode



Model	IT27557 Programmable DC Load				
	Voltage	0.150V∼150V			
	Current	0∼10A			
	Power	0∼500W			
Rated value	Resistance	0.15Ω~1500Ω			
	Min. operating voltage	1.5V at 10A			
	Input leakage current	0.001A			
	Voltage	0.01V			
	Current	0.001A			
Setup Resolution	Power	0.01W			
	Resistance	0.01Ω			
	Voltage	0.0001V			
Read Back Resolution	Current	0.0001A			
	Power	0.01W			
	Voltage	≤0.02% + 0.02%FS			
	Current	≤0.05% + 0.05%FS			
Setup Accuracy	Power	≤0.1% + 0.2%FS			
	Resistance (1)	(Vin/Rset)*0.5%+0.5%FS			
	Voltage	≤0.02% + 0.02%FS			
Read Back Accuracy	Current	≤0.05% + 0.05%FS			
	Power	≤0.1% + 0.2%FS			
Setup Temperature	Voltage	≤20ppm/ ℃			
Coefficient	Current	≤30ppm/°C			
Read Back Temperature	Voltage	≤20 ppm/°C			
Coefficient	Current	≤30ppm /℃			
	Rising slope	10A/ms			
Current Slope	Falling slope	10A/ms			



	Voltage	≤0.005% + 0.005%FS			
Line Regulation	Current	≤0.015% + 0.015%FS			
	Voltage (2)	≤0.005% + 0.005%FS			
Load Regulation	Current	≤0.015% + 0.015%FS			
Isc	Current	10.5A			
	ОСР	10.2A			
Input protection	OVP	153V			
	OPP	510W			
Input OVP	156V				
Remote Sense Compensation Voltage	≤15V				
Isolation DC to GND		800Vdc			
Working Temperature		0~40℃			
Storage Temperature		-10°C∼70°C			
IP	IP20				
Cooling	Air				
Dimension (mm)	320)mm*100mm*40mm			
Weight(net)	1.0kg				

- (1) The voltage/current input is not less than 10%FS.
- (2) Under sense mode



Chapter5 Appendix

Specifications of Red and Black Test Lines

ITECH provides you with optional red and black test lines, the user can choose the company's test line for testing. For specifications of ITECH test lines and maximum current values, refer to the table below.

Model	Specifi cations	Length	Description				
IT-E30110-AB	10A	1m	Alligator clips-Banana plugs A pair of red and black test line				
IT-E30110-BB	10A	1m	Banana plugs - Banana plugs A pair of red and black test line				
IT-E30110-BY	10A	1m	Banana plugs - Y-type terminals A pair of red and black test line				
IT-E30312-YY	30A	1.2m	Y-type terminals - A pair of red and black test line				
IT-E30320-YY	30A	2m	Y-type terminals - A pair of red and black test line				
IT-E30615-OO	60A	1.5m	Ring terminals - A pair of red and black test line				
IT-E31220-OO	120A	2m	Ring terminals - A pair of red and black test line				
IT-E32410-OO	240A	1m	Ring terminals - A pair of red and black test line				
IT-E32420-OO	240A	2m	Ring terminals - A pair of red and black test line				
IT-E33620-OO	360A	2m	Ring terminals - A pair of red and black test line				

For maximum current of AWG copper wire, refer to table blow.

AWG	10	12	14	16	18	20	22	24	26	28
The Maximum current value(A)	40	25	20	13	10	7	5	3.5	2.5	1.7

Note: AWG (American Wire Gage), it means X wire (marked on the wire). The table above lists current capacity of single wire at working temperature of 30°C. For reference only.



Connect with us

Thank you for purchasing ITECH products. Any questions, pls. feel free to let

