


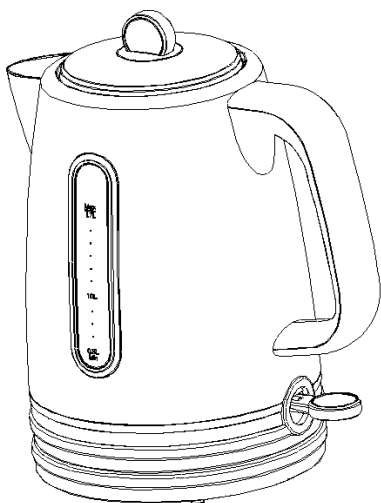

CORDLESS WATER KETTLE

WK8359AE

USER MANUAL



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFETY INSTRUCTIONS

- Please read these instructions carefully before using the water kettle for the first time.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, DO NOT use. For electrical safety, any repairs to the product should only be carried out by a qualified electrical person only or the product must be disposed.
- If the kettle is overfilled, boiling water may be ejected.
- Kettle is only to be used with the base stand provided.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type

environments;

- bed and breakfast type environments.

- Do not operate the kettle if damaged.
- Avoid spillage on the electrical connector.
- CAUTION! Heating element and surface are subject to residual heat after use.
- Use the kettle according to these instructions, any misuse may cause electric shock or other hazards.
- This appliance is not intended to heat liquids other than water.
- Regarding how to clean the surfaces in contact food, please refer to section < Cleaning >.
- Before you connect the kettle to the mains supply, make sure that the voltage indicated on the rating plate, located on the bottom of the water kettle matches the mains voltage in your home. If it does not, do not use the kettle.
- The kettle will switch OFF automatically when the water has boiled. If you want to stop the heating process before the kettle automatically switches off, press the ON/OFF switch up.
- After the kettle has switched OFF automatically (or has been switched OFF manually) it may need time to cool down and reset. After 15-20 seconds, the kettle can be

switched ON again.

- Always fill the kettle with cold water before switching it ON.
- The kettle is designed to disconnect the live electrical supply from the heating element during abnormal operating conditions. If the water kettle is accidentally switched ON without water, it will activate the dry boil protection circuit in the kettle.
- If the kettle ever boils dry, the power indicator will go out. Allow 15 minutes to cool down before refilling with cold water. The safety cutout circuit will automatically reset during this time.
- Place the kettle on a stable flat surface.
- CAUTION! Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched ON.
- Do not use this appliance outdoors.
- Ensure that the kettle is switched OFF before removing it from the base.
- Do not remove the kettle from its base during operation.
- Never immerse the kettle or cord in water or any other liquid. Do not allow liquid to penetrate the electrical parts of this kettle.

- Prevent children from pulling on the mains power cord or knocking the kettle over.
- Ensure that the mains lead does not overhang from the benchtop surface.
- The outside surface of the kettle may get hot during and immediately after use, please take care when using the kettle.
- Never fill in water more than the maximum water level mark on the kettle.
- Never use the kettle with the lid open.
- Do not open the lid when steam is coming out of the spout.
- Before cleaning the kettle disconnect from the mains power outlet socket and wait until the kettle has completely cooled down.


WARNING – Avoid water spillage on the electrical connectors.

WARNING – Potential injury from misuse.

WARNING – Do not remove the lid while the water is boiling.

CAUTION! To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

FEATURES OF KETTLE

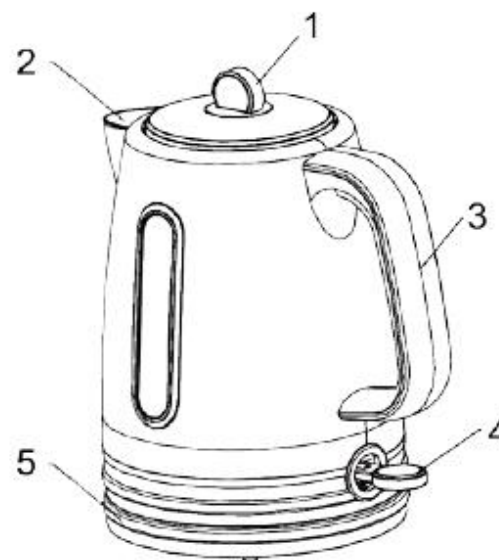

- Switch button
- Switch button
- Base
- Base

1. Lid handle
2. Filter (inside the spout)
3. Handle
4. ON/OFF Switch
5. Power Base

Before first use

Before first use, it is recommended to operate the kettle for 2 or 3 times following the instructions below, this will remove any dust or residues remaining from the manufacturing process.

- Remove kettle from the power base before filling.
- To fill the kettle, open the top lid by pulling on the lid handle, then fill the kettle with cold water (note: the water level must be between the minimum mark, 0.5L and maximum mark, 1.7L). Close the lid by pushing it down until it clicks into place.
- Connect the power supply cord plug into a mains power outlet socket. Press down on the ON/OFF switch, and the power indicator will light up.
- When the water has boiled, the kettle will automatically switch itself OFF. You can stop the boiling process at any time by lifting the ON/OFF switch. The power indicator light will go out.

Cleaning

- First read the instructions in the section titled “IMPORTANT INSTRUCTIONS”.
- Always disconnect the kettle from the mains power outlet socket before cleaning.
- Before cleaning make sure the kettle is cool to touch.
- Empty the kettle. Clean the exterior surface of the kettle with a clean, damp cloth to preserve its original polished finish. Dry and polish with a soft cloth.
- Do not use abrasive cleansers or scouring agents/pads of any kind inside or on the exterior of the kettle.
- Open the lid, lift out the filter, rinse the filter under warm water and brush off any impurities.
- Refit the filter and lid in reverse order.
- Only use a dry cloth to wipe the base of the kettle.
- Avoid wetting the electrical parts.
- Do not immerse the kettle or power base in water or other liquid, and make sure the electrical parts are kept dry.

Descaling

- Half-fill the kettle with tap water and add the juice of 1 lemon to the water.
- Boil this mixture and allow it to stand for 15 minutes. Re-boil the mixture and allow it to stand a further 15 minutes. Re-boil this mixture a third time then rinse the kettle thoroughly.

TECHNICAL DATA

Voltage: 220-240V~ 50-60Hz

Power: 1850-2200W

12 MONTH WARRANTY

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense

incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.