

OSIGHT X

Optic Operation Instructions

Figure 4

Manual On

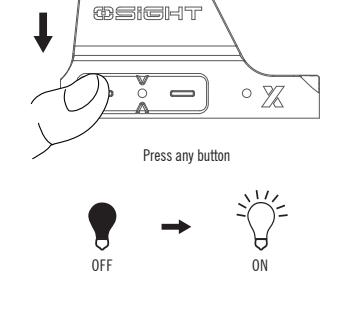


Figure 5

Manual Off

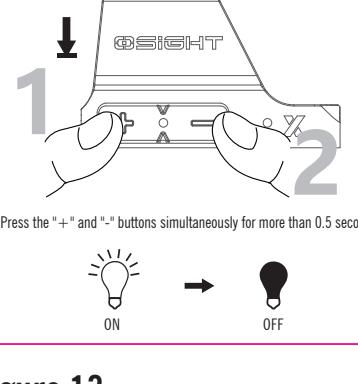
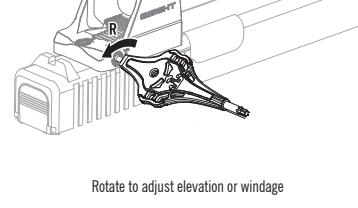


Figure 13

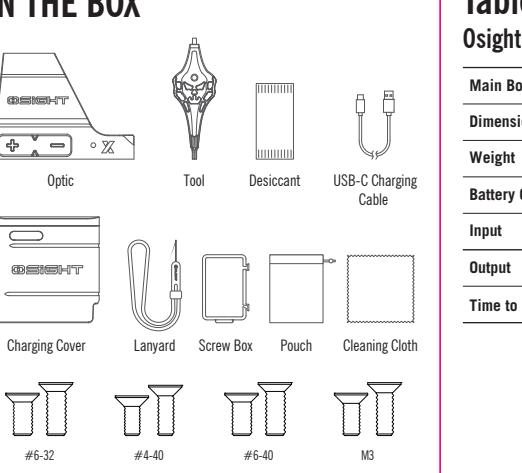
Zero Setting



Rotate to adjust elevation or windage

1 MOA per click

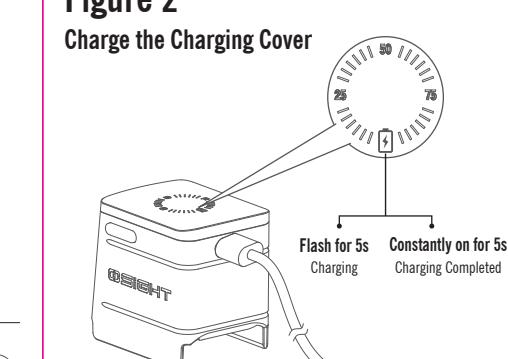
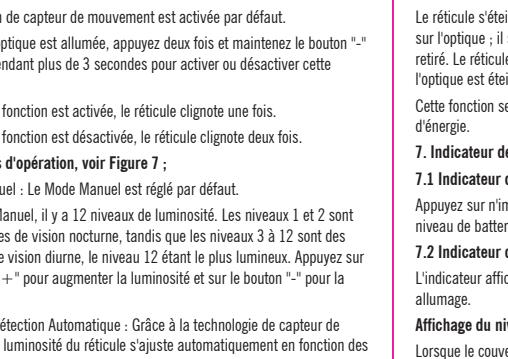
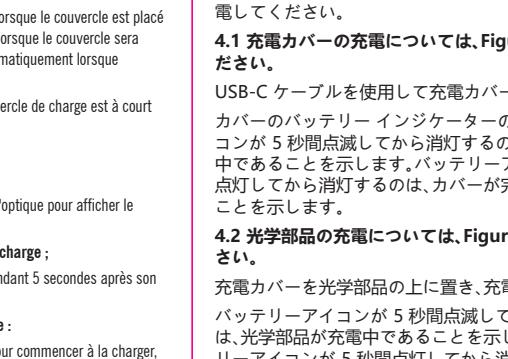
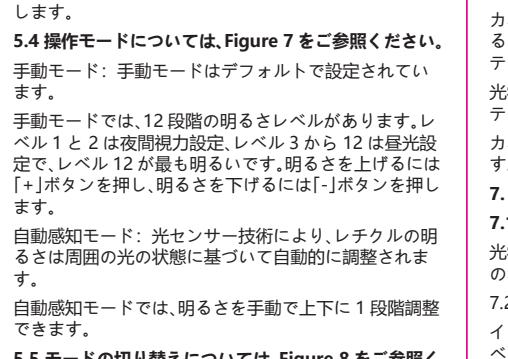
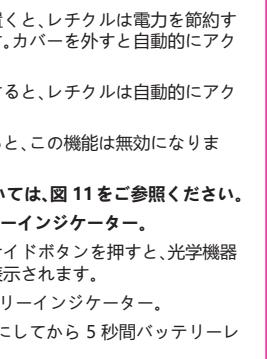
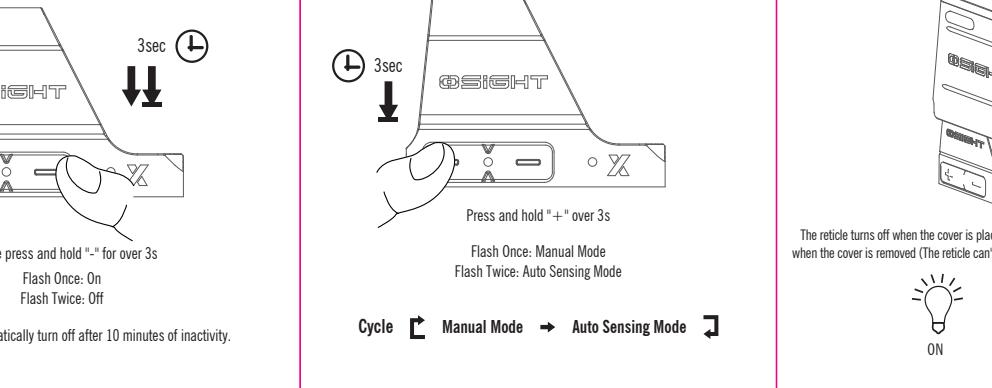
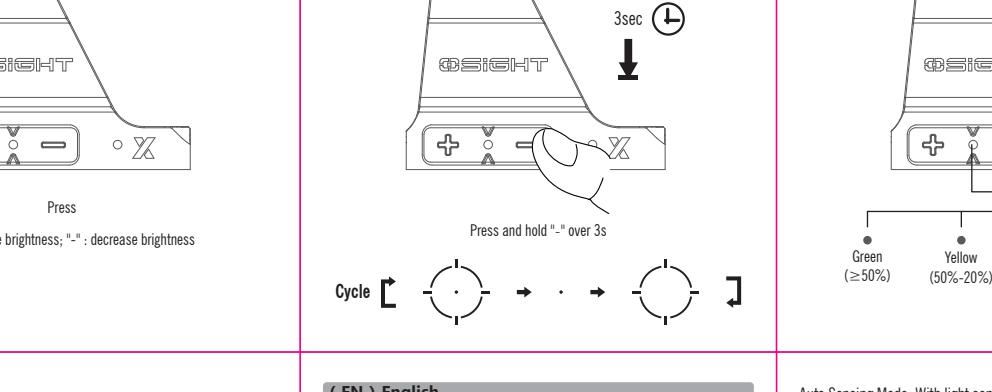
IN THE BOX

Table 2:
Osiht X Charging Cover

Main Body	Plastic + AL6061
Dimensions	47*35*44 mm / 1.85*1.38*1.73 in
Weight	50 g / 1.76 oz
Battery Capacity	800 mAh 3.87 V (3.1 Wh)
Input	DC 5 V / 2 A (MAX)
Output	DC 4.45 V / 0.1 A (MAX)
Time to Fully Charge the Optic	2.5 H

Table 1: Optic
SPECIFICATIONS

Mode	Mode 3	21000 H	57000 H	22000 H
This is at full 100% brightness, with motion detection on and ambient light sense on. For more runtime details please visit osight.com .				
Note:	Plese fully charge the product every three months to maintain stable power consumption.			
170 mAh 3.87 V (0.66 Wh) 1.0 m IPX5 Working Temperature -10°C~40°C				
Dimensions	41.40 mm (W) * 31.30 mm (H) * 33.30 mm (D)	DAL (Housing Material)	46 g / 1.62 oz	(Housing Material)

Figure 1
Product OverviewFigure 2
Charge the Charging CoverFigure 3
Charge the Optic With the CoverFigure 4
Fonction d'économie d'énergieFigure 5
Motion Sensor FunctionFigure 6
Motion Sensor Function
On/OffFigure 7
Brightness Adjustment (Manual Mode)

CONTENTS

(EN) English

01

1. Product specifications, see Table 1 and Table 2;

2. Product overview, see Figure 1;

3. Operating instructions are as follows:

4. Charging, see Figure 3;

5. Switch the optic, see Figure 8;

6. Brightness adjustment, see Figure 9;

7. Reticle system switching, see Figure 10;

8. How to install, see Figure 12;

9. Zero setting, see Figure 13;

10. Windage (left/right) or elevation (up/down) adjustment is 1 MOA per click.

11. Optic operation instructions;

12. Brightness adjustment (manual mode);

13. Motion sensor function; see Figure 6;

14. Auto sensing mode, see Figure 7;

15. How to install, see Figure 12;

16. Zero setting, see Figure 13;

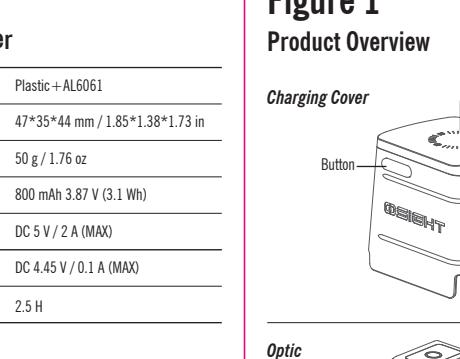
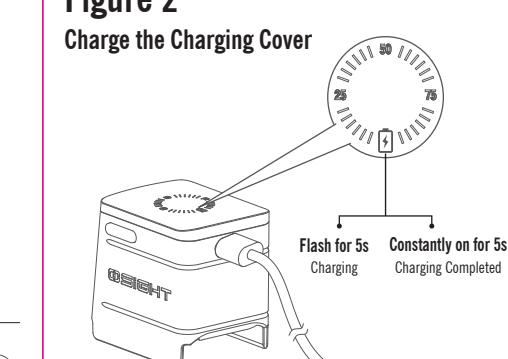
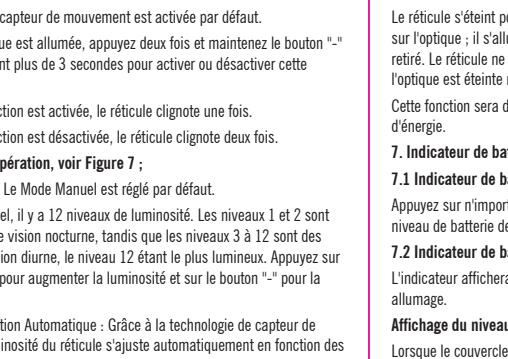
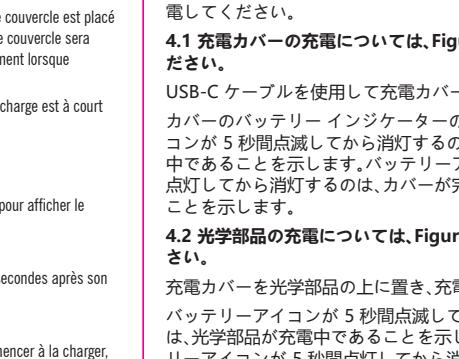
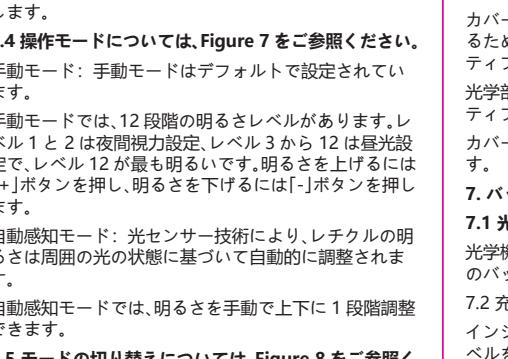
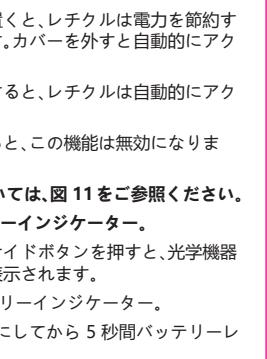
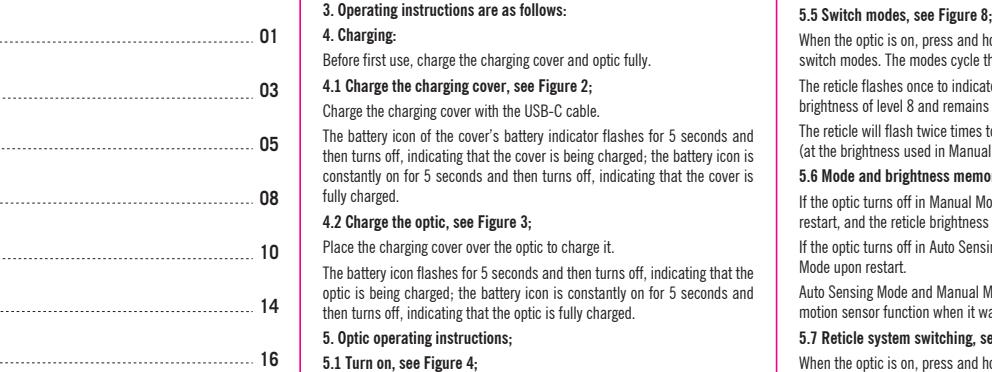
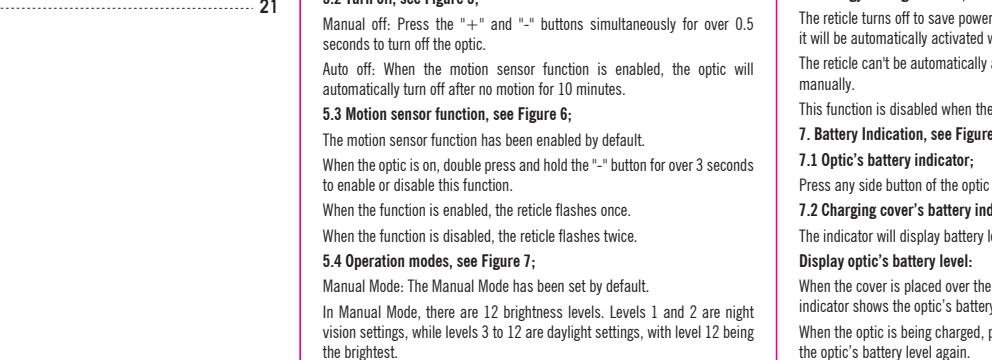
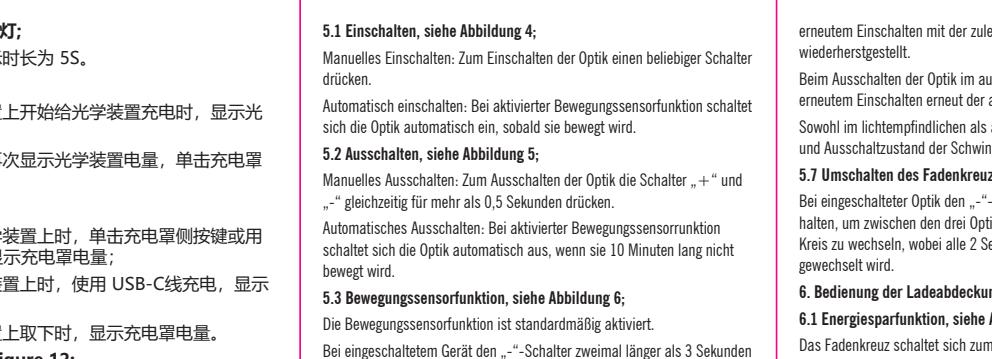
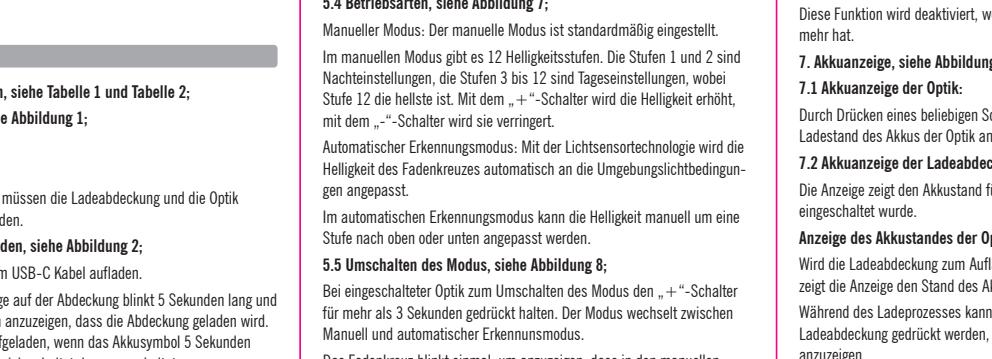
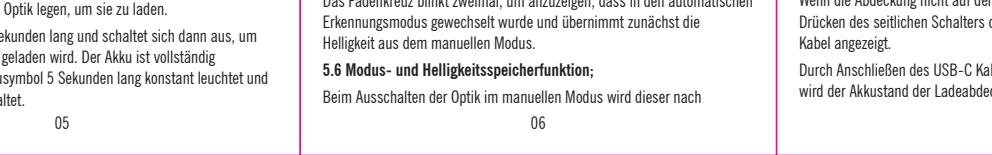
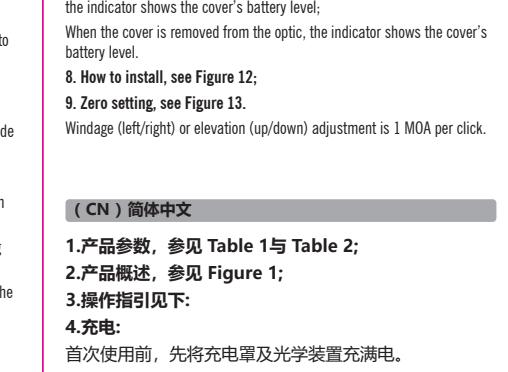
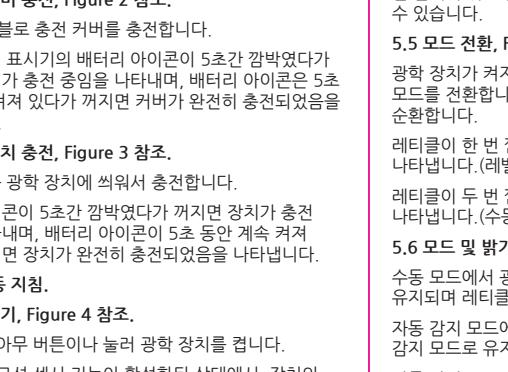
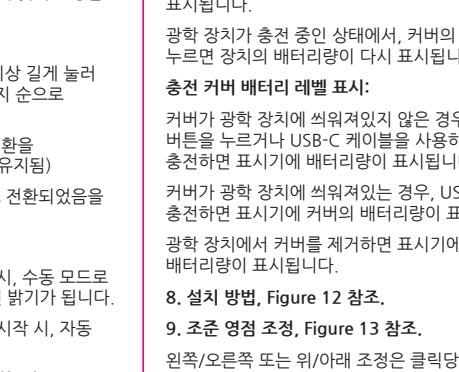
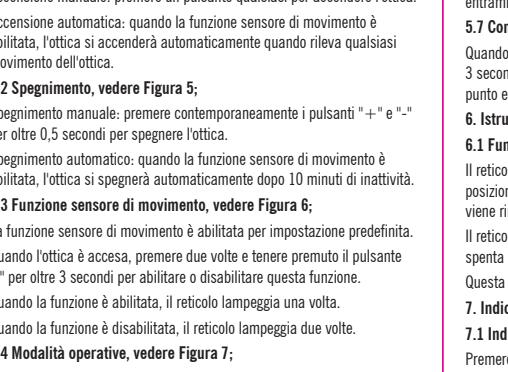
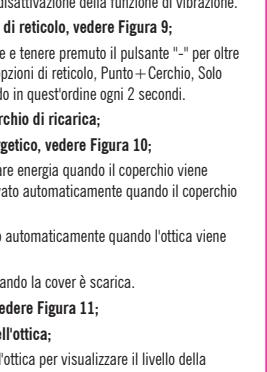
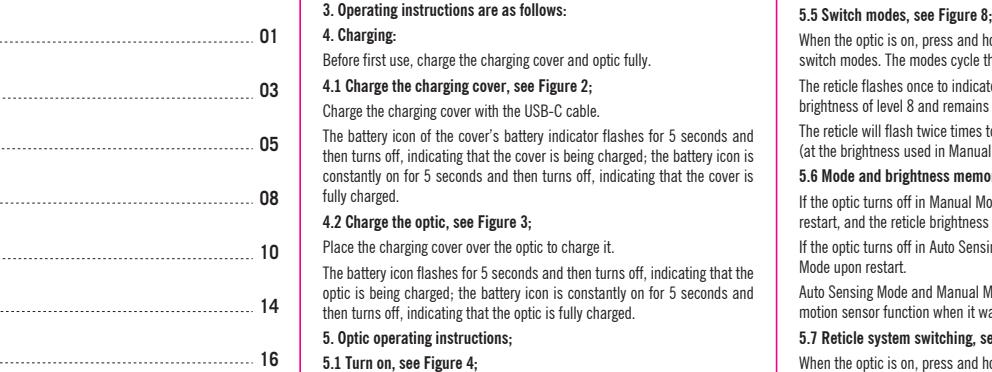
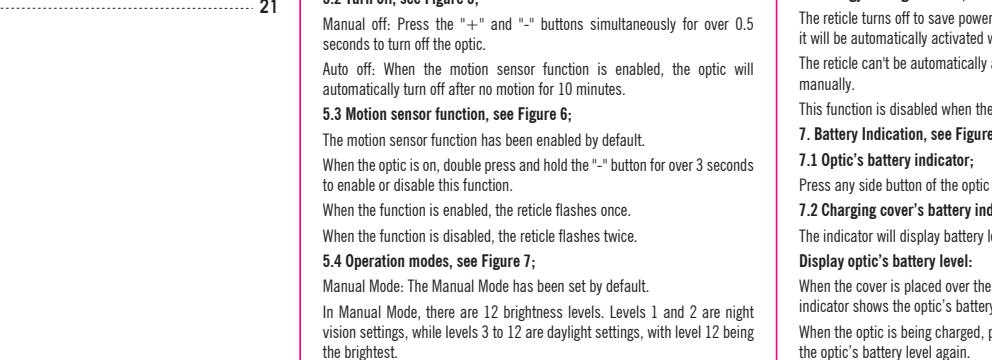
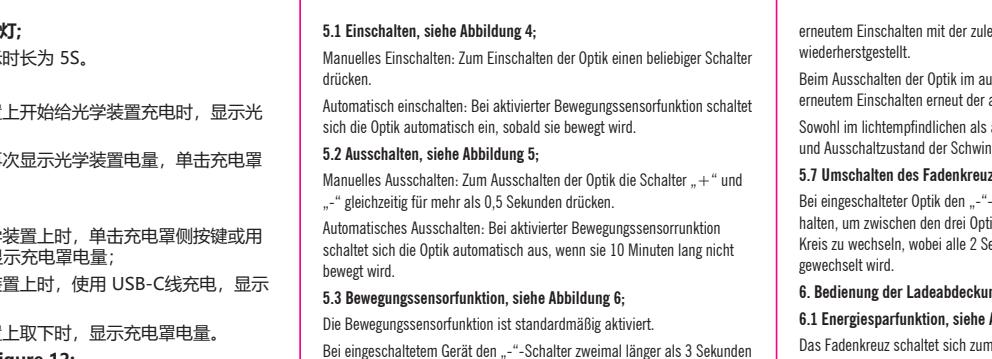
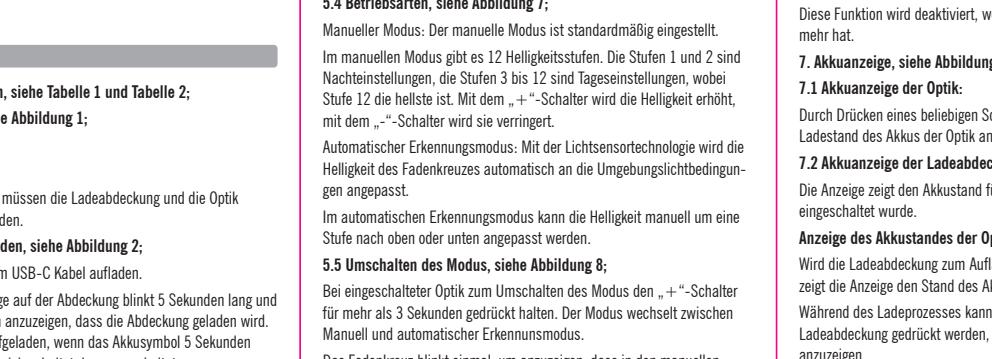
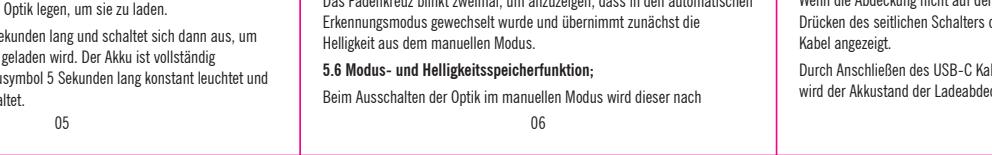
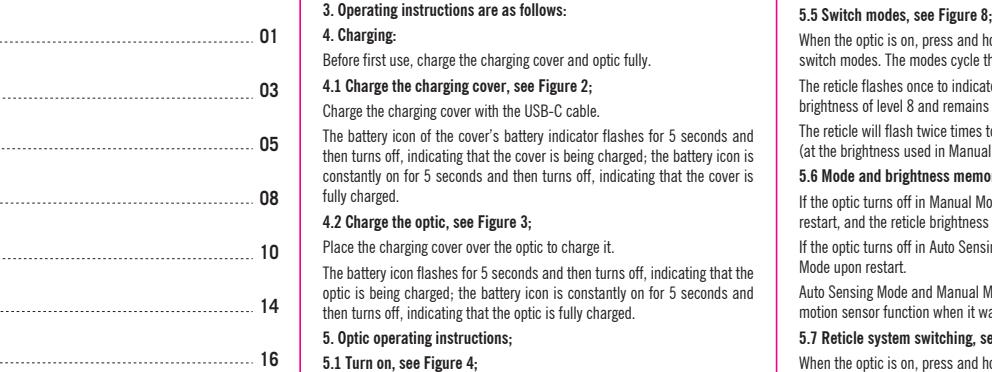
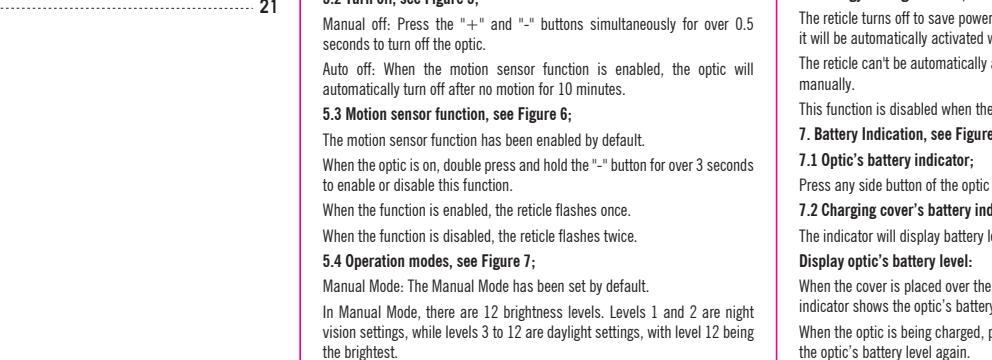
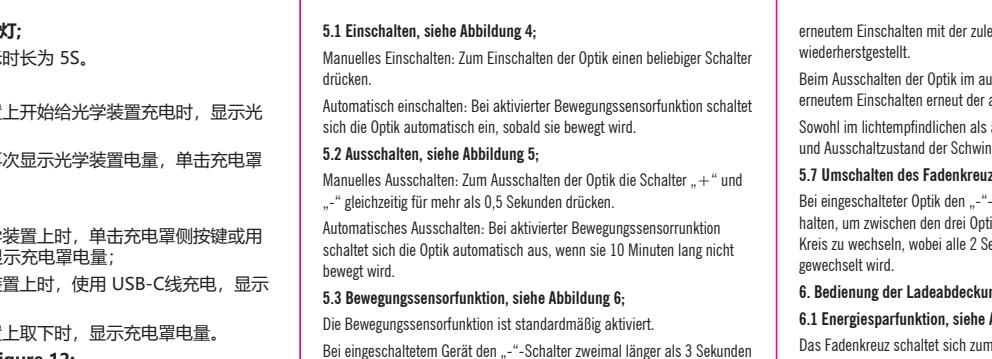
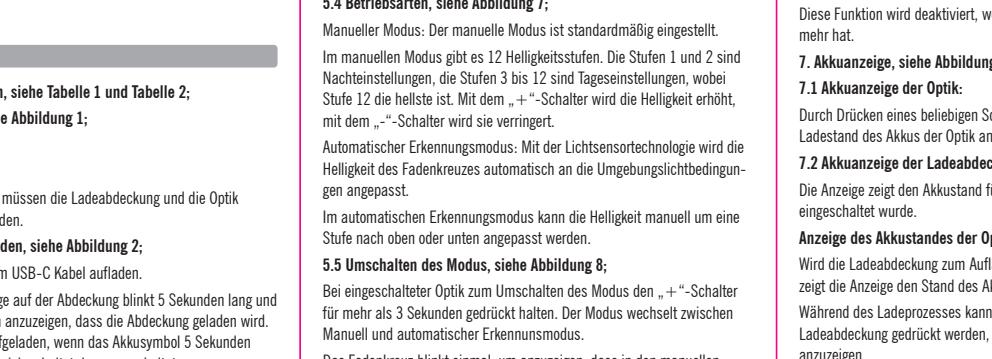
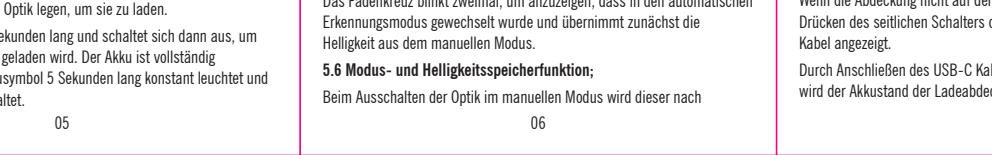
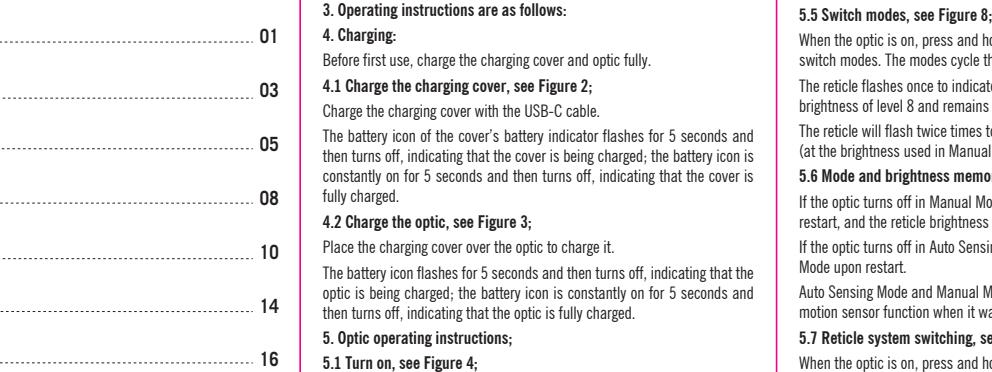
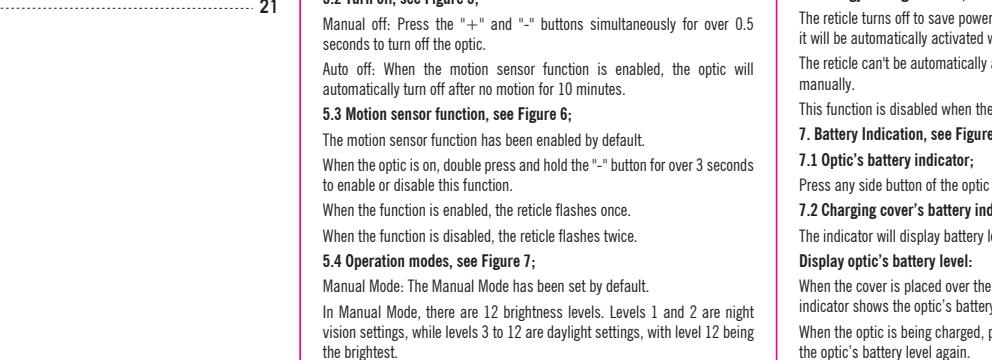
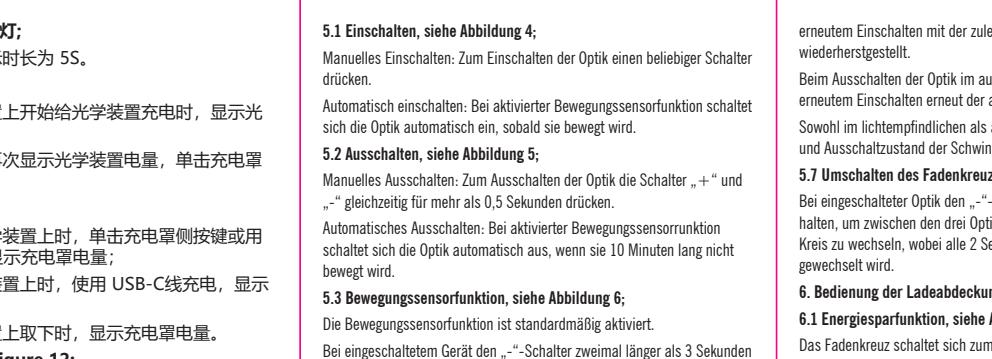
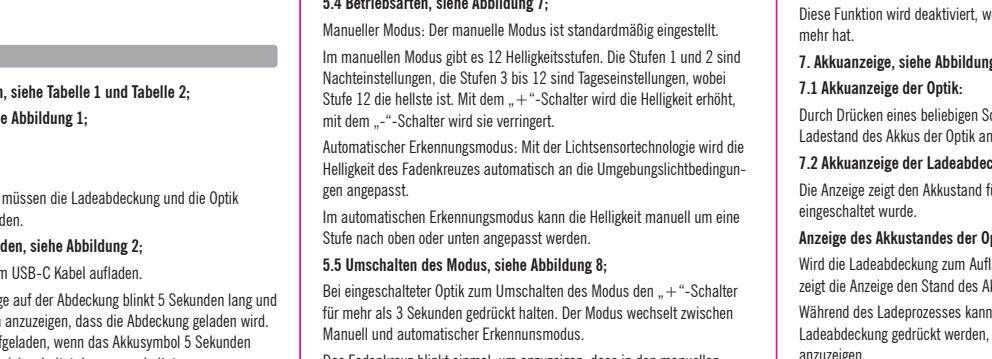
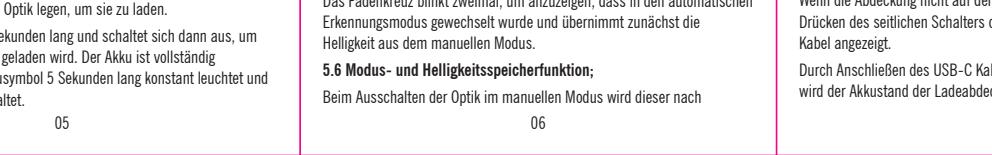
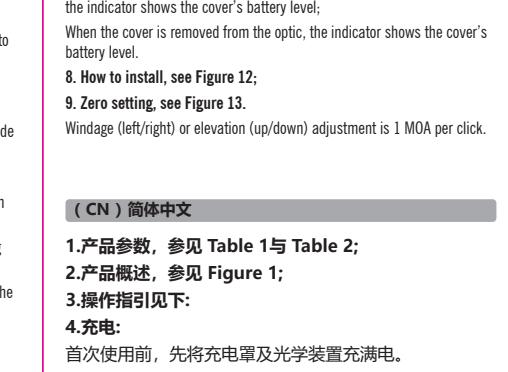
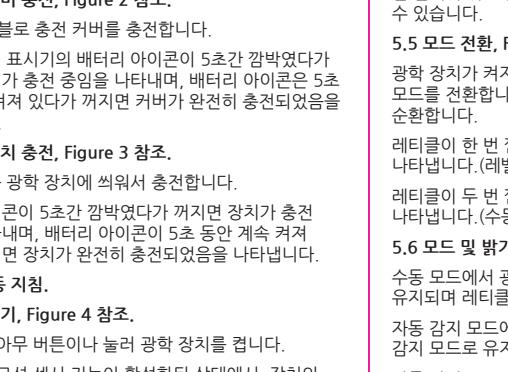
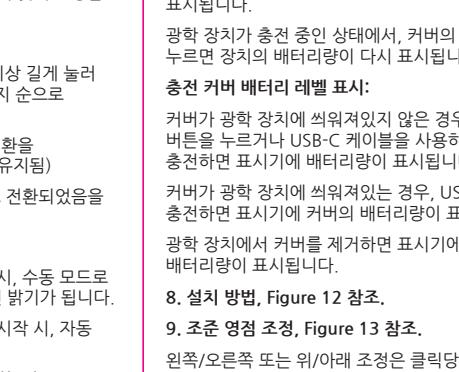
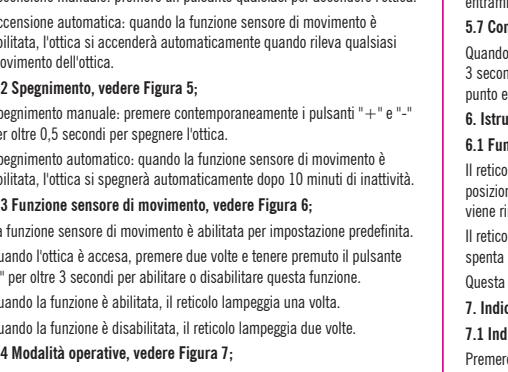
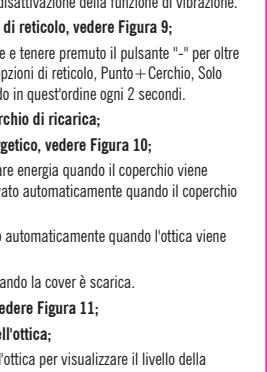
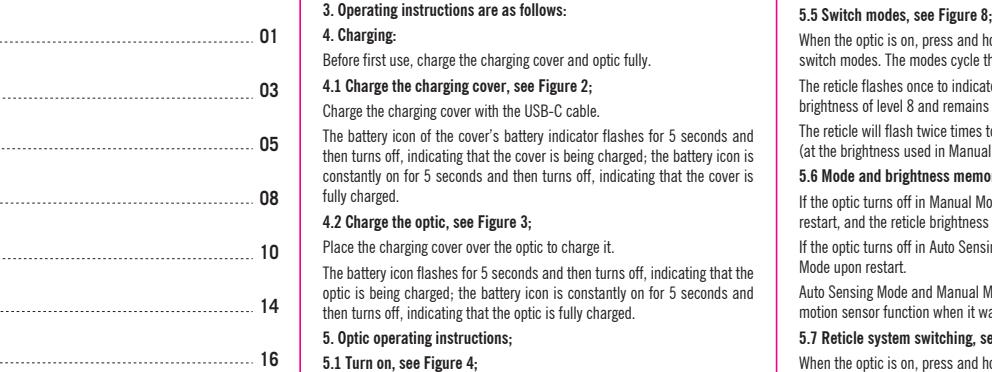
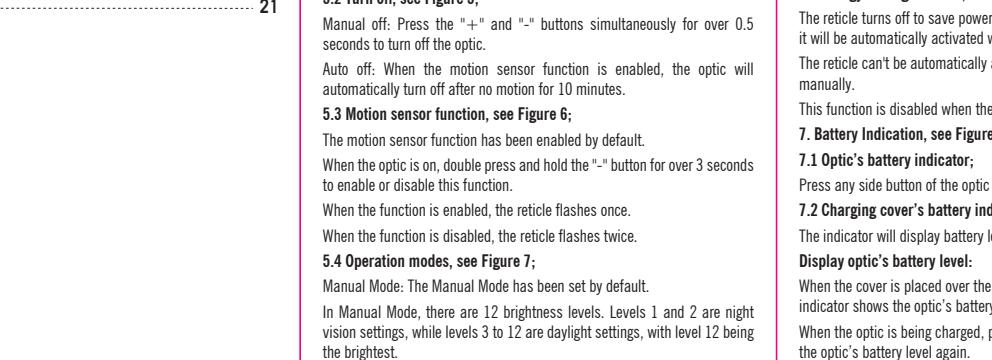
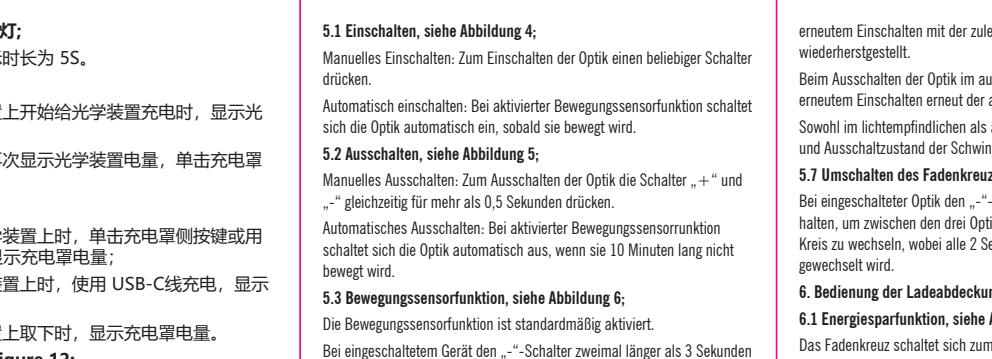
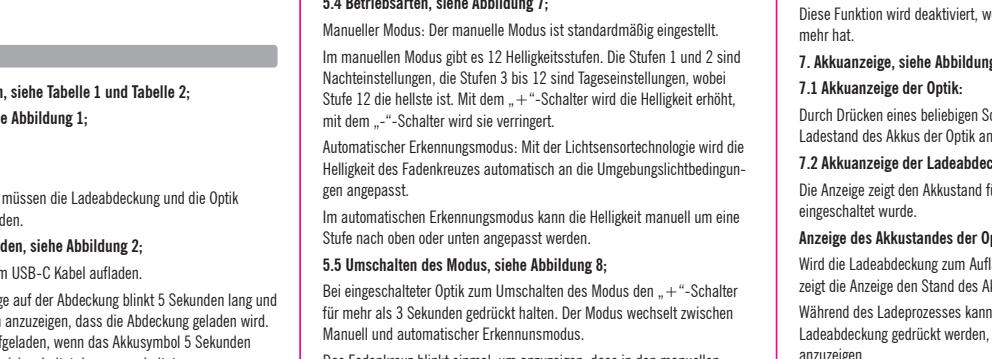
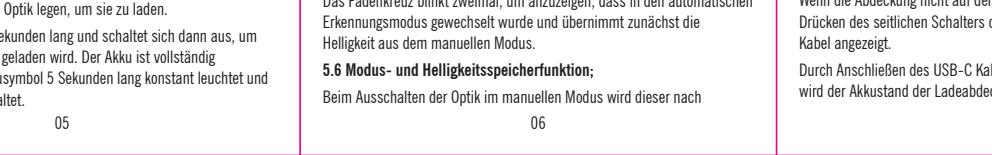
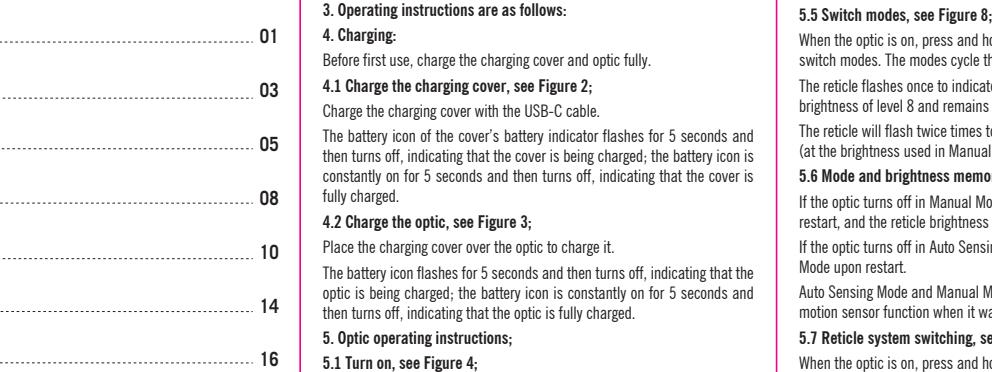
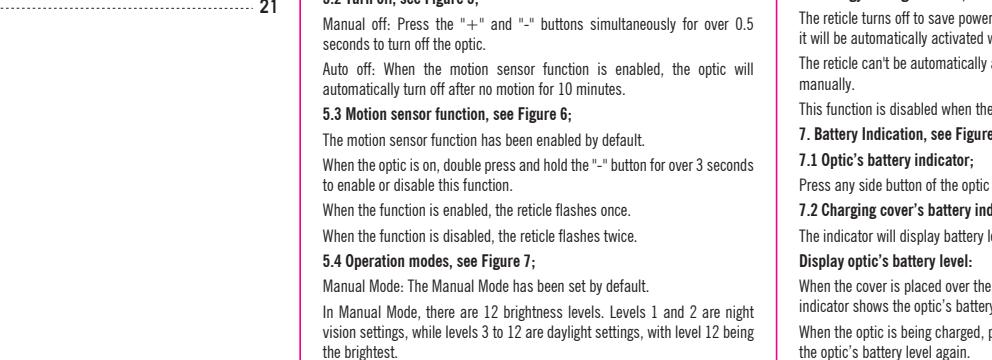
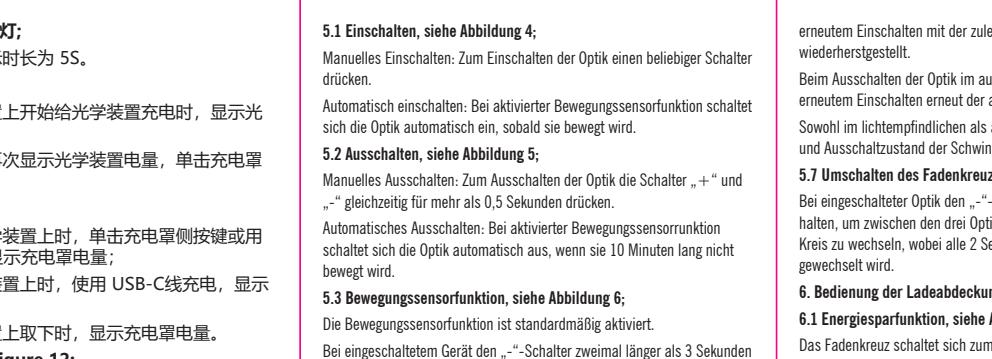
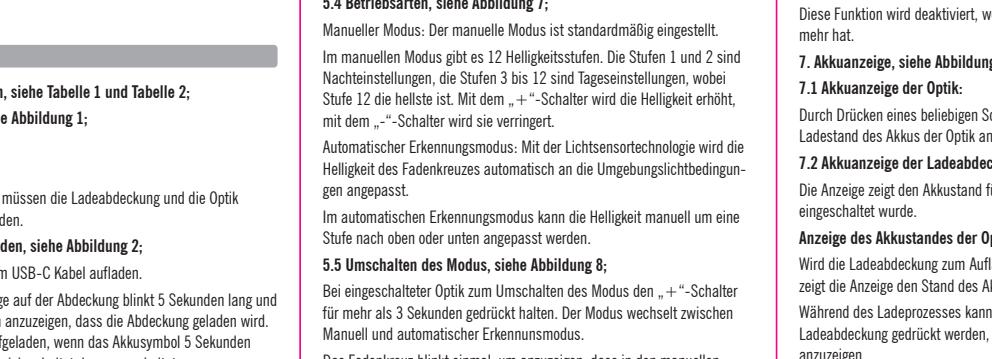
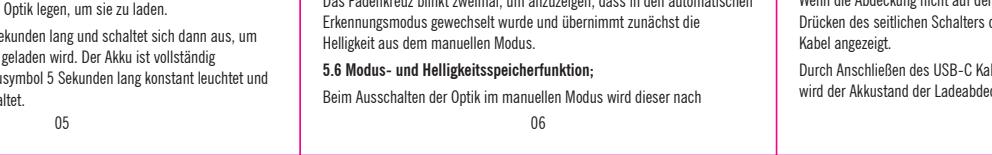
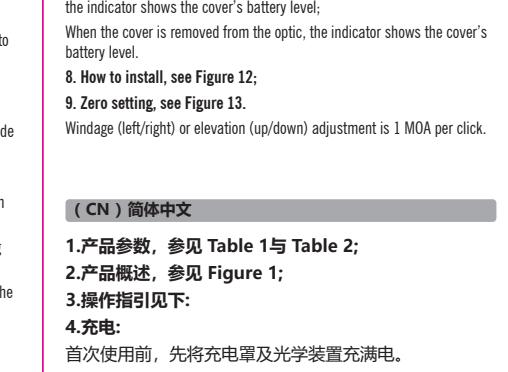
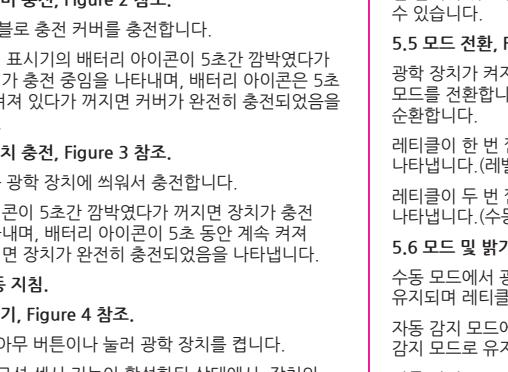
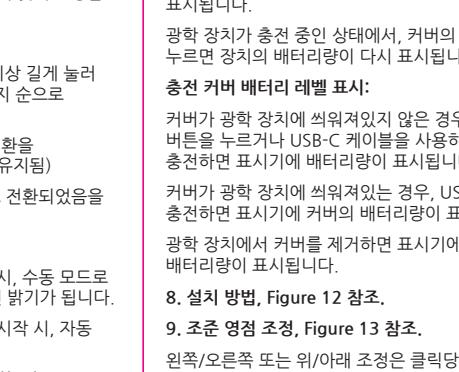
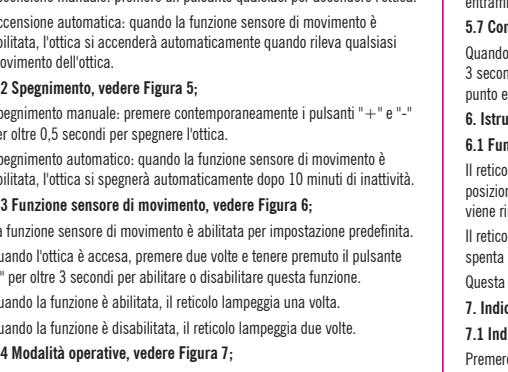
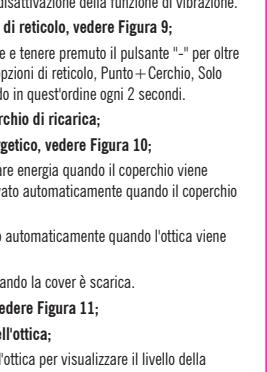
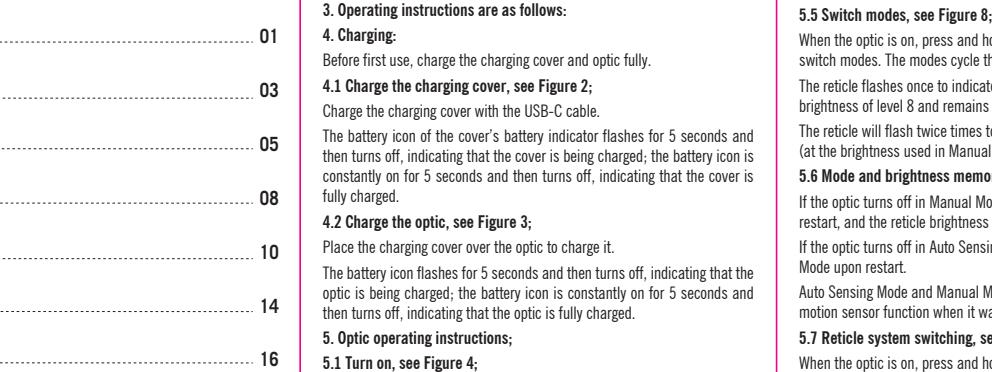
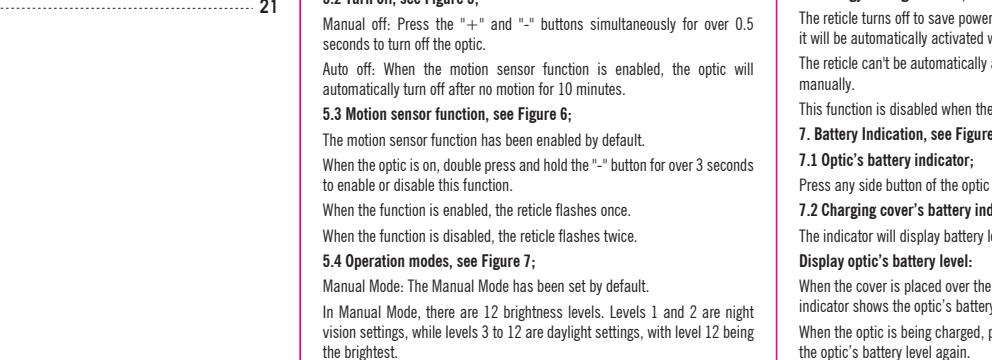
17. Brightness adjustment (manual mode);

18. Auto sensing mode, see Figure 7;

19. Motion sensor function; see Figure 6;

20. How to install, see Figure 12;

21. Zero setting, see Figure 13;

Table 2:
Osiht X Charging CoverFigure 1
Product OverviewFigure 2
Charge the Charging CoverFigure 3
Charge the Optic With the CoverFigure 4
Fonction d'économie d'énergieFigure 5
Motion Sensor FunctionFigure 6
Motion Sensor Function
On/OffFigure 7
Brightness Adjustment (Manual Mode)Figure 8
Mode SwitchingFigure 9
Reticle System SwitchingFigure 10
Energy-Saving FunctionFigure 10
Energy-Saving FunctionFigure 11
Reticle System SwitchingFigure 12
How to InstallFigure 13
Zero SettingFigure 14
Zero SettingFigure 15
Zero SettingFigure 16
How to InstallFigure 17
Zero SettingFigure 18
How to InstallFigure 19
Zero SettingFigure 20
How to InstallFigure 21
Zero SettingFigure 22
How to InstallFigure 23
Zero SettingFigure 24
How to InstallFigure 25
Zero SettingFigure 26
How to InstallFigure 27
Zero SettingFigure 28
How to InstallFigure 29
Zero SettingFigure 30
Zero SettingFigure 31
Zero SettingFigure 32
Zero SettingFigure 33
Zero SettingFigure 34
Zero SettingFigure 35
Zero SettingFigure 36
How to InstallFigure 37
Zero SettingFigure 38
How to InstallFigure 39
Zero SettingFigure 40
Zero SettingFigure 41
How to InstallFigure 42
Zero SettingFigure 43
How to InstallFigure 44
Zero SettingFigure 45
Zero SettingFigure 46
Zero SettingFigure 47
Zero SettingFigure 48
Zero SettingFigure 49
Zero SettingFigure 50
Zero SettingFigure 51
How to InstallFigure 52
Zero Setting