 
 
 
 


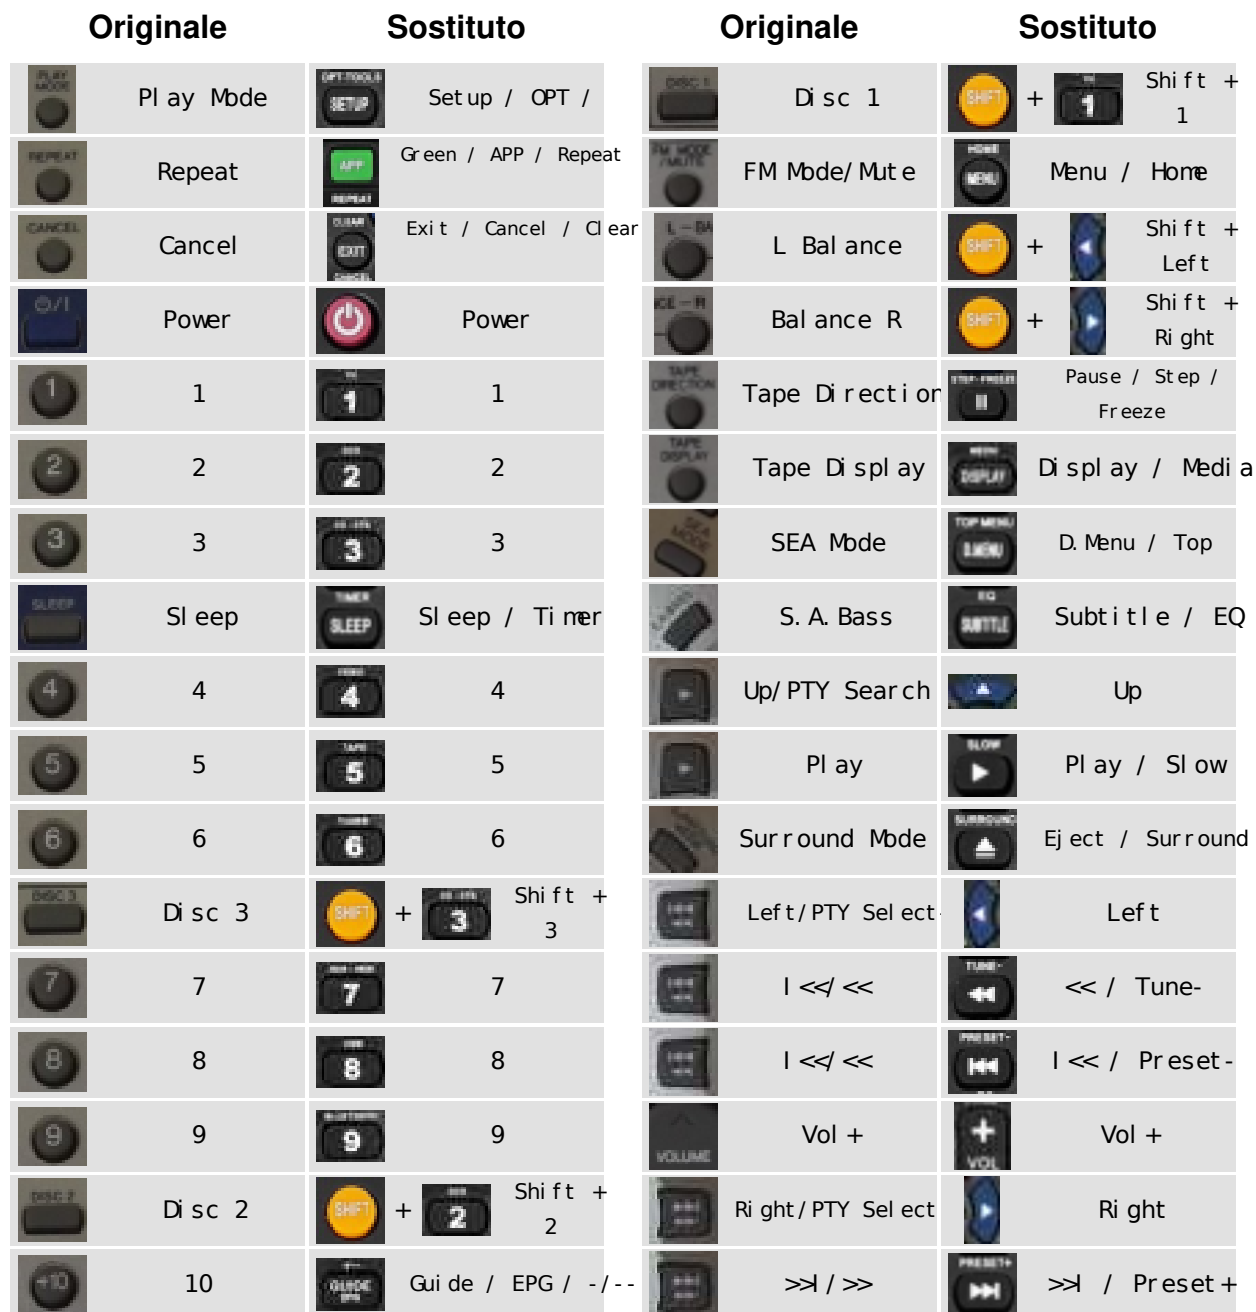



 
 
 


| Originale                                                                                   | Sostituto                                                                                               | Originale                                                                                                | Sostituto                                                                                                  |
|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
|  Play Mode |  Set up / OPT /        |  +10                  |  Gui de / EPG / - / - - |
|  Repeat    |  Green / APP / Repeat  |  Di sc 1              |  Shift + 1              |
|  Cancel    |  Exit / Cancel / Clear |  FM Mode/ Mute        |  Menu / Home            |
|  Power     |  Power                 |  L Bal ance           |  Shift + Left           |
|  1         |  1                     |  Bal ance R           |  Shift + Ri ght         |
|  2         |  2                     |  Tape Di recti on     |  Pause / Step / Freeze  |
|  3         |  3                     |  Tape Di spl ay       |  Di spl ay / Medi a     |
|  Sl eep    |  Sl eep / Ti ner       |  SEA Mode             |  D. Menu / Top          |
|  4         |  4                     |  S. A. Bass           |  Subti tle / EQ         |
|  5         |  5                     |  Pl ay                |  Pl ay / Sl ow          |
|  6         |  6                     |  Up/ PTY Sear ch      |  Up                     |
|  Di sc 3 |  Shift + 3           |  Surround Mode      |  Ej ect / Surround    |
|  7       |  7                   |  I << / <<          |  << / Tune-           |
|  8       |  8                   |  Left / PTY Sel ect |  Left                 |
|  9       |  9                   |  I << / <<          |  I << / Preset-       |
|  Di sc 2 |  Shift + 2           |  Vol +              |  Vol +                |
|  10      |  0                   |  >> / >>            |  >> / Preset +        |





 
 
 


| Originale                                                                                   | Sostituto                                                                                               | Originale                                                                                                  | Sostituto                                                                                                  |
|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
|  Play Mode |  Set up / OPT /        |  +10                    |  Gui de / EPG / - / - - |
|  Repeat    |  Green / APP / Repeat  |  Di sc 1                |  Shift + 1              |
|  Cancel    |  Exit / Cancel / Clear |  FM Mode/ Mute          |  Menu / Home            |
|  Power     |  Power                 |  L Bal ance             |  Shift + Left           |
|  1         |  1                     |  Bal ance R             |  Shift + Ri ght         |
|  2         |  2                     |  Tape Di recti on       |  Pause / Step / Freeze  |
|  3         |  3                     |  Tape Di spl ay         |  Di spl ay / Medi a     |
|  Sl eep    |  Sl eep / Ti ner       |  SEA Mode               |  D. Menu / Top          |
|  4         |  4                     |  S. A. Bass             |  Subti tle / EQ         |
|  5         |  5                     |  Pl ay                  |  Pl ay / Sl ow          |
|  6         |  6                     |  Up/ PTY Sear ch        |  Up                     |
|  Di sc 3 |  Shift + 3           |  Sur round Mode       |  Ej ect / Sur round   |
|  7       |  7                   |  Left / PTY Sel ect   |  Left                 |
|  8       |  8                   |  Vol +                |  Vol +                |
|  9       |  9                   |  Ri ght / PTY Sel ect |  Ri ght               |
|  Di sc 2 |  Shift + 2           |  Vol -                |  Vol -                |
|  10      |  0                   |  St op                |  St op / Hol d        |







| Originale                                                                                   | Sostituto                                                                                               | Originale                                                                                                  | Sostituto                                                                                                  |
|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
|  Play Mode |  Set up / OPT /        |  +10                    |  Gui de / EPG / - / - - |
|  Repeat    |  Green / APP / Repeat  |  Di sc 1                |  Shift + 1              |
|  Cancel    |  Exit / Cancel / Clear |  FM Mode/ Mute          |  Menu / Home            |
|  Power     |  Power                 |  L Bal ance             |  Shift + Left           |
|  1         |  1                     |  Bal ance R             |  Shift + Ri ght         |
|  2         |  2                     |  Tape Di recti on       |  Pause / Step / Freeze  |
|  3         |  3                     |  Tape Di spl ay         |  Di spl ay / Medi a     |
|  Sl eep    |  Sl eep / Ti ner       |  SEA Mode               |  D. Menu / Top          |
|  4         |  4                     |  S. A. Bass             |  Subti tle / EQ         |
|  5         |  5                     |  Pl ay                  |  Pl ay / Sl ow          |
|  6         |  6                     |  Up/ PTY Sear ch        |  Up                     |
|  Di sc 3 |  Shift + 3           |  Sur round Mode       |  Ej ect / Sur round   |
|  7       |  7                   |  Left / PTY Sel ect   |  Left                 |
|  8       |  8                   |  I << / <<            |  << / Tune-           |
|  9       |  9                   |  I << / <<            |  I << / Preset-       |
|  Di sc 2 |  Shift + 2           |  Vol +                |  Vol +                |
|  10      |  0                   |  Ri ght / PTY Sel ect |  Ri ght               |




$$\gg / \gg$$
$$\gg / \gg$$

Vol -

St op

Down/ RDS  
Di spl ay Mbde

Down/ RDS  
Display Mode

## Fade Mut i ng

## Sostituto

>> / Preset +

```
>> / Tune+
```

Vol -

St op / Hol d

Down

AV / Input / RDS

Mute / Dimmer

**Originale****Sostituto**