


USER MANUAL

Portable Wireless Microphone & Speaker



K1-L
Karaoke Machine

Product Diagram

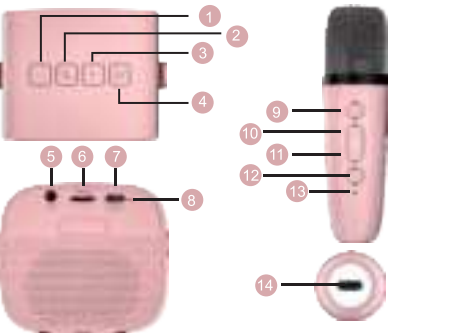

1		Short press to turn down volume of the speaker Long press to switch to the previous song
2		Long press to POWER ON/OFF the machine Short press to PLAY/PAUSE the music
3		Short press to turn up volume of the speaker Long press to switch to the next song
4		Long press to turn on/off LED dancing light Short press to switch modes(TF/Bluetooth)
5		Headphone Port
6		TF card port
7		Charging port 5V-1A
8		Working Indicator

9		Press and hold for 2-3s to turn ON/OFF the microphone. Short press to PAUSE/PLAY music remotely.
10		Short press to turn up microphone volume, there are 5 levels of mic volume. Long Press 2-3s to turn up echo volume , there are 5 levels of echo volume. (The default echo is 0)
11		Short press to turn down microphone volume, total 5 levels of mic vol. Long Press 2-3s to turn down echo volume , total 5 levels of echo vol.(The default echo is 0)
12		Short press to switch between 4 kinds of magic voices Long press 2-3s to remove/restore music vocals (Part of IOS music not supported)
13		Working Indicator
14		Charging port for microphone 5V-1A

How to use the speaker?

1.Power ON/OFF: Press and hold for 2-3s to turn ON/OFF the speaker.And short press + - button to adjust volume of the speaker.

2.Bluetooth Connection: Turn on the speaker, and press **M** button to switch to Bluetooth mode,there is a voice" Bluetooth", and search the Bluetooth name" **K1-L**", click and paired.

3.Previous/Next Song: Long press + - and hold for 2-3s to switch to next/previous song.

4.Play music via TF card: Prepare a micro SD card loaded with MP3 songs, plug the card into TF card slot of the speaker, it will auto play.

How to use the microphone?

1.Power ON/OFF

Press and hold for 2-3s to turn ON/OFF the microphone. The mic and speaker will auto connect with each other when both power on.

2.How to adjust microphone volume?

Short press + - to turn up/down microphone volume, there are 5 levels of mic volume. When reach to the highest or the lowest volume, there will be a prompt voice" du du"

3.How to adjust echo volume?

Long Press + for 2-3s to turn up echo volume, long press once to turn up 1 level, total 5 levels of echo vol.
Long Press - for 2-3s to turn down echo volume, long press once to turn down 1 level, total 5 levels of echo vol.

Note: The default echo is 0, pls long press + to turn up echo volume to suitable level for better singing/karaoke effect.

4.Magic Sound Effect

Short press to switch between 4 kinds of magic voices
Long press 2-3s to remove/restore music vocals (Part of music for IOS not supported)

How to Charge

- 1.Take out the type-C charging cable included in the package
- 2.Plug type-C end of the cable into the machine or microphone, another USB end into normal USB charging adaptor/PC Port (5V, 1A-2A)
- 3.When the speaker/mic is being charged, the indicator light turns red. Once it is fully charged, the indicator light will turns off.

FAQS

1.Bluetooth can't be paired

- ◆Press M button to switch to Bluetooth mode first
- ◆Distant Bluetooth connection, try to adjust the distance between the karaoke machine and the phone.
- ◆The karaoke machine already paired with other phone. First turn off Bluetooth of other phones and restart the machine, try to pair with phone again.

2. The mic is no sound;

- ◆ Try to charge the mic and use it
- ◆ Try to long press of the mic to turn on
- ◆ The speaker and mic are not connected successfully. Pls restart them and turn up mic vol to try again.

3. The machine no sound when playing music;

- ◆Check whether the Bluetooth is connected successfully
- ◆Check if the sound was paused via mic end, if yes, short press of the mic to PLAY/PAUSE the music
- ◆Check if the phone volume is turned up
- ◆Short press + of the speaker to trun up speaker's volume

4.Presence of noise

- ◆Environmental noise, or mobile phone signal interference, Adjust the distance between karaoke machine and the cellphone, and adjust the distance between mic and machine

5. Long press the power button and the machine/mic indicator does not light up;

- ◆ Try to charge the device/mic and use it

HOW TO USE THE MICROPHONE?

MODEL : V1-C Karaoke Machine

Press and hold for 2-3s to turn ON/OFF the microphone.
Short press to PAUSE/PLAY music remotely.

Short press to turn up microphone volume,
Long Press 2-3s to **turn up echo volume**,
(The default echo is 0)

Short press to turn down microphone volume,
Long Press 2-3s to **turn down echo volume**.

Short press to switch between 4 kinds of magic voices
Long press 2-3s to remove/restore music vocals
(Part of IOS music not supported)

HOW TO USE THE SPEAKER?


Short press to switch between Bluetooth play and TF card mode
Long press to turn on/off lights.

Short press to turn up music volume.
Long press to switch to next song.

Press and hold for 2-3s to turn ON/OFF the speaker.
Short press to PAUSE/PLAY music.

Short press to turn down music volume.
Long press to switch to previous song.

How to Use

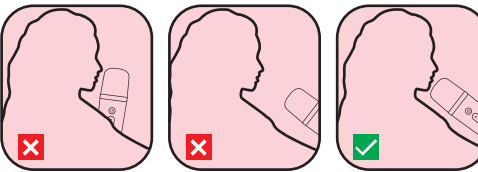

FAQ

1. **Bluetooth can't be connected**
Pls press M button to switch to Bluetooth mode first
If the speaker has been connected to other bluetooth device, pls turn off other Bluetooth first.
2. Microphone volume too low
Pls turn up both echo and mic volume to try.
3. Microphone doesn't work
Fully charge the speaker and the mic, and restart them to connect again.

Service Description

No worry about this purchasing!

30 days no reason money back guarantee, 1 year Warranty and 24hours warm customer service!
If you encounter any issues with the machine, refer to the user manual or contact us for assistance.

How to Contact Us?

Click "My Orders"→select your order→click "Order Questions"→write down your questions and send it to us.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Portable

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ISED Statement

English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
 - (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).
French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada. L'exploitation est soumise aux deux conditions suivantes :
(1) Cet appareil ne doit pas provoquer d'interférences.
(2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

L'appareil numérique du clem conforme canadien peut - 3 (b) / nmb - 3 (b).

This device meets the exemption from the routine evaluation limits in section 6.3 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 6.3 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé.

Portable

RF Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences. L'appareil peut être utilisé en condition d'exposition portable sans restriction.

Product name: Karaoke Machine

Nom de produit: Machine à karaoké

Model: K1-L, V1-C **FCC ID:** 2BKSF-K1-L, 2BKSF-V1-C

IC: 33006-K1L, 33006-V1C **HVIN:** KMKI-L, KMV1-C

Manufacturer: Dongguan MeiYin keji Co.,LTD.

Manufacturer Address: Room 1004, No.3, Lane 6, Minchang Road,Nanzha,Humen Town, Dongguan City,Guangdong Province