

# Smart Wall Socket

Featuring LoRaWAN®

**WS51x**

User Guide



## Safety Precautions

Milesight will not shoulder responsibility for any losses or damages resulting from not following the instructions of this operating guide.

- ❖ The device must not be modified in any way.
- ❖ In order to protect the security of the device, please change the device password when first configuration. The default password is 123456.
- ❖ The device is intended for indoor use only. Do not place the device where the temperature is below/above the operating range.
- ❖ Do not overload the maximum capacity to avoid damaging the device.
- ❖ Do not place the device close to naked flames, heat sources (such as oven or sunlight), cold sources, liquid, and objects with extreme temperature changes.
- ❖ Use the device in a clean environment only. Dusty or dirty environments may prevent the proper operation of this device.
- ❖ The device must never be subjected to physical shocks or strong vibration.

## Declaration of Conformity

WS51x is in conformity with the essential requirements and other relevant provisions of the CE, FCC, and RoHS.



**Copyright © 2011-2023 Milesight. All rights reserved.**

All information in this guide is protected by copyright law. Whereby, no organization or individual shall copy or reproduce the whole or part of this user guide by any means without written authorization from Xiamen Milesight IoT Co., Ltd.



For assistance, please contact

Milesight technical support:

Email: [iot.support@milesight.com](mailto:iot.support@milesight.com)

Support Portal: [support.milesight-iot.com](http://support.milesight-iot.com)

Tel: 86-592-5085280

Fax: 86-592-5023065

Address: Building C09, Software Park III,  
Xiamen 361024, China

**Revision History**

| Date          | Doc Version | Description     |
|---------------|-------------|-----------------|
| July 15, 2023 | V 1.0       | Initial version |

# Contents

|                                         |    |
|-----------------------------------------|----|
| 1. Product Introduction .....           | 5  |
| 1.1 Overview .....                      | 5  |
| 1.2 Features .....                      | 5  |
| 2. Hardware Introduction .....          | 5  |
| 2.1 Packing List .....                  | 5  |
| 2.2 Hardware Overview .....             | 6  |
| 2.3 Power Button and LED Patterns ..... | 6  |
| 2.4 Dimensions (mm) .....               | 6  |
| 3. Installation .....                   | 7  |
| 4. Operation Guide .....                | 8  |
| 4.1 NFC Configuration .....             | 8  |
| 4.2 LoRaWAN Settings .....              | 9  |
| 4.2.1 Basic Settings .....              | 9  |
| 4.2.2 Frequency Settings .....          | 10 |
| 4.2.3 Multicast Settings .....          | 12 |
| 4.3 General Settings .....              | 14 |
| 4.4 Milesight D2D Settings .....        | 15 |
| 4.5 Maintenance .....                   | 15 |
| 4.5.1 Upgrade .....                     | 15 |
| 4.5.2 Backup .....                      | 16 |
| 4.5.3 Reset to Factory Default .....    | 17 |
| 5. Device Payload .....                 | 17 |
| 5.1 Basic Information .....             | 18 |
| 5.2 Sensor Data .....                   | 19 |
| 5.3 Downlink Commands .....             | 19 |

# 1. Product Introduction

## 1.1 Overview

WS51x is an in-wall smart socket panel with a stylish and minimalist design that combines power control and electricity consumption statistics features. It can intelligently manage appliances and promote the scientific use of electricity. The product offers various power control methods, such as local button control and remote control through wireless LoRaWAN® network communication. WS51x is compatible with Milesight's LoRaWAN® gateway and IoT Cloud solution, which allows for remote monitoring and control via a webpage or mobile App, triggered by other Milesight sensors. Designed for in-wall installation, WS51x has broad applications in smart homes, smart offices, smart campuses, and other scenarios.

## 1.2 Features

- Turn on/off devices and create delay switch-on/off schedules remotely
- Collect current, voltage, power, electrical consumption and support overload protection
- Elaborate structural and safety door design for both safe usage and convenient installation
- Easy configuration via NFC
- Function well with standard LoRaWAN® gateways and network servers
- Standard LoRaWAN® technology
- Compatible with Milesight IoT Cloud
- Support Milesight D2D protocol to enable ultra-low latency control without gateway
- Support multicast for control in bulk

# 2. Hardware Introduction

## 2.1 Packing List



1 × WS51x Wall  
Socket



2 × Mounting Screws



1 x Quick Start Guide




1 x Warranty Card



**If any of the above items is missing or damaged, please contact your sales representative.**

## 2.2 Hardware Overview

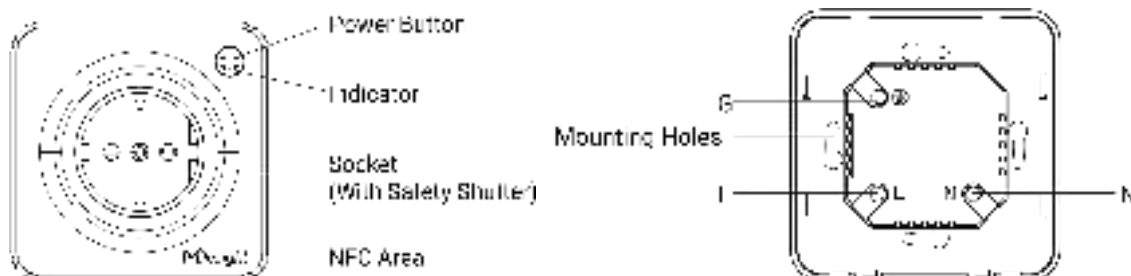

**Note:** Product appearance will differ according to socket types.

## 2.3 Power Button and LED Patterns


| Function                         | Action                                             | LED Indicator  |
|----------------------------------|----------------------------------------------------|----------------|
| Open the socket to supply power  | Press the power button.                            | Off → On       |
| Close the socket to supply power |                                                    | On → Off       |
| Network Status                   | Send join network requests.                        | Blinks once    |
|                                  | Join the network successfully.                     | Blinks twice   |
| Reset to Factory Default         | Press and hold the power button for more than 10s. | Quickly blinks |

**Note:**


- 1) Network status will only display when LED is enabled and on.
- 2) If WS51x still fails to join the network after 32 join requests, the LED will stop blinking.
- 3) Reset operation is not affected even if the button lock is enabled or the LED indicator is disabled.

## 2.4 Dimensions (mm)

**EU Type:**

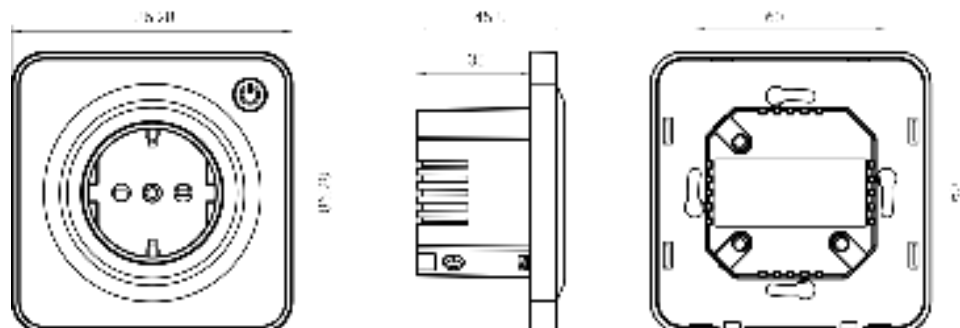

**FR Type:**

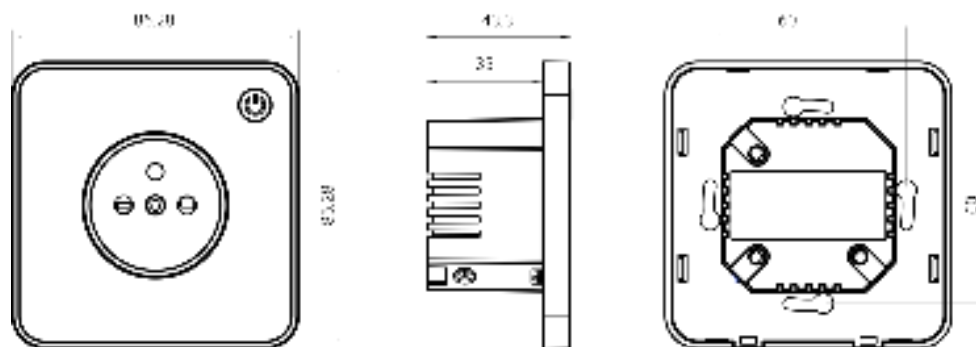


### 3. Installation

#### Installation Note


- ❖ The installation and maintenance must be conducted by a qualified service person and should strictly comply with the electrical safety regulations of the local region.
- ❖ In order to realize the best data transmission, ensure the device is within the signal range of the LoRaWAN® gateway and keep it away from metal objects and obstacles.
- ❖ Ensure the breaker is powered off during the installation.
- ❖ Do not dig the screw holes on the enclosure of this device, otherwise it will break this device.
- ❖ The nominal cross-sectional area of electrical wires should be not more than 2.5 mm<sup>2</sup>, otherwise the wires will be easy to drop from the device.
- ❖ It is suggested to mount the socket with default mounting screws. If using other screws, ensure the width of screw head is not more than 9mm, otherwise it will break the device.
- ❖ Ensure the width of socket box is more than 40mm.
- ❖ Do not leave any object inside the socket box during installation.

#### Installation Steps

1. Ensure the circuit has been turned off and the old socket has been removed.
2. Open the face plate of WS51x wall socket.
3. Loose the screws next to the holes and connect corresponding wires to the WS51x socket.

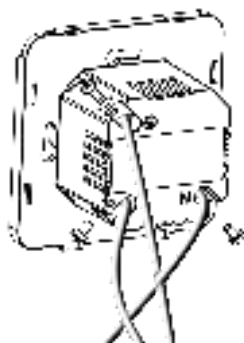

4. Fix the socket to the socket box with mounting screws, then attach the face plate back onto the socket.

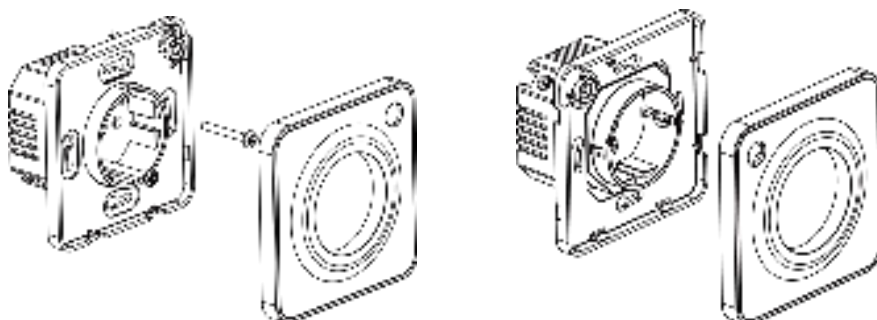

## 4. Operation Guide

### 4.1 NFC Configuration

WS51x can be configured via an NFC supported mobile phone.

1. Download and install “Milesight ToolBox” App from Google Play or Apple App Store.
2. Enable NFC on the smartphone and open Milesight ToolBox.
3. Attach the smartphone to the NFC area of the socket, click **NFC Read** to read device information.



4. Basic information and settings of WS51x socket will be shown on the ToolBox if it's recognized successfully. You can read and configure the device by tapping the **Read/Write** button on the App. In order to protect the security of devices, password validation is required when first configuration. The default password is **123456**.



**Note:**

- 1) Ensure where is the NFC area on your smartphone, and it's recommended to take off the phone case.
- 2) If the smartphone fails to read/write configurations via NFC, keep the phone away and back to try again.
- 3) WS51x can also be configured by ToolBox software via a dedicated NFC reader provided by Milesight IoT.

## 4.2 LoRaWAN Settings

LoRaWAN settings are used to configure the data transmission parameters in the LoRaWAN® network.

### 4.2.1 Basic Settings

WS51x supports basic configurations like join type, App EUI, App Key and other information. You can also keep all settings unchanged by default.

Device EUI

24E124148C371943

\* APP EUI

24e124c0002a0001

\* Application Port

85

Join Type

OTAA

\* Application Key

\*\*\*\*\*

LoRaWAN Version

V1.0.3

| Parameters       | Description                                                           |
|------------------|-----------------------------------------------------------------------|
| Device EUI       | Unique ID of the device which can also be found on the label.         |
| App EUI          | The default App EUI is 24E124C0002A0001.                              |
| Application Port | The port used for sending and receiving data, the default port is 85. |
| Join Type        | OTAA and ABP modes are both available.                                |
| Application Key  | The default Appkey for OTAA mode is                                   |

|                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                | 5572404C696E6B4C6F52613230313823.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Device Address                 | The default DevAddr for ABP mode is the 5 <sup>th</sup> to 12 <sup>th</sup> digits of SN.                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Network Session Key            | The default Nwkskey for ABP mode is 5572404C696E6B4C6F52613230313823.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Application Session Key        | The default Appskey for ABP mode is 5572404C696E6B4C6F52613230313823.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| LoRaWAN Version                | V1.0.2 and V1.0.3 are available.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Work Mode                      | It's fixed as Class C.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| RX2 Data Rate                  | RX2 data rate to receive downlinks or Milesight D2D commands.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| RX2 Frequency                  | RX2 frequency to receive downlinks or Milesight D2D commands. Unit: Hz                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Confirmed Mode                 | If the device does not receive ACK packet from network server, it will resend data once.                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Rejoin Mode                    | Reporting interval $\leq$ 35 mins: the device will send a specific number of LinkCheckReq MAC packets to the network server every reporting interval or 2*reporting interval to validate connectivity; If there is no response, the device will re-join the network.<br>Reporting interval $>$ 35 mins: the device will send a specific number of LinkCheckReq MAC packets to the network server every reporting interval to validate connectivity; If there is no response, the device will re-join the network. Only OTAA mode supports rejoin mode. |
| Set the number of packets sent | When rejoin mode is enabled, set the number of LinkCheckReq packets sent.<br><b>Note:</b> the actual sending number is <b>Set the number of packets sent + 1</b> .                                                                                                                                                                                                                                                                                                                                                                                     |
| ADR Mode                       | Allow the network server to adjust the data transmission rate of the device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Spread Factor                  | If ADR is disabled, the device will send data via this spread factor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Tx Power                       | Transmit power of the device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

**Note:**

- 1) Please contact sales representative for device EUI list if there are many units.
- 2) Please contact sales representative if you need random App keys before purchase.
- 3) Select OTAA mode if you use Milesight IoT Cloud to manage devices.

**4.2.2 Frequency Settings**

Select supported frequency and channels to send uplinks. Make sure the channels match the LoRaWAN® gateway.

**Note:** When **Single-Channel Mode** is enabled, only one channel can be selected to send uplinks and the ADR will not work. Please enable Single-Channel Mode if you connect the device to

DS7610.

\* Support Frequency

EU868

|                          |   |       |   |
|--------------------------|---|-------|---|
| <input type="checkbox"/> | - | 868.1 | + |
| <input type="checkbox"/> | - | 868.3 | + |
| <input type="checkbox"/> | - | 868.5 | + |
| <input type="checkbox"/> | - | 863   | + |
| <input type="checkbox"/> | - | 863   | + |

If device frequency is one of CN470/AU915/US915, you can enter the index of the channel that you want to enable in the input box, making them separated by commas.

#### Examples:

1, 40: Enabling Channel 1 and Channel 40

1-40: Enabling Channel 1 to Channel 40

1-40, 60: Enabling Channel 1 to Channel 40 and Channel 60

All: Enabling all channels

Null: Indicates that all channels are disabled

\* Support Frequency

US915

Enable Channel Index ⓘ

0-71

| Index   | Frequency/MHz ⓘ |
|---------|-----------------|
| 0 - 15  | 902.3 - 905.3   |
| 16 - 31 | 905.5 - 908.5   |
| 32 - 47 | 908.7 - 911.7   |
| 48 - 63 | 911.9 - 914.9   |
| 64 - 71 | 903 - 914.2     |

### 4.2.3 Multicast Settings

WS51x supports setting up several multicast groups to receive multicast commands from the network server, then users can use this feature to control devices in bulks.

1. Enable Multicast Group feature on the device, and set a unique multicast address and keys to distinguish other groups. You can also keep these settings by default.

| Parameters          | Description                                                                                                                                                                                                                                               |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Multicast Address   | Unique 8-digit address to distinguish different multicast groups.                                                                                                                                                                                         |
| Multicast McNetSkey | 32-digit key. Default values:<br>Multicast Group 1: 5572404C696E6B4C6F52613230313823<br>Multicast Group 2: 5572404C696E6B4C6F52613230313824<br>Multicast Group 3: 5572404C696E6B4C6F52613230313825<br>Multicast Group 4: 5572404C696E6B4C6F52613230313826 |
| Multicast McAppSkey | 32-digit key. Default values:<br>Multicast Group 1: 5572404C696E6B4C6F52613230313823<br>Multicast Group 2: 5572404C696E6B4C6F52613230313824<br>Multicast Group 3: 5572404C696E6B4C6F52613230313825<br>Multicast Group 4: 5572404C696E6B4C6F52613230313826 |

2. Add a multicast group on the network server. Take Milesight UG6x gateway as example, go to **Network Server > Multicast Groups**, click **Add** to add a multicast group.



Fill in the multicast group information the same as WS51x settings, and select the devices which you need to control, then click **Save**.

|                                   |                                                 |
|-----------------------------------|-------------------------------------------------|
| Group Name                        | Light Control                                   |
| Multicast Address                 | 11111111                                        |
| Multicast Network Session Key     | 5572404C696E6B4C6F526132                        |
| Multicast Application Session Key | 5572404C696E6B4C6F526132                        |
| Class Type                        | Class C                                         |
| Datarate                          | DR0 (SF12, 125 kHz)                             |
| Frequency                         | 869525000 Hz                                    |
| Frame-counter                     | 0                                               |
| Selected Devices                  | <div>10 24E124136B261600 24E124122A233246</div> |

| General                          | Applications | Profiles      | Device | Multicast Groups  | Gateway Fleet | Packets     |
|----------------------------------|--------------|---------------|--------|-------------------|---------------|-------------|
| Multicast Groups                 |              |               |        |                   |               |             |
| <div>Add</div> <div>Search</div> |              |               |        |                   |               |             |
| Multicast Address                |              | Group Name    |        | Number of Devices |               | Operation   |
| 11111111                         |              | Light Control |        | 2                 |               | <div></div> |

3. Go to **Network Server > Packets**, select the multicast group and fill in the downlink command, click **Send**. The network server will broadcast the command to devices that belong to this multicast group.

**Note:** ensure all devices' application ports are the same.

| General                      | Applications | Profiles | Device      | Multicast Groups | Gateway Fleet            | Packets         |
|------------------------------|--------------|----------|-------------|------------------|--------------------------|-----------------|
| Send Data To Device          |              |          |             |                  |                          |                 |
| Device EUI                   |              | Type     | Payload     | Port             | Confirmed                |                 |
| <div></div>                  |              | ASCII    | <div></div> | 85               | <input type="checkbox"/> | <div>Send</div> |
| Send Data to Multicast Group |              |          |             |                  |                          |                 |
| Multicast Group              |              | Type     | Payload     | Port             |                          |                 |
| Light Control                |              | Hex      | 0010F       | 85               |                          | <div>Send</div> |

## 4.3 General Settings



Reporting Interval: 2 min

LED Indicator: ☒

Power Consumption: ☒

When Power is Restored, Socket: Return to Previous Working State

Button Lock: ☐

Overcurrent Alarm /A: ☐

Overcurrent Protection /A: 10 ☒

Change Password: ☐

| Parameters             | Description                                                                                                                                              |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Reporting Interval     | The interval of reporting socket status and electrical parameters.<br>Default: 20 mins, Range: 1 - 1080 mins                                             |
| LED Indicator          | Enable or disable the light indicating in chapter <a href="#">2.4</a> . This will not affect the blinks when you hold on the button to reset the device. |
| Power Consumption      | Record the power consumption. If disabled, the device will stop recording and the power consumption value will stop updating.                            |
| When Power is Restored | If the device is powered off and restored, the device will switch on or off according to this parameter.                                                 |
| Button Lock            | If enabled, the power button will not be allowed to turn on/off the socket.                                                                              |
| Overcurrent Alarm      | When current reaches the threshold, the device will send socket status and device electrical parameters.                                                 |
| Overcurrent Protection | When current reaches the threshold, the device will stop supplying power.                                                                                |
| Change Password        | Change the password for ToolBox App to write this device.                                                                                                |

**Note:** even overcurrent alarm or overcurrent protection is disabled, the device will also stop supplying power when the current is over rated current by 30%, then send out an alarm packet.

## 4.4 Milesight D2D Settings

Milesight D2D protocol is developed by Milesight and used for connection among Milesight devices without gateway. When D2D setting is enabled, WS51x can work as the Milesight D2D agent device to receive commands from Milesight D2D controller devices or work as Milesight D2D controller device to send commands to trigger D2D agent devices.

1. Ensure the RX2 datarate and RX2 frequency in LoRaWAN settings are the same as the D2D controller device.
2. Enable D2D Agent Settings, and define a unique D2D key to be the same as the setting in D2D controller device. (Default D2D Key: 5572404C696E6B4C6F52613230313823)
3. Define a 2-byte hexadecimal control command (0x0000 to 0xffff) and command action. For example, you can configure a control command 1510 to turn on, turn off or reverse the button as below. WS51x supports 16 control commands at most.

Enable ☒

D2D Key  
5572404C696E6B4C6F52613230313823

Control command 1  
1510

Action Object  
BUTTON

Status  
On

## 4.5 Maintenance

### 4.5.1 Upgrade

1. Download firmware from Milesight official website to your smartphone.
2. Open ToolBox App and click **Browse** to import firmware and upgrade the device.

**Note:**


- 1) Operation on ToolBox is not supported during the upgrade.
- 2) Only Android version ToolBox supports the upgrade feature.



#### 4.5.2 Backup


WS51x supports configuration backup for easy and quick device configuration in bulk. Backup is allowed only for devices with the same model and LoRaWAN® frequency band.

1. Go to **Template** page on the App and save current settings as a template. You can also edit the template file.
2. Select one template file that saved in the smartphone and click **Write**, then attach it to another device to write configuration.

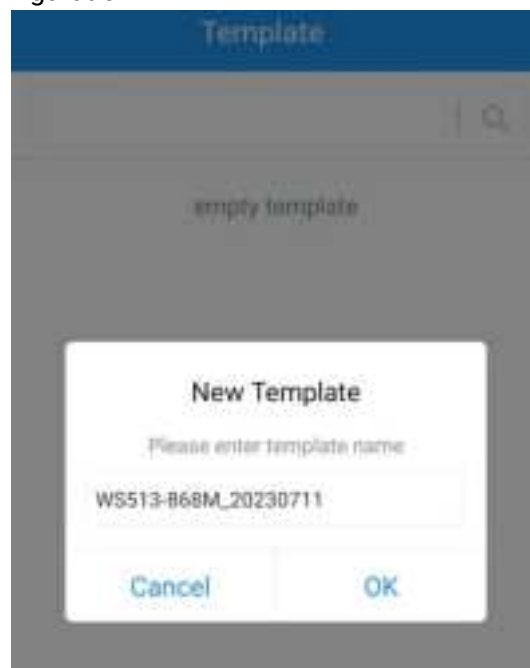

**Note:** Slide the template item to the left to edit or delete it. Click the template to edit the configurations.



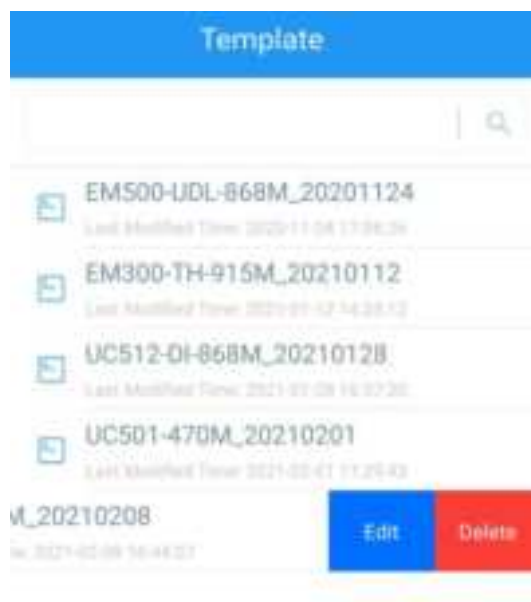

### 4.5.3 Reset to Factory Default

Please select one of the following methods to reset the device:

**Via Hardware:** Hold on power button for more than 10s until LED indicator blinks.

**Via ToolBox App:** Go to **Device > Maintenance** to tap **Reset**, then attach smartphone with NFC area to the device to complete the reset.



## 5. Device Payload

All data are based on the following format (HEX), the Data field should follow little -endian:

| Channel1 | Type1  | Data1   | Channel2 | Type2  | Data2   | Channel 3 | ... |
|----------|--------|---------|----------|--------|---------|-----------|-----|
| 1 Byte   | 1 Byte | N Bytes | 1 Byte   | 1 Byte | M Bytes | 1 Byte    | ... |

For decoder examples you can find at <https://github.com/Milesight-IoT/SensorDecoders>.

## 5.1 Basic Information

WS51x reports basic information of the device whenever it joins the network.

| Channel | Type                        | Description                                                  |
|---------|-----------------------------|--------------------------------------------------------------|
| ff      | 01(Protocol Version)        | 11=>V1.1                                                     |
|         | 09 (Hardware Version)       | 01 40 => V1.4                                                |
|         | 0a (Software Version)       | 01 14 => V1.14                                               |
|         | 0b (Power On)               | Device is on                                                 |
|         | 16 (Serial Number)          | Serial number of this device, 16 digits                      |
|         | 24 (Overcurrent Alarm)      | Byte 1: 00-disabled, 01-enabled<br>Byte 2: current threshold |
|         | 25 (Button Lock)            | 00 00-disabled, 00 80-enabled                                |
|         | 26 (Power Consumption)      | 00-disabled, 01-enabled                                      |
|         | 30 (Overcurrent Protection) | Byte 1: 00-disabled, 01-enabled<br>Byte 2: current threshold |

**Example:**

| ff0bff ff0101 ff166762d21130962038 ff090100 ff0a0108 ff240000 ff30010a ff250000<br>ff2601 |                                |                      |         |                          |                     |
|-------------------------------------------------------------------------------------------|--------------------------------|----------------------|---------|--------------------------|---------------------|
| Channel                                                                                   | Type                           | Value                | Channel | Type                     | Value               |
| ff                                                                                        | 0b<br>(Power On)               | ff (Reserved)        | ff      | 01<br>(Protocol Version) | 01(V1.0)            |
| Channel                                                                                   | Type                           | Value                | Channel | Type                     | Value               |
| ff                                                                                        | 16 (Serial Number)             | 6762d21130<br>962038 | ff      | 09<br>(Hardware Version) | 0100 (V1.0)         |
| Channel                                                                                   | Type                           | Value                | Channel | Type                     | Value               |
| ff                                                                                        | 0a<br>(Software Version)       | 0108<br>(V1.8)       | ff      | 24(Overcurrent Alarm)    | 00=disable<br>00=0A |
| Channel                                                                                   | Type                           | Value                | Channel | Type                     | Value               |
| ff                                                                                        | 30<br>(Overcurrent Protection) | 01=enable<br>0a=10A  | ff      | 25 (Button Lock)         | 00<br>00=disable    |
| Channel                                                                                   | Type                           | Value                |         |                          |                     |

|    |                        |           |  |  |  |
|----|------------------------|-----------|--|--|--|
| ff | 26 (Power Consumption) | 01=enable |  |  |  |
|----|------------------------|-----------|--|--|--|

## 5.2 Sensor Data

WS51x reports socket status and electrical data according to reporting interval (20 mins by default). Besides, when the socket status changes, the device will upload the status immediately.

| Channel | Type                   | Description                                                                                     |
|---------|------------------------|-------------------------------------------------------------------------------------------------|
| 03      | 74 (Voltage)           | UINT16, Unit: V<br>Resolution: 0.1 V                                                            |
| 04      | 80 (Active Power)      | UINT32, Unit: W                                                                                 |
| 05      | 81 (Power Factor)      | UINT8, Unit: %                                                                                  |
| 06      | 83 (Power Consumption) | UINT32, Unit: Wh                                                                                |
| 07      | c9 (Total Current)     | UINT16, Unit: mA                                                                                |
| 08      | 70 (Socket Status)     | 00: Close/Close by Command, 10: Close by button<br>01: Open/Open by Command, 11: Open by button |

### Examples:

#### 1. Periodic package

| 087001 058164 07c90200 0374b208 068301000000 048001000000 |                       |                                               |         |                   |                                                     |
|-----------------------------------------------------------|-----------------------|-----------------------------------------------|---------|-------------------|-----------------------------------------------------|
| Channel                                                   | Type                  | Value                                         | Channel | Type              | Value                                               |
| 08                                                        | 70 (Socket Status)    | 01 => Open                                    | 05      | 81 (Power Factor) | 64=> 100%                                           |
| Channel                                                   | Type                  | Value                                         | Channel | Type              | Value                                               |
| 07                                                        | c9 (Current)          | 02 00=>00<br>02=2mA                           | 03      | 74(Voltage)       | b2 08=>08<br>b2=2226<br>Voltage=2226<br>*0.1=222.6V |
| Channel                                                   | Type                  | Value                                         | Channel | Type              | Value                                               |
| 06                                                        | 83(Power Consumption) | 01 00 00 00=>00<br>00 00 01=1<br>Wh=0.001 kWh | 04      | 80 (Active Power) | 01 00 00<br>00=>00 00 00<br>01=1 W                  |

#### 2. Socket status change

| 087011  |                    |                      |
|---------|--------------------|----------------------|
| Channel | Type               | Value                |
| 08      | 70 (Socket Status) | 11 => Open by button |

## 5.3 Downlink Commands

WS51x supports downlink commands to configure the device. The application port is 85 by default.

| Channel | Type                           | Description                                                                                                                                                                                      |
|---------|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 08      | -                              | 00 00 ff-Socket close, 01 00 ff-Socket open                                                                                                                                                      |
| ff      | 03 (Set Reporting Interval)    | 2 Bytes, unit: s                                                                                                                                                                                 |
|         | 10 (Reboot Device)             | ff                                                                                                                                                                                               |
|         | 22 (Add Delay Task)            | <b>Byte 1:</b> 00<br><b>Byte 2-3:</b> delay time, unit: s<br><b>Byte 4:</b> 10-close, 11-open<br><b>Note:</b> WS51x supports adding only one task.<br>Later command will cover previous command. |
|         | 23 (Delete Delay Task)         | 00 ff                                                                                                                                                                                            |
|         | 24 (Overcurrent Alarm)         | Byte 1: 00-disable, 01-enable<br>Byte 2: current threshold                                                                                                                                       |
|         | 25 (Button Lock)               | 0000-disable, 0080-enable                                                                                                                                                                        |
|         | 26 (Power Consumption)         | 00-disable, 01-enable                                                                                                                                                                            |
|         | 27 (Reset Power Consumption)   | ff                                                                                                                                                                                               |
|         | 28 (Enquire Electrical Status) | ff                                                                                                                                                                                               |
|         | 2f (LED Indicator)             | 00-disable, 01-enable                                                                                                                                                                            |
|         | 30 (Overcurrent Protection)    | Byte 1: 00-disable, 01-enable<br>Byte 2: current threshold                                                                                                                                       |
|         | a5 (Socket Status Reverse)     | 01                                                                                                                                                                                               |

**Examples:**

1. Open the supply of the socket.

| 080100ff |                |
|----------|----------------|
| Channel  | Command        |
| 08       | 01 00 ff=>Open |

2. Set reporting interval as 20 minutes.

| ff03b004 |                             |                                      |
|----------|-----------------------------|--------------------------------------|
| Channel  | Type                        | Value                                |
| ff       | 03 (Set Reporting Interval) | b0 04 => 04 b0 = 1200 s = 20 minutes |

3. Add a delay task: open the socket after 1 minute

| ff22003c0011 |      |           |
|--------------|------|-----------|
| Channel      | Type | Value     |
| ff           | 22   | Byte 1:00 |

|  |                  |                                                     |
|--|------------------|-----------------------------------------------------|
|  | (Add Delay Task) | Byte 2-3: 3c 00=>00 3c=60s=1min<br>Byte 4: 11=>open |
|--|------------------|-----------------------------------------------------|

4. Delete the delay task.

| ff2300ff |                        |       |
|----------|------------------------|-------|
| Channel  | Type                   | Value |
| ff       | 23 (Delete Delay Task) | 00ff  |

5. Enable overcurrent alarm and protection and set current threshold as 10A.

| ff24010a ff30010a |                           |                                            |         |                                |                                            |
|-------------------|---------------------------|--------------------------------------------|---------|--------------------------------|--------------------------------------------|
| Channel           | Type                      | Value                                      | Channel | Type                           | Value                                      |
| ff                | 24<br>(Overcurrent Alarm) | Byte 1:<br>01=>enable<br>Byte<br>2:0a=>10A | ff      | 30<br>(Overcurrent Protection) | Byte 1:<br>01=>enable<br>Byte<br>2:0a=>10A |

6. Reboot the device.

| ff10ff  |                    |               |
|---------|--------------------|---------------|
| Channel | Type               | Value         |
| ff      | 10 (Reboot Device) | ff (Reserved) |

7. Disable the LED indicator.

| ff2f00  |                    |            |
|---------|--------------------|------------|
| Channel | Type               | Value      |
| ff      | 2f (LED Indicator) | 00=disable |

**-END-**

# AirTeq ONLINE MONITORING



API / integratie  
Modbus / MQTT / ODS



Your Cloud



AirTeq Cloud

## Service & Advies

Heeft u vragen of opmerkingen over een sensor? Of zoekt u ondersteuning bij het instellen van de sensor? Onze medewerkers van de afdeling Service staan elke werkdag voor u klaar. U kunt contact opnemen door te bellen of te mailen.

**AirTeq** ONLINE  
MONITORING

Telefoon: 0345 785 611  
E-mail: [support@AirTeq.eu](mailto:support@AirTeq.eu)  
[www.AirTeq.eu](http://www.AirTeq.eu)

Pascalweg 2a  
4104 BG Culemborg  
Netherlands