



SKU	LA-BC55M032US-DW01B&DW01W	
型号+产品名称+文件名称	号+产品名称+文件名称 M55摄像头壁灯 说明书 Olafus	
尺寸(长x宽x高)mm	展开尺寸: 660 X 260mm 折后尺寸110 X 130mm	
材质	105G铜版纸 四色双面印刷 风琴折	
料号	PSBD00SX003Z01	
版本号	Z01	


包装	电子	结构	确认人	审核人
林利诚				
日期: 2023.5.6	日期:	日期:	日期:	日期:

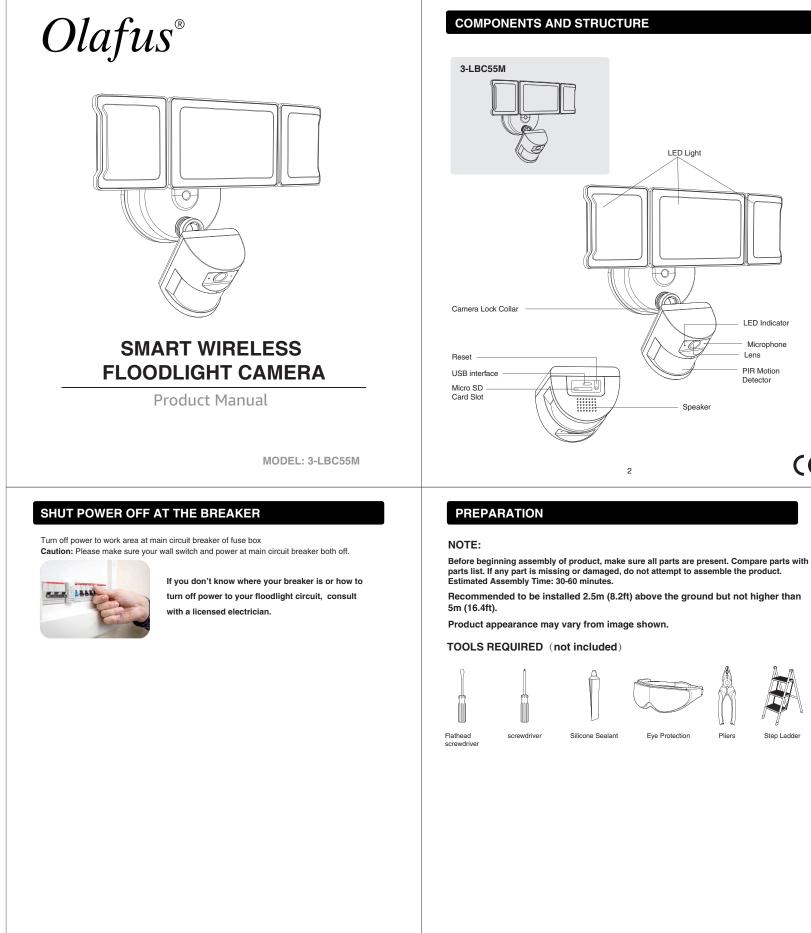


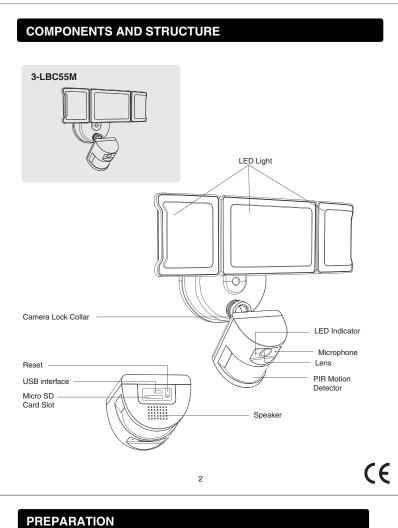

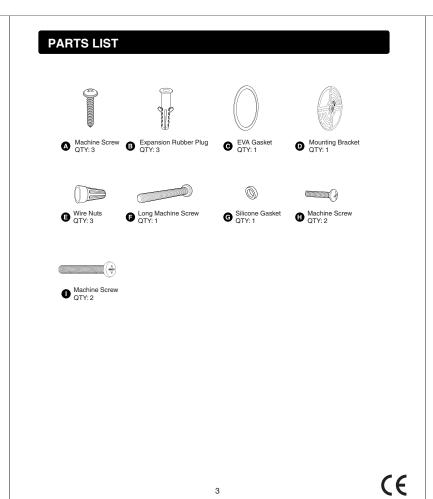

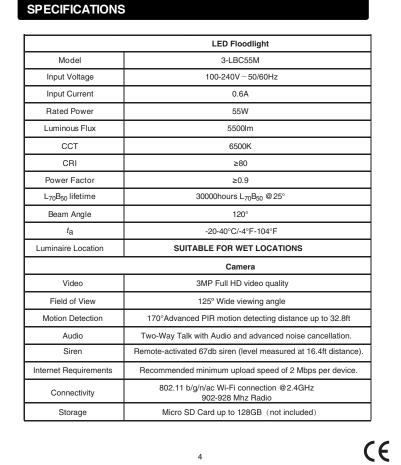

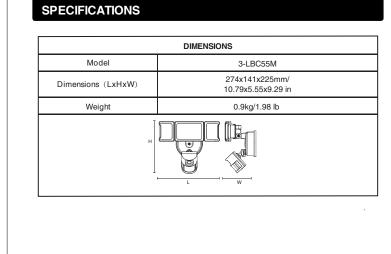

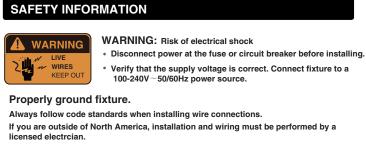

CAUTION: Risk of fire

Do not install near combustible or flammable surfaces.


NOTICE


Do not connect this light fixture to a dimmer switch or timer. Floodlight Camera must be installed on a wall and on a UL listed junction box.


THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

 
DO NOT CONNECT THIS LIGHT FIXTURE TO AN UNGROUNDED ELECTRICAL SYSTEM. ATTACH GROUND FIXTURE WIRE TO EITHER GREEN GROUND SCREW ON MOUNTING PLATE OR THE GROUND WIRE IN THE OUTLET BOX.



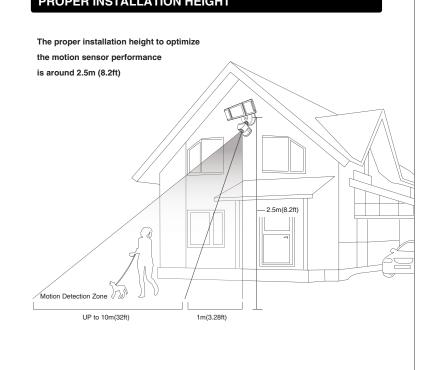

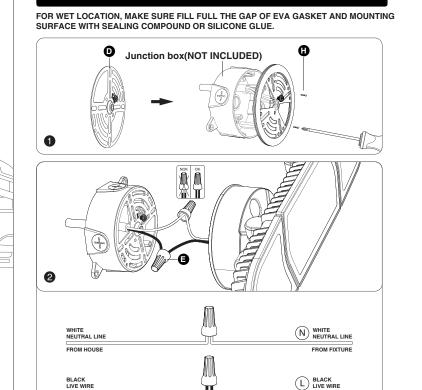

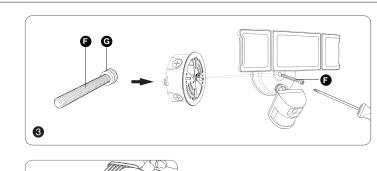







After restoring power, the lights will turn on and your Floodlight Camera will begin speaking to you to let you

CONNECTION PREPARATION

Please install the Floodlight Camera within Wi-Fi overed area to ensure the best working

Make sure smart phone is connected with your wireless router.

Please note that the camera only works with 2.4G Wi-Fi and does not support 5G Wi-Fi. Smartphones (iOS 9.0 or Android 4.4 and above) are supported. Tablets, Mac or Windows


Please don't use special characters, symbols to name the Wi-Fi and its password.









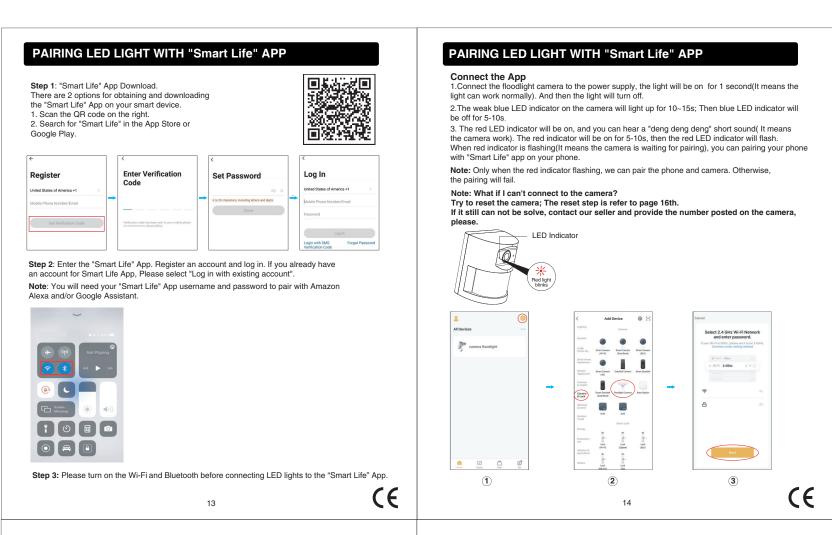



- 1 Tap "+" button on top right corner and tap "Add Device" to add device.
- (2) Tap "Camera&Lock" and then "Floodlight Camera" to enter next page.

PAIRING LED LIGHT WITH "Smart Life" APP

- 3 Enter Wi-Fi password to join your network.
- Please Note: a. This smart LED Light can only support 2.4 GHz network and cannot work with 5.0 GHz network. b. Please check if your home network is 2.4 GHz and make sure that your phone has been connected to your Wi-Fi network.
- Please ensure your network is not hidden. (4) Tap the "Next" button to pair the LED Light
- (5) Put the QR code that appears on the APP in front of the Camera at a distance of 15-20cm (5.9-7.87in). Let the Camera scan the code . When the LED indicator becames blue and flashing, and you can hear a "deng deng deng"
- short sound, it means the camera is already scan the QR code. Press the "I hear prompt" button on your phone. Then you will hear the camera emitsing "deng deng deng" short sound. (It means the camera already found the device, and it is connecting the network.) The blue indicator will continuously flashing.
- (6) Wait for the device to register (about 40-60s).

Share the device

- When the blue LED indicator stop flashing and the light is always on, It means the connected is finished.
- 7 Tap "Done" to complete the light pairing Note: The blue light is on, camera is ready for viewing.

 ϵ

CAMERA LED INDICATOR

NO.	LED Status	Camera Status	
1	Red indicator always on	System starting up	
2	Red indicator flashing	Waiting for pairing to network	
3	Blue indicator flashing	Network pairing	
4	Blue indicator always on	Camera connecting to network successful	

Reset

Note: If the pairing is failed, please long press the resetting key for 3-5s until you see the red indicator flashing and hear "deng deng deng" sounds(means the resetting succeed).


The red indicator will flash for 3s, and turn off. Then the blue indicator will be on for 10~15s, and then off for 5-10s. Red indicator is on, and you will hear "deng deng deng" again, also, the red indicator is flashing. At this time, you can connect your phone to the camera by scanning the QR code. And continue the next step that is shown on page 15th.



(€

Micro SD Card

- To ensure Micro SD Card video recording works steady, we recommend to use a Class 10 or higher speed Micro SD Card.
- To make sure the device works normally, please format the Micro SD Card to FAT32
- Before insert or pull out the Micro SD Card, please power off the device. Insert the Micro SD Card properly into the slot as below.
- It only support Micro SD Card up to 128GB (not included).

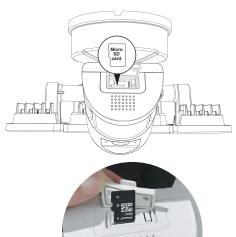

HOW TO OPERATE THE APP Magnify the lens Record a video Take a picture --- Microphone 0 2 2 0 Motion Detection Messages Cloud Features

Note: Micro SD Card is required to watch back. If two way audio is needed, please set in "Settings " - " Basic function settings "-" Talk Mode "- turn on " Two-way talk". Switch for motion detection. ctivate the PIR and adjust its sensitivity. activate the motion detection and monitoring functions, you need to turn "Motion Detection" and "PIR" at the same time. With these functions, u can receive photos and alert notifications that the camera automatically tures when detecting a motion. ress "Siren" to start the alarm. Manually switch on/off the lamp, adjust the brightness and set a timer. heck the monitored information.

HOW TO OPERATE THE APP

Motion detection and








need to turn on "Motion Detection" and "PIR" at the same time. With these functions you can receive photos and aler notifications that the camera automatically captures when detecting a motion. After setting Motion Detection


When turning on the PIR, choose the high sensitivity

To activate the communication and monitoring functions, you sensitivity, We suggest to mode, be sure to remove the slash on the "Earpiece" and turn on the "Microphone".


Two-way talking is supported

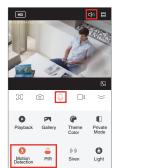

HOW TO OPERATE THE APP

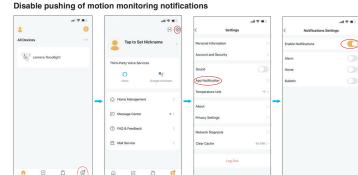

If you want to activate the motion monitoring function, but do not want to frequently receive notifications, you can disable the notification push feature.

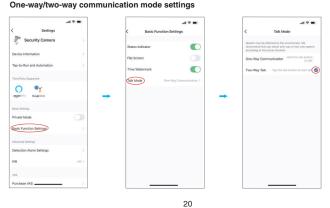





Note: Shared family members can only view monitoring and notifications, but



When you replace your phone, or someone else wants to connect to the device, be sure to remove the device from your old phone first.

Note: For security reasons, the device can only be connected by one person at a time. If someone else wants to see the camera information at the same time, you can refer to "Share HOW TO CONNECT WITH ALEXA SHOW AND GOOGLE ASSISTANT APP

smart lighting-WIFI+BLE-R



Tap " \underline{Z} " and find the third-party voice device you want to connect to and tap it, then follow the

FCC ID: 2AT7E-3-LBC55M

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FAQ

1. What if I can't connect to the camera?

Try to reset the camera; The reset step is refer to page 16th.

If it still can not be solve, contact our seller and provide the number posted on the camera, please.

2. Can't find an Micro SD Card? Firstly we suggest using these famous brands card, like Samsung, SanDisk, Kingston etc. with at

Secondly, please format it to FAT32, which is the only format that camera can support.

3. Floodlight cannot turn on automatically?

If you want the light to turn on in the darkness when people or animal moving, please set on "Motion Detection" and "PIR" on the app. 4. Siren cannot turn on automatically?

Siren is designed to be turned on manually to avoid disturbing your neighbors.

5. Two way audio is not working?

Please go to "Settings" - "Basic function settings"-"Talk Mode"- turn on "Two-way talk".

6. You cannot get the video for a long time? Please first make sure the camera is installed as close as possible to your router. It is not recommended to install the camera in a place where there are two thick walls away from

Please test your network and make sure it works well.

For more questions, please send them via the "Settings" - "FAQ&Feedback" within the app.

HK JW Illumination Co., Limited Unit 616, 6/F., Kam Teem Industrial Building. 135 Connaught Road West, Sai Wan Hong Kong

Manufacturer/Hersteller: MDH LIGHTING LTD Suite 302, 292 Strovolos Avenue, 2048 Strovolos Nicosia,

UK Importer: MDH LIGHTING LTD 69 Aberdeen Avenue, Cambridge CB2 8DL, United Kingdom

Made in China

C € 5k 🚡

22

23

turn on automatically When the camera is in the darkness.



and PIR, lamp can be triggered by moving people or animals to