


morphy richards®

smart ideas for your home



STEAM IRON 2200W

Please read and keep these instructions for future use

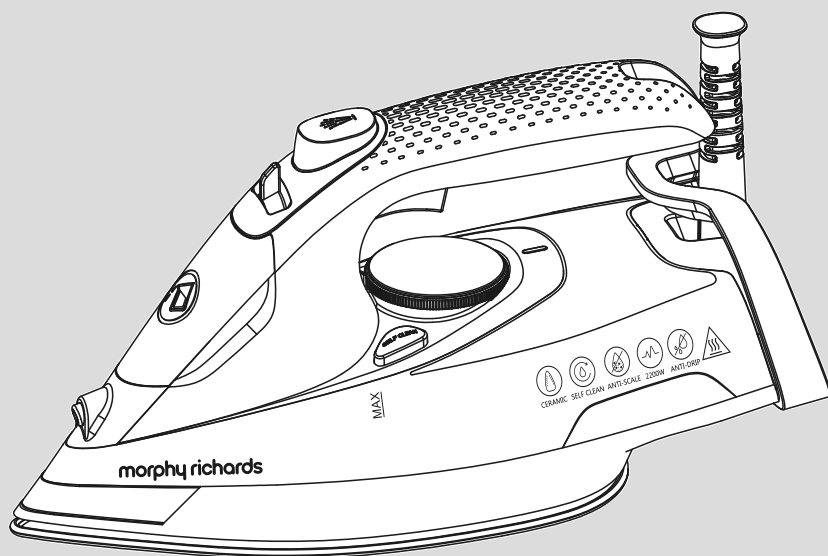

#10880543

www.morphyrichards.com


Important Safety Instructions

The use of any electrical appliance requires the following common sense safety rules.


Please read these instructions carefully before using the product.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge concerning the use of this product, unless they are supervised or have been given instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Close supervision is required when any appliance is used near children or invalids.
- This product is not for people who have sense or visual disabilities and lack of experience and knowledge (including children) to use.
- Always ensure that the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or a qualified person to avoid an electrical hazard.
- This appliance is intended for household use only. Industrial or commercial use will void the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorized service agent.
- To reduce the risk of electric shock, do not immerse plug or the power cord to water or any other liquid.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance. Always unplug the unit when not in use or before cleaning.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire, or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Never use this unit near bathtubs, showers, basins, or other vessels containing water.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
- Do not leave this appliance unattended during use. Always unplug the unit when not in use. Allow it to cool before cleaning the appliance.
- Iron only on an ironing board.

Important Safety Instructions

- Always operate the appliance on a smooth, even and stable surface. Do not place the unit on a hot surface.
- The manufacturer does not accept responsibility for any damage or injury caused by the improper or incorrect use of the appliance, or by repairs carried out by unauthorized personnel.
- In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the appliance to an authorized service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions, could affect the safe operation of this machine.
- Do not allow the cord to touch sharp edges and hot surfaces.
- When you have finished ironing or when you are leaving the iron unattended:
 - a. Turn the steam control knob to “ ” position and turn the Temperature Control to “MIN” position.
 - b. Stand the iron upright.
 - c. Disconnect the iron from the wall outlet.
- **CAUTION:** Hot steam comes out of the iron. Do not remove wrinkles from a garment while some one is wearing it. To prevent burns, do not direct the steam at people.
- Do not touch hot metal parts, hot water, or steam. These parts become hot and may cause burns. Take care if you turn the iron upside down. There may be hot water in the tank.
- The plug and cord should not be allowed to touch the hot soleplate. Allow the iron to cool before taking it away.
- The plug must be removed from the socket-outlet before the water tank filled with water.
- The water inlet cover must not be opened during use.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- **CAUTION:** To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- **CAUTION:** If using for the first time, it is normal to see a few droplets or water residue in the water tank as we test all our steam irons to ensure it is operating correctly with no defects.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - Farmhouses.
 - By clients in hotels, motels and other residential-type environments.
 - Bed and breakfast type environments.

Product Overview

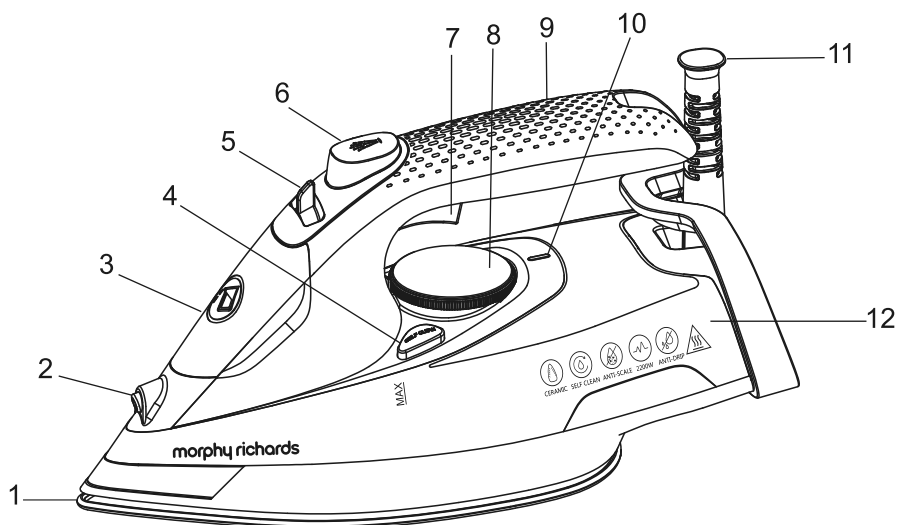

1. Ceramic soleplate	7. Burst steam button
2. Spray nozzle	8. Temperature control dial knob
3. Water filling cover	9. Handle
4. Self clean button	10. Indicator light
5. Steam control knob	11. Power cord protector
6. Spray button	12. Water tank

Function

1. Steam Ironing.
2. Temperature regulating, Water spraying, Dry ironing, Variable steam, Bursting steam.
3. Anti-drip, Anti-scale and Self-clean.

Caution:







This symbol means that surface could get hot during the use.

Hints Before First Use

1. Some parts of the Iron have been slightly greased and as a result, the iron may smoke slightly when switched on for the first time. It will not happen again after a few uses.
2. Remove protective wrappings and labels from the soleplate and clean it with a soft, damp cloth.
3. When using the iron for the first time, test it on an old piece of fabric to ensure that the soleplate and water tank are completely clean.
4. Wait for about three minutes before ironing heat sensitive fabrics. Temperature adjustment need a certain time to reach the required level – no matter if it is higher or lower.
5. Delicate fabrics such as silk, wool, velour, etc. are best ironed with an ironing cloth to prevent shine marks.
6. Turn the temperature control to the desired setting by aligning the setting on the dial with the temperature indicator. The indicator light will turn on to indicate that the iron is heating to the selected temperature. When the indicator light goes out the iron is at the selected temperature and is ready for use.


Setting The Temperature

1. Always check garment label for ironing instructions before ironing garment.
2. If the ironing instructions are missing, then the table below may help you.
3. First you should sort the laundry: Wool with wool, Cotton with cotton etc. Start ironing the fabrics requiring the lowest temperature and progress to the higher ones because the iron heats up quicker than it cools down.
4. Test ironing a small area on the backside or inside of the garment if you are unsure about the type of fabric. Start with a low temperature and increase gradually.
5. If the fabric consists of various kinds of fibers (e.g. cotton with polyester) you must always select the ironing temperature for the material with the lowest recommended temperature.
6. Pure wool fabric (100% wool) can be ironed with the appliance in the steam position by preference, select a high steam position and use a dry ironing cloth.
7. Turn the temperature control to the desired temperature setting.
8. The desired temperature has been reached when the indicator light has turned off. The indicator light will turn on and off from time to time, indicating that the selected temperature is being maintained.


LABEL	KIND OF TEXTILE
	Do not Iron this article
	Synthetics (Nylon, Acrylic, Rayon, Polyester)
	Wool, Silk
	Cotton
MAX	Linen

Operating Instructions

Filling The Water Tank

1. Before filling water, please pull out the plug first.
2. Turn the steam control knob to “” position.
3. Open the water filling cover, pour tap water from measuring cup through the water inlet hole into the water tank.
**Do not fill the water tank beyond the “MAX” indication.
4. If the water in your area is particularly hard, it is advisable to use distilled or demineralized water.
5. Do not use vinegar, starch or chemically descaled water.
6. Do not put perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank.
7. Press to close the water filling cover.

Dry Ironing

1. Plug into the power supply.
2. Turn the steam control knob to “” position.
3. Turn the temperature control in a clockwise direction; select ● (1 dot), ●● (2 dots) or ●●● (3 dots) or “MAX” according to the recommendation of the garment label.
4. Indicator light will light up, then put the iron on a smooth and stable surface vertically.
5. When the required temperature is reached; indicator light goes off. The iron is ready for use.

Spray Function

1. This function can be used any time and it does not affect the ironing temperature.
2. Make sure there is enough water in the water tank. The water filling cover must not be opened during use.
3. Aim the nozzle toward the garment.
4. Press the spray button a couple of times to moisten the garment.

Steam Function

1. Make sure there is enough water in the water tank. The water filling cover must not be opened during use.
2. Plug into the power supply.
3. Turn the temperature control in a clockwise direction to “●●●” (3 dots) or “MAX” setting. (Do not use 1 dot or 2 dots setting for steam ironing). Indicator light will light up indicating the iron is switched on.
4. After the indicator light switches off, which indicate that the selected temperature has been reached.
5. Turn the steam control knob to the required position. Steam will be sprayed and you can start ironing.
6. During breaks in ironing, stand the iron upright.
7. When you are finished ironing, pull out the plug from the power supply and allow to cool. Turn the iron upside down and allow the water to drain out.

CAUTION: Avoid coming in contact with ejected steam

Operating Instructions

Bursts of Steam Function

1. This function provides an extra amount of steam to remove stubborn wrinkles.
2. Fill the water tank with water. The water filling cover must not be opened during use.
3. Plug into the power supply.
4. Set the temperature control to the "MAX" position, otherwise, water may leak from the soleplate if the temperature is low. Indicator light will illuminate to indicate that the iron is switched on.
5. Indicator light switches off when the required temperature is reached.
6. Press the burst steam button once.
7. It may be necessary to press the burst steam button a few times to start function.
8. Steam will penetrate into the garment removing the wrinkles.
9. Wait for a few seconds before pressing the burst steam button again when there are stubborn wrinkles.
10. For optimum steam quality, do not use the bursts of steam more than three times after the indicator light goes off.


Anti-Scale

The anti-scale function filtrate the minerals from the water to prevent mineral residue build up at the steam chamber.

Anti-Drip

The iron automatically stops steaming when the temperature is too low to prevent water from dripping out of the soleplate.

Self-Cleaning Function

1. This function removes the scales and minerals built up in the Steam Chamber. The iron will remain in the best condition if this function is performed at least once a month or more regularly depending on the hardness of the water used.
2. Fill the water tank up to the max level and stand the iron upright.
Caution : Keep skin/body away from the hot surfaces.
3. Plug into the power supply.
4. Set the temperature control to the "MAX" position. Indicator light will light up indicating the iron is switched on.
5. Indicator light switches off when the required temperature is reached.
6. Hold the iron horizontally over a sink.
7. Press the self-clean button for about 1 minute, strong steam and hot water will be sprayed to clean the steam chamber. Use the function once every two weeks.
8. Disconnect the iron from the electric outlet.
9. When self-cleaning is complete, turn the steam control knob to "  " position and turn the temperature control to "MIN" position. Turn the Iron upside down and allow water to drain out.

Care And Cleaning

1. Turn the temperature control to "MIN" position, then disconnect the iron from the wall outlet and let it cool down completely.
2. Deposits and other residues on the soleplate can be removed with a cloth soaked in a diluted vinegar/water solution.
3. To clean the exterior of your iron, wipe with a damp soft cloth and wipe dry.
4. Do not use scouring pads, abrasives or harsh cleaners to clean the soleplate.
5. Keep the soleplate smooth, do not iron over sharp objects such as buttons, studs, and zippers.

Storage

1. Turn the steam control knob to "OFF" position and turn the temperature control to "MIN" position.
2. Disconnect the iron from the wall outlet.
3. Hold the iron upside down and gently shake it to remove the water remaining in the water tank.
4. Stand the iron upright and let it cool down completely.
5. Always store the iron on its heel rest.
6. Do not store the iron with the soleplate facing down, or in the carton.
7. Please keep it in a cool and dry place away from direct sunshine

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
 2. The appliance has been used on a voltage supply other than that stamped on the products.
 3. Repairs have been attempted by persons other than our service staff (or authorized dealer).
 4. The appliance has been used for hire purposes or non-domestic use.
 5. The appliance is second hand.
 6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.
- These guarantees do not confer any rights other than those expressly set out above and do not cover any claims for consequential loss or damage. These guarantees are offered as an additional benefit and do not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instruction.

Disclaimer



Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

WARRANTY

**PLEASE AFFIX YOUR RECEIPT/PROOF OF PURCHASE HERE.
IN THE EVENT OF A CLAIM UNDER THIS WARRANTY THE AFORESAID
RECEIPT/PROOF OF PURCHASE MUST BE PRODUCED TOGETHER WITH THIS
WARRANTY.**

Model number	(Lot number:)
Product name	
Date of purchase	
Place of purchase	

1. The party selling the product ("the seller") to the original purchaser of this product ("the customer") hereby warrants that this product will be of good quality and, in good working order and, free of defects and suitable for its intended purpose under normal household use, for a period of 2 (two) years from the date of purchase ("warranty period") of this product.
2. In the event that the warranty period has not lapsed and the product is not of a good quality, or in good working order or, is defective or is not suitable for its intended purpose under normal household use, the customer may, subject to paragraph 3 below, return the product to the seller and have the following options available:
 - 2.1 Within the first 6 (six) months of the warranty: to receive a refund of the actual price paid or exchange the product for the same or similar product of the same purchased value;
 - 2.2 Within the second 6 (six) months of the warranty: to have the product exchanged for the same or similar product of the same purchased value.
3. The seller will not replace the product or refund the customer in terms of this warranty if the product:
 - 3.1 has been altered contrary to the instructions provided in the product manual;
 - 3.2 has been misused, abused or tampered with;
 - 3.3 is defective or not in working order due to ordinary wear and tear;
 - 3.4 is damaged resulting from the customer's gross negligence, recklessness, malicious behavior or criminal conduct;
 - 3.5 has been utilised for commercial use.
4. This warranty applies only to the product that has been purchased from the seller and not to any expendables attached to or installed on the product by the customer.
5. Any claim in terms of this warranty must be supported by the original proof of purchase.
6. Note that the exchange item will only carry the balance of the warranty period as from the original date of purchase.

