

Technical Support and E-Warranty Certificate www.vevor.com/support

Digital Kiosk USER'S GUIDE

MODEL:DC-A43ZN-B

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.





Digital Kiosk

MODEL:DC-A43ZN-B



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.



FCC Information:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2)This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- · Reorient or relocate the receiving antenna.
- · Increase the distance between the product and receiver.
- · Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for assistance.

IMPORTANT SAFEGUARDS



WARNING: Read all safety warnings, instructions, illustrations and specifications provided with this thermal receipt printer. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

- 1. Do not use this product in areas where it may be exposed to water or other liquids.
- 2.Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 3.To reduce the risk of electric shock, do not disassemble this product. Take it to qualified service personnel when service or repair work is required. Opening or removing covers -like the rear cover plate- may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electric shock when the appliance is subsequently used.
- 4.If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent. Only use the cable provided with the unit. The use of other cables may result in electric shock, fire or cause serious damage to the unit.
- 5.Do not operate the unit in areas with high temperature or high humidity since it may prevent it from working correctly.
- 6. When unplugging the power plug, do not pull it by the cord but rather grip the plug to pull it out. Not following these instructions may result in electric shock, fire or damage to the unit.
- 7.Do not use the unit if the power cord is damaged or if the plug socket contact is loose. Not following these instructions may result in electric shock, fire or other hazards.
- 8.Do not place heavy objects over the cord and do not bend it excessively since it could get damaged. Not following these instructions may result in electric shock, fire or other hazards.
- 9. When not using the unit for a long period of time, remove the power plug from the wall outlet.
- 10. This equipment is not suitable for use in locations where children are likely to


SAVE THESE INSTRUCTIONS

INSTRUCTIONS

- The upgraded screen playback design perfectly solves the problem of playing pictures and videos at the same time and realizes the intelligent split-screen function, which makes your ads more attractive.
- Using Android 11 OS with powerful speakers, supports U disk plug-and-play, remote control operation, and timing on/off.
- The digital kiosk is widely used in commercial centers, airports, hospitals, restaurants and all kinds of stores.

Easy to publish your advertisement by USB disk

● Prepare the pictures and videos which you want to display. (make sure the pictures and videos is suitable for screen that can get perfect visual experience).

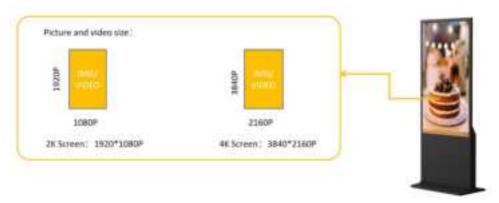

• Copy the software tpcl.exe to the document which your picture is already prepared.




" tpcl.exe " can be found in the USB disk which in the accessory bag.

NOTE: " tpcl.exe " is a picture dealing software that can make sure your picture can be identify by digital kiosk.

■Run the "tpcl.exe" and the picture will be deal automatically.



●When the picture dealing completed, press the Enter key to exit.

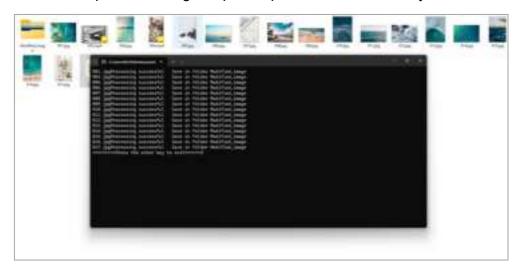

● After picture dealing completed, it will create a new file Modified_image which the dealing pictures all in it.



● Copy the picture to the USB disk.



Notice: Please copy the pictures which in the file "Modified image"


●Insert the USB disk to the digital kiosk.



Publish advertisement by APP



● Click the corner or screen for 4 times to setting mode.

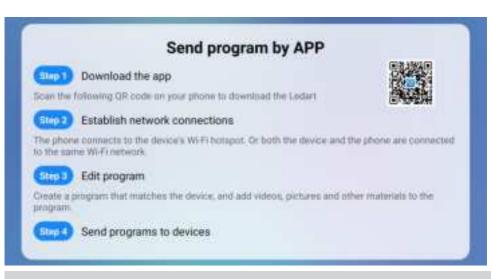

Publish advertisement by Website



• Click the corner or screen for 4 times to setting mode.



Operation instruction

Connect network

Press the menu button on the remote control to enter, Magic Player Setting-> network settings, as shown in the figure:



Timing switch machine

Enter Magic Player Setting -> system control-> switch machine settings, as shown in figure:



System language setting

System Settings-> System-> Languages-> Add the language you want-> Press OK on the remote control and double-click the language you added to make it take effect.



U disk playback setting

Magic Player Setting -> System Mode-> Select Stand-alone Mode:





① Click on SystemMode ② Select single machine mode

There are two loading modes:

- One is the copy mode, which copies the pictures or videos in the root directory of the U disk into the system and then plays them.
- ② 2) One is extended mode, which directly plays pictures or videos in the root directory of the U disk.

Installation Steps



Accessories List

```
User's Guide * 1,
Power cord * 1,
USB flash drive * 1,
Screw * 8,
Roller * 4,
Key * 1.
```

Matters Need Attention

If there is a hand pressing the screen, the touch screen operation will not be responded to at this time.

Scan the QR code for more installation and usage video information.



Sanven Technology Ltd.

Address: Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730



Technical Support and E-Warranty Certificate www.vevor.com/support