

USER MANUAL



Car MP5 Player

Car-Play wired + wireless(optional)



Customer service:

We have done our best to deliver a high-quality product and we'll continue doing so, doing so, recommend does not to install the product yourself.

We recommend having it professionally installed by a certified professional.

If you decide to install the unit by yourself please do read the user manual carefully and follow the installation steps.

Tips and Warnings

In order to emphasize the important information of the user manual, special attention should be paid when seeing the label  , which indicates some important warnings and reminders.

Safety Notice

Read all instructions before installation. It is recommended that the machine be installed by a car audio professional.

This machine is suitable for the vehicle 12V power supply system (the ground wire must be grounded), please do not install the machine in the 24V vehicle, otherwise it will damage the machine.

Do not repair the power fuse without professional guidance. Improper use of the fuse can cause damage to the machine and cause a fire.

To avoid violating traffic rules, drivers cannot watch videos while driving and operating machines to avoid unnecessary accidents.

For the sake of safety and to ensure the normal use of the product, please invite professionals to install, disassemble or repair the machine to avoid machine damage and accidents.

Please do not placing this product in a humid environment and water in case causing fire due to electric shock or other unnecessary damage.

Read the Entire Manual

- Keep The Manual
- Clean with A Dry Cloth only

- Follow All instructions
- Do Not Use Or Operate Near Water
- Do Not Defeat Any Safety Features

Note: To Prevent Burning The Machine, Do Not Turn On The Power Until The Power Cord Is Properly Connected!

⚠ Please check the speaker line carefully before installation . If any grounding or touching, Please connection again or the unit will be burned . The positive and negative terminals of the power supply must not touch or short circuit, otherwise the machine will be immediately damaged . The speaker wire must not touch each other, and the speaker wire must not touch the power supply wire either, otherwise the machine will have no sound and will be immediately damaged.


Test

A quick simple test before the installation is to confirm that the device is working normally and as expected in case there is a wrong step in the subsequent installation, which will cause it to fail to work. If you perform a successful test but the unit did not work after installing it please recheck the installation steps.

Test car stereo:

Step1

Test car stereo: ① The red and yellow wires of the car stereo combine together firstly and then connected to the positive pole of the battery. ② The black wire is connected to the negative pole of the battery. ③ 2 seconds later, check the car stereo, if the screen is lighting up, it means the car stereo is proper functioning.

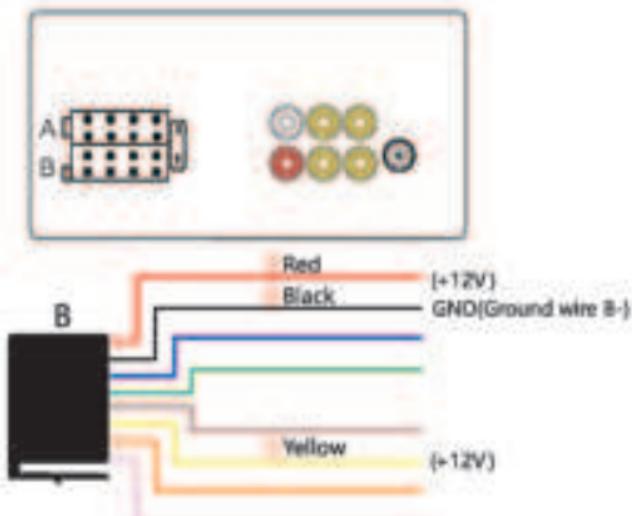


(Note: The picture is for reference only, please refer to the actual product)

Test rear view camera

Step2

Test rear view camera: Holding the Step 1 connection, ④ and then the pink wire is connected with the top red wire of the rear view camera, ⑤ The middle red wire and the bottom red wire of the rear view camera combine together and then connected to the ⑥ (which the red and yellow wires connected to the positive pole of the battery) ⑦ The black wire of rear view camera is connected to ⑧ (which the black wire is connected to the negative pole of the battery). At this time , if the camera lights up, and the car stereo shows the reverse image, it means rear view camera is proper functioning .

The reverse camera needs to be purchased separately

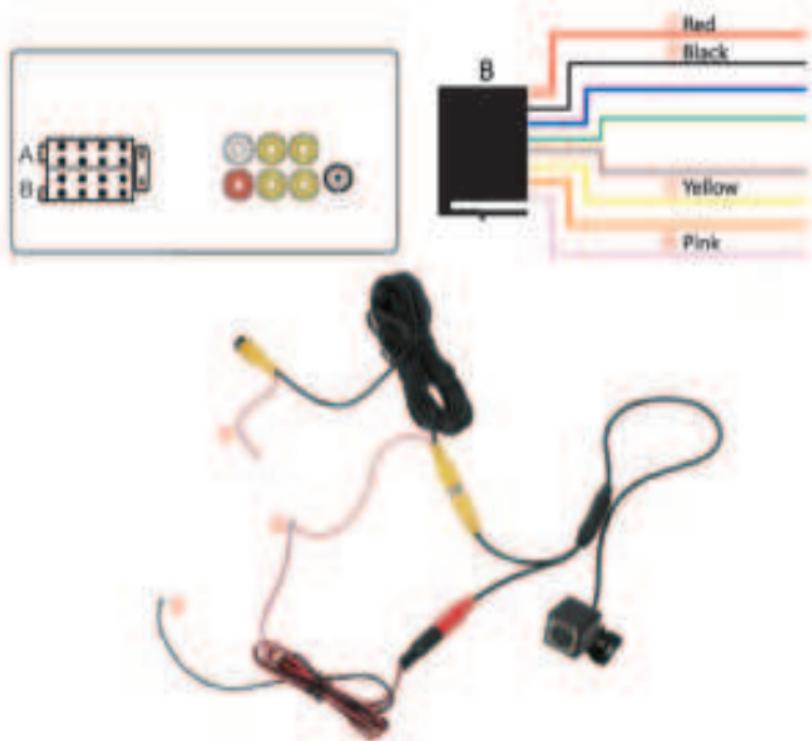


After completing the steps of the test, the car stereo is ready to be installed in your car.

Wiring diagram reference

Attention: The specific wiring is subject to the actual product.

Example 1

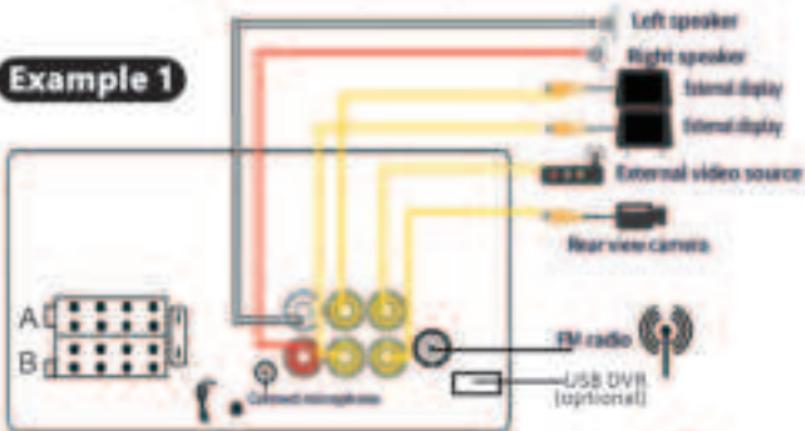

A


Red	ACC/Ignition Switch +12V
Black	GND(Ground wire B-)
Blue	ANT(Auto Antenna Power)
Green	ILL(Headlight control line)
Brown	KEY1(Steering wheel controls)
Yellow	B+(Power Supply +12V)
Orange	Parking single check
Pink	Parking Sensor Control Wires

B

Green	Rear Left Speaker+
Green/Black	Rear Left Speaker-
White	Front Left Speaker+
White/Black	Front Left Speaker-
Gray	Front Right Speaker+
Gray/Black	Front Right Speaker-
Purple	Rear Right Speaker+
Purple/Black	Rear Right Speaker-

Attention: The specific wiring is subject to the actual product

Example 2

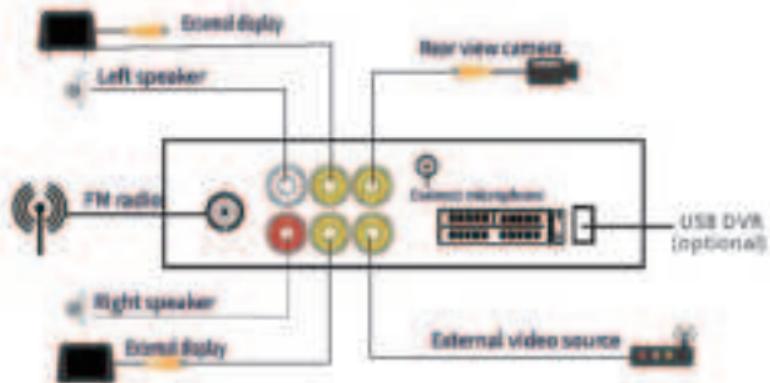

Orange
Orange/Black
Orange/Black
Pink
Brown
Red
Blue
Green/Black
Green
Purple/Black
Purple
White/Black
White
Grey/Black
Grey
Black
Yellow

- LL (Luminate Backlight)
- Steering Wheel Control(2)
- Steering Wheel Control(1)
- Reversing Camera Wires
- Brake Detect
- +12V Ignition switch
- Auto Antenna
- Rear Left Speaker-
- Rear Left Speaker+
- Rear Right Speaker-
- Rear Right Speaker+
- Front Left Speaker-
- Front Left Speaker+
- Front Right Speaker-
- Front Right Speaker+
- Ground Wire(3-)
- +12V Constant
- Power Supply(B+)




MACHINE INSTALLATION

Common disassembly instructions. Different models may vary, this image is for reference only


The size of this car stereo is universal, suitable for most cars, and can be easily installed by following the steps below. But if you find that the unit is not suitable for your car, please consider these four methods. You may need three aftermarket accessories to complete your installation: - Double DIN dash kit for [your car model]. - Wire harness (Connects car wiring to stereo wiring) for [your car model]. - Antenna adapter for [your car model]. You can find the correct aftermarket accessories by searching the year, make, and model of your vehicle on Amazon or Google. - Or you would need to mill the original frame of your car.



1 Screw fixed installation

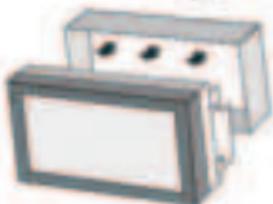

2 Card position fixed installation

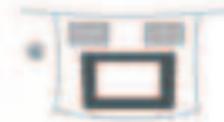

3 Special frame fixed installation

FUNCTION DESCRIPTION

-5 Touch Screen

BT/FM/USB MP3

With USB port

Support the Audio playback format of MP3/WMA/WAV/FLAC/OGG/APE

Support the Video playback format of

RM/RMVB/DVD/DVD+/-RW-DAT)MP4/MF2/DIVX/XVCD/VCD/H263/-204/-

DivX/3GP/3GP2/AVI/ASF/JPEG etc.

FM Range 97.5 MHz - 100.90 MHz(Europe)

With Remote Control

Supports with auto-memory store function under radio in DSD mode

Clock Function

Volume Function

BT Function

Bass & Treble, 2.5 channel stabilizer

Smart view function

Video input Function

USB interface charging

Phone Link(Options)

Tip: Different models have different functions. The specific functions are subject to the actual product.

Common icon function instruction

Video and Music function buttons

	HOME button		The next song
	Random pattern		Single/list loop
	Fast backward function		Sound shortcut key
	Pause/Play		Return key

Due to different versions, the icon functions may vary, this information is for reference only.

【Icon introduction】

1. Machine - Host

1		Last song
2		Press it long time to turn on/off Press it. Short time to enter into Switch mode.
3		Next Song
4		VOL+
5		VOL-
6		Built-in microphone hole
7		Reset(press with a sharp object)
8		External audio input jack
9		Screen pop-up/screen slow (electrically retractable)
10		Screen angle adjustment (electrically retractable)
11		Return to the main interface
12		Return to the previous interface

Function description. For reference only

Radio

Click on the "FM/Radio icon" on the menu to enter radio mode. Band Selection Press "FM" turn FM to radio mode, then press "FM1" to select different band of programs (FM1/2/3) Browse/ Auto Memory stations Press "AS/PS", it will browse the saved stations on the band (each last for 10 seconds). When you come across the desired radio station while browsing, please press it and it will start playing the selected station. Hold "AS/PS" last 3 seconds for storage the stations automatically. Radio will start to search and storage the stations automatically from the present band. Memo-ize the strong signal firstly, then the weak signal.

1. Manual search: Press or can be manually up or down to convert different radio frequency

2. Auto search: Hold or can be automatically up or down to search different radio frequency.

USB/TF play

Insert the USB flash drive/TF card to play videos and music. The USB interface also supports charging for the phone.

Audio/ Vedio input

Click on the application icon to enter the application interface, where you can enter the audio and video play track interface. Select the audio and video file to play. Audio/Video support

formats: AVI, MKV, QT, MPG, ASF, FLV, RMVB, MP3, WMA, ACC, WAVE, FLAC, APE, OGG, MP4 etc; Image supported formats: BMP, GIF, JPEG, PNG

Steering Wheel learning

The steering wheel learning steps are as follows:

- (1) Press any button on the steering wheel, the interface will display a long press on the steering wheel, and you will not be able to Learn without pressing the steering wheel button for awhile
- (2) Click on the screen to learn the docking function
- (3) Click the corresponding function button on the steering wheel and repeat 1/3 steps in sequence until all the control buttons on the steering wheel are completed.
- (4) The implementation conditions of this function:
 - (5) Original steering wheel for non-bus control
 - (6) The steering wheel key of the original car must be the voltage input control method.

BT

1. Click settings icon to enter setting page, and then click BT icon to enter BT connection page.

2. Search the BT name of the device, the phone will pop up the relative matching cases, click and confirm to match and connect.

PIN Number: "0000" or "1234" or "88888888" (if need)

3. Pairing devices When the car is not paired with a device, go to Phone>Settings>BT>Search for Device>Find the BT name "CAR***" of the host to connect. The phone will pop up a PIN code box, enter (PIN code on the settings interface) or combine directly, and display "Phone Device Name" to indicate successful connection.

4. Call function

① Click on the number in the interface to input the phone number.

If the input is incorrect, click to delete it one by one.

② After entering the phone number,

press to dial;

Press to end the current call.

5. Telephone directory

① Enter the phone book interface. Click the [Sync Contact] button to confirm the pop-up synchronization contact book request.

② Search for contacts: After synchronizing the contacts, clicking the button will pop up a search box. Enter English letters to search.

6. BT music playback function

① BT music playback interface, which can be connected to a BT phone for playback/pause/stop function operations.

② Use BT music function to play songs on your phone. You must first go to the music page on your phone and then click play to play some music players.

The previous song

Pause/Play

Next song

AUX

The AUX line is transmitted to the original car player.(Only some models support)

Mirrorlink (Optional)

Click "Mirrorlink icon" menu enter Phone link, you can use connect your phone to the MPS.

- 1.Only when the phone's display mode is set to "landscape" can the car stereo display be shown in full screen.
- 2.BT must be connected in order to synchronize audio from the mobile phone to the car stereo.
- 3.If the phone screen is turned off, the car stereo display will also turn off simultaneously.

For android mirror link

When using an Android device, after connecting the USB data cable, you will be prompted to install the APP software. After installation, Plug the data cable again, it will enter the screen mirroring mode. And it can be operated on both the player screen and the phone screen. Only the image transfer is successful at this time. The sound can only be transmitted after the Bluetooth connection is successful.

1. For wired mirror link (supported by some models)

Use the data cable to connect the device with the Android mobile phone and confirm the authorization request on the mobile phone



2. For wireless mirror link (supported by some models)

Please use your mobile phone to wirelessly search for this product device and connect to it.

For iphone mirror link

Note: There are a small number of phones with high configuration that are not suitable for this function. This function varies depending on the product model and connection method, and the actual product shall prevail.

1. For wired mirror link (supported by some models)

Use the data cable to connect the device with the Apple phone, and confirm the authorization request on the phone.



2. For wireless mirror link (supported by some models)

Please use your mobile phone to wirelessly search for this product device and connect to it.



Apple CarPlay (wired & wireless) (optional)

Please refer to the specific model support

1. Wired connection: Just connect the USB data cable, and then it will automatically enter the CarPlay interface.

2. Wireless connection: first turn on the BT and wifi functions of the mobile phone, and then connect the BT. Then it will automatically enter the CarPlay interface.
(Note: The signal is transmitted through wifi at this time so even if the BT function is turned off, it will be transmitted normally. When the wifi function is turned off, CarPlay will be disconnected.)



These are simulated screenshots for reference only.

Android Auto (wired & wireless) (optional)

Please refer to the specific model support

This feature is not supported in all countries, and "Google Play" services need to be available locally.

1. Need to download and install "Android auto" software in "Google Play"

2. A mobile phone with Android 6.0 or higher is needed. Must use a valid data cable connection.

3. Wired connection: Just connect the USB data cable, and then it will automatically enter the Android Auto interface.

4. Wireless connection: First turn on the BT and wifi functions of the mobile phone, and then connect the BT. Then it will automatically enter the Android Auto interface. (Note: The signal is transmitted through wifi at this time, so even if the BT function is turned off, it will be transmitted normally. When the wifi function is turned off, Android Auto will be disconnected.)



You can also control your phone directly via the vehicle's touch screen.

REVERSING CAMERA CONNECTION (CCD)

The reversing video input can be connected through the RCA adapter cable. When there is a signal at this port, the LCD will automatically switch to the camera image. (The camera is purchased separately.)

1. Please refer to Rearview Camera installation before using.
2. If the rearview camera is not installed, it will display 'No Signal'.
3. 'Rearview Cam' can be triggered ways:
Press 'Rearview Cam' icon in main interface or Reverse gear of vehicle.
In case of being triggered by reverse gear, it will automatically enter and display the rear view image.

[Safety Warning]:

When driving normally, please try not to turn on the rearview cam to avoid distracting attention.

Rear View Camera Wiring


When using the rear view reversing function, the system will automatically disconnect the link with the mobile phone, such as calls and music in BT mode, mobile phone mirroring links, etc., which are all normal.

Note: When installing, Whether You Use a Reversing Camera Or Not, Please Connect The Reversing Cable. Otherwise, Your WiFi and BT Signals Will Be Affected!

1. Monitor

2. Camera Power Source

3. Camera(Optional)

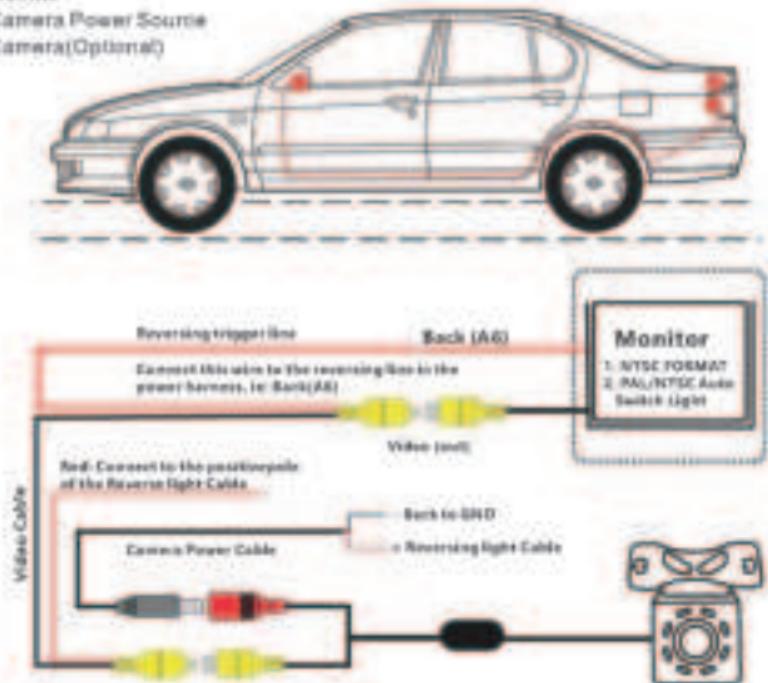

After installation is completed, start the engine and put it into reverse gear. Check whether the monitor automatically displays the rear view image. If it does not work properly, please check whether it is installed correctly.

The last installation step is to adjust the rearview camera angle. Please observe the monitor and adjust the camera angle to make sure that the rear bumper is clearly visible. It is suggested that the rear bumper should occupy 5% of the screen image. Then, lock the lens bracket screws, and end all installation.

Attention: Adjusting the lens angle to see the bumper can improve the safety of reversing, please install in strict accordance with the instructions.

Simple Troubleshooting Guide

Problem	Cause and resolve
Power off	<p>Check if the power fuse has burned out and replace it.</p> <p>If there is a failure in the connection of the DC wires, reconnect them.</p>
Fail in keying	<p>Program disorder, press reset button or turn off the power to restart.</p>
Fail in getting stations	<p>Check whether the antenna has been inserted or connected correctly. If not, please insert the antenna or connect it correctly.</p>
Poor radio reception.	<p>1. Antenna length may not be set up right, check if it reach out completely or is broken down, if it breaks down, please change it for new one.</p> <p>2. Or the radio signal is too weak.</p> <p>3. Antenna is not grounding rightly, please confirm if it connects the ground wire rightly.</p>
"STEREO" flashing	<p>1. tuning the radio frequency accurately .</p> <p>2. Radio signal is too weak.(please press ST button to turn off stereo)</p>
Noise, image jumping, no color.	<p>The disc is damaged or blurry.</p> <p>The color system setup is not correct. Set the color system to "PAL" or "NTSC" according to the connected TV condition.</p>
Remote unavailable	<p>1. The battery of the remote control has no power. Please change the battery.</p> <p>2. The remote control window is unable to receive the signal. Please make sure to aim the remote control at the model's remote receiver window.</p>
USB no reading	<p>The connection is not correct.</p> <p>This card is unsupported.</p>

- 1. Car radio does not turn on, or turns off after power is on.**
- 1. Ensure the red cable is connected to the ignition positive terminal, the yellow cable to the battery-positive terminal (+12V), and the black cable to the battery-negative terminal (-GND). Only use the radio in a 12V output vehicle. Do not use a voltage adapter to power the radio.
 - 1. If the radio switches off after confirming correct wiring, temporarily connect the red and yellow cables to either end of the 12V-positive terminal.
 - 1. If the unit still does not power on, check whether the fuse is blown.
- 2. Car radio powers on but produces no sound, or sound cuts out during playback. (Note: The radio can play USB/SD content but has no audio output. Common causes include:**
- Q: Speaker negative wires are improperly grounded.
 - W: The amplifier IC is damaged or due to a short circuit in the wiring.
2. Turned up speaker volume has a short circuit, and ensure such area is immediately fixed.
2. If you confirm that the wire is correctly wired, you can find a speaker crimp which is soldered, which would easily confirm the problem is from the radio in your car's system.
- 3. Car radio's BT is not working, or it works for a while then disconnects itself.**
- 3.1 Forget the device: Go to your phone's BT settings → Select "CAR-MP3" → Tap Forget This Device.
Re-pair the device later on the MP3's BT → Scan for devices on your phone → Select "CAR-MP3".
Enter PIN (all principles): 0001, 1234, or 00000000 (default code).
 - 3.2 If the last step can't meet the BT track, try to wait the track buffer on the unit's panel and do the reset for entry. If it's convenient enough, you can also try to unlock the power connector behind for 2~3 minutes and repeat it in later.
- 4. Car radio's mic is not working, phone call from the other side can't hear clearly.**
- 4.1 Try to check if the BT volume setting.
 - 4.2 Try to check if the dual microphone is too low (the microphone far for you) or the radio can't collect your voice.
- 5. Car radio cannot read your USB flash disk or SD/TF card. Please confirm whether the capacity of the USB flash disk or SD memory card is turned lower than 32GB disk normally. Please use the other flash disks with fewer songs to test again (please confirm if you insert the SD/TF card in a correct slot).**
- 6. Car radio's remote control does not work. Please check if the remote has the correct battery inside.**
- 7. The reversing camera cannot work in the radio. If you can check the pink cable is wired correctly with the reversing camera's controlling cable. If you don't know how to wire it, you can also contact us for advice.**
- 8. Car radio cannot save the time or radio station setting. Check if the Yellow cable is wired with your car's battery 12V (constant voltage) or not. It provides constant power to the unit and save the setting.**

9. Car radio noise problem.

- 1 For some cars, there might be some noise generated in the playing. Especially when you are using amplifier. Usually, this kind of problem is related with interference. Please make sure all the cables are wrapped well in case of any contact with each other.
- 2 You can find a speaker elsewhere to do an extra test, which could easily confirm the problem is from the radio of your car's system.

10. Screen Mirroring Failure

Step 1: Check device compatibility. Ensure your phone supports Mirroring.

Step 2: Enable car's WI-FI → Activate phone's screen mirroring → Select "CAR-M15".


Step 3: No signal? Restart both devices.

Note that some phones do not support phone mirroring and are not compatible.


The above are common fault detection instructions. Please try to contact us after completing the above steps, and we promise to provide a solution to your problem. We will provide you with appropriate advice or solutions. Some photos or videos will help us solve this problem faster.

Remote Control Description(Optional)

Common button instructions (subject to actual receipt)

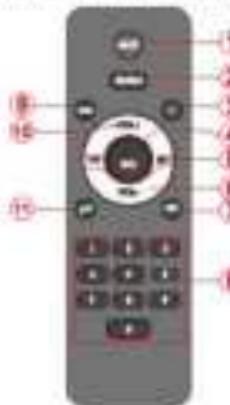

- 1. MUTE
- 2. MODE
- 3. POWER
- 4. ENT
- 5. PREVIOUS/NEXT
- 6. VOLUME-
- 7. HANG UP
- 8. NUMBER
- 9. MENU
- 10. VOLUME+
- 11. ANSWER

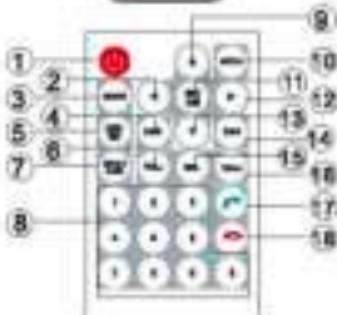

- 1. Power switch
- 2. Right
- 3. Mode switch
- 4. Last song
- 5. USB/SD
- 6. Volume+
- 7. Bars/Automatic/station search
- 8. Digital key
- 9. UP
- 10. Menu
- 11. Confirm/Play/Pause
- 12. Left
- 13. Under the
- 14. Next song
- 15. Choice
- 16. Volume-
- 17. Answer the phone
- 18. Hang up

Please note that for safety reasons we will always have a supervisor present during the trials. Participants will receive free social media (Facebook or Twitter) training and will also gain from access to many performance-enhancing products available on several free social media platforms.