

Logger1000 Commissioning Quick Guide (SG30/50/110CX Inverters)


Disclaimer

The material in this document has been prepared by Sungrow Australia Group Pty. Ltd. ABN 76 168 258 679 and is intended as a guideline to assist solar installers for troubleshooting. It is not a statement or advice on any of the Electrical or Solar Industry standards or guidelines. Please observe all OH&S regulations when working on Sungrow equipment.

This quick guide is to be read in conjunction with the Sungrow's User Manuals and SG30/50/110CX inverters as example for demonstration.

For export control and load consumption, an energy meter (DTSD1352-C/1(6)A with external CT) needed to be connected.

All of the components are connected via daisy-chain RS485 as per standard RS485 topology.

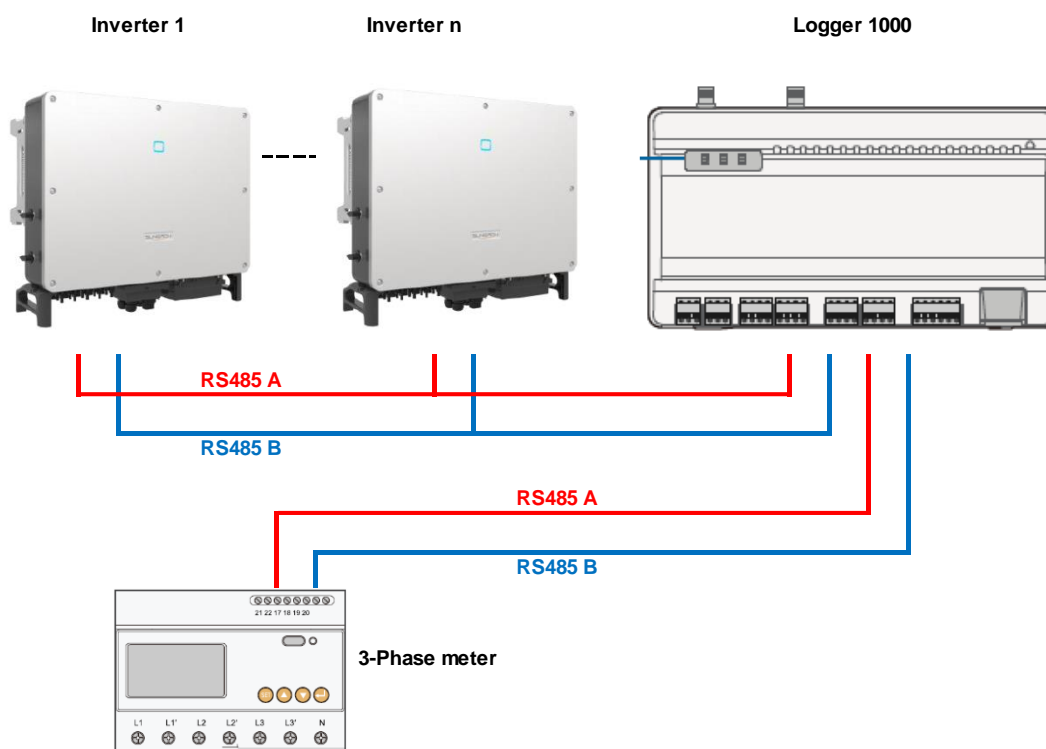

Please use the following checklist for quick commissioning:

Procedures		Yes/No
RS485 connection	RS485 communication cables installed correctly between inverters to Logger1000 by terminal blocks?	
	RS485 communication cables installed correctly between energy meter DTSD1352-C/1(6)A to Logger1000 by terminal blocks?	
Logger1000 web portal setup	Logger1000 Setup via WLAN (11.11.11.1; password: pw1111)	
	Set the local time	
	Auto search inverters	
	Add the energy meter and adjust CT Transformation Ratio	
	Set up export control if required	
Setup Online Monitoring	Create a solar plant via iSolarCloud APP via an installer account	
Remote maintenance	Enable International Server	
	Update iSolarCloud serve domain	
	Check Port Parameter for IP address	

Quick tutorial

Part 1 Logger1000 Overview (click [here](#))


Part 2 Logger1000 Commissioning Setup (click [here](#))

Part 3 Logger1000 iSolarCloud Setup (click [here](#))


RS485 Connection

Recommend that RS485 can be connected by terminal blocks.

Please note SG15/20KTL-MT inverters connection is different as SG30/50/110CX inverters.

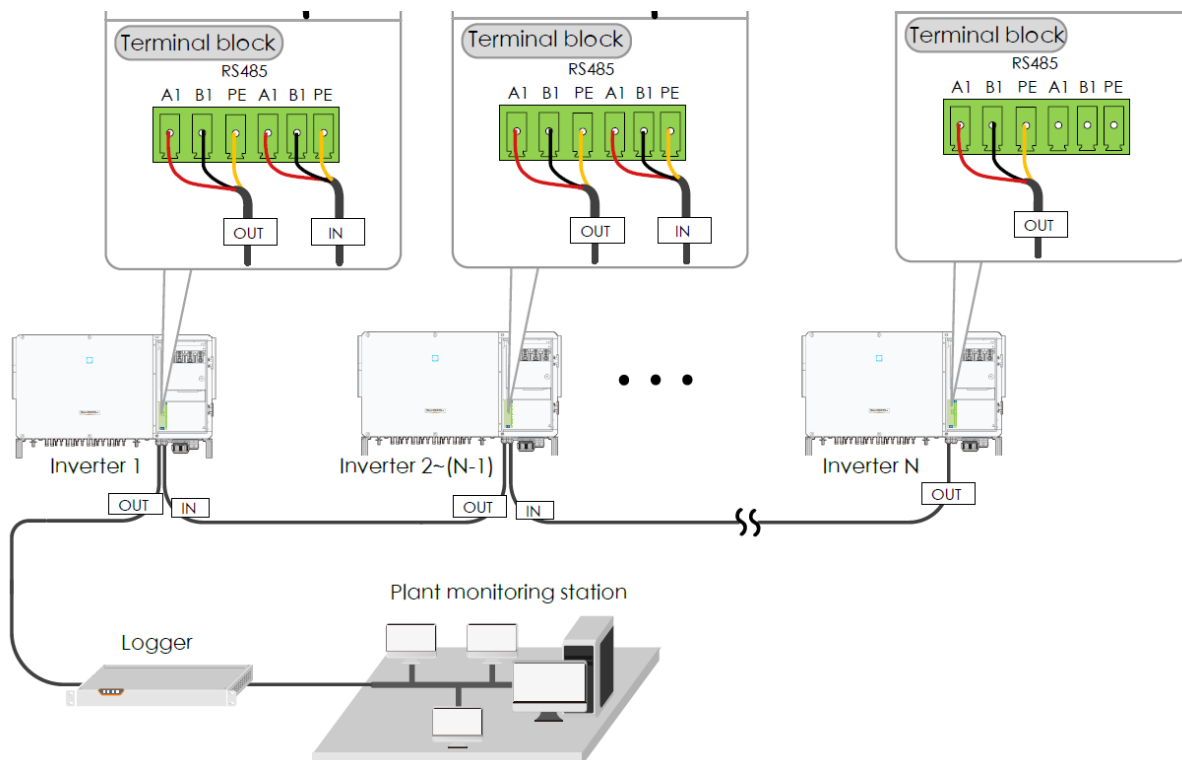

Optional: Ensure the termination resistors (120 Ohm) are enabled ON (SW1) at each end of the RS485 in the inverter line when more than 15 inverters are connected.

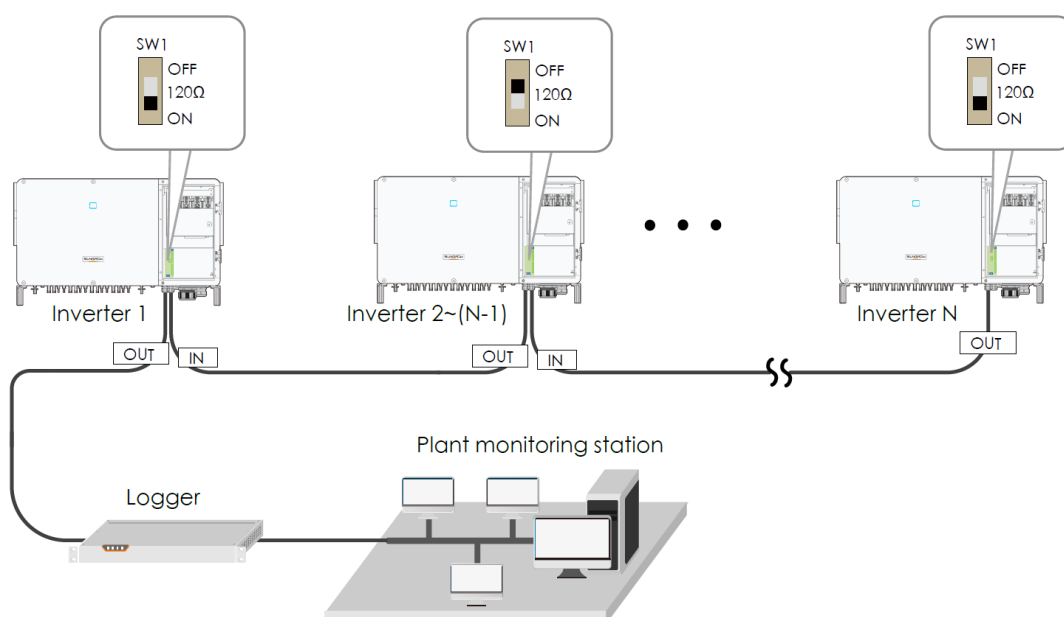


Energy Meter Connection

The site electrician will need to calculate the CT ratio required as per the installation. The CT ratios can be set by accessing the DTSD1352 energy meter. Please refer [Meter Selection Guide](#) for reference.

Default Modbus address is 1 and the secondary current of CT should be 5A.

The corresponding pinouts to RJ45 are Pin 3 (White-green) to RS485- B and Pin 6 (Green) to RS485+ A:

If the communication cable is Shielded Ethernet cable, white-green cable 3 is defined as RS485- B cable and the green cable 6 as RS485+ A cable.

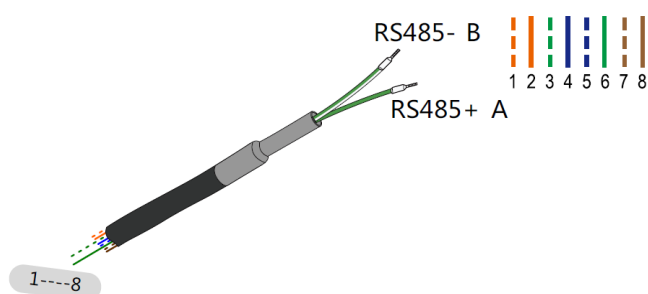



Corresponding Relationship Between Cables and Color :

Cable 1: White -orange ;	Cable 2: Orange ;
Cable 3: White -green ;	Cable 4: Blue ;
Cable 5: White -blue ;	Cable 6: Green ;
Cable 7: White -brown ;	Cable 8: Brown.

Cable 3 and Cable 6 are used for communication

- Cable 3 to RS 485- B
- Cable 6 to RS 485+ A


Terminal 21 to Green cable (RS485+ A) and terminal 22 to White-green cable (RS485- B) on the DTSD1352 energy meter side. The following figures shows the meter cable connection on the energy meter side.

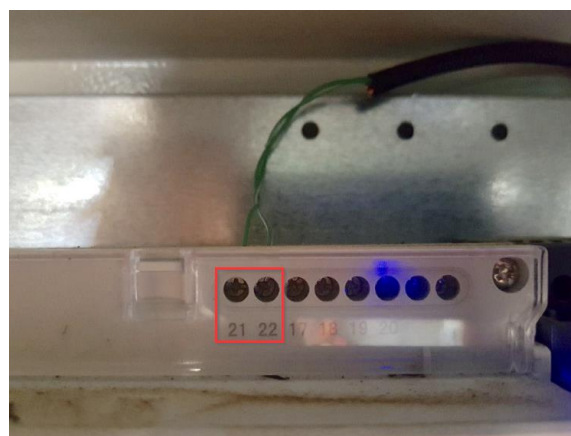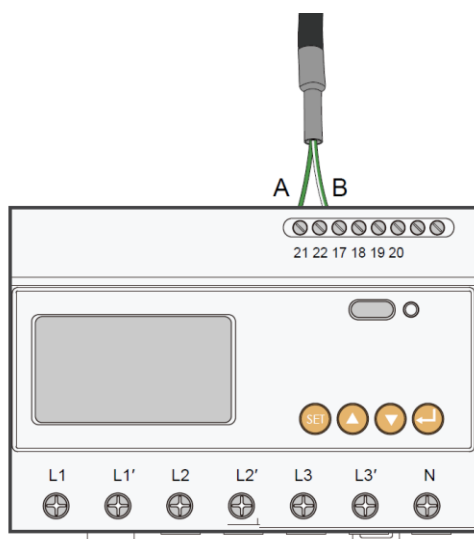

Connect to Logger1000 via the RS485 cable from the energy meter on RS485 port A2 and B2 if it has not been used.

Connection to Logger1000

Connect the RS485 comms from the inverter(s) via A1/B1 and the energy meter via A2/B2 to the Logger1000 as an example.

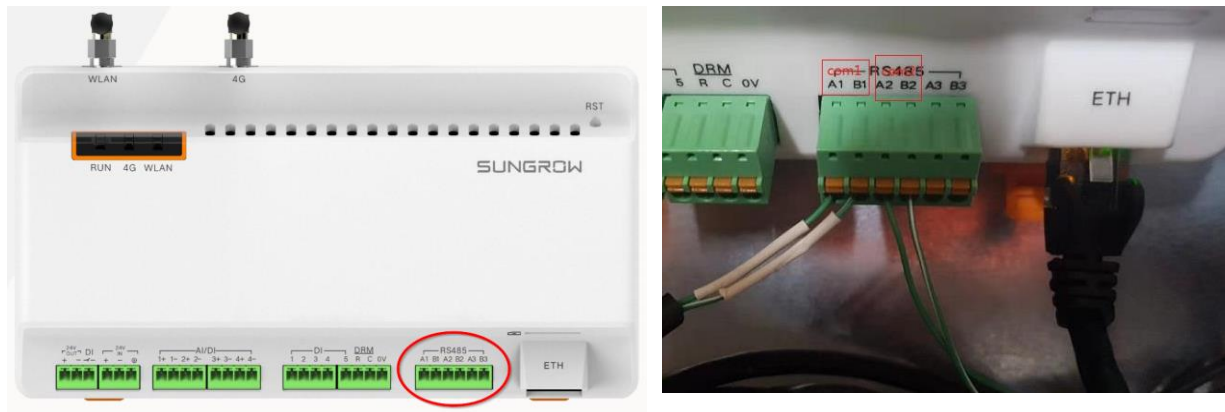


On the logger1000 side, A1 and B1 are terminals to connect with the inverter which display as **COM1** on the Logger1000 web portal; A2 and B2 are the terminals to connect with the energy meter, they are shown as **COM2** on the portal.


Logger1000 web portal setup

Access Logger1000 web portal


Use a smart device or laptop under Wi-Fi function to search for the SG***** (10 digits number) network that corresponds to the Logger1000 serial number.

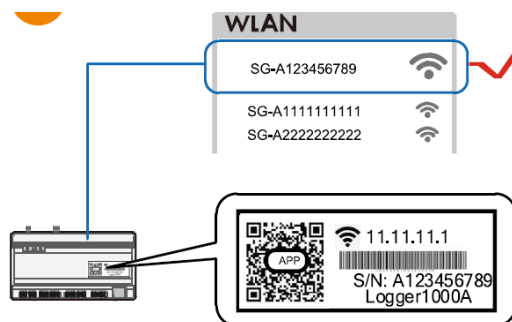

Open a web browser and enter IP address (11.11.11.1) and password: pw1111 to access below Logger1000 web page.

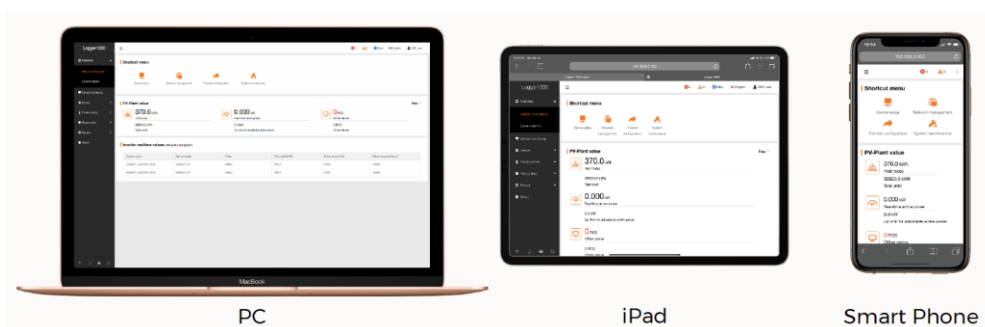

Then you can log in the account (please contact Sungrow for password) via the right top corner login button. When you log in for the first time, a help window will pop up for instruction.

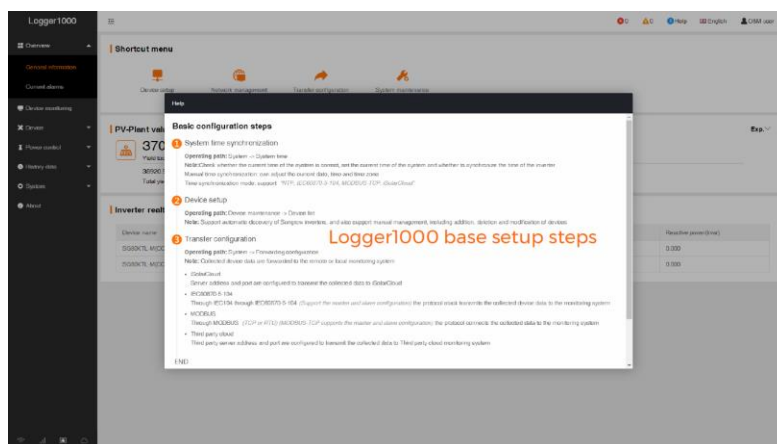

Set local time

Navigate to 'System Time' under System and select Clock Source to '**NTP**' and Time Zone to '**UTC+10:00**' and make sure to **Save**

Auto search inverters


Navigate to '**Device**' and click '**Device List**' section and click '**Auto search**'. Sungrow's inverters will be automatically detected as long as they are correctly connected and energised.

Confirm the communication status for each device under **Communication status** section. Green icon indicates the connection works and red icon means no connection between Logger1000 and other device.

Add Energy Meter

The energy meter needs to be manually added which is same as any other 3rd party equipment.

To add the energy meter, click '**Add device**' and select a device type in the pop-up window and fill in the required information (Add device for DTSD1352 energy meter and device address: 254)

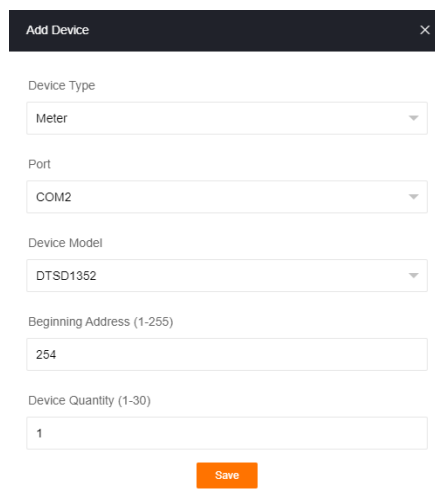

Add Device

Device Type
Meter

Port
COM2

Device Model
DTSD1352

Beginning Address (1-255)
254


Device Quantity (1-30)
1

Save

If the meter connected with **A2** and **B2** on the Logger1000, we need to make sure the port number on the portal is **COM2**. Otherwise, DTSD1352 meter's status will show disconnect.

Add CT Transformation Ratio.

Navigate to '**Device Monitoring**' and select DTSD1352. If the ratio is 200/5, then enter value 40.

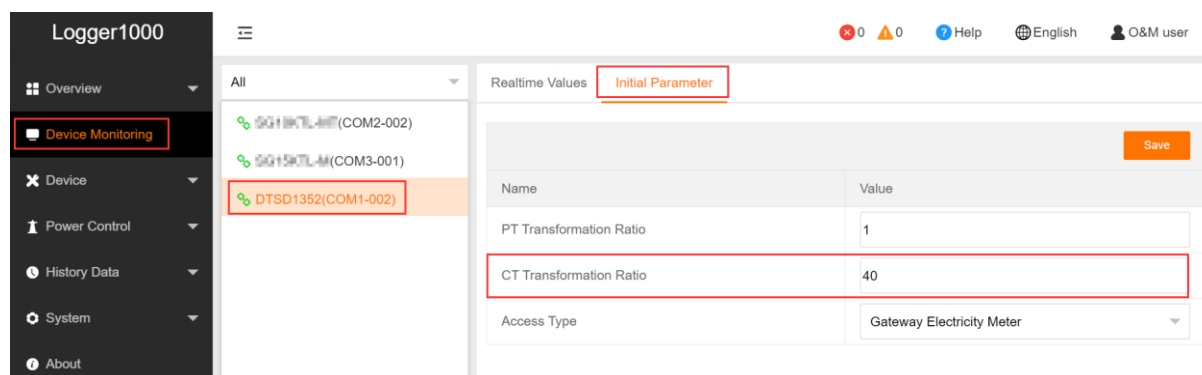

Logger1000

Overview
Device Monitoring
Device
Power Control
History Data
System
About

All

SG1100L-III (COM2-002)
SG1500L-III (COM3-001)
DTSD1352 (COM1-002)

Realtime Values Initial Parameter

Save


Name	Value
PT Transformation Ratio	1
CT Transformation Ratio	40
Access Type	Gateway Electricity Meter

Setup Export Control if required

Select **Power Control -> Active Power**. Then you can set all the parameters as following figures. The **Fixed Value of Active Power** is the part to set the power limit.

Note: make sure to **disable** 'Feed-in stop'

If it is 50 kW inverter and need export control to 20 kW as an example, then enter 'Fixed Value of Active Power' to 20 kW.

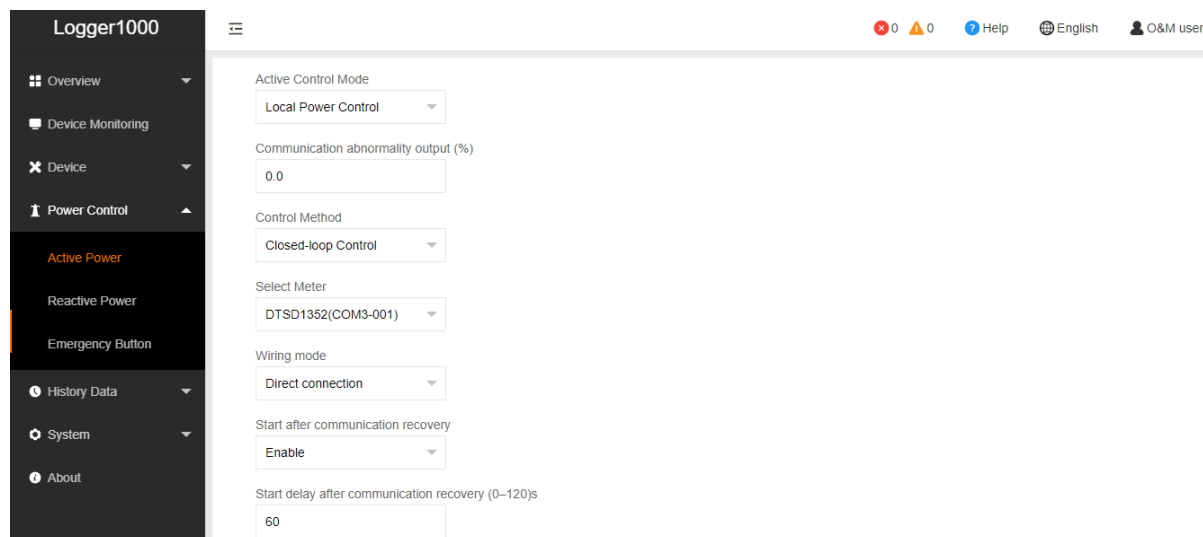

Logger1000

Overview
Device Monitoring
Device
Power Control
Active Power
Reactive Power
Emergency Button
History Data
System
About

Active Control Mode
Local Power Control

Communication abnormality output (%)
0.0


Control Method
Closed-loop Control

Select Meter
DTSD1352(COM3-001)

Wiring mode
Direct connection

Start after communication recovery
Enable

Start delay after communication recovery (0-120)s
60

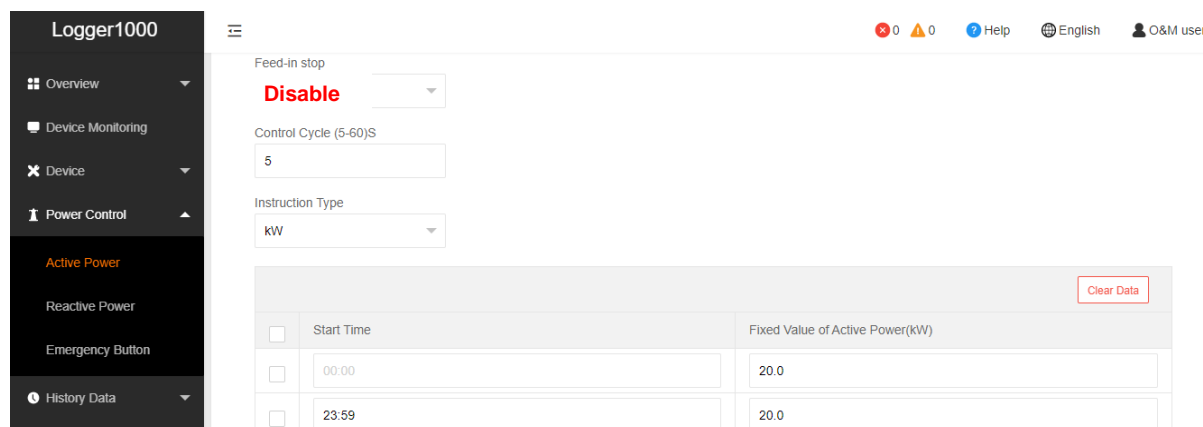

Logger1000

Overview
Device Monitoring
Device
Power Control
Active Power
Reactive Power
Emergency Button
History Data

Feed-in stop
Disable

Control Cycle (5-60)S
5

Instruction Type
kW

Clear Data

	Start Time	Fixed Value of Active Power(kW)
<input type="checkbox"/>	00:00	20.0
<input type="checkbox"/>	23:59	20.0

Setup Online Monitoring

The iSolarCloud portal is available for the Logger1000 online monitoring. You need to create an iSolarCloud installer account if you do not have, then you can create a plant to link with Logger1000 via the iSolarCloud APP.

Create Plant -> Commercial -> PV -> Com100/Logger100 -> Scan the QR Code of Logger1000

SELECT PLANT TYPE

Select plant type to choose the right communication device.



SELECT INVERTER TYPE


Select inverter type to choose the right communication device.
Tap "PV" when all inverters of the plant are PV inverters.
Tap "HYBRID" when the plant has at least one hybrid inverter.



Step 1


SELECT YOUR SETUP

Select communication device to connect your inverter.

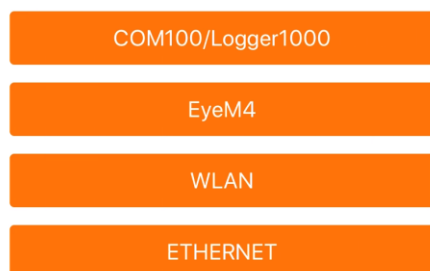

Step 3

Step 2

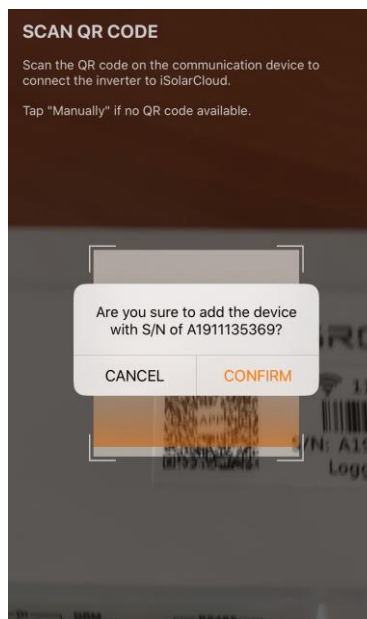


Step4

Then you only need to enter the customer's basic information, and the plant will be created in a few minutes.


After you connect the Logger1000 with the customer's router via the ethernet cable, you also need to adjust parameter settings on the Logger1000 via WLAN.

Use a smart device or laptop under Wi-Fi function to search for the SG***** (10 digits number) network that corresponds to the Logger1000 serial number.

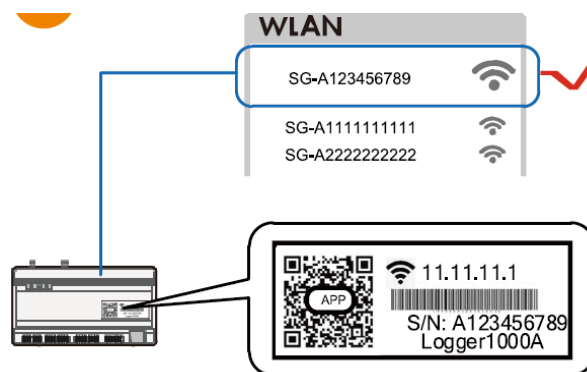


Open a web browser again and enter IP address (11.11.11.1) and password: pw1111 to access below Logger1000 web page.


Select **System-> Remote maintenance**, enable the function and make sure the **Remote Service Address** is selected as **International Server**

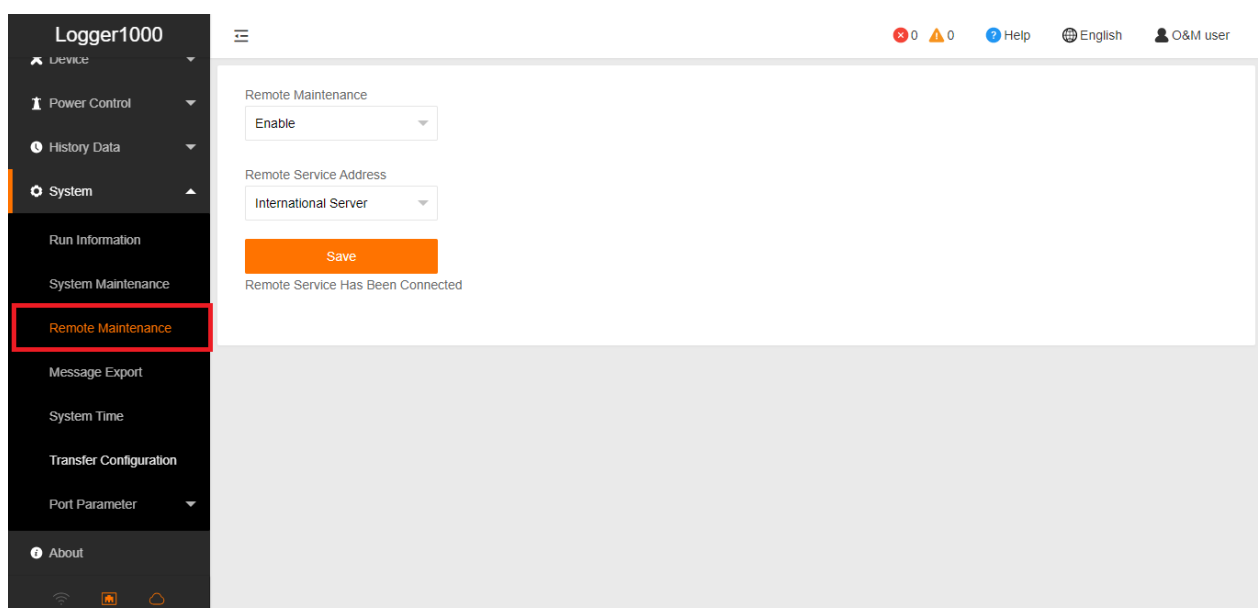

Then go to **System-> Transfer Configuration**, click the **Setting gearwheel** highlighted in red to change the **Server Domain**. Please make sure the domain address is **api.isolarcloud.com.hk**

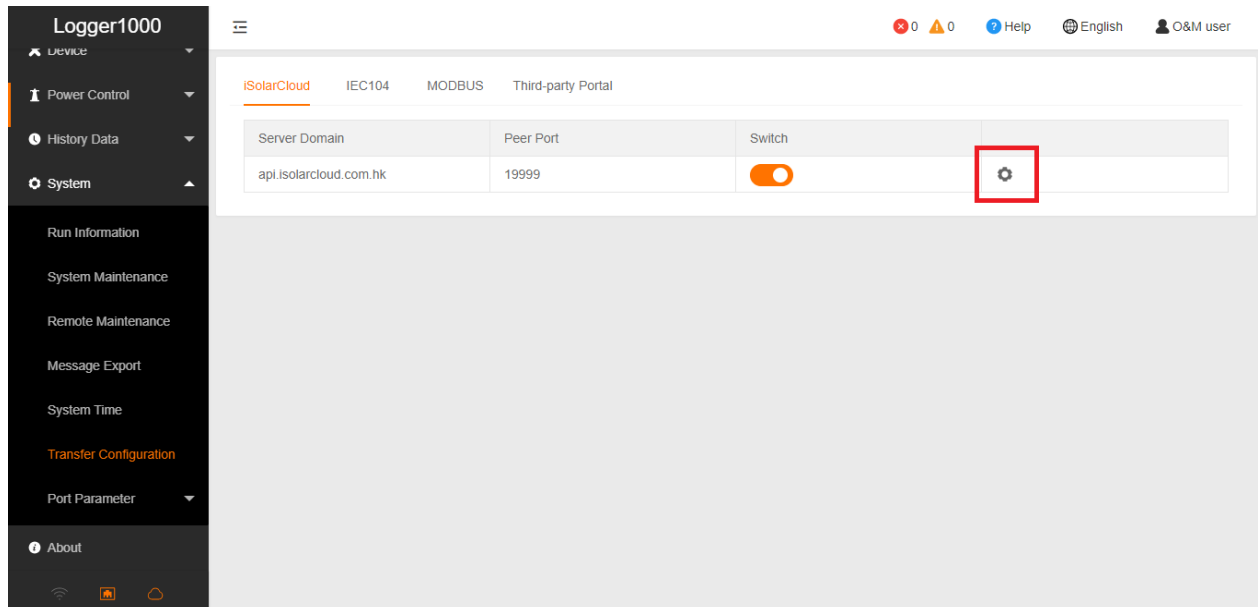


After this, Select **Port Parameter-> Ethernet**. Select **ON** for the DHCP setting and the home router could allocate a random IP address to Logger1000.

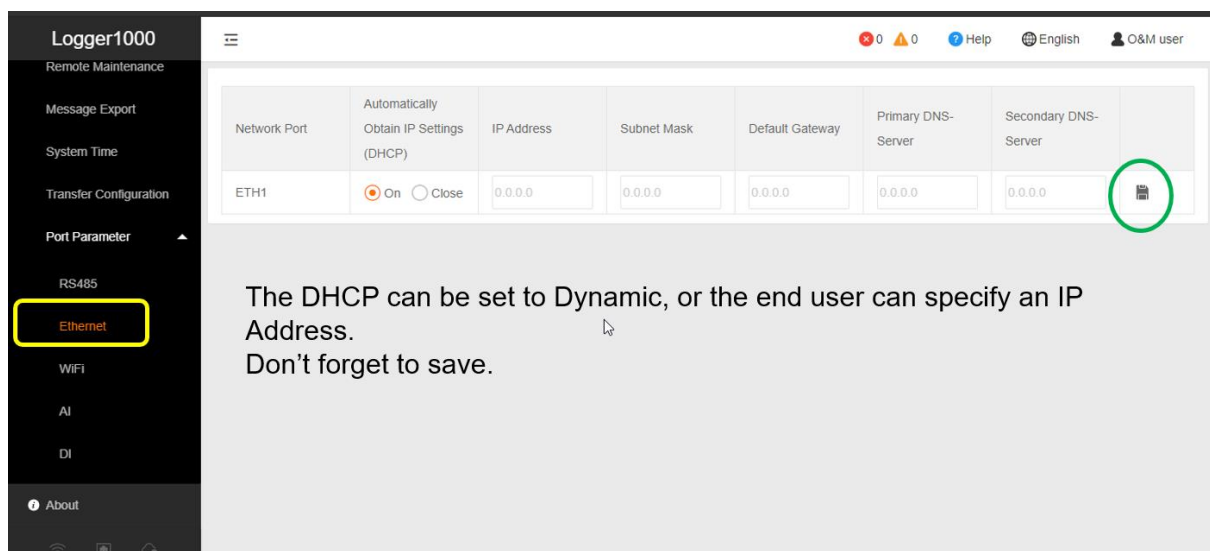

After the above settings completed, go back to the 'Remote Maintenance' and check if there is an information indicating the Logger1000 connect with iSolarCloud server.

Meanwhile, you can find a cloud icon at the bottom left corner ON, it means the Logger1000 is on iSolarCloud when the icon lights up.

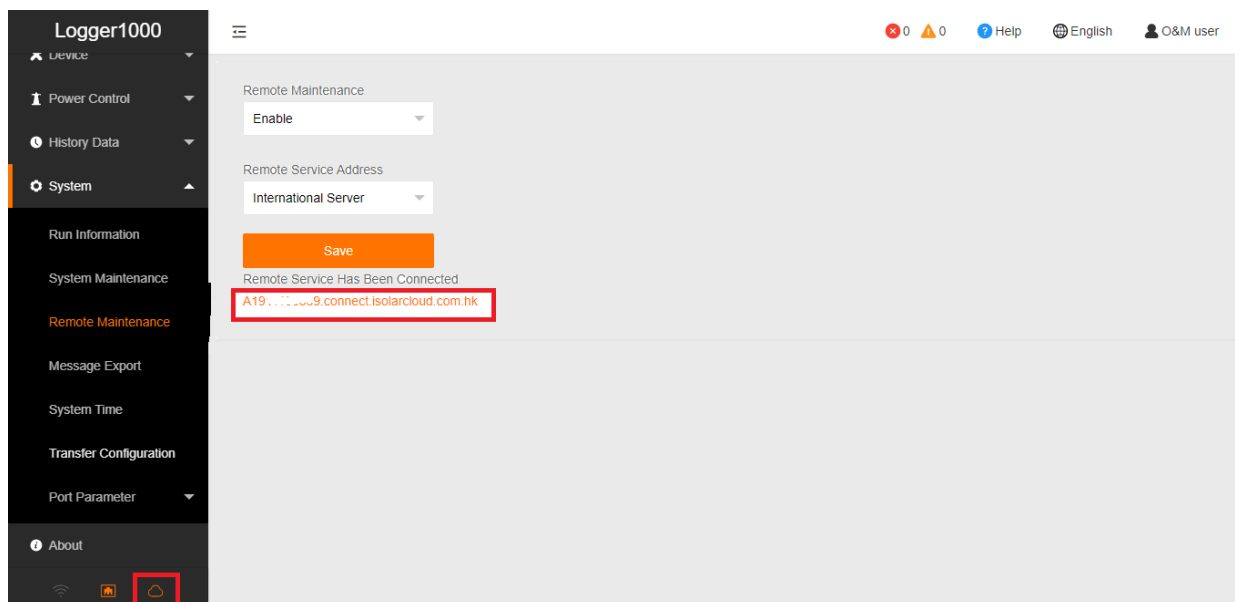

If you have any questions, please contact Sungrow Service Department on 1800 786 476 or email to service@sungrowpower.com.au.