

REMINGTON®

PRO-Luxe Dryer



AC9140



www.remington.co.uk

Register online for an EXTRA year guarantee

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.



Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
 - Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
 - Keep direct airflow away from eyes or other sensitive areas.

- Do not allow any part of the appliance touch the face, neck or scalp.
- During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.
- Keep the power plug and cord away from heated surfaces.
- Do not leave the appliance unattended while plugged in.
- Do not place the appliance on any soft furnishings.
- Do not use attachments other than those we supply.
- Do not set the appliance down while still on.
- Do not twist or kink the cable, or wrap it round the appliance.
- Do not use the appliance if it is damaged or malfunctions.
- Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|--------------------------|-------------------------------------|
| 1. Heat settings switch | 6. Styling concentrator |
| 2. Speed settings switch | 7. Diffuser |
| 3. Cool shot | 8. Removable easy clean rear grille |
| 4. Style shot | 9. Hang up loop |
| 5. Slim 7mm concentrator | 10. Cord |
-

INSTRUCTIONS FOR USE

1. Wash and condition your hair as normal.
2. Squeeze out excess moisture with a towel and comb through.
Hairsprays contain flammable material – do not use while using this product.
3. Attach the concentrators or diffuser by fitting it to the front of the hairdryer and twisting clockwise to lock it.
4. Plug the product into the mains power supply.
5. Switch your hairdryer on and select the desired speed setting (low  or high ) using the speed selector switch.
6. Select the desired heat setting (low , medium  or high ) using the heat selector switch.
7. After use, turn the appliance off and unplug it.
8. Let the appliance cool down before cleaning or storing away.

HOW TO CREATE LONGER-LASTING STYLES

- For best results, the style shot should only be used when the hair is 70-80% dry.
- The style shot works on all temperature and speed settings.
- Select the desired temperature and speed setting using the switches on the handle as described above.

- Dry your hair gently without sectioning until it is around 70-80% dry.
- Turn off the dryer and attach the styling concentrator. The 7mm may also be used.
- Section the hair.
- Ensure the style shot setting has been selected and turn the dryer on (🔌).

Style Shot:

- Increases the dryer temperature and ensures the perfect amount of heat is applied to the hair when styling.
- Using a hair brush, work on one section at a time.
- Turn the hairdryer on and run the concentrator down the hair until dry.
- When the section of hair is dry, select the cool setting (❄️) and run the concentrator down the hair again. This will help to set the style and achieve longer-lasting results.

TIPS

- For fast drying use the high heat / high speed setting.
 - To create smooth styles use the concentrator and a round hair brush (not included) whilst drying.
 - To enhance natural curls and waves, attach the diffuser to the dryer. Turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the dryer as you style.
 - To create extra volume at the roots of the hair, keep your head upright and place the diffuser against the top of the head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp being careful not to burn the scalp. Dry gently on a medium heat / low speed setting.
- Caution:** Do not use the diffuser on the highest heat setting (🔥).
- To set your style, press the cool shot button whilst styling.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- Don't use harsh or abrasive cleaning agents or solvents.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille.
- To remove the rear grille for cleaning hold the dryer handle in one hand, then with the other place your thumb on the tab at the bottom of the grille. Push upwards to flip the grill up and off the dryer.
- To replace the rear grill Hold in place with thumb and index finger hook the top into the slot and click the bottom into place.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: **www.remington.co.uk/productregister**

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk

Ireland

 Tel 142 951 40
Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12
www.ie.remington-europe.com

REGISTER ONLINE

Register online for an EXTRA year guarantee*.

Visit www.remington.co.uk/productregister

*You must register within 28 days of purchase.

Model No. AC9140

18/UK/ AC9140 T22-7000624 Version 11 /18

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.
Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2018 Spectrum Brands, Inc.