



Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV/Radio /
	0
	Display / Media
	Guide / EPG / -/--
	Info / Angle
	Menu / Home

Original	Replacement
	Up
	CH+ / Page+
	Exit / Cancel / Clear
	Left
	Vol-
	OK
	Right
	Vol+
	Down
	CH- / Page-
	Smart / List
	Shift + CH+ /
	>>I / Preset+
	Pause / Step / Freeze
	Picture / Format
	Shift + CH- /
	I<< / Preset-





Original	Replacement
 UHF	 AV / Input / RDS
 Red / Recall	 Red / Netflix / Search
 Red / Recall	 Back / Return
 Green / Audio	 Green / APP / Repeat
 Green / Audio	 Audio / Lang I/II
 Yellow / Text	 Yellow / YouTube / Repeat
 Yellow / Text	 Text / Goto
 Blue	 Blue / Prime Video / Random
 RGB / YPbPr	 Setup / OPT / EQ
 Subtitle	 Subtitle / EQ
 Wide	 Zoom / Size

Original	Replacement

