

Power	PWR/Power	System	SYS/System
On: Power on		Flashing: System running normally	
Off: Power off		On/Off: System running abnormally	

Link/Act (for ER605) | SFP WAN (for ER7206)

	On: Connecting to a device but no activity
	Off: No device connected to the corresponding port
	Flashing: Transmitting or receiving data

Link/Act and 1000Mbps (for ER7206)


	On: Connecting to a device and running at 1000 Mbps
	Off: No device connected/connecting to a device but not running at 1000 Mbps
	On: Connecting to a device but no activity
	Off: No device connected to the corresponding port
	Flashing: Transmitting or receiving data

Installation Guide

Omada Gigabit VPN Router

Note: For simplicity, we take ER605 as an example throughout this Guide.

Connection

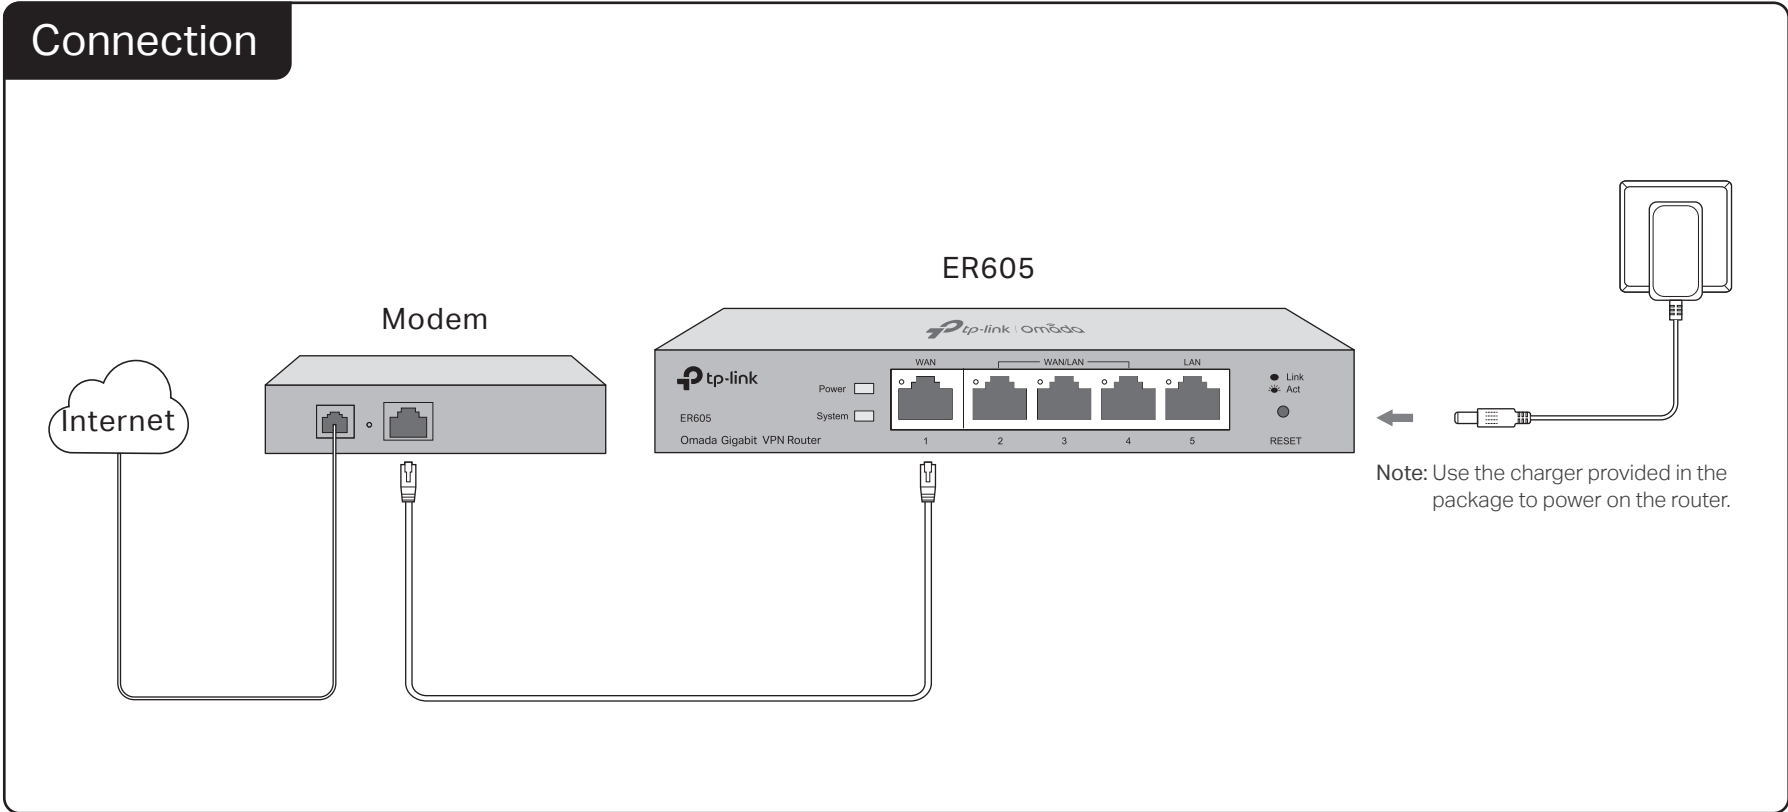

Configuration


The router supports two configuration options:

- Standalone Mode: Configure and manage the router singly.
- Controller Mode: Configure and manage the network devices centrally. It is recommended in the large-scale network, which consists of mass devices such as access points, switches, and gateways.

Note: When the router is managed by a controller, configurations of the router will be overridden by the controller.

Option 1: Standalone Mode

In Standalone Mode, use a computer to configure and manage the router.

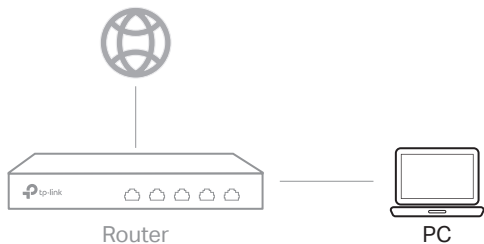

1. Connect a computer to a LAN port of the router with an RJ45 cable properly. If your computer is configured with a fixed IP, change it to **Obtain an IP address automatically**.


2. Open a web browser and type the default management address **192.168.0.1** in the address field of the browser, then press the **Enter** key.
3. Create a username and a password for subsequent login attempts and for security.
4. Use the username and password set above to log in to the webpage.
5. After a successful login, you can configure the function by clicking the setup menu on the left side of the screen.

For detailed configurations, refer to the User Guide of the router. The guide can be found on the download center of our official website: <https://www.tp-link.com/support/download/>.

Option 2: Controller Mode

Controller Mode applies to the large scale network with mass devices. All devices can be centrally configured and monitored via Omada Software Controller, Omada Hardware Controller or Omada Cloud-Based Controller.

Topology 1: Via Omada Software/Hardware Controller

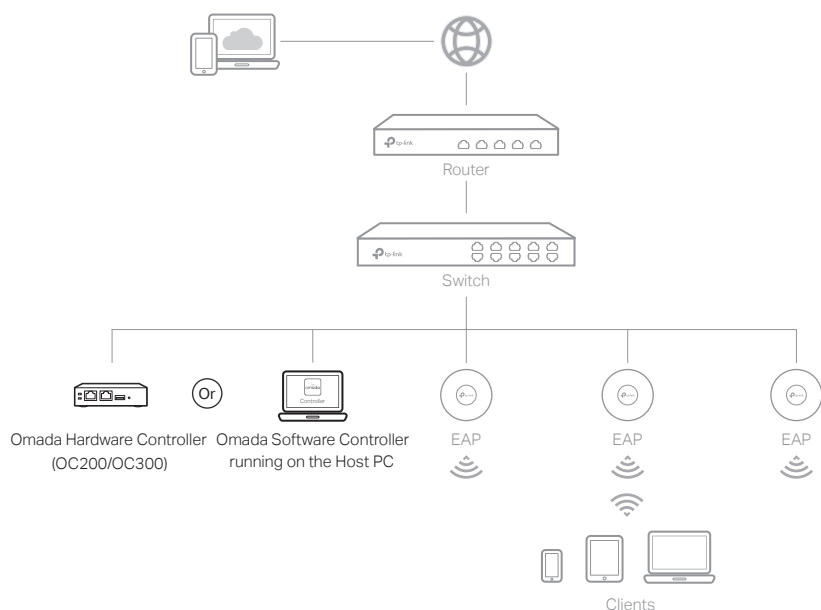

Via Omada Software Controller

1. On the PC with Windows OS or Linux OS, download the Omada Software Controller installation file from <https://www.tp-link.com/support/download/omada-software-controller/>.

Note: To download Omada Software Controller successfully, it is recommended to configure the router's network to access the internet. Refer to Standalone Mode to launch the management page and go to **Network > WAN** to complete the configuration.

2. Run the file and follow the wizard to install the Omada Software Controller.
3. Launch the Omada Software Controller and follow the step-by-step instructions to complete the Quick Setup. After the wizard is finished, a login screen will appear.
4. Enter the username and password you created and click **Log in**. Then you can further configure the network.

Omada Cloud Portal


After installing Omada Software Controller, you can remotely access the controller through Omada Cloud Portal. Follow the steps below.

1. Enable **Cloud Access** on the setting page on the controller and bind a TP-Link ID to your controller. If you have configured this in the setup wizard, skip the step.
2. Launch a web browser and enter <https://omada.tplinkcloud.com> in the address bar.
3. Enter your TP-Link ID and password to log in. A list of controllers that have been bound with your TP-Link ID will appear. Then you can click **Launch** to further configure the controller.

Via Omada Hardware Controller (OC200/OC300)

Omada Hardware Controller (OC200/OC300), which is pre-installed with Omada Software Controller, is a good alternative if you have no spare PC to keep running Omada Software Controller in the network. It needs to be purchased additionally. For more details, refer to the Installation Guide of Omada Hardware Controller.

Topology 2: Via Omada Cloud-Based Controller

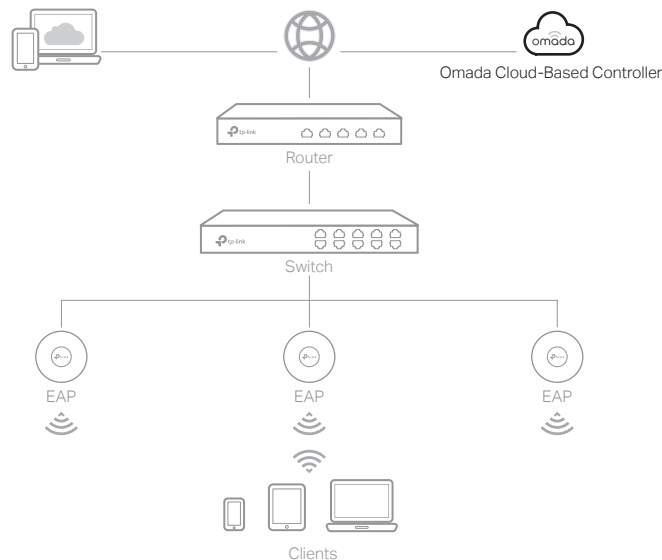

Via Omada Cloud-Based Controller

Before managing the devices via Omada Cloud-Based Controller, make sure they can access the internet.

1. Launch a web browser and enter <https://omada.tplinkcloud.com> in the address bar. Enter your TP-Link ID and password to log in.
2. Click **Add Controller** and register for an Omada Cloud-Based Controller. Follow the instructions to complete the setup process.
3. Add devices with the serial number, make sure the devices are online and in factory default.
4. Assign appropriate licenses in order to manage and configure the devices on the cloud-based controller. Then wait until your controller is deployed.

* Omada App

With Omada App, you can also manage your controller at a local site or a remote site via your mobile device.



For the detailed configurations, refer to the User Guide of the controller. The guide can be found on the download center of our official website: <https://www.tp-link.com/support/download/>.

- To ask questions, find answers, and communicate with TP-Link users or engineers, please visit <https://community.tp-link.com> to join TP-Link Community.
- For technical support and other information, please visit <https://www.tp-link.com/support>, or simply scan the QR code.
- If you have any suggestions or needs on the product guides, welcome to email techwriter@tp-link.com.cn.



EU Declaration of Conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863.

The original EU declaration of conformity may be found at <https://www.tp-link.com/en/ce>.

Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Adapter shall be installed near the equipment and shall be easily accessible.
- Place the device with its bottom surface downward.

