



VS-0866 PORTABLE BLUEBOOTH SPEAKER

Trouble shooting guide

Common problems	Possible Cause	Solution
There is no sound when power is on	1. No input source. 2. The main volume is at the minimum position.	1. Use better music signals. 2. Adjust the volume appropriately.
Distortion of sound	1. Volume is adjusted to max. 2. Speaker may be damaged.	1. Turn down the main volume. 2. Check whether the speaker is damaged or not. If it so, it needs to be repaired.
Mic is silent	1. The microphone switch is not on. 2. Mic volume is at 0 position. 3. Low battery of wireless microphone.	1. Turn on the microphone switch. 2. Adjust the microphone volume appropriately. 3. Replace the wireless microphone battery.
MP3 is silent	1. USB song format is wrong. 2. Improper operation leads to procedural chaos. 3. The USB/TF card is not inserted properly.	1. Convert the format to MP3. 2. Restart the machine. 3. Unplug and re-plug into the USB/TF card.

Main technical specifications

Output power----- 160W
 Input sensitivity----- 320mV
 SNR----- ≥70dB
 Frequency response----- 60Hz~20KHz
 Power supply----- DC 15V

*Above specifications are the specifications of the sampling machine and are for reference purpose only.
 *Because of continuous product improvement, specifications will keep changing at any time without prior notification.

Common function description

VOLUME: Adjust volume
 TREBLE: Adjust treble
 BASS: Adjust bass
 MIC VOL: Adjust microphone volume
 ECHO: Adjust echo
 MIC: Wired microphone input

Product features

This system can be used with PC, DVD, VCD, MP3, Electronic Piano, Radio and any device with audio output.

The amplifying circuit is designed with high performance and high fidelity, and equipped with professional and high quality speaker, it can make the sound field positioning clear and layered.

The system voice effect is outstanding, the bass is surging and shocking, the middle tone is strong and bright, the treble is crisp and pleasant.

Professional electronic frequency division circuit, so that the division point of the machine more accurate, better effect.

The use of professional design and manufacture of large capacity batteries, as well as audio power supply capacitor makes the local power reserve margin more larger, more stable, better dynamic, higher SNR.

Charging instructions

When charging, use the power transformer that comes with the package to connect AC 100V ~ 240V voltage for charging. The charging time should be 6 ~ 8 hours. After being fully charged, unplug the power supply to avoid damage to the battery due to long-term charging.

Battery level indicator: There is a battery level indicator on the display. When the battery power is too low, the battery indicator icon will flash, please charge it in time. The red light on the display will light up when charging, and the blue light on the display will light up when fully charged.

Note: If the battery is used out, please recharge the battery within 48 hours. Do not leave the empty battery for a long time, otherwise the battery will be damaged.



Remote control instructions



1. Mute
2. Music number
3. Input mode
4. Volume +
5. Play/Pause
6. Next
7. Volume -
8. USB
9. EQ
10. Playback
11. Record
12. Bluetooth
13. Previous
14. Microphone priority
15. Repeat



20 feet
60°/90°

1. Under normal circumstances, the remote control should be used within a range of about 20 feet and 30 degrees from the remote reception window.

2. When operating the remote control, point the remote control at the receiver window of the machine. There should be no obstacles between the remote control and the machine.

3. If the receiving window is in the position of strong light, the remote control may fail. In this case, please remove the machine to avoid direct exposure to strong light.

4. Please don't make both new and old batteries work together, and regularly check whether the remote control batteries need to be replaced.

***Image diagram, for reference only**

Guitar

GUITAR: Connect guitar.

GUITAR VOL: Adjust the guitar volume.


USB/TF

Music files in USB and TF cards should be formatted as FAT32 on the computer.

The order about music play is based on file name, if the music file names are as "01,02,03" in sequence, this product will play the file "01" first.

Copy MP3 or WMA music files to USB/TF cards. It is recommended to delete unnecessary files and folders to speed up card reading and reduce card reading problems.

Microphone controls and basic operation

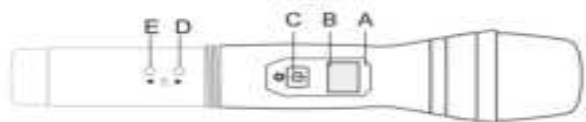


Note: Both Mics have already completed the pair at the factory. There is no need for any adjustment. But if it doesn't work, please try below methods.

How to pair with mic?.....

1. Press C to turn on Mic first. Then, hold down the button D or E for 2-3 seconds into Set mode.
2. When SET is flashing on the screen, press D or E to select frequency. There are 3 frequencies. If one of them doesn't work, please change to different one.
3. After selecting the desired frequency, aim the "signal transmitting area (A)" at the "circular infrared receiving area" on the machine.
4. Wait 4-5 seconds for the microphone pairing to complete. Then test whether the microphone has been successfully connected to the machine. If the connection is unsuccessful, please follow the above steps to reset. Or contact us directly and we will send the replacement mic to you.

***Image diagram, for reference only**

Description of controls

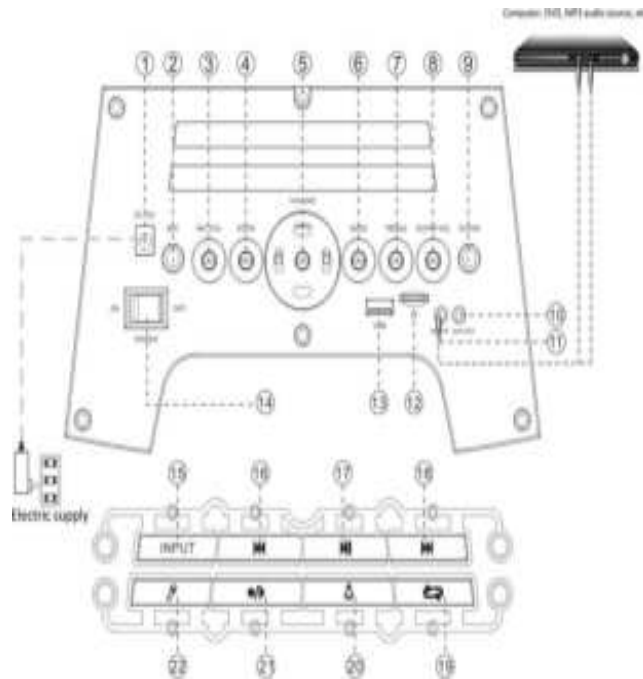

- | | |
|------------------|-------------------------|
| 1. DC 15V IN | 12. TF Slot |
| 2. MIC Jack | 13. USB Slot |
| 3. MIC Volume | 14. Power switch |
| 4. Echo | 15. Input selection |
| 5. Volume | 16. Previous |
| 6. Bass | 17. Play / Pause / Scan |
| 7. Treble | 18. Next |
| 8. Guitar Volume | 19. Repeat |
| 9. Guitar Jack | 20. LED Light Control |
| 10. Audio Output | 21. Record / Playback |
| 11. Audio Input | 22. MIC Priority |

***Image diagram, for reference only**

Recording function

Please insert USB or TF card first and then press **●▶** into recording mode. When recording music at the first time, a new file "VOICE" will be created in the card and all recordings will be saved into the file. These recording files are automatically named as REC001, REC002, REC003... in sequence. When recording music, press **●▶** to pause it and press again to continue. Press INPUT or **●▶** to quit recording mode.

Please press **●▶** into recording-play mode (automatically play the music recording before). Usually the machine will play the last recording music first. Press PREV (**◀**) or NEXT (**▶**) to select the music. Press Replay on the remote control to replay music. If you would like to replay single music or all music, please press Replay repeatedly.

Play function

USB: insert USB and play music.

TF: insert TF card and play music.

Supports MP3, WMA, and WAV music formats, outstanding sound performance, high fax stereo design.

INPUT: to switch external audio, MP3 / Bluetooth / Radio functions.

▶||: press this key to pause the music, and press again to continue.

◀▶: when playing, select the PREVIOUS/NEXT music.

Bluetooth operation

Bluetooth connection method: Turn on the speaker, press the "INPUT" key on the speaker panel, and the screen will show "bBLUE". Use your phone to connect the Bluetooth of the speaker. The Bluetooth name is VS-0866.

If the connection fails, please restart the device or the phone and try again.

The use range of the Bluetooth is 32ft in the open area.

FM function

Press "INPUT" to switch to FM radio.

Press **▶||** for automatic searching and saving.

Press **◀◀** and **▶▶** to switch channels.