

 


AOBOSI


INSTRUCTION MANUAL

Compressor Wine Cooler


Brand:AOBOSI

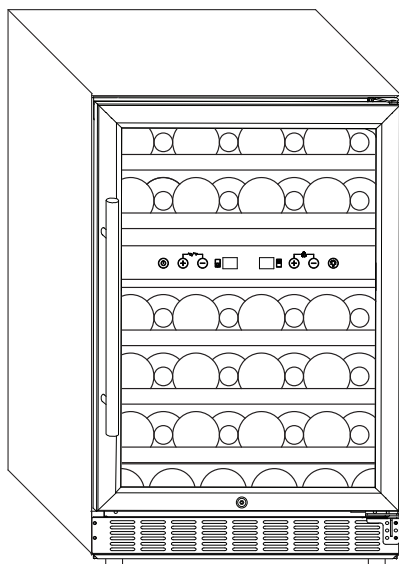

CWC-150B

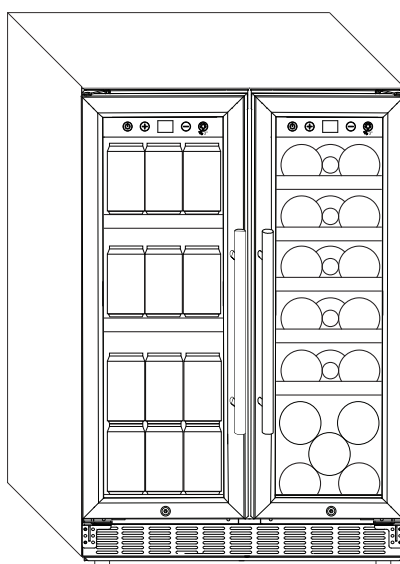 

CWC-150C

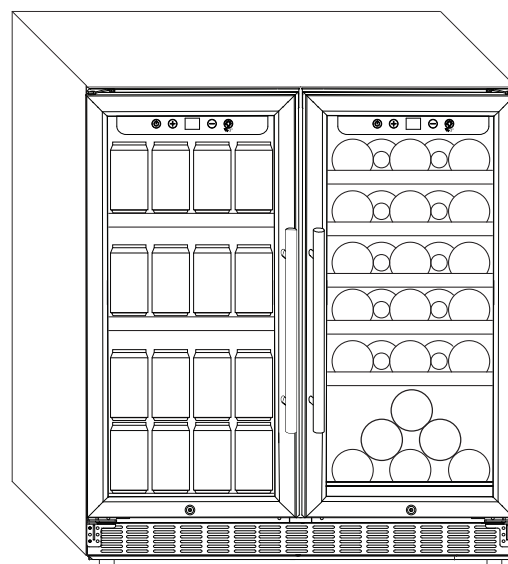 

CWC-180C

This manual contains important information including safety and installation instructions of the appliances. Please read it carefully before use and follow all safety information & instructions. It is recommended to keep this manual for easy reference so that you can be familiar with the operation of the appliance.

CONTENTS

WARNING-----	1
IMPORTANT SAFETY INSTRUCTIONS-----	2
INSTALLATION INSTRUCTIONS-----	3
UNPACKING AND INSTALL THE DOOR HANDLE -----	3
TEMPERATURE SETTING-----	7
CARE & MAINTENANCE-----	12
TROUBLESHOOTING GUIDE-----	13
TECHNICAL SPECIFICATION -----	14
WARRANTY-----	15

WARNING

- To prevent damaging the door gasket, make sure to have the door all the way opened when pulling shelves out of the rail compartment.
- The appliance must be positioned so that the plug is accessible. Release the electric cord. Move your cabinet to its final location. Do not move your Cabinet while loaded with wine. You might distort its body. The wine cellar should be installed in a suitable place in order to avoid touching the compressor with hand.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the supply cord is damaged, it must be replaced by manufacturer of its Service agent or a similarly qualified person in order to avoid a hazard.

PLEASE DON'T TRY TO PLUG INTO OR EXTENSION THE CABLE IN ANY CASE.

IMPORTANT SAFETY INSTRUCTIONS

⚡WARNING⚡	To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:
<ul style="list-style-type: none">• Read all instructions before using the Wine cellar.• DANGER or WARNING: Risk of child entrapment.• Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous even if they will "just sit in the garage a few days".• Before you throw away your old Wine Cellar: Take off the door. Leave the shelves in place so that children may not easily climb inside.• Never allow children to operate, play with, or crawl inside the appliance.• Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.• Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.• WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction;• WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those Recommended by the manufacturer;• To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.• WARNING: Do not damage the refrigerant circuit;• WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are the type recommended by the manufacturer.• If the refrigerant of these appliances are R600a, Flammable and explosive articles should not be put in or near the cabinet, to avoid the fire or explode caused. <p style="text-align: center;">-Save these instructions-</p>	

UNPACKING AND INSTALL THE DOOR HANDLE

 
Remove the exterior and interior packing materials.

Install the door handle provided with the appliance by following these steps:

Step 1 — Remove the gasket at the inner side of the door to expose the two screw holes.

Step 2 — Install the handle tightly with the screws and washers provided.

Step 3 — Tidy and restore the gasket.

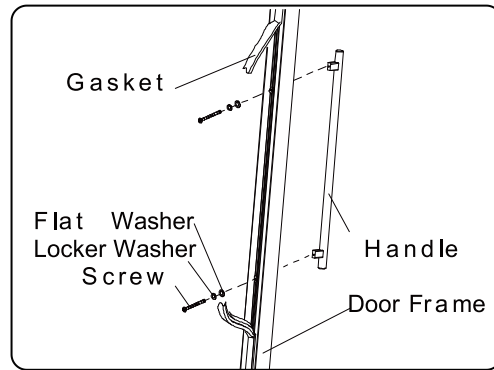

INSTALLATION INSTRUCTIONS

➤ **Before Using Your Wine cellar**

- Remove the exterior and interior packing.
- Before connecting the Wine cellar to the power source, let it stand upright for approximately 24 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Use a soft cloth to clean the interior surface with lukewarm water.
- This appliance is intended to be used in household and similar applications such as
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses and by clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments;
 - Catering and similar non-retail applications.
- When disposing your appliance, please choose an authorized disposal site.

➤ **Installation of Your Wine Cellar**

- This appliance is designed to be for free standing installation or built-in (fully recessed) (Refer to sticker location the back of this appliance).
- This appliance is intended to be used exclusively for the storage of wine or beverages.
- Place your Wine cellar on a flat floor that is strong enough to support it when it is fully loaded. To level your Wine cellar, adjust the front leveling leg at the bottom of the Wine cellar.
- This appliance is using flammability refrigerant. So never damage the cooling pipework during the transportation. Locate the Wine cellar away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in moist areas.
- Plug the Wine cellar into an exclusive, properly installed-grounded wall outlet. Do not cut or remove the third (ground) prong from the power cord under any circumstances. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized Products service center.

➤ **Attention**

- Store wine in sealed bottles;
- Do not overload the cabinet;
- Do not open the door unless necessary;
- Do not cover shelves with aluminum foil or any other shelf material which may prevent air circulation;
- Should the Wine cellar be stored without use for long periods, it is suggested to leave the door ajar to allow air to circulate inside the cabinet after a careful cleaning, avoiding possible formations of condensation, mold or odors.

➤ **Ambient Room Temperature Limits**

This appliance is designed to operate in ambient temperatures specified by its temperature class marked on the rating plate.

Class	Symbol	Ambient Temperatures range (°C / °F)
Extended Temperate	SN	+ 10°C / 50 °F to + 32°C / 89.6°F
Temperate	N	+ 16°C / 60.8°F to + 32°C / 89.6°F
Subtropical	ST	+ 16°C / 60.8°F to + 38°C / 100.4°F
Tropical	T	+ 16°C / 60.8°F to + 43°C / 109.4°F

Description of product model


Model	Description
CWC-150B	46 bottles dual zone wine cooler
CWC-150C	20 bottles & 44cans wine & beverage cooler
CWC-180C	31 bottles & 80cans wine & beverage cooler

The standard bottles as below:




The stated capacity is dependent on the size and shape of standard Bordeaux 750ml bottle with diameter of 2.75".

 When accommodating larger bottles, you can remove shelves. This will reduce the stated bottle capacity.

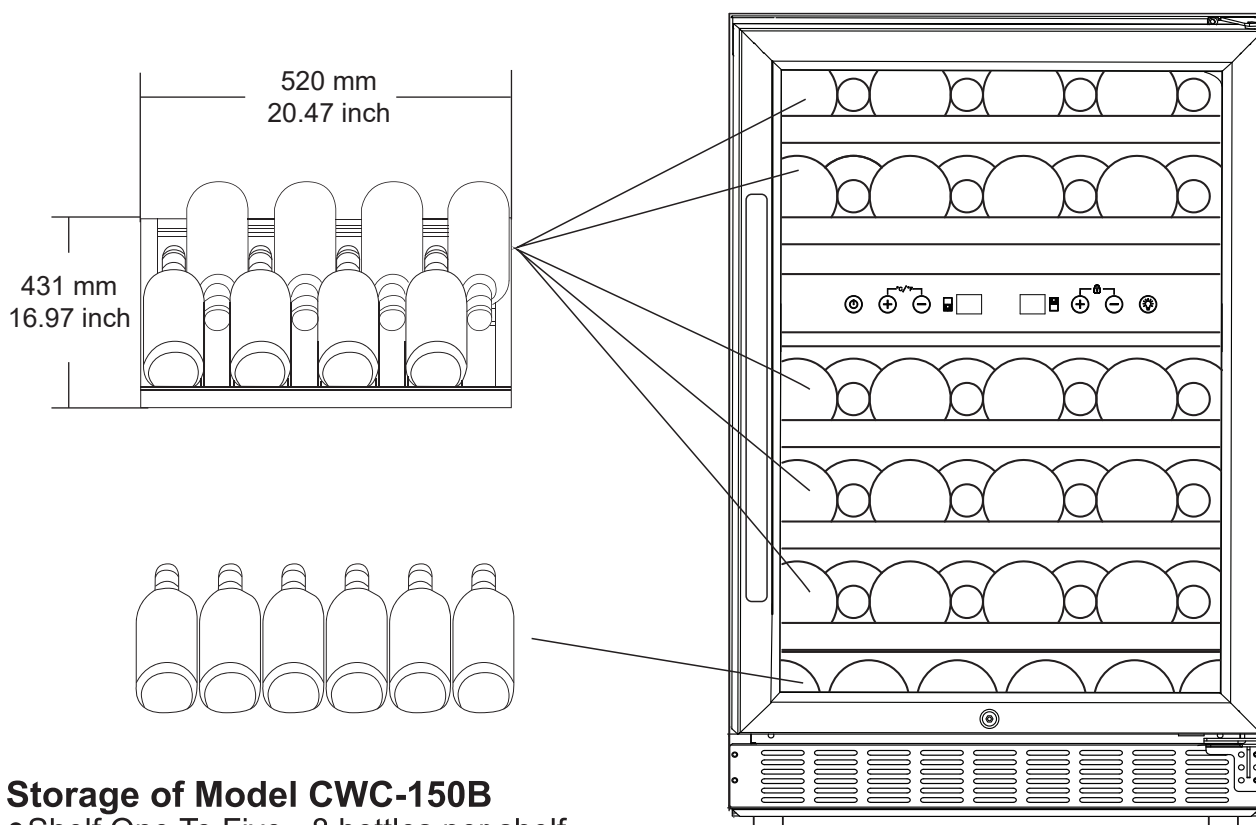

Storage of Model CWC-150B

 - Shelf One To Five - 8 bottles per shelf
- Bottom Section - 6 bottles

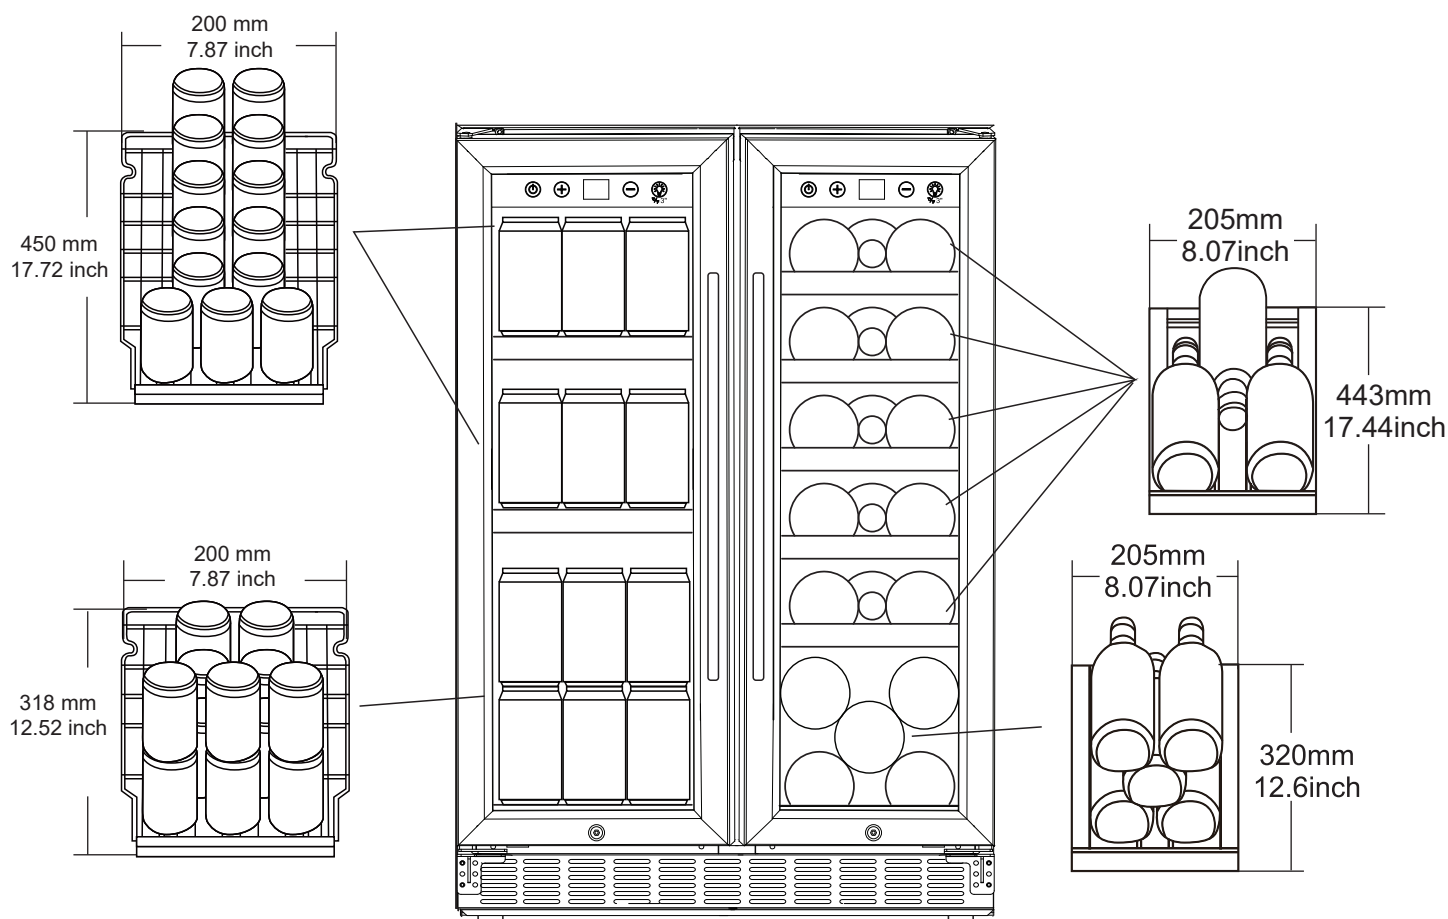


Storage of Model CWC-150C Beverage Cooler Zone

- Shelf One To Two - 13 cans per shelf
- Bottom Section - 18 cans per shelf

Wine Cooler Zone

 - Shelf One to Five - 3 bottles per shelf
- Bottom Section - 5 bottles

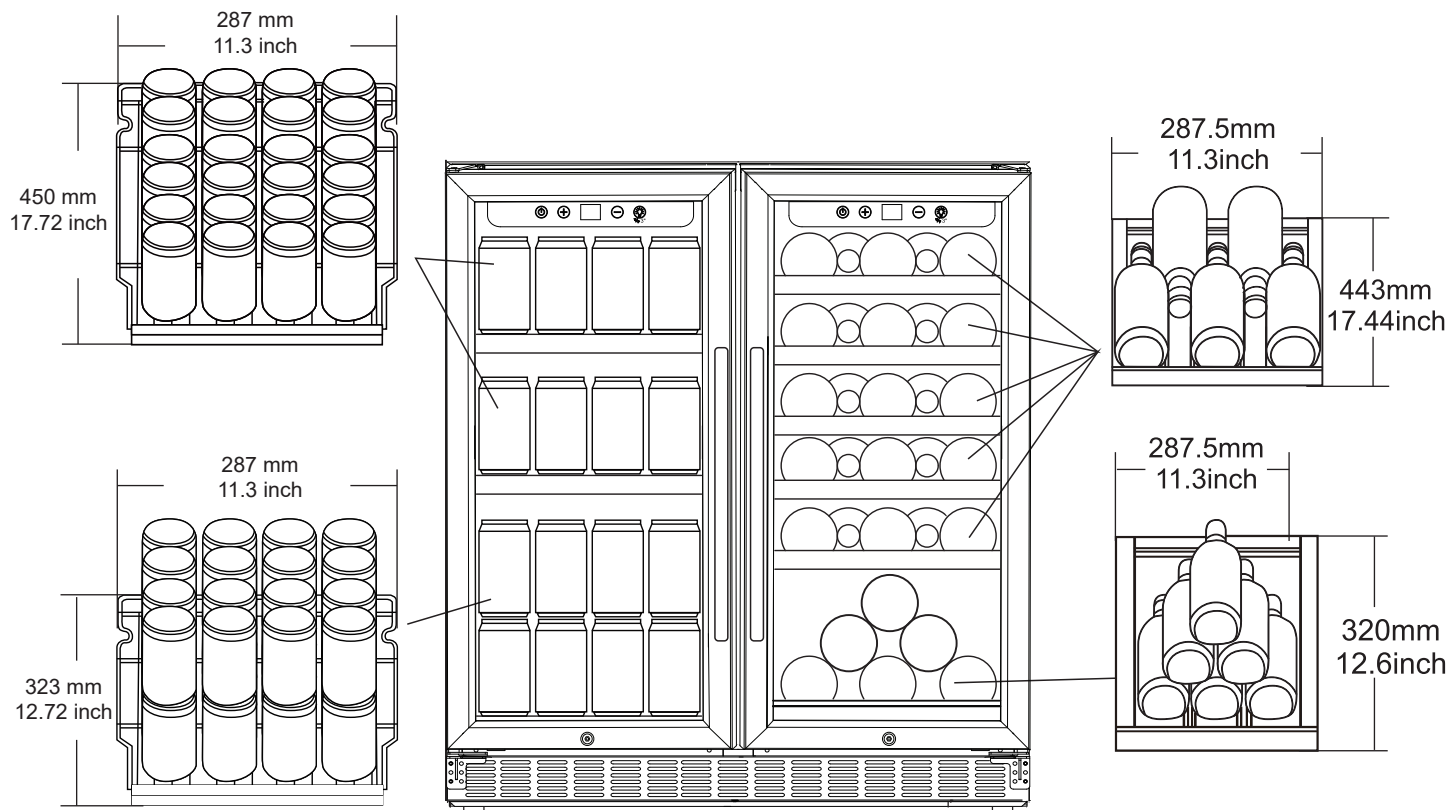

Storage of Model CWC-180C

Beverage Cooler Zone

- Shelf One To Two - 24cans per shelf
- Bottom Section - 32cans per shelf

 
Wine Cooler Zone

- Shelf One to Five - 5 bottles per shelf
- Bottom Section - 6 bottles

OPERATING YOUR WINE CELLAR AND SETTING THE TEMPERATURE CONTROL

FOR CWC-150B WINE COOLER


➤ Control System Instruction

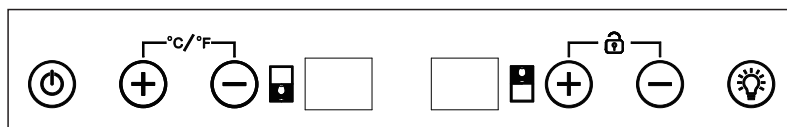

- Power switch : Plug in, press for 3 seconds to turn on or off the unit.
- Left combination button ; Press and at the same time for 3 seconds to change the temperature display between Celsius and Fahrenheit.
- Left display window show the temperature of lower zone, the temperature will increase 1°F or 1°C if you push the left button , the temperature will decrease 1°F or 1°C if you push the left button.
- Right display window show the temperature of upper zone, the temperature will increase 1°F or 1°C if you push the right button , the temperature will decrease 1°F or 1°C if you push the right button.
- Right combination button; Press and at the same time for 3 seconds to unlock the control panel except Light function. The control panel will automatically lock after 150 seconds from the start of no settings.
- Light button : Press to turn on or off.

FOR CWC-150C/ CWC-180C WINE & BEVERAGE COOLER

 ➤ Control System Instruction

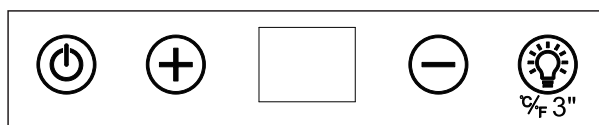

- Power switch : Plug in, press for 3 seconds to turn on or off the unit.
- Temperature setting: The temperature will increase 1°F or 1°C if you touch the once; On the contrary the temperature will decrease 1°F or 1°C if you touch the once.
- Light button: Press the button once to turn or off the light, press the button for 3 seconds to change the temperature display between Celsius and Fahrenheit.

➤ **Setting The Temperature Controls**

- When press the temperature setting button, the system will enter ot set up mode of automatically. The LED display will flash and show the setting temperature. After 5 seconds the flash will stop and it will show the actual measured interior temperature.


Model	Temperature range
CWC-150B WINE COOLER	Upper compartment: The temperature setting can be adjusted from 5°C/40°F to 10°C/50°F. Lower compartment: The temperature setting can be adjusted from 10°C/50°F to 18°C/66°F.

Model	Temperature range
CWC-150C WINE & BEVERAGE COOLER	Left compartment(Beverage): The temperature setting can be adjusted from 3°C/38°F to 10°C/50°F
CWC-180C WINE & BEVERAGE COOLER	Right compartment(Wine): The temperature setting can be adjusted from 5°C/40°F to 18°C/66°F

➤ **Attention**

If the unit is unplugged, power lost, or turned off, you must wait 3 to 5 minutes before restart the unit. If you attempt to restart before this time delay, the Wine Cellar will not start. If first time use or longer absence of using, the temperature will be different between setting and LED display temperature. After running a period, the temperature will be reverting back.

 
BUILT-UNDER SERIES (Built under a kitchen table top)

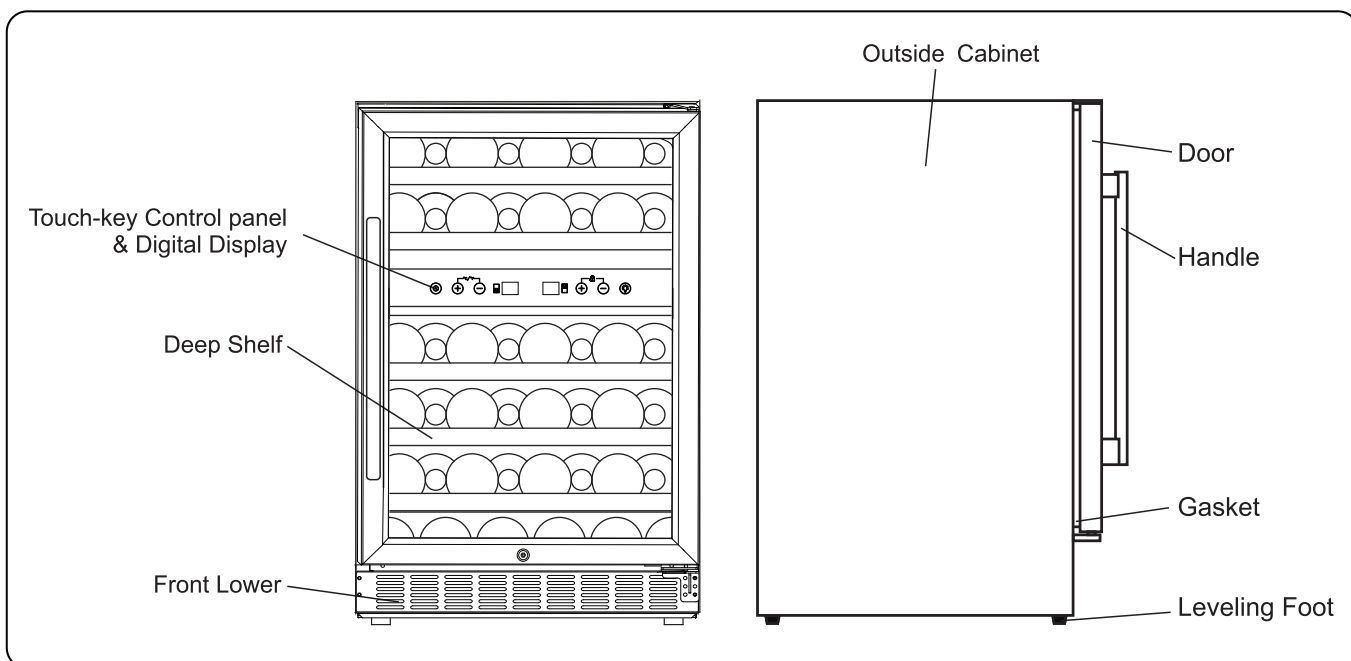


Remark: The above picture is for reference only. Please refer to the actual product.

➤ **Installation specifications for built-in purposes**

 
CWC-150B

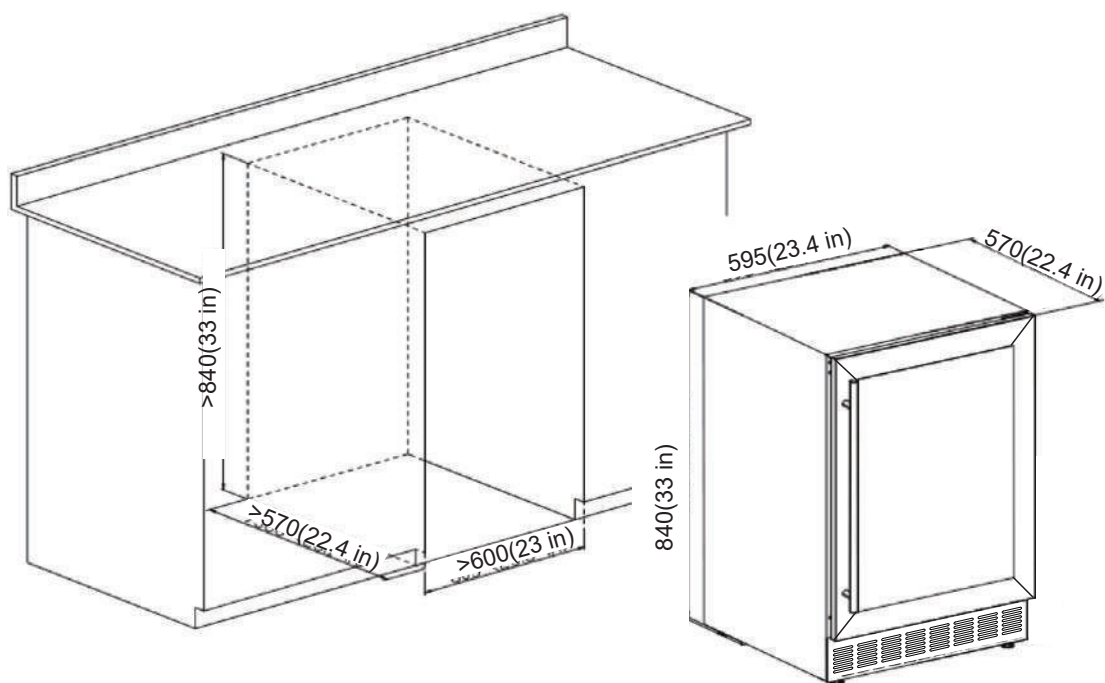

CWC-150C

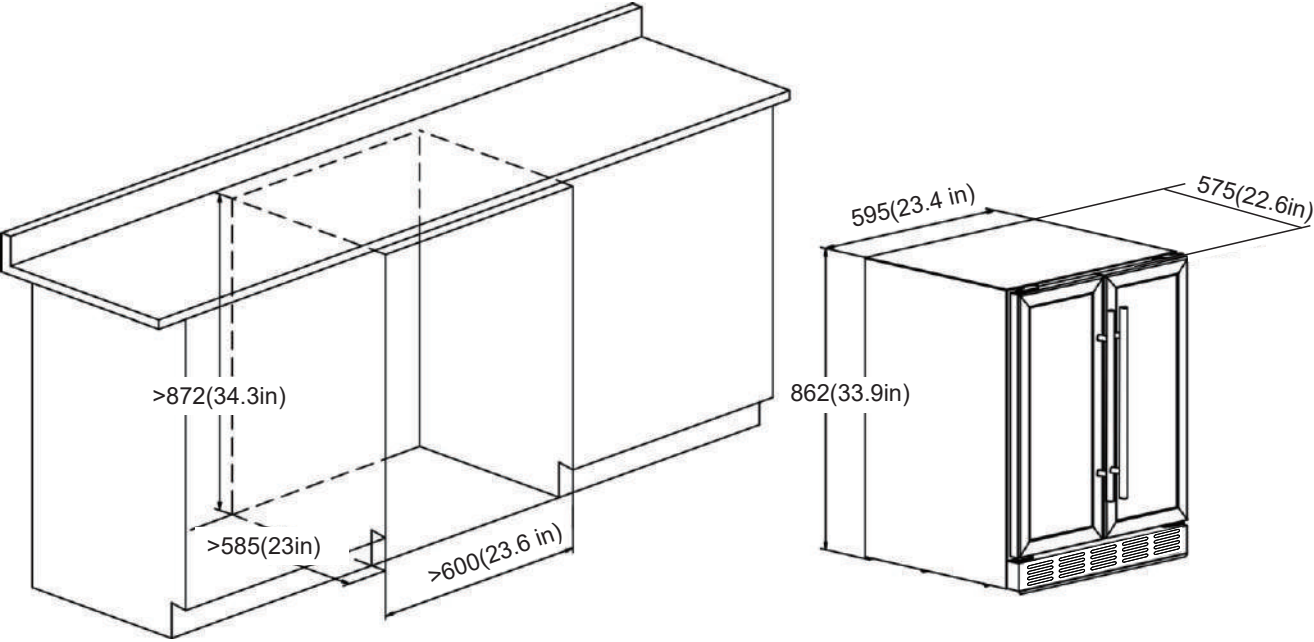 

CWC-180C

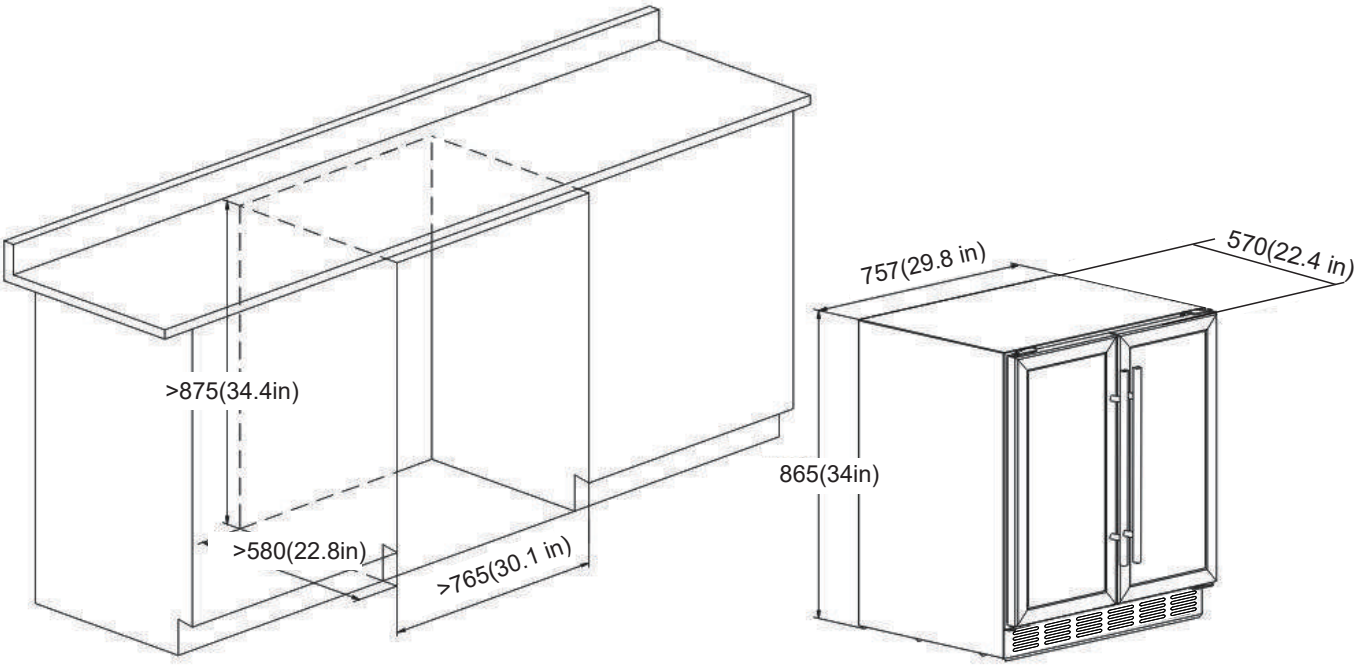 

LOCK & UNLOCK THE DOOR (FOR OPTION)

Lock is an optional function. If your Wine Cellar has such function, a key should be attached inside the packing of this Manual.

 
Insert the key into the lock and turn it counter-clockwise to unlock the door. To lock it, please follow the reversed operation. Please save the key well.

CHARCOAL FILTRATION SYSTEM

Your wine is a living object that breathes through the cork of its bottle. In order to preserve the quality and taste of your fine wines, they must be stored at the ideal temperature and ambient conditions. Your cellar is equipped with an active charcoal filtration system to ensure air purity, cooling efficiency, and to maintain an odor free cabinet for the storage of your fine wines. The filter assembly is located at the rear panel inside your cellar.

Keep in mind, that this filter must be changed every 12 months and purchase the new one from the distributor.

To replace your filter:

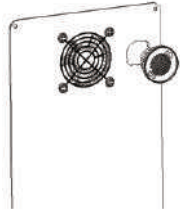1	Remove the bottles of wine stored on the two (2) shelves in front of the filter.	
2	Remove the shelves and set aside to be replaced once you have changed the filter	
3	Hold the filter and turn it at 45 degrees in the counter-clockwise direction and then pull it out.	
4	Remove the existing filter and replace with a new one.	
5	Put the new filter into the hole and then turn the filter at 45 degrees in clockwise direction.	

CARE & MAINTENANCE

➤ **Clean your Wine Cellar**

Turn off the power, unplug the appliance, and remove all items including shelves and rack. Wash the inside surfaces with a warm water and mild solution.

Wash the shelves with a mild detergent solution.

Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.

Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

➤ **Power failure**

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a long period of time, you need to take the proper steps to protect your contents.

➤ **Vacation Time**

Short vacations: Leave the Wine Cellar operating during vacations of less than three weeks.

If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly: blocking it open if necessary.

➤ **Moving your Wine Cellar:**

Remove all items.

Take out the loose items inside the wine cellar (such as shelf), or fix the loose items with the foam.

Turn the adjustable leg up to the base to avoid damage.

Tape the door shut.

Be sure the appliance stays secure in the upright position during transportation. Also protect outside of appliance with a blanket or similar items.

➤ **Energy saving tips**

The Wine Cellar should be located in the coolest area of the room, away from producing appliances, and out of the direct sunlight.

TROUBLESHOOTING GUIDE

If you feel the appliance is out of order, follow these instructions to try to see if you can solve the problem simply by yourself before calling for service.

PROBLEM	POSSIBLE CAUSE
Wine cooler do not operate.	Not plugged in using different voltage. The circuit breaker tripped or a blown fuse.
Wine cooler is not cold enough.	Check the temperature control setting. The door is open too often. The door is not closed completely. The door seal does not seal properly. The wine cooler does not have the correct clearance.
The light does not work.	Main control board does not work. PCB Problem. There is some problem with the plug.
Vibrations.	Check to assure that the wine cooler is leveled.
The wine cooler seems to make to much noise	The wine cooler is not leveled. Check the fan.
The door will not close properly.	The wine cooler is not leveled. The doors were reversed and not properly installed. The seal is weak. The shaves out of position.
LED could not display.	Main control board does not work. PCB Problem. There is some problem with the plug.
LED display error.	Weak quality of display. Temperature point is out off.
Buttons are not functional.	Temperature controller panel is damaged.

TECHNICAL SPECIFICATION

MODEL	CWC-150B	CWC-150C	CWC-180C
POWER	AC110-120V,60Hz	AC110-120V,60Hz	AC110-120V,60Hz
POWER INPUT	90W	90W	90W
RATED CURRENT	1.2A	1.2A	1.2A
PRESSURE HIGH SIDE	105PSIG	105PSIG	105PSIG
PRESSURE LOW SIDE	55PSIG	55PSIG	55PSIG
PRESSURANT AMCUNT	R600a(34g)	R600a(34g)	R600a(34g)

Manufacturer: Foshan Shunde QINGZHOU Electric Appliances Co., Ltd.
Add.: ROOM 2901, BUILDING 18, VANKE JINYU RIVERSIDE PLAZA, NO.13 DESHENG MIDDLE ROAD, DALIANG STREET,
SHUNDE DISTRICT, FOSHAN CITY, GUANGDONG PROVINCE
Contact: Kelly Tel: +1(838)900 9806 E-Mail: info@iaobosi.com

WARRANTY

Thank you for choosing AOBOSI product. We sincerely hope that you are satisfied with it.

The manufacturer's warranty covers the product for a period of 12 months from the date of purchase against manufacturing faults. All warranties are automatically kept track of in our system, so there is no need to register your product.

Agent/Distributor is welcome to contact us. Email:info@iaobosi.com.

Any help or questions during use, please contact us via website www.iaobosi.com, send email to info@iaobosi.com, we will service you within 24 hours. We suggest to provide a warranty card, a photo or a video if there's broken spare part or not working machine so that we can be much more clear about your problems and offer you the best solution.



AOBOSI Warranty Card

Item name:_____

Model:_____

Serial No.:_____

Store name:_____

Purchase date:_____

Buyer's name: _____

Email:_____

Address:_____

Tel.:_____

Please fill in the table and email it within 10 days from the date of purchase.