

TCL



REGISTER NOW
See inside for details &
protect your purchase

Hi! Let's get started.

TCL |  **Google TV**

 
43/50/55/65/75Q671G



TCL Home App
Your TCL Smart Hub
Download Now



Register and protect your purchase

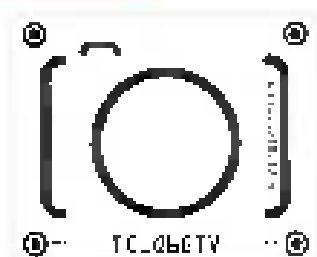

TEXT TO REGISTER

Text a photo of the camera icon to 71403

Or register online at tcl.com

Need help? Visit proregister.com for more info. Call 1-800-871-0303

Add a TCL Protection Plan when you register your product and be covered from life's mishaps

Thank you for choosing TCL. We want your ownership experience to bring you as much joy as the television you purchased does. As a gift, we're offering you a special price on a TCL Protection Plan when you purchase during registration. Add a TCL Protection Plan within your first 30 days of ownership to receive the best value and we won't let anything get in the way of your viewing pleasure.

Benefits & Description

PROTECT

PROTECT PLUS

Extended Manufacturer Coverage

Extended parts & labor coverage for manufacturer defects.

Up To 4 Years

Up To 4 Years

Priority Service

Free shipping and rapid turn-around time.

3-5 Days

3-5 Days

Product Replacement

Free 1-time replacement if product cannot be fixed.

⊕

Ⓢ

TCL Parts & Service

Genuine TCL parts & factory-certified service.

⊕

⊕

No Deductible

No out of pocket expense.

⊕

Ⓢ

Fixal Repair and Burn-In Coverage

Don't let shadows or off-screen pixels get in the way of your viewing.

⊕

⊕

Accidental Damage Protection

Coverage for drops, breaks and spills starts after 30 days.

⊕

Ⓢ

Complimentary Remote & Reinstall

Don't lose a day! Remote or professional services 55" and larger.

⊕

⊕

Lost Your Remote?

No problem! We'll replace your remote, so you never have to leave your couch. One time only.

⊕

⊕

DO NOT RETURN TO STORE

**WE ARE
READY TO
HELP** contact us first
with any questions



TCL SUPPORT:
support.tcl.com/us
1-877-300-9576



TAKE CARE WHEN
REMOVING THE TV

Important Information



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



This symbol indicates that the product contains double insulated parts between hazardous main voltage and accessible parts. When repairing, use only factory replacement parts.

CAUTION: Always follow Samsung's maintenance warning. Caution is required to avoid the risk of electric shock, fire and remote control (or battery) damage when disassembling parts inside. Refer servicing to qualified service personnel.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates "dangerous voltage" accompanying the product.

WARNING

To reduce the risk of fire or electric shock, do not expose the product to rain or moisture. This product should not be exposed to dripping or splashing. No objects filled with liquids, such as vases, should be placed on the apparatus.

WARNING

The TV is unstable if it is not properly attached to the base or mounted to the wall. Please follow the base or wall mounting instructions provided in the User's Guide to ensure your safety.

Warnings: The television should not be exposed to excessive heat, such as prolonged direct sunlight, open flame, or fire of any kind. Refer to the "Safety Information" tab located on this page for more product safety and proper operating voltage.

Cable TV Installer: This remote is provided to aid your installation to Article 820.45 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground should be connected to the grounding system of the building as close to the point of cable entry as practical.

Important: This television is a table model and is designed to sit on a hard, flat surface. Do not place the TV on soft carpeting or on a similar surface as this may cause the vent fans inside located on the bottom of the unit to be blocked and may result in reduced product life-span from overheating. To ensure adequate ventilation for this product, maintain a spacing of one (1) inch from the top and side of the TV receiver and two (2) inches from the rear of the TV receiver and other surfaces. Make sure the TV stand or base you use is of adequate strength to prevent the TV from tipping or falling, tripped over, pushed off, or pulled off. This may cause personal injury and/or damage the TV. Refer to the Important Safety Instructions on the next page.

The Power button  on this TV and your remote control puts the TV into a very low-power standby mode but will not completely turn the power off. In order to completely shut the power off, you will need to disconnect the power cord from the outlet. The main programmable power switch is used to completely turn off the device. If you prefer to completely turn off the device, you should install the TV in a manner that allows you to disconnect the power cord when desired.

Product Information

Keep your serial receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. These numbers are located on the product.

Warning: Changing or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Keep the apparatus at least 6 inches away from the human body.

Input	Signal Compatibility
Antenna/Cable	480i, 480p, 720p, 1080i (NTSC, ATSC) and QAM formats
Composite Video	480i
HDMI	480i, 480p, 720p/60Hz, 1080i/60Hz, 1080p/60Hz, 2160p/24/30/60Hz

For the best viewing experience, we have the Energy Guide Label from the TV front panel or TV screen before use.

Model No. _____


Serial No. _____


Purchase Date _____

Dealer/Address/Phone _____

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Read all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Carefully read the right.
7. Do not block any vent holes or other parts of the apparatus in accordance with the instructions.
8. Do not install any other heat sources such as heaters, heat registers, stoves, or other appliances (including any the first that could heat).
9. Protect the power cord from being walked on or pinched where it exits the apparatus, especially where it exits through a convenient receptacle and the point where they exit from the apparatus.
10. **WARNING:** Please refer to the information on page 10 for information about the use and safety information on safety including instructions for the apparatus.
11. **WARNING:** The main plug is used to disconnect the device and should remain readily accessible.
12. When not in use, the main plug should be stored in a safe place with the cord in a safe place. Do not use the main plug as a support for the device or other objects. When not in use, the main plug should be stored in a safe place with the cord in a safe place. Do not use the main plug as a support for the device or other objects.
13. Do not use the main plug as a support for the device or other objects. Do not use the main plug as a support for the device or other objects.
14. Do not use the main plug as a support for the device or other objects. Do not use the main plug as a support for the device or other objects.
15. Do not use the main plug as a support for the device or other objects. Do not use the main plug as a support for the device or other objects.
16. Do not use the main plug as a support for the device or other objects. Do not use the main plug as a support for the device or other objects.
17. Do not use the main plug as a support for the device or other objects. Do not use the main plug as a support for the device or other objects.
18. Do not use the main plug as a support for the device or other objects. Do not use the main plug as a support for the device or other objects.
19. Do not use the main plug as a support for the device or other objects. Do not use the main plug as a support for the device or other objects.
20. Do not use the main plug as a support for the device or other objects. Do not use the main plug as a support for the device or other objects.

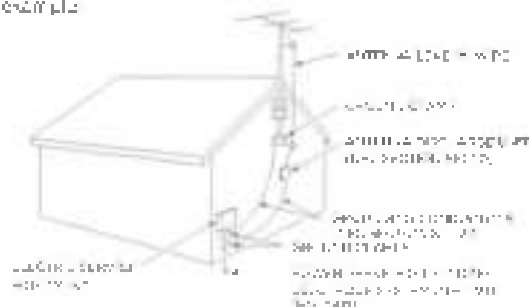

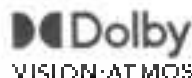

The terms HDMI, HDMI (High-Definition Multimedia Interface), HDMI Trade Dress and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Dolby, Dolby Vision, Dolby Atmos, and the Double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. All other trademarks are the property of their respective owners. Copyright © 2017 2020 Dolby Laboratories. All rights reserved.

For DTS patents, see <http://pats.dts.com>. Manufactures and licensees must obtain a license from DTS Licensing Limited (DTS Limited), and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2010 DTS, Inc. ALL RIGHTS RESERVED.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential setting. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between this equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital equipment complies with FCC Part 15.003.

The device includes models of www.tte.com.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause unexpected operation.

Supplier Name: TTE Technology, Inc. (aka TTE North America)

Supplier Address: 181 Technology Drive, Suite 200, CA 92016, USA

Supplier phone number and contact information: 617-320-0576 support@tte.com

Battery CAUTION & Disposal Information

1. For best results, use alkaline type batteries.
1. Do not mix Alkaline Standard (Carbon-Zinc) or Rechargeable (Nickel-Cadmium, Nickel Metal Hydride) batteries.
2. Always replace depleted batteries with two same brand name batteries from the same manufacturer. Never use damaged battery.
4. Do not use Rechargeable (Nickel-Cadmium or Nickel Metal Hydride) batteries.
 - Initial only use Batteries of the same type in your product. These guidelines www.tte.com and the battery is covered by our warranty www.tte.com.
6. Avoid mix old and new batteries.
7. Batteries should not be exposed to excessive heat, such as prolonged direct sunlight, open flame, or fire of any kind as it may result in an explosion or leakage of flammable liquid or gas.
9. Batteries should not be exposed to extremely low air pressure as it may result in an explosion or the leakage of flammable liquid or gas.
9. Fail to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause heat and leak.
10. Batteries should be recycled or disposed of in accordance with local guidelines. Do not dispose of batteries in a fire, hot, wet, or humid areas, or in the presence of children. For more information, visit www.tte.com.

ELECTRONICS & PACKAGING RECYCLING INFORMATION

For information on recycling your old TTE, sound bars and other consumer products, and to find drop-off locations in your area, please visit the "Electronics Recycling" area on the TTE website at www.tte.com. Click on our convenient Internet recycling link located in the footer of our website. For more information, please visit www.tte.com or call 1-800-444-4444. For more information on recycling, please visit www.tte.com or call 1-800-444-4444. For more information on recycling, please visit www.tte.com or call 1-800-444-4444.

Look for the "Recycling" symbol on the product box for help recycling your new TV packaging for recycling. These boxes have no extra fill, and no extra fill. The various types of packaging material are used with your new TV along with bright-colored and clear packaging materials.

Warning: To avoid the danger of suffocation, keep plastic packaging away from babies, children, and pets. Do not use packaging bags in beds, beds, cribs, or cribs.

What's In the box



NCL 40-inch TV



150W (200W)

150

Power cable
150W (150)



2 x AAA batteries
(not included)



2x

2 x VESA mounting holes
(not when mounting the TV wall)



4 x Phillips screws



4 x M4 x 10mm
screws

4 x Phillips screws



2x



2 x VESA mounting holes

2 x VESA mounting holes




1 x 1.5m HDMI
cable



Remote control

What you need

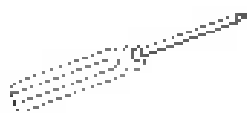

Phillips #2
screwdriver

Make the most of your TV



HDMI - Internet Connection
(see 1-2 for connection)

For additional support, please visit www.ncl.com.my

Step 1 Set up your TV

Ready for the step-by-step? You're only minutes away from TV bliss! **Warning:** To avoid the danger of installation, keep people (including baby) from getting distracted and press the release packaging bag in order to take away, cut edges, or damages.



Remove your TV from the box

Be careful, it's heavy!

To use the stand

- A** To prevent damage to the screen, carefully place your TV on a soft, padded surface.
- B** Align the stands with the screw holes located on the TV. Secure the stands to the TV with four (4) screws.

Notes: Make sure the installation direction of the stand is the same as illustrated. Please remove the protective film after installation.

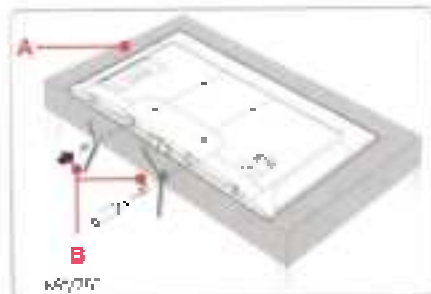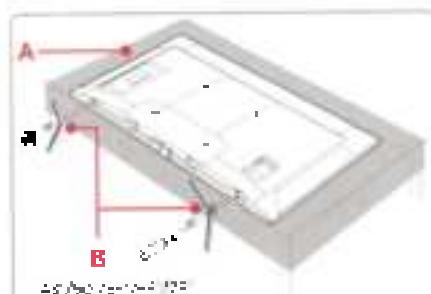

Screws

4x4.5/50/57x17mm 50/55/54x25mm (4) (H=20mm)

Warning (Stability Hazard):

Never place a television set in an unstable location. A television set is heavy, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by following these precautions:

- Using cabinets or shelves are not allowed by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Placing the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (bookshelves, bookshelves or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on unstable or movable stands that may be moved away from the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.
- NEVER place items that might encourage children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.
- ALWAYS make cords and cables connected to your television set they cannot be tripped over, pulled or grabbed.

If your existing television set is being retained and reinstalled, the same considerations as above should be applied.



Optional - To mount on a wall

(Wall mount hardware and accessories are not included.)

To mount on a wall

Preparation must be done before mounting your TV on a wall.

Note: Do not place your TV in a location exposed to direct sunlight, heat, fire, or moisture. Exposure will damage the TV.

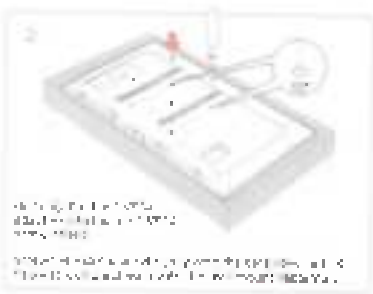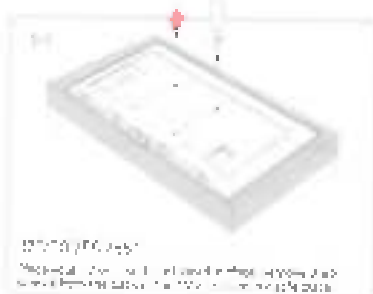

When mounting your TV to the wall, do not follow these steps:

To mount your TV to the wall, purchase a VESA wall mount			
43" Model	Purchase a VESA 400x200	(2) M5x15mm screws - top row	(2) M5x2mm screws - bottom row
50" Model	Purchase a VESA 300x300	(2) M6x1mm screws - top row	(2) M6x2mm screws - bottom row
55" Model	Purchase a VESA 300x300	(2) M6x30mm screws - top row	(2) M6x15mm screws - bottom row
65" Model	Purchase a VESA 400x400 (4) M6x15mm screws		
76" Model	Purchase a VESA 400x400 (4) M8x10mm screws		

The VESA standard is a universal standard for local and international mounting. For example, 200x indicates the distance between mounting holes. For example, 200mm horizontally and 200mm vertically.

Follow the instructions that come with the wall mount.

Your wall mount is not able to bear more than one time the full weight of your TV without being damaged.

Warnings:

- The product should only be mounted by a professional installer.
- Never install or mount this product to the ceiling with the screen side facing down. Installing or mounting the product to the ceiling or the underside of a structure or surface is hazardous and may result in personal injury and/or property damage.


Step 2 Power up

In this step, we'll make sure all systems are a GO!

Connect your power cable to the TV, then plug it into the wall outlet.

Power your TV remote by inserting the included batteries.

If applicable, connect external devices by referencing port label and descriptions on Page 9.

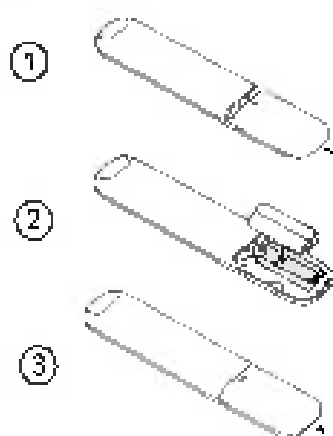

Insert batteries and reconnect on only as instructed in the battery compartment.

Power Tip! Always replace depleted batteries with two same brand-new batteries from the same manufacturer to avoid the danger of overheating.

If your remote doesn't work after using two brand-new and correct battery types, contact customer support for help.

See the Battery section for special information on page 4.

Troubleshooting

Having trouble completing the guided setup? Don't worry, it's usually an easy fix.

Cannot connect to wireless network (WiFi)

- Select the correct wireless network name and verify the password entered correctly.
- Remove the router from objects that interfere with performance (e.g. less-planned baby monitors, etc).
- Restart the router by disconnecting the power for more than 2 minutes and reconnect.

Problems connecting my cable box or antenna through a coax cable

- For best performance, use the HDMI connection if you can also connect.
- Make sure the cable connections to the TV and your device are securely fastened.
- Check name of antenna input.
- Select the channel when there and follow the on-screen instructions to confirm that it works when.

What is the remote code for programming my Universal or Cable box remote control?

- Please visit <http://google.com/occc>

How to update Parental Control password

- Select "Settings" from the home screen.
- Select "System".
- Select "Parental Controls" to view and/or change your parental password.
- You can setup your parental password anytime.
- If you forget your parental password, you can use 0423 to reset.

How do I turn Text-to-Speech (TTS) on or off?

- Select "Settings" from the home screen.
- Select "System".
- Select "Accessibility".
- Select "TalkBack".
- Select "Enable" and check "On" for turn it on or off.
- For more information visit <http://google.com/tts-voice>


How to use voice control through the remote control?

- In Google TV mode, press and hold the "HOME" and "OK" buttons on your remote at the same time.
- Hold your remote within 3 ft. of your TV during the pairing process.
- Press and hold the "OK" button longer than the Google Assistant icon (it will appear between the 1 and 2 o'clock position) or holding down the Google Assistant button to make a question or voice suggestion.

Need more help?

www.tcl.com/us

1-877-300-9576

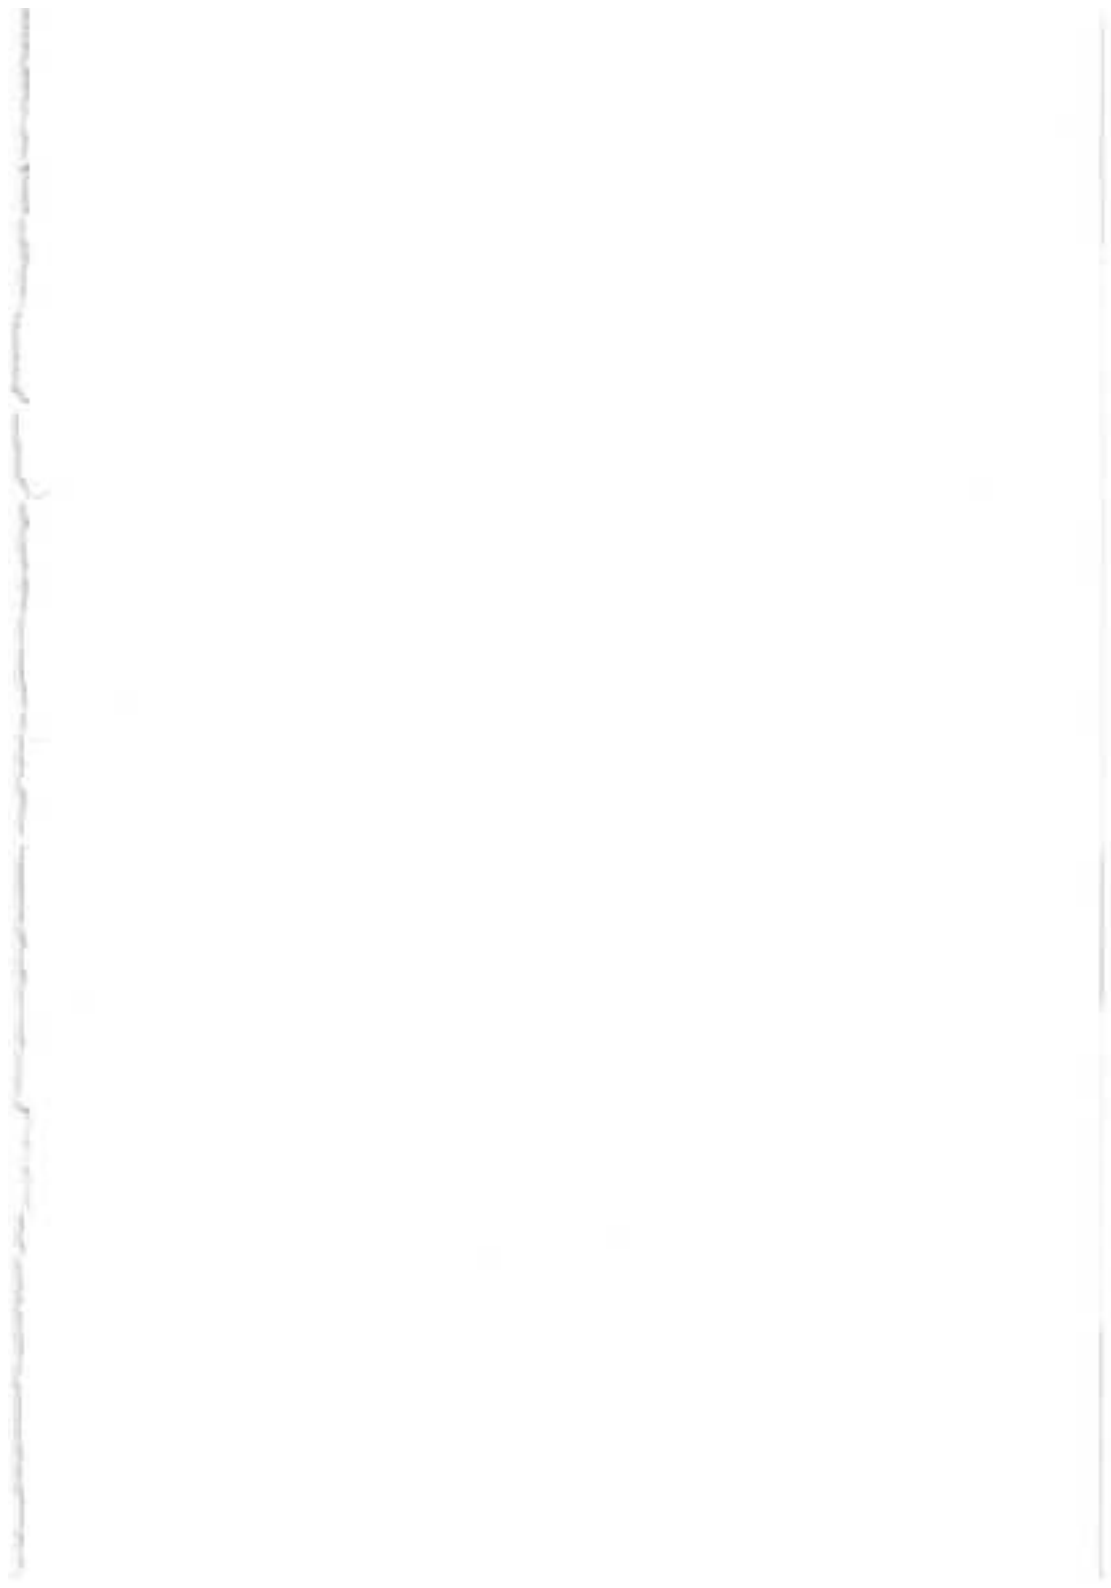

Home Theater, Made Simple.

Complete your Home Theater Experience with a TCL Sound Bar!

Upgrade your TV speakers with the all-new TCL Sound Bars offering premium audio with true surround sound, crisp clarity, and deep bass for all your favorite entertainment.

Available features include DTS® Virtual:X™, Bluetooth® streaming, a powerful wireless subwoofer, surround sound speakers and up to 300 watts of audio power.



Learn more at TCL.com or visit your favorite retailer.

TCL

Copyright © 2019 by TCL. All rights reserved.
TCL and the TCL logo are owned by TCL Corporation and
used herein by TCL under license. Other brands and model
names are the property of their respective owners.

For more details
see Technology Policy Center: 00-0000-000



Part No. 0000-000000