 


ENGLISH

Introduction.	3
Care and maintenance	3
Technical specifications	4
Product contents	4
Connectivity and commands	4
Switching the tower on and off	6
Downloading the Wi-Fi app	6
Initial settings	6
Playback settings	9
How to use the Wi-Fi app	9
Favourites	10
My music	10
TuneIn	10
Spotify	10
Play modes that don't need the Wi-Fi app	10
Bluetooth	10
Removable USB/SD memories	11
Audio inputs	11
Do you have more Wi-Fi speakers?	11
Connect them and enjoy the Multiroom mode	11
Individual Multiroom Mode	12
Synchronized Multiroom Mode	12
How to connect to the speaker's own network	13
How to connect your speaker to your PC	14
1) Windows 10:	14
2) Linux:	14
3) Mac OS:	14
Sound equalizer	14
Charging devices	15
How to change the speaker's language	15
Restore default settings.	16
How to make your speaker connect to your Wi-Fi network	16
Minimum router requirements	18
Wi-Fi setup wizard	18
Warranty	20
Warranty procedure	20
Declaration of conformity	20

Energy Multiroom Tower Wi-Fi

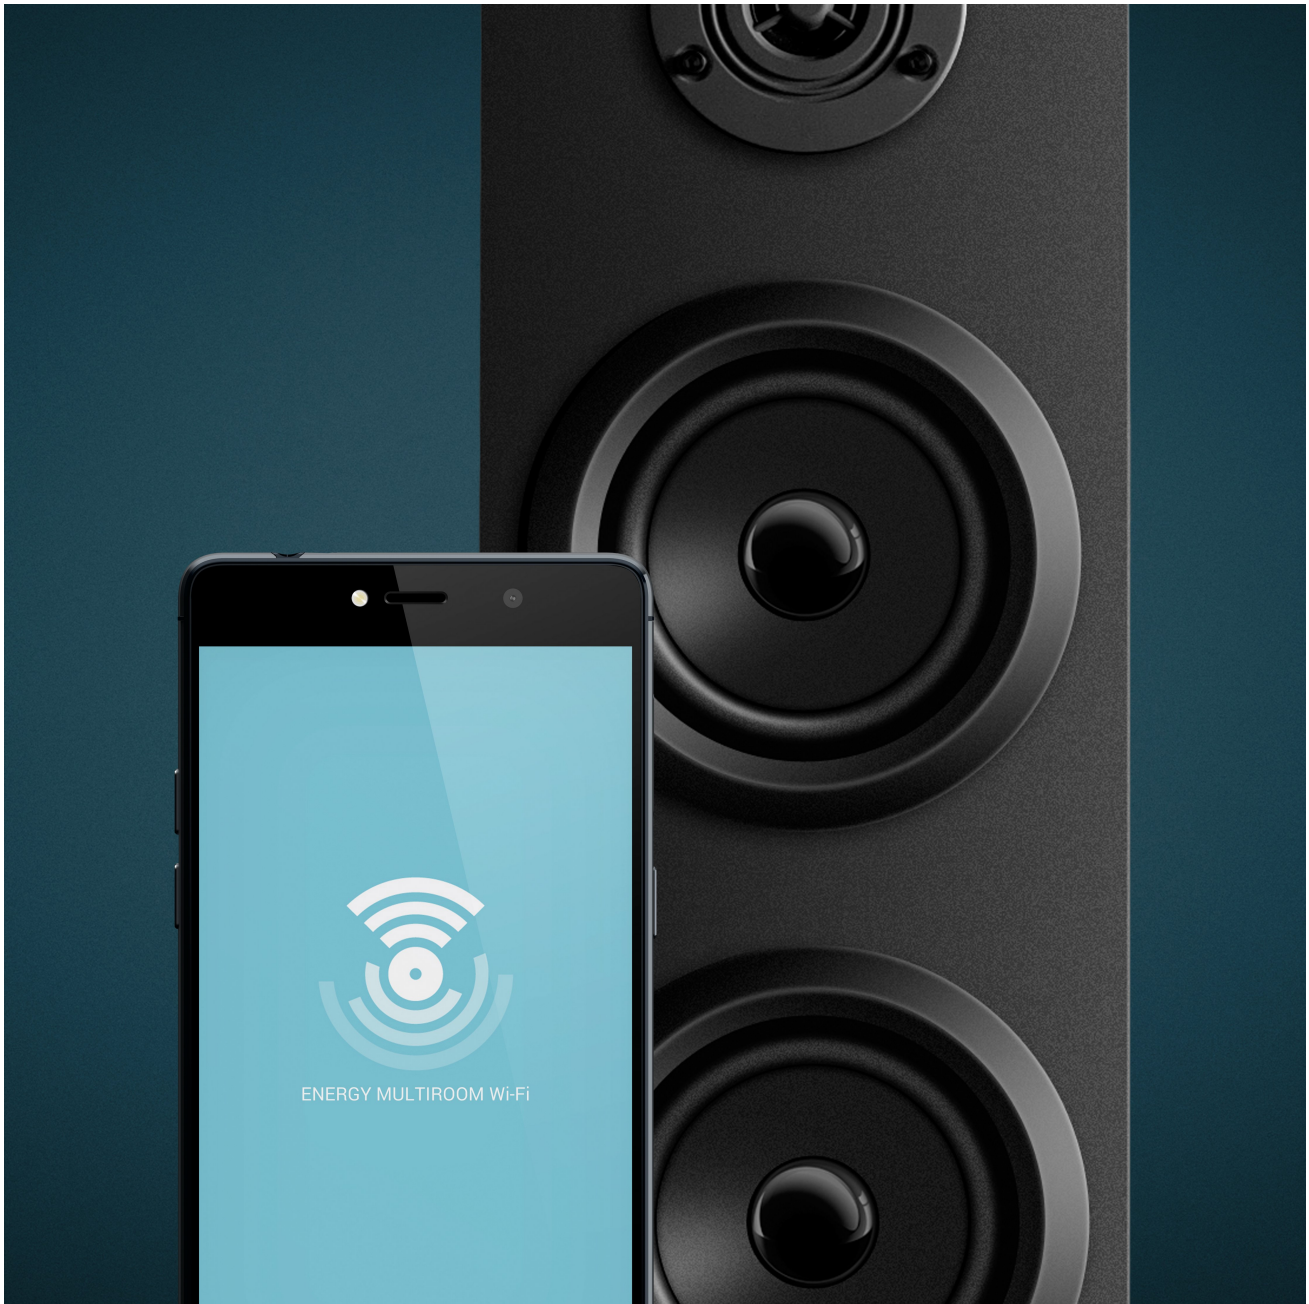

Introduction.

- Energy System would like to thank you for your trust and for buying this *Multiroom Tower Wi-Fi*. We hope you enjoy it.
- This Wi-Fi system gives an amazing 2.1 sound with 60 W output power and lot of possibilities to play your favourite songs around the house either via Bluetooth, external memories or audio-in connections.
- We recommend you to read this manual in order to enjoy your device safely and with maximum performance.

Care and maintenance

- Do not expose your *Multiroom Tower Wi-Fi* to humidity or high temperatures.
- Do not press the speaker cones.
- Do not use corrosive nor abrasive cleaning products.
- Please do not dismantle the device. All repairs should be done exclusively by qualified staff of Energy System Technology, S.A.

- Please make sure that your *Multiroom Tower Wi-Fi* is off if you are not using it.

Technical specifications

- 2.1 sound system with 60 W output power. (1 x 4" subwoofer of 30 W + 2 x 4" full range speakers of 10 W + 1 x 1.5" tweeter of 10 W).
- Frequency response: 20 Hz-20 Hz.
- Wi-Fi connection:
 - Standard: 802.11 b/g/n.
 - Frequency range: 2,412 GHz ~ 2,484 GHz.
 - Supported security protocols: WPA-PSK.
 - Encryption Standard: AES.
 - Compatible wireless audio systems: Airplay and DLNA.
- Bluetooth 4.0 connection:
 - V4.0 + EDR (Enhanced Data Rate).
 - Class II. Distance range up to 10 m.
 - Bluetooth profiles®: A2DP ; AVRCP.
 - Frequency: 2.4 GHz ISM range.
- SD memory decoder: reads MP3/WAV files from SD flash drives up to 64 GB.
- USB memory decoder: reads MP3/WAV files from USB flash drives up to 64 GB.
- 5 preset digital EQ for USB and SD modes.
- Two-band analogue equalizer.
- Wooden cabinet speakers.
- Remote control with up to 10 meters range.
- 3.5 mm audio input.
- Output power of USB ports: 5V 2A
- LED-Backlit touch display.
- LED segment display.
- Power supply: 120-240 V / 50-60 Hz.

Product contents

 
- Multiroom Tower Wi-Fi.
- Remote control.
- 3.5 mm Audio-Input cable (miniJack).

Connectivity and commands


In order to select different functions, press CHANGE FUNCTION (4). You will be able to see the selected function on screen. If no device is connected to the USB and SD/MMC inputs, the CHANGE FUNCTION (4) button will change between APP, Bluetooth and Audio input 2.

In case that you connect a device to any of the USB or SD onputs, the *Multiroom Tower Wi-Fi* will change automatically to that function. If one or all inputs are being used, you will be able to change between all the available functions by pressing the CHANGE FUNCTION (4) button.


TOP VIEW:

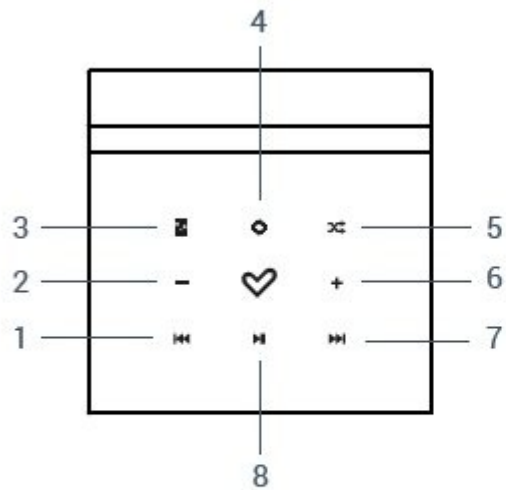


RIGHT PANER VIEW:

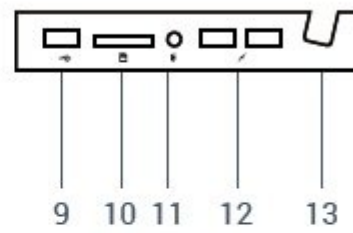 

REMOTE CONTROL:

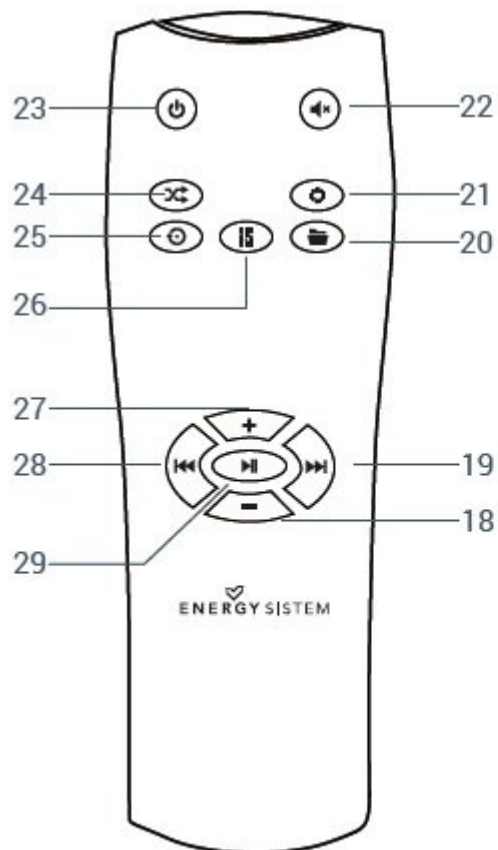 

REAR VIEW:

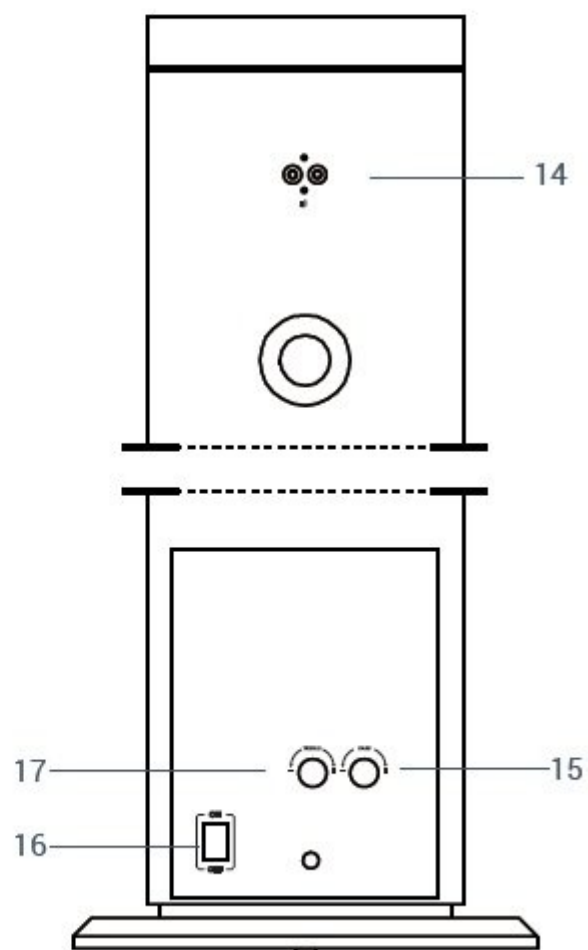 

- | | |
|--|----------------------|
| 1. Previous | 16. On-Off switch |
| 2. Volume – | 17. Treble control |
| 3. Equalization | 18. Volume – |
| 4. Mode / Wi-Fi synchronization | 19. Next |
| 5. Playback mode / restore settings (10 s) | 20. Folder |
| 6. Volume + | 21. Mode |
| 7. Next | 22. Mute |
| 8. Play-Pause /On-Off | 23. On – Off |
| 9. USB in | 24. Playback mode |
| 10. SD card slot | 25. Restore settings |
| 11. Audio-In 3,5mm | 26. Equalization |
| 12. USB charging ports | 27. Volumen + |
| 13. Holder for devices | 28. Previous |
| 14. Audio-In RCA | 29. Play - Pause |
| 15. Bass control | |

Switching the tower on and off

Once the *Multiroom Tower Wi-Fi* has been plugged into a socket, turn it on by moving the ON-OFF SWITCH (16) on the back side of the tower to the "ON" position. From that moment on, you can turn it on or off by pressing the PLAY/PAUSE button (8) on the top display for 2 seconds or the ON/OFF button (23) on your remote control.

If you are not going to use the tower for a long period of time, we recommend, not only to switch it off from the top display but also to turn the ON-OFF SWITCH (16) to the "OFF" position.

Downloading the Wi-Fi app

Please download the Wi-Fi app and make the most of your speaker:

- Control the speaker from your smartphone or tablet. You can control it from several devices at the same time.
- Connect several *Wi-Fi* speakers to play the content you want in a synchronized way or individually (Multiroom Mode).
- Explore online radio stations with TuneIn.
- Listen to your favourite music on Spotify.

Download the app from the Play Store or the App Store directly by searching for the "Wi-Fi" application.



Energy Multiroom Wi-Fi.



Initial settings

Follow these instructions to define your speaker's settings:

- 1) Switch your Wi-Fi speaker on and wait 15 seconds. A sound will indicate that the speaker is ready to be used in APP

mode.

2) Run the app and select the "Add Device" option. Please verify that the device is connected to your private Wi-Fi network.

 


3) Enter the password that you use to connect to your private Wi-Fi network and press "Next".



4) Press and hold your speaker's Wi-Fi SYNC (4) button until you hear "Waiting for Wi-Fi connection". A voice message will confirm that the synchronization has been established successfully. If this does not happen, please repeat once again the process starting at point 1).

5) Choose the name you want to give to your speaker. You can choose your speaker's name from a list or predefined names but also have the option of creating the name you want through the "custom" option.

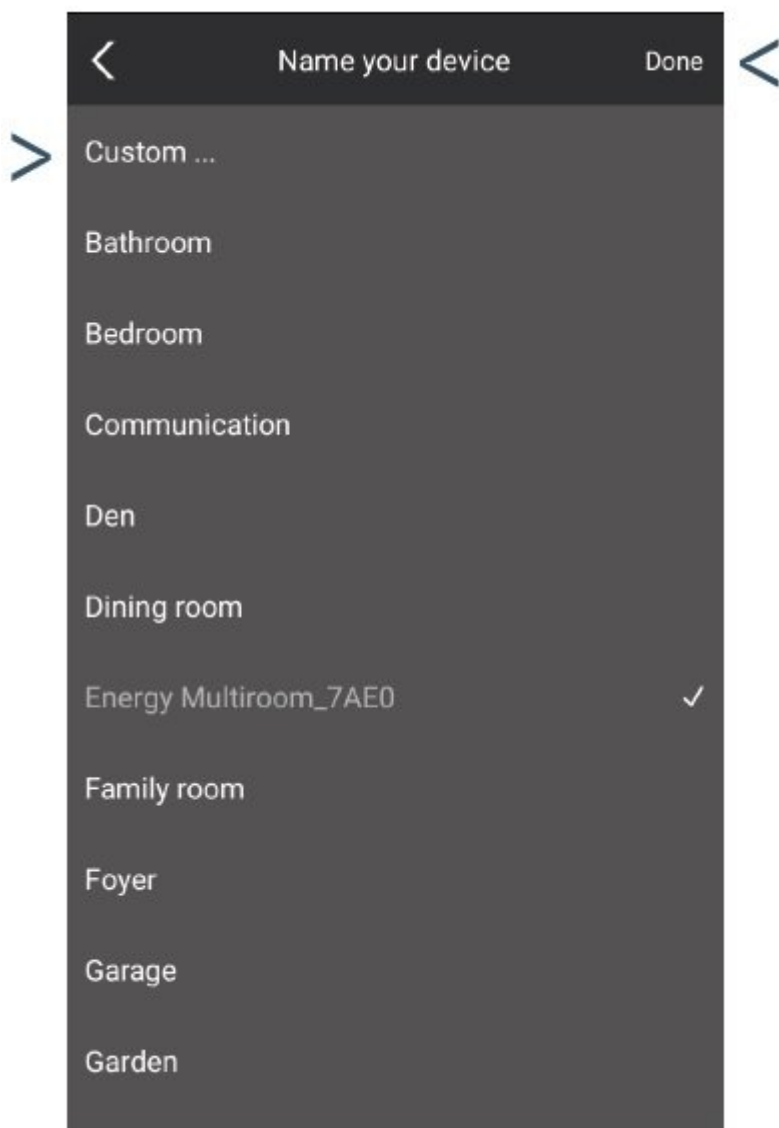

Once you have selected your speaker's name, press "Done". Your speaker is now ready!

 
Note: there is an alternative option to establish the connection between your speaker and your private Wi-Fi network. Please take a look at the "How to make your speaker connect to your Wi-Fi network" section.

Playback settings

Once you have defined your speaker's settings, you have the following options to playback your favourite music:

How to use the Wi-Fi app

In the app's main menu you will find 4 categories:

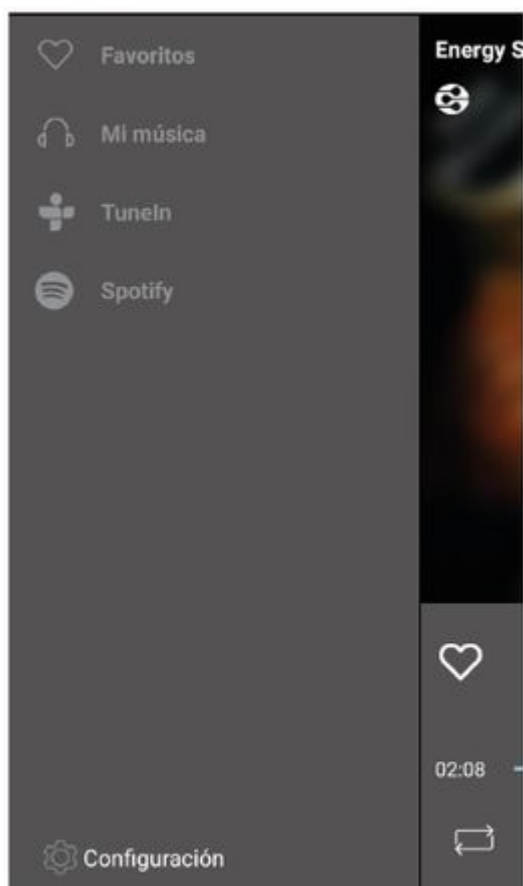

Favourites

This option will enable you to access the songs that you like most and that have been previously saved quite fast. This list has been conceived to add and delete songs more easily.

My music

Playback the songs that you have stored on your device. In order to make it easier, songs are sorted out into Albums and Artists. Furthermore, you will be able to create your own playlists and access the last played tracks. In case that one USB stick or SD card is connected to your speaker, you will also have the possibility of accessing these external memories and select the song you want to hear. If you access the additional information of a certain music track, you will be able to add this song to favourites or to the current playlist as well as take a look at the additional information.

TuneIn

Use this option to enjoy a wide selection of online radio stations. You will be able to listen to all types of music from all over the world as well as your favourite sport programmes.

Spotify

If you have a Spotify Premium account, you can also listen to your favourite music on your Multiroom speaker with this option. This option is available on the app's main menu.

Play modes that don't need the Wi-Fi app

Apart from the above mentioned play options, you can control all other external play modes through the app. However, it is not necessary to use the app to enable the following external inputs:

Bluetooth

Change the play mode by pressing your speaker's MODE (4) button and select the Bluetooth mode (the letters "-bt-" will appear on your speaker's screen). Once you have selected this mode, connect to your Multiroom via Bluetooth. You won't need any code to establish the connection.

This is the perfect option to play online videos from your device.

Removable USB/SD memories

If you connect an USB or SD external memory to your speaker, it will start the USB/SD mode automatically. You can play MP3 and WAV files that have been saved to your external memories and change the mode by pressing the MODE (4) button on your speaker.

Audio inputs

Your *Multiroom Tower Wi-Fi* has two audio inputs to connect any external device.

 
- AUX 1. It is on one side of the top display. 3.5 mm mini jack input. All other play modes will be muted when the speaker detects the input signal.
- AUX 2. Is on the tower's back part. RCA stereo input. This input has been conceived to connect your TV or music system permanently. You will be able to enable and disable the use of these inputs through the MODE (4) option.

Do you have more Wi-Fi speakers?

Connect them and enjoy the Multiroom mode

You can connect several speakers to your private Wi-Fi network and control them using your smartphone, tablet or different devices simultaneously.

Once the first speaker's initial settings have been set, select the "+" option and follow the steps described in the "Initial settings" section to connect your second Wi-Fi speaker.

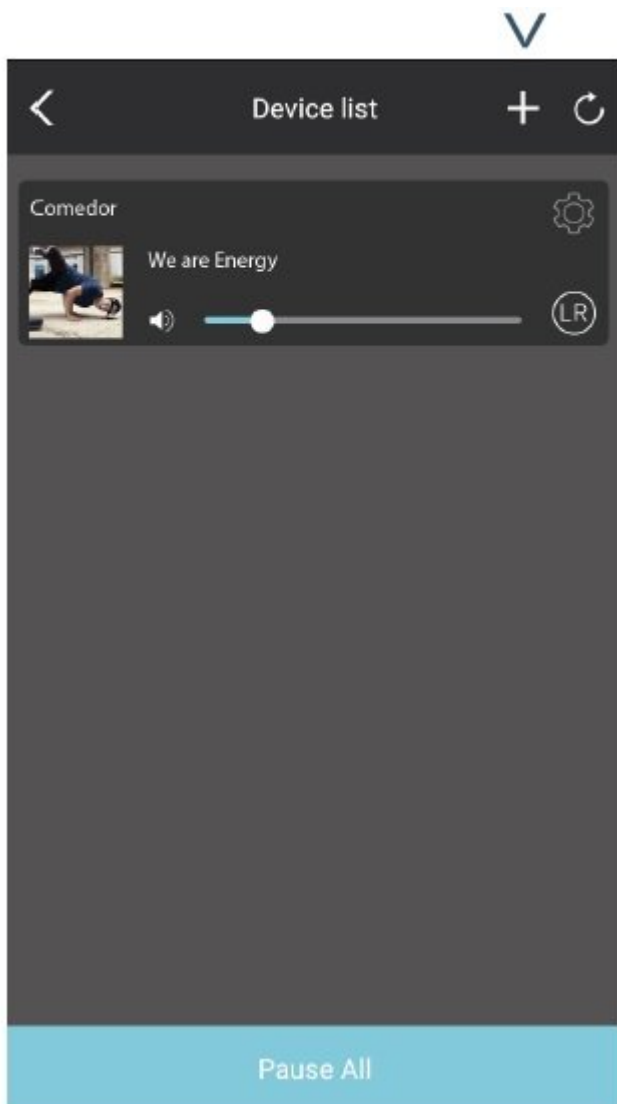


Repeat the same steps to connect more speakers. You can connect up to 8 speakers in Multiroom mode.

Control the music on each speaker with this app. Each speaker is represented by one track. You can play different music content on each speaker or the same song through all of them simultaneously.


Individual Multiroom Mode

 This Multiroom mode is set by default. Each speaker will play music independently and you can control each of them using the application or interacting directly with the device by touching the top display. You will know that this play mode is active by looking the app since each device will appear in one line within the "List of devices" menu.

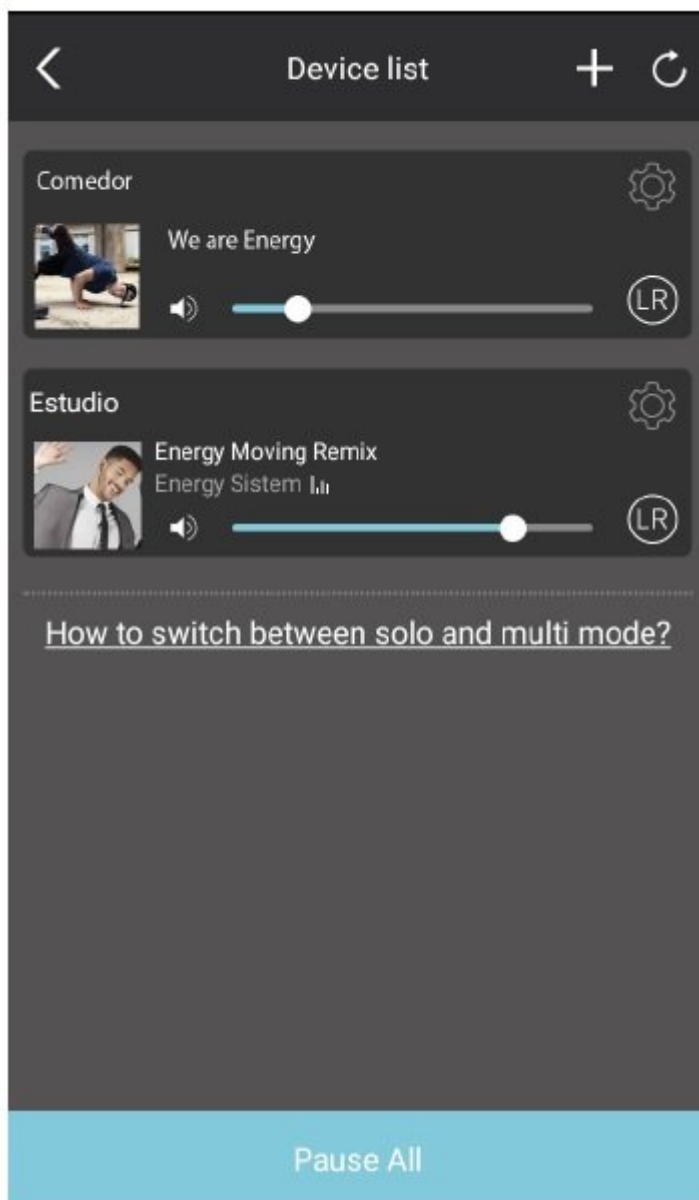

Synchronized Multiroom Mode

 This synchronized Multiroom mode enables to play the same music on all speakers at the same time. In order to define the play mode settings using the app, please go to "List of devices" in the app and press the device that you want to connect to other speaker and then, drag it to another track maintaining contact. Wait a few seconds and you will see that both devices are now synchronized. The synchronized tracks will appear on the app screen. This way, you will create groups comprising a master speaker and the rest of speakers.

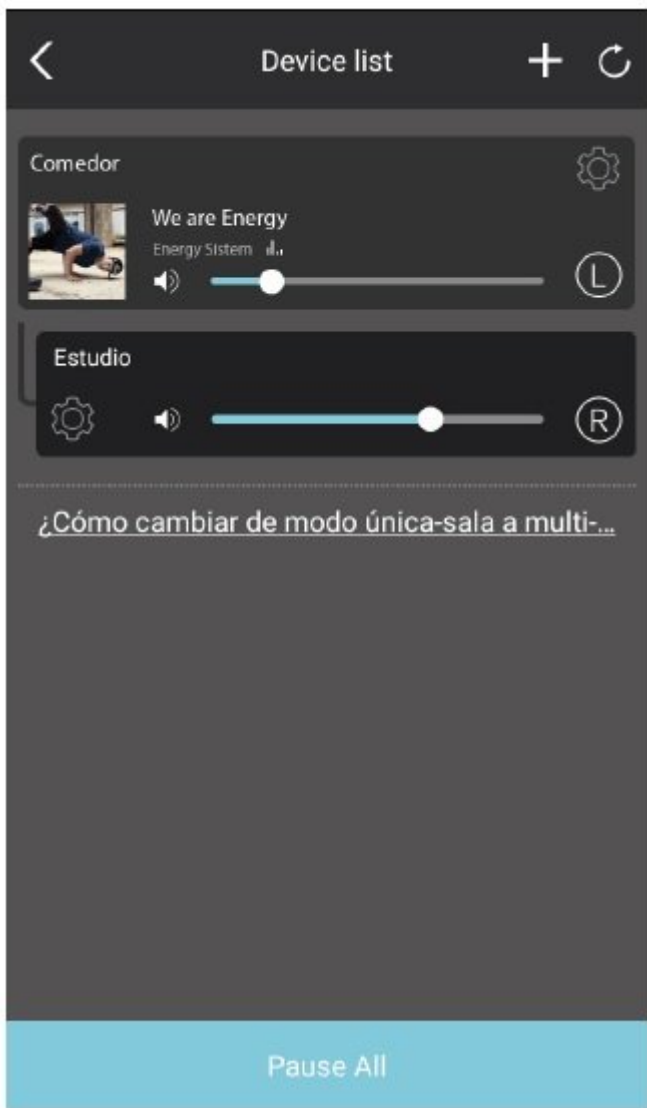

You can assign a different channel to each speaker.

- L = Left channel
- R = Right channel
- LR = Stereo

The synchronized mode remains active until it is disabled manually, so if you change the master speaker's play mode through the CHANGE FUNCTION (4) button, for instance, to Bluetooth mode, you will be able to stream the contents via Bluetooth to all synchronized speakers.

To enable the Individual Multiroom Mode again you only have to press on the synchronized secondary speaker and once selected, drag it under the dotted line on screen. You will see that the white broken line disappears. Wait a few seconds and the process to end the synchronized mode will be completed.

How to connect to the speaker's own network

The *Multiroom* speakers create their own Wi-Fi network in order to interact with all other devices that belong to the same product range. These networks can be identified easily since the default name follows the "Multiroom_XXXX" structure in which XXXX is a unique indicator of each device. The network's name can certainly be modified accessing the device setup wizard. For more information, please see "Wi-Fi setup wizard".

You can connect directly to the Wi-Fi network created by your speaker. This network is encrypted by default and uses a WAP-PSK (AES) password. The default password is 0123456789. We recommend to change this password for another one that you can easily remember. You will be able to do this from the application, through the "Device information" menu, or from the device setup wizard. For more information, please see "Wi-Fi setup wizard".

The main advantage of this mode is that:

- You don't need a router.

Limitations:

- You won't have access to the Internet on the device that you're currently using.

How to connect your speaker to your PC

The *Multiroom* speakers use a wireless communication protocol from Digital Living Network Alliance (DLNA) to communicate with each other via the Wi-Fi network that they have created. This gives you the possibility to connect the speaker to other devices that work with these types of protocols such as devices with Linux or Windows operating systems. It can also be used with AirPlay protocol (Mac OS).

1) Windows 10:

1.1) Connect to the device's network. For more information please see "How to connect to the speaker's network".

1.2) Access the Device Manager (Control Panel->Hardware and sound->Add device->Active devices). Wait for the device to appear and add it as an external device. It will appear with the net's name. Please wait until the connection is set up correctly.

1.3) Stream your music to your speaker. Access the Windows Media Player, select the songs that you want to stream to your speaker, open the additional settings menu (right click) and once there search for the "stream to a device" option. To finish, you just have to select your speaker in the list that appears.

2) Linux:

2.1) Connect to the speaker's Wi-Fi network. For more information please see "How to connect to the speaker's network".

2.2) Open the terminal and enter the following commands to install the pulseaudio-dlna package, which enables streaming to other devices using DLNA protocol:

```
sudo add-apt repository ppa:qos/pulseaudio-dlna
sudo apt-get update
sudo apt-get install pulseaudio-dlna
pulseaudio-dlna
```

2.3) Access the Audio Manager of your operating system and select the Multiroom Wi-Fi speaker as audio output.

3) Mac OS:

3.1) Connect to the speaker's Wi-Fi network. For more information please see "How to connect to the speaker's network".

3.2) Open iTunes, use the AirPlay protocol and select the device as external player.

Sound equalizer

Your *Multiroom Tower Wi-Fi* has two controllers at the back that enable users to adjust equalization:

- Adjust Treble (17). This function is indicated as "Treble".
- Adjust Bass (15). This function is indicated as "Bass".

You can also choose one of the five preset equalizers by pressing the EQUALIZATION button on the top display (3) or on the remote control (26):

- EQ 0: Normal.

- EQ 1: Pop.
- EQ 2: Rock.
- EQ 3: Jazz.
- EQ 4: Classic.

Charging devices

Your *Multiroom Tower Wi-Fi* includes two USB CHARGING PORTS (12) to connect an USB cable and charge other devices such as smartphones, tablets or MP3 Players, even if the tower is playing music.

 
Technical specifications of USB CHARGING PORTS:

- Voltage = 5V
- Current = 2A

Any device that requires more than 5V voltage cannot be charged.

How to change the speaker's language

You can change the speaker's language using the app. Access the speaker's settings by pressing the Settings icon that appears on the right upper corner of the audio track:

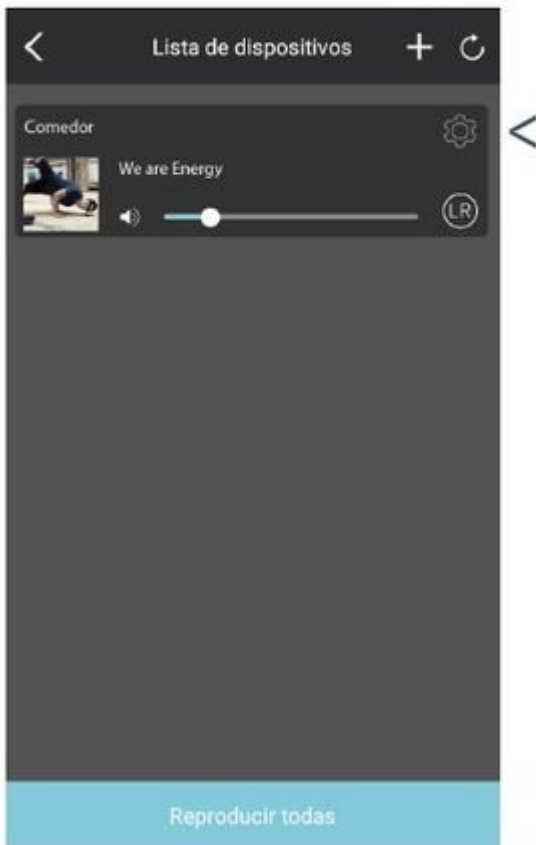

Then, select "Speaker info" and the menu to select the speaker's language will appear. There are two languages available: English and Spanish.

INFORMACIÓN DEL ALTAVOZ	
Conectar a red Wi-Fi : Wifi casa	
Nombre del altavoz : Energy multiroom	
SSID : Energy multiroom_159C	
IP : 192.168.1.94	
Versión firmware : 3.4.2517	
Fecha de creación : 20151217	
Idioma : EN_US	>
Contraseña del dispositivo : APAGADO	>
UUID : FF31F002B3AD989A1C2164A0	
MAC : 00-22-6C-07-15-9C	
Restaurar configuración de fábrica	

Restore default settings.

You can delete the current settings and restore factory settings. To do so, select the "APP" mode and press and hold *Restore settings* (5) for 10 seconds. You will hear a voice message indicating the process has started. Wait for approximately 2 minutes until the process finishes.

How to make your speaker connect to your Wi-Fi network

You have two alternative options to establish the connection apart from the standard procedure that has been described in the "Initial settings" section.

The first option consists in connecting to the speaker's network. For more information please see the "How to connect to your speaker's network". Once the connection has been established, you need to access the device installation wizard and force the speaker to connect to a specific network, as explained in the "Wi-Fi setup wizard" section.

The second option to connect the speaker consists in using the app. This option is only available for Android devices. If after completing the device connection process you get an error message, you can access a window with the steps to set up the Wi-Fi network and restart searching. Press "Manually connect to a network".



At this moment you have to run the app in the background (without closing it) and access your device Wi-Fi settings. You will have to connect to the speaker's Wi-Fi network next. For more information please see "How to connect to the speaker's network". Once you have done this, restore the app to full-screen again so that you return to the point where you were. Now the "Next" option, which was hidden, will appear on the screen upper corner.



Press this button to access the menu with all networks that can be accessed from the speaker. Select the network you want and set it up if necessary. This way, you will have forced the speaker to connect to your private network.



Minimum router requirements

In order for the speakers to work via Wi-Fi correctly, the router of your private network must fulfill the following requirements:

- For the Wi-Fi, you will need a **2.4 GHz** band. The Multiroom system is not compatible with 5 GHz Wi-Fi bands.
- It is necessary that the net to which you connect the speaker is encrypted with a WAP PSK key via AES or that it doesn't use a password at all.
- The router has to support the Internet Group Management Protocol (IGMP) in order to enable the communication with the speakers.
- The net to which you want to connect the speaker has to enable the SSID broadcast.
- Considerations related to advanced router settings that can cause problems:
 - Assign static IP addresses.
 - Filter the connections by MAC addresses.
 - The router is being used as a portal. If in order to access the Internet it is necessary to set up a net access code from an Internet browser, it won't be possible to set up the speaker so that it can connect to these type of routers.
- Network environments with high levels of noise or a low performance level between router and speaker can result in mistakes that affect settings. Please verify that the distance between the speaker and the router is not excessively long and that the Wi-Fi channel is not overflowed.

Wi-Fi setup wizard

Your *Multiroom Tower Wi-Fi* comes with a Wi-Fi setup wizard to adjust all the Wi-Fi parameters of your speaker. There are two options to run the setup wizard:

1. The first one consists in connecting to the network's Tower. In order to know how to connect to this net, please see the "How to connect to the speaker's net" section and access the **10.10.10.254** IPS address from an Internet browser.
2. The second option consists in accessing the speaker's IP address from a device connected to the same network as the speaker using an Internet browser. This IP address appears in the "Speaker info" option within the apps settings menu.

Once you have accessed, the "Wi-Fi" menu will appear. You will access the speaker's network information through this settings menu. The active network's name will appear on top of the screen while a list of all available networks will be shown below. If you select any network from the list, the active Wi-Fi network selected for your speaker will change to that one.



Within the "Settings" menu we will find three tabs. The "Status" tab contains general information on the device such as specifications, firmware versions or the IP address if we are connected to any network.

In the "System" tab you will find the option to change the language of the Setup wizard. It is necessary to save all modifications by pressing the "Save" button. The speaker's firmware can be updated manually or online. You can also restore the default settings to return to the state by default.

The "Network" tab offers you the possibility of changing the password, the type of encryption as well as the name of the speaker's Wi-Fi network.



Warranty

Energy Sistem Technology, S.A. is liable for any lack of conformity that exists at the time the goods are purchased during a period of 36 months.

This warranty covers any defects in workmanship or materials. This warranty does not cover any failure of the product due to accidents, misuse or alteration made by an unauthorized person.

For other countries please refer to the specific legislation or your local distributor.

Warranty procedure

Please visit <http://www.energysistem.com/en/support> and select your product to view the FAQ (Frequently Asked Questions), the user manual, the quick guide, the drivers and updates available, submit a query to Technical Support or manage the warranty.

You can check the availability of the user manual in your language at <http://www.energysistem.com/guide/42674>. Alternatively, you may prefer to contact the distributor that sold the product by presenting the purchase receipt or invoice.

Important: This warranty does not cover any damage or loss of data stored in warranty products. Therefore, Energy Sistem's Technical Service will not assume any loss of the above mentioned information. In this respect it is recommended that you make a backup of your data and remove any personal data from the product's internal memory before you send it or send it only with the original data. Specifications are subject to change without notice.

Trademarks All company, brand and product names are trademarks or registered trademarks of their respective companies.

©2016 by Energy Sistem®. All rights reserved.

Declaration of conformity

Issuer's name: Energy Sistem Technology, S.A. CIF: A53107488

Address: C/ Calpe, 1 - 03509 Finestrat, Alicante (Spain)

Tel: +34 966 830 324

We declare under our sole and exclusive responsibility that the product:

Description: Tower Wi-Fi speaker

Brand: Energy Sistem

Model: Multiroom Tower Wi-Fi

Manufacturer: Energy Sistem Technology, S.A.

Manufacturing country: China

referred to in this declaration complies with the essential norms and standards

EN 50663:2017

EN 62479:2010

EN 62368-1:2020+A11:2020

EN 301 489-17 V3.2.2 (2019-12)

EN 301 489-1 V2.2.3 (2019-11)

EN 300 328 V2.2.2 (2019-07)

EN 303 345-1 V1.1.1 (2019-06)

EN 303 345-3 V1.1.0 (2019-11)

in conformity with the provisions of the Directive 2014/53/EU of the European Parliament and of the Council of 16th April 2014.

Finestrat, 1st December 2020



Miguel Ángel Aragüez García
Innovation and Technology Director

