



**temperature
control kettle**
cordless - 1.7 L



Instruction Booklet

Model: GK2077

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
8. The use of accessories or attachments not recommended by Salton may result in fire, electric shock or personal injury.
9. **DO NOT** use outdoors.
10. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
11. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
13. Only use the Kettle with the base provided.
14. **DO NOT** use appliance for other than intended use.
15. **DO NOT** leave unit unattended while in use.
16. Extreme caution must be used when moving an appliance containing hot liquids.

17. **DO NOT** use the Kettle without the Lid in place. **WARNING:** Do not remove the lid while the Kettle is boiling.
18. Scalding may occur if the Lid is opened while the Kettle is hot.
19. Direct kettle spout away from cabinets, walls, etc. to prevent possible steam damage.
20. **DO NOT** use the Kettle if liquid is below the 0.5L (MIN) or above 1.7L (MAX) marking.
21. **DO NOT** attempt to remove any housing parts or insert foreign objects into the kettle.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

IMPORTANT – HIGH ALTITUDE LOCATIONS

Water boils at lower temperatures at high altitudes. For every 152 meters (500 feet) above sea level, the boiling point of water will be 0.5°C (1°F) lower than the boiling point of 100°C (212°F) at sea level. This Kettle has been calibrated to automatically shut-off when water boils for approximately 30 – 40 seconds, regardless of the requested temperature.


The temperature settings below the boil temperature of 100°C (212°F) will not be affected by high altitude.

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

DESCRIPTION OF PARTS

1. Spout
2. Control Panel
 - a. Keep Warm
 - b. °C/°F Button
 - c. Power Button
3. Handle
4. Power Base
5. Cord Wrap
6. Kettle Lid

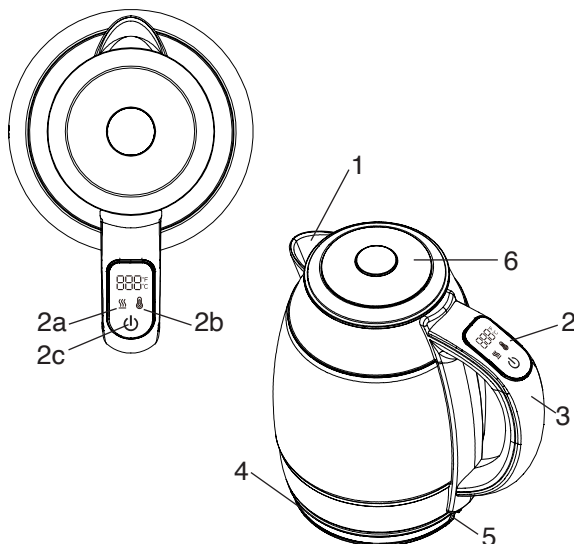


BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.
3. Fill the Kettle with 1 L (4 cups) of cold tap water and bring to a boil.
4. Add 500 mL (2 cups) of white vinegar and let stand for at least 1 hour or overnight. Discard.
5. Fill the kettle to the maximum fill line with cold tap water. Bring to a boil and discard. Repeat.
6. The kettle is ready to use.

HOW TO USE

1. Open the Lid. Fill the Kettle through the lid opening with a minimum of 500 mL (2 cups) of water.
2. **DO NOT** attempt to fill the Kettle while it is plugged into the wall outlet. **DO NOT** use for other than boiling water. Other liquids will contaminate the interior of the kettle. **DO NOT** fill past the MAX level printed on the glass. Overfilling may cause water to spit out when boiling.
3. Close the Lid.
4. Place Kettle and Base on a flat, level, dry, heat resistant surface. Ensure that it is correctly engaged on the Base.

5. Plug into a 120V AC wall outlet. The display will show the actual water temperature. The Kettle is now in standby mode.
NOTE: If no selection has been made in 30 seconds, the display will shut off and the Kettle will enter Sleep Mode. Press any button once to "Wake up" the Kettle.
NOTE: Never plug kettle into an electrical outlet when the kettle is empty.
6. Direct kettle spout away from cabinets, walls, etc. to prevent possible steam damage.
7. The default temperature is 100°C (212°F). The variable temperature range is 40 to 100°C (105 - 212°F) in 10 degree Celsius increments.
8. **To boil water:**
 - Press the power button  once.
 - To switch between the Celsius and Fahrenheit display press the °F/°C button for 3 seconds.
 - The display will show 100°C (212°F) for 3 seconds then the display will switch to the actual water temperature. The display temperature will increase until the kettle reaches 100°C (212°F).
 - Once the water has boiled the Kettle will shut off.
 - The display will show 100°C (212°F) for 30 seconds then the display will shut off.
9. **To use the variable temperature settings:**
 - Press the °C/°F Button until you reach the desired temperature between 40 –100°C (104 – 212°F) in 10 degree Celsius increments.
 - To switch between the Celsius and Fahrenheit display, press the °F/°C button and hold for 3 seconds.
 - The display will show the chosen temperature for 3 seconds then will switch to the actual water temperature. The display temperature will increase until it reaches the chosen temperature.
 - Once the temperature has reached the set temperature the Kettle will shut off.
10. **IMPORTANT:**
 - a) The kettle shuts off automatically after the boiling cycle is complete.
 - b) If the kettle is removed from the base before the boiling cycle is complete the boiling cycle will be cancelled.
 - c) To turn the kettle off before the boiling cycle is complete press the Power Button.
11. The Lid should not be opened when the Kettle is hot.
12. Only grip the Kettle by the Handle as all other surfaces will be hot.
13. Return the Kettle to the Base or a heat resistant surface after use.
14. **IMPORTANT:** If the Kettle is accidentally switched on when empty, the thermostat will automatically cycle on and off to prevent the Kettle from overheating. If this situation occurs unplug the Kettle immediately and allow the Kettle to cool before refilling.

15. It is recommended that the Power Cord be disconnected from the wall outlet when not in use.
16. **DO NOT** attempt to connect any other appliance to the Power Base or tamper with the connector in any way.

KEEP WARM FUNCTION

1. Hold the Keep Warm Button for 3 seconds, then press the °C/°F Button until you reach one of the 6 desired 'keep warm' temperature settings between 40 - 90°C (104 – 194°F). Press the power button once.

IMPORTANT: The Keep Warm Function cannot be used for the 100°C/212°F temperature setting.

2. The Keep Warm symbol on the display will be illuminated when the Keep Warm function has been activated.

NOTE: The Keep Warm function will remain active for 2 hours if the Kettle remains on the base. If the Kettle is lifted off the base the Keep Warm setting is cancelled.

3. The Keep Warm Function can be deactivated at any time by pressing the Power Button once.

WATER TEMPERATURE GUIDE

The following is a general guide for brewing different types of tea. Brand and freshness of tea including each individual's taste and preference differs.

If your tea box/container has brewing instructions, follow those as they are probably ideal for that specific tea.

Type of Tea	Water Temperature	Steep Time
Green tea	80°C / 176°F	1-3 minutes
White tea	80°C / 176°F	4-8 minutes
Oolong tea	90°C / 194°F	1-8 minutes
Black tea	90°C / 194°F	3-5 minutes
Herbal tea	90°C / 194°F	5-8 minutes
Boil	100°C / 212°F	

Your kettle can also be used for bringing the water to the perfect temperature for the following. Please remember that these are guidelines only.

Others:	Water Temperature
Baby formula preparation	40°C / 104°F (water should have been previously boiled)
Hot Chocolate	80°C / 176°F
Instant soup mixes	90°C / 194°F
Oatmeal	90°C / 194°F

CARE AND CLEANING

1. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
2. Unplug Kettle from wall outlet. Empty the Kettle and allow it to cool before cleaning.

Exterior

- Use a soft, damp cloth to clean the exterior.
- **DO NOT** use abrasive cleaners. Dry exterior thoroughly before use.
- **DO NOT** immerse kettle or power base in water or other liquid.

3. Descaling

Under normal use, scale build-up will form on the inside of the kettle and will coat the stainless steel plate. Scale, which has accumulated inside the kettle must be removed by boiling equal parts of white vinegar and water (500ml/ 2 cups of each is recommended). Once the water has boiled, allow the mixture to stand several hours or overnight. Empty out mixture and fill kettle to the MAX level with fresh water. Bring water to a boil and discard. For heavy scale build-up, use pure vinegar and let stand overnight. Empty out vinegar and fill kettle to the MAX level with fresh water. Bring water to a boil and discard.

This descaling process should be repeated periodically.

NOTE: Scale build-up can be delayed by pouring out water after use then refilling the kettle when required.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

****The original sales receipt is the only acceptable proof of purchase****

Salton Appliances (1985) Corp. warrants that this appliance shall be free from defects in material and workmanship for a period of three (3) year from the date of original purchase. Salton Appliances (1985) Corp. at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Appliances (1985) Corp. will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order ☐ Visa ☐ MasterCard ☐

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

Salton Appliances (1985) Corp.
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com