



## **My Pal Scout Smarty Paws™**



## **My Pal Violet Smarty Paws™**

 


### **Instruction Manual**

This guide contains important information. Please keep it for future reference.  
Ce guide contient des informations importantes. Veuillez le conserver pour  
toute référence future.

# INTRODUCTION

Thank you for purchasing the My Pal Scout Smarty Paws™ / My Pal Violet Smarty Paws™! Cute, cuddly and customizable, this interactive plush lets you add your child's name and favorite things to activities and phrases. The touch-sensitive smarty paws encourage your child to interact with Scout and allow you and your child to enjoy playtime together.

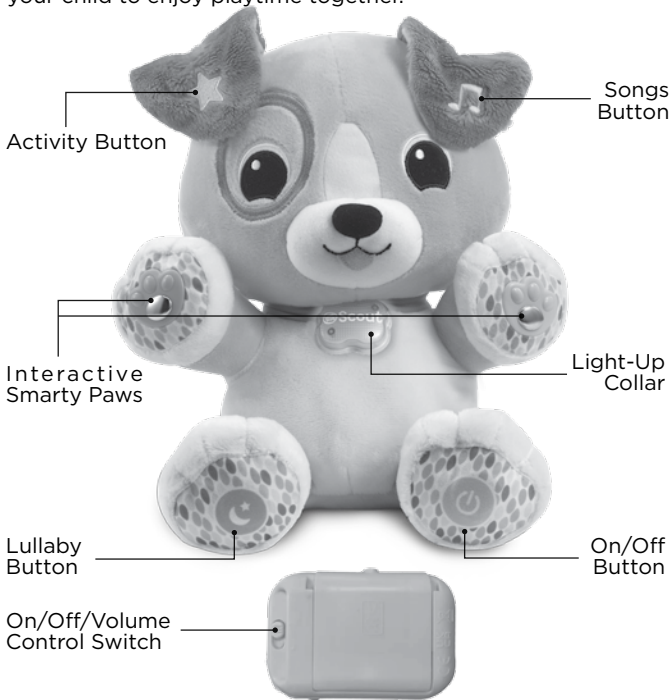

# INCLUDED IN THE PACKAGE

- 1 My Pal Scout Smarty Paws™ / My Pal Scout Smarty Paws™
- 1 cable (inside the battery box)
- 1 Quick Start Guide

## **WARNING**

All packing materials, including tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## **NOTE**

Please save this Instruction Manual as it contains important information.

## **ATTENTION**

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

## **NOTE**

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

# GETTING STARTED

## PERSONALIZATION

### Step 1

Using a smartphone, tablet or computer with a 3.5mm headphone jack, go to [leapfrog.com/SmartyPaws](http://leapfrog.com/SmartyPaws). Follow the instructions to select your child's name and favorite things.

For a list of supported browsers, see System Requirements on the opposite side of this guide.



### Step 2

Open the hook-and-loop fastener on the back of Scout to access the battery box. Use a screwdriver to loosen the screw and slide open the battery box door to reveal the Cable. Slide the On/Off/Volume Control Switch to the On position.

 
When prompted by the website, connect the Cable in Scout's battery box to the 3.5mm headphone jack or adapter on your smartphone, tablet or computer. Do not plug the Cable into peripheral or external accessories such as speakers, docks, etc. Follow the instructions on the website to begin the download.

### Step 3

When personalization is complete, disconnect the Cable from your device and tuck the Cable back into the battery box. Close the battery box door and use a screwdriver to tighten the screw to secure. Close the hook-and-loop fastener over the battery box.

## BATTERY INSTALLATION

1. Make sure the unit is turned Off.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

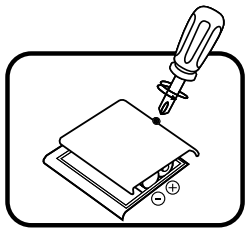

### **WARNING**

Adult assembly needed. Close the battery door and tighten the screw to secure before giving your child the toy.



### **ATTENTION**

L'assemblage doit être effectué par un adulte. Fermer puis revisser fermement le couvercle du compartiment à piles avant de donner ce jouet à un enfant.

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.

- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## **IMPORTANT : INFORMATIONS CONCERNANT LES PILES**

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

 
## **PILES RECHARGEABLES**

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.

- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.

## ACTIVATE NORMAL PLAY MODE


This product is set to Try-Me mode in the package. To activate normal play mode, switch the **On/Off/Volume Control Switch** to (●) and then back to (◀▶) to activate normal play mode.

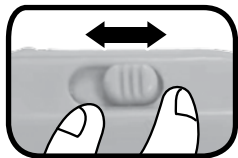

## PRODUCT FEATURES


### 1. On/Off Button

 Press the On/Off Button to wake up Scout and begin to play.

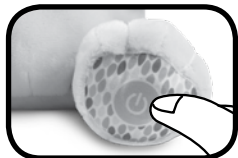


### 2. Interactive Smarty Paws

 Touch the Interactive Smarty Paws to play a musical activity that features three children's tunes.

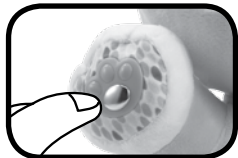


### 3. Lullaby Button

 Press the Lullaby Button once to hear five minutes of music. Press it twice to hear 10 minutes of music. Press it three times to hear 15 minutes of music.

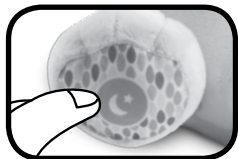


#### 4. Activity Button

 Press the Activity Button to hear Scout talk about your child's favorite things, feeling words and explore mindfulness activities.

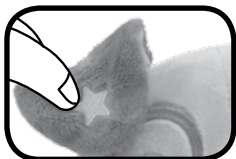

#### 5. Songs Button

 Press the Songs Button to play personalized songs and melodies.

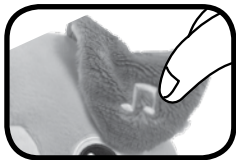

## ACTIVITY

#### 1. Interactive Smarty Paws

Scout's Interactive Smarty Paws can be played by your child alone or in multiplayer mode.

To play in multiplayer mode, each person (such as you and your child) can touch one of Scout's Interactive Smarty Paws. After the initial dialogue prompt plays, you can now tap your child's skin (nose, face, arm, etc.) with your other hand to create an interactive play circle. Continue to tap your child's skin to keep playing the musical activity.





## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off by using the **On/Off/Volume Control Switch** on the battery box.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On by using the **On/Off/Volume Control Switch** on the battery box. The unit should now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

### **IMPORTANT NOTE:**

If the problem persists, please call our Consumer Services Department at **1-800-701-5327** in the U.S. or email [support@leapfrog.com](mailto:support@leapfrog.com). Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## **SYSTEM REQUIREMENTS**

PC: Microsoft Edge (latest version), Chrome™ browser (latest version), or Mozilla Firefox (latest version)

Mac Computer: Safari® browser (latest version), Chrome™ browser (latest version), or Mozilla Firefox (latest version)

iOS: iOS version 10 or higher with Safari® browser (latest version) or Chrome™ browser (latest version)

Android™: Android version 8.0 or higher with Chrome™ browser (latest version)

Microsoft Edge is a trademark of Microsoft Corporation; Android and Chrome are trademarks of Google LLC; Safari and Mac are trademarks of Apple, Inc.; and Mozilla and Firefox are trademarks of Mozilla Corporation. All trademarks, service marks, and company names are the property of their respective owners.

## **Environmental phenomena**

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power Off and back On, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

## Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **Supplier's Declaration of Conformity**

Trade Name: LeapFrog®  
Model: 6150  
Product Name: My Pal Scout Smarty Paws™  
My Pal Violet Smarty Paws™  
Responsible Party: LeapFrog Enterprises, Inc.  
Address: 2200 Powell Street, Suite 500,  
Emeryville, CA 94608  
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-003 (B)/NMB-003(B)



***Visit our website for more  
information about our products,  
downloads, resources and more.***

***leapfrog.com  
leapfrog.ca***

Read our complete warranty and legal policies  
online at [leapfrog.com/warranty](https://leapfrog.com/warranty)

LeapFrog Enterprises, Inc.  
A subsidiary of VTech Holdings Limited.  
TM & © 2022 LeapFrog Enterprises, Inc.  
All rights reserved.  
IM-615000-000