



Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep / Timer
	Setup		Setup / OPT /
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/-
	A.SRD		TV/Radio /
	Cinema		AV / Input / RDS
	D.ENH		Yellow / YouTube / Repeat
	Group		Mute / Dimmer
	Cancel		Exit / Cancel / Clear
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<< Slow Search		<< / Tune-
	Slow Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Top Menu/Direct Navigator		Smart / List
	Menu/Play List		Menu / Home
	Display		Display / Media
	Return		Back / Return
	Up		Up
	Down		Down
	Right		Right



