 
 


PANEL FUNCTION DECLARATION

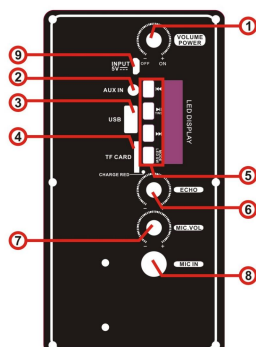

1. Master volume control /Power on/off switch
 2. Audio input port
 3. USB Port: Insert flash drive to play music
 4. TF card Slot: Insert card to play music
 5. Display panel
- MODE:** MODE SELECT/LED MODE
 ▶▶ :PLAY/PAUSE /TWS
 ◀◀ :PREVIOUS(Long press to fast backward.)
 ▶▶ :NEXT(long press to fast forward.)
- 6.ECHO
 - 7.MIC.VOL
 - 8.Wired microphone input
 - 9.Charging Port

REMOTE FUNCTION DECLARATION

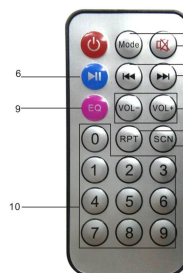

1. PRESS FOR MUTE
2. **MODE**
(Change to LINE-IN, USB, FM and BLUETOOTH mode)
3. **SINGLE SONG REPEAT**
4. **VOLUME UP/DOWN**
5. **PREVIOUS SONG**
6. **PLAY, PAUSE**
7. **SCAN FUNCTION**
8. **NEXT SONG**
9. **EQ**
10. **0-9 SELECTION FOR CHOOSING SONGS**

BLUETOOTH FUNCTION DECLARATION

 
1. PRESS THE MODE BUTTON ON FRONT PANEL TO LAUNCH THE BLUETOOTH APPLICATION. YOU WILL THEN SEE THAT "FISHER-FBX864" SHOWS ON THE SCREEN.
2. SLIDE THE "BLUETOOTH" SWITCH TO "ON" ON SPEAKER. MAKE SURE BLUETOOTH IS ACTIVATED ON THE DEVICE YOU WISH TO CONNECT. YOUR DEVICE (CELLPHONE, COMPUTER, ETC.) WILL AUTOMATICALLY BEGIN SCANNING FOR NEARBY BLUETOOTH DEVICES.
3. TAP THE ENTRY FOR THE BLUETOOTH ACCESSORY WHEN YOUR DEVICE HAS DETECTED THE SPEAKER AND DISPLAYED ON THE SPEAKER SCREEN. BLUETOOTH IS NOW READY TO OPERATE.

True Wireless Stereo(TWS) Function

TWS allows you to connect 2 speakers Via Bluetooth with TWS technology so they can play at the same time and you can double your audio output.


Long press(3 seconds) "TWS" key in bluetooth MODE then turn on TWS function. Long press again (3 seconds) "TWS" key to turn off TWS function

PANEL FUNCTION DECLARATION

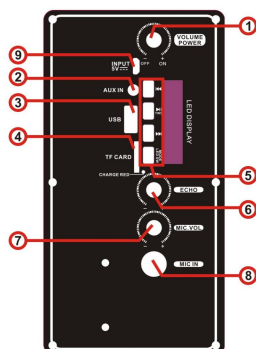

1. Master volume control /Power on/off switch
 2. Audio input port
 3. USB Port: Insert flash drive to play music
 4. TF card Slot: Insert card to play music
 5. Display panel
- MODE:** MODE SELECT/LED MODE
 ▶▶ :PLAY/PAUSE /TWS
 ◀◀ :PREVIOUS(Long press to fast backward.)
 ▶▶ :NEXT(long press to fast forward.)
- 6.ECHO
 - 7.MIC.VOL
 - 8.Wired microphone input
 - 9.Charging Port

 REMOTE FUNCTION DECLARATION

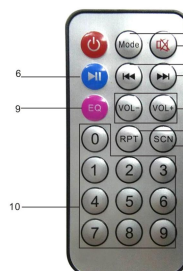

1. PRESS FOR MUTE
2. **MODE**
(Change to LINE-IN, USB, FM and BLUETOOTH mode)
3. **SINGLE SONG REPEAT**
4. **VOLUME UP/DOWN**
5. **PREVIOUS SONG**
6. **PLAY, PAUSE**
7. **SCAN FUNCTION**
8. **NEXT SONG**
9. **EQ**
10. **0-9 SELECTION FOR CHOOSING SONGS**

BLUETOOTH FUNCTION DECLARATION

1. PRESS THE MODE BUTTON ON FRONT PANEL TO LAUNCH THE BLUETOOTH APPLICATION. YOU WILL THEN SEE THAT "FISHER-FBX864" SHOWS ON THE SCREEN.
2. SLIDE THE "BLUETOOTH" SWITCH TO "ON" ON SPEAKER. MAKE SURE BLUETOOTH IS ACTIVATED ON THE DEVICE YOU WISH TO CONNECT. YOUR DEVICE (CELLPHONE, COMPUTER, ETC.) WILL AUTOMATICALLY BEGIN SCANNING FOR NEARBY BLUETOOTH DEVICES.
3. TAP THE ENTRY FOR THE BLUETOOTH ACCESSORY WHEN YOUR DEVICE HAS DETECTED THE SPEAKER AND DISPLAYED ON THE SPEAKER SCREEN. BLUETOOTH IS NOW READY TO OPERATE.

True Wireless Stereo(TWS) Function

TWS allows you to connect 2 speakers Via Bluetooth with TWS technology so they can play at the same time and you can double your audio output.

Long press(3 seconds) "TWS" key in bluetooth MODE then turn on TWS function. Long press again (3 seconds) "TWS" key to turn off TWS function

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

RF Exposure

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used as portable exposure without any restriction.