



SNR


Wi-Fi router

User manual



CONNECT YOUR ROUTER TO THE INTERNET

1. Connect cable from your ISP to the WAN port of the router
2. Connect your computer to the LAN port or use Wi-Fi

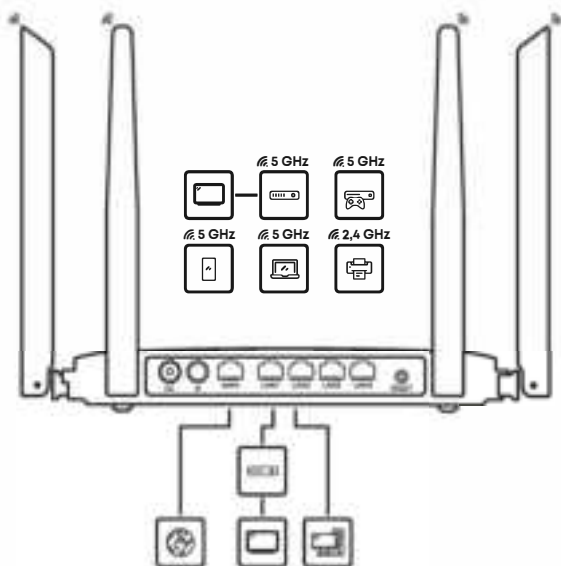

INTERNET ACCESS CONFIGURATION

Attention!

You will need to obtain configuration guide from your ISP:

1. Type of connection
2. Credentials (login/password for L2TP, PPTP connection, IP/ Gateway/ IP mask for Static IP). If your connection type is DHCP(Automatic), then you won't need any special credentials

Configuring SNR-CPE with SNR-CPE-CONFIG app

1. Connect your Android device to Wi-Fi network which is stated on a sticker at the bottom of the router
2. Open SNR-CPE-Config app
3. Choose «Quick Setup Wizard» and follow the instructions



CONFIGURING USING WEB BROWSER

1. Open WEB browser
2. Enter address 192.168.1.1
3. Follow the instructions

STEP 1

Enter standard login and password, which are stated on the bottom sticker, and press «Login» button. Pic 1

STEP 2

Choose «Quick Setup Wizard» from main menu and push «Proceed» button. Choose a system language and push «Proceed» button. Pic 2

STEP 3

Choose connection protocol used by your ISP. Enter connection credentials if needed and push «Proceed» button. Pic 3

STEP 4

Configure Wi-Fi network. Enter network name (SSID), Auth mode and a password (not less than 8 symbols, using letters and digits). It's recommended to use «WPA2 Personal». Push «Proceed» button. Pic 4 .

CONFIGURING USING WEB BROWSER

STEP 5

Configuring VLAN ID. This page allows you to configure IPTV/SIP ports, provided by your ISP using tagged VLAN ID or in bridge mode.

Choose a type of service and state VLAN ID if available, or leave this field blank to use a bridge mode. Pic 5.

If your ISP doesn't require VLAN ID or a bridge mode, then keep default values.

STEP 6

Change default password and push «Proceed» button. After applying all changes, router will restart. Don't turn off the power while router restarts. Pic 6.

INDICATORS



Power



Wi-Fi 2.4GHz



Mesh



Wi-Fi 5GHz



VPN connection



LAN connection



System indicator



WAN connection

WARRANTY CARD

warranty period is 24 months from the date of purchase

Model

Serial number

Date of purchase

Seller organization

DATE OF MANUFACTURE OF THE DEVICE

The date of manufacture of the device is encrypted in the serial number. The serial number of the type «RT622G310223000000!» consists of the following parts:

RT622G310223000000!

The short title
of the article

Production date
(02/23 - February 2023)

The device number
in the batch

SNR management
and configuration app



MODELS AND TECHNICAL DETAILS OF SNR ROUTERS FAMILY

SNR-CPE-W4N (rev.N)

Power

5V, 1A

WAN port

10/100 Ethernet

Wi-Fi

Wi-Fi 802.11b/g/n, MIMO 2x2

USB port

Not available

LAN ports

4xLAN 10/100 Ethernet

Working temperature

0°C ~ 40°C

SNR LTE

Power

12V, 1A

WAN port

10/100 Ethernet

Wi-Fi

802.11b/g/n, MIMO 2x2

USB port

USB 2.0

LAN ports

2xLAN 10/100 Ethernet

LTE Cat.4 up to 150mbit/s

LTE-FDD: B1/B3/B5/87/B8/B20/B28

LTE-TDD: B38/B40/B41

WCDMA: B1/B8

GSM: 900/1800

Working temperature

0°C ~ 40°C

MODELS AND TECHNICAL DETAILS OF SNR ROUTERS FAMILY

SNR MD2

Power

12V, 1A

WAN port

10/100 Ethernet

Wi-Fi

802.11a/b/g/n/ac, Wave 2

MU-MIMO 2x2:2

USB port

Not available

LAN ports

4xLAN 10/100 Ethernet

Working temperature

0°C ~ 40°C

SNR-CPE-ME2-Lite (rev. B)

Power

12V, 1A

WAN port

10/100/1000 Ethernet

Wi-Fi

802.11a/b/g/n/ac, Wave 2

MU-MIMO 2x2:2

USB port

Not available

LAN-порты

4xLAN 10/100/1000 Ethernet

Working temperature

0°C ~ 40°C

MODELS AND TECHNICAL DETAILS OF SNR ROUTERS FAMILY

SNR-CPE-ME2-SFP Lite

Power

12V, 1,5A

WAN port

10/100/1000 SFP

Wi-Fi

802.11a/b/g/n/ac, Wave 2
MU-MIMO 2x2:2

USB port

Not available

LAN ports

4xLAN 10/100/1000 Ethernet

Working temperature

0°C ~ 40°C

SNR AX2

Power

12V, 1A

WAN port

10/100/1000 Ethernet

Wi-Fi

802.11a/b/g/n/ac/ax

USB port

Not available


LAN ports

4xLAN 10/100/1000 Ethernet

Working temperature

0°C ~ 40°C

ANNEX

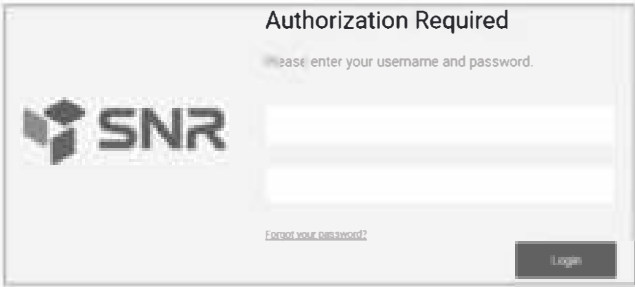

Authorization Required

Please enter your username and password.

 SNR

[Forgot your password?](#)

Login

Picture 1



Language and CPE mode setup

Step 1 of 5

Language

Back Proceed

Picture 2

ANNEX

WAN setup

Step 2 of 5

WAN Connection

Protocol	DHCP client	▼
Use custom DNS settings	☐	
MAC-Address	F8:F0:82:78:3F:4A	

PPPoE / VPN connection

Use PPPoE / VPN connection	None	▼
----------------------------	------	---

Back

Proceed

Picture 3

ANNEX

Wi-Fi setup

Step 3 of 5

Wireless network Wi-Fi 2.4 GHz☐

Channel

Channel 6 (2437 MHz)

▼

SSID

SNR-CPE-3FA4

Password

7H6XdcSkZwsc

Wireless network Wi-Fi 5 GHz☐

Channel

Channel 36 (5180 MHz)

▼

SSID

SNR-CPE-3FA4-5GHZ

Password

7H6XdcSkZwsc

Advanced wireless network settings

Auth Mode

WPA2 Personal

▼

Back

Proceed

Picture 4

ANNEX

VLAN setup Step 4 of 5

Ethernet ports

LAN1 1000FD	LAN2 1000FD	LAN3/VLAN	
LAN ▾	LAN ▾	LAN ▾	LAN ▾

Back Proceed

Picture 5

Management setup Step 5 of 5

Change password for user: Admin

Password	
Confirmation	

Back Proceed

Picture 6

MANUFACTURER INFORMATION

UAE Importer: Grand Block Technologies LLC., UAE, Dubai,
Office M-03, Al Garhaud Business center Building

KZ Importer: NAG Kazakhstan LLC, Kazakhstan, Almaty, st.
Abai 151/1109

UZ Importer: NAGTECH LLC, Uzbekistan, Tashkent,
st. Mirza Ulug'bek 520

Website: snr.global

E-mail: sale@snr.global

Technical support portal: snr.support



«NAG» company reserves the right to change and improve appearance, technical characteristics and box contents without prior notice.

