



# USER MANUAL



## VAPOR PRO STEAM CLEANER

## —、Safety instructions

 
- Please use the correct power supply voltage, and use the power plug with ground wire.
- Never share the power supply with other high-power appliances. This machine is only used indoors.
- In order to avoid the danger of electric shock, do not immerse this machine, power plug or power cord in water or other liquids.
- This machine must be monitored in the whole process of use, and it is not allowed to operate unsupervised.
- Please unplug the power supply when adding water to the water tank. Do not inject too much water to avoid overflowing.
- You can't pull the plug out of the socket, but you should catch the plug and gently pull it out of the socket.
- Do not inject hot water or corrosive detergent into the water tank, otherwise it will damage the machine. It is recommended to use water without minerals.
- Don't run the machine when using dangerous power supply or the machine is damaged. To avoid electric shock, don't try to disassemble the machine. Send the machine to qualified maintenance personnel for inspection and repair. Do not disassemble, repair and replace the electrical appliances by yourself, so as not to cause fire danger, contact with electricity or personal injury when using the electrical appliances.
- When this machine is working, high-temperature steam will be ejected from the steam panel. Please pay attention to safety. In order to reduce the risk of scalding caused by the steam sprayed from the contact steam port, do not aim the steam at people, pets or plants when using the product.
- This machine is not recommended for people with physical sensory, mental or activity disabilities (including children), or people who lack experience and related knowledge to use this machine unless they get clear instructions from their guardians to use this machine safely.
- Unplug the power plug after use and store the product in a cool, dry room.
- Please don't use the steam cleaner for other purposes.

- If the power cord is damaged, in order to avoid danger, it must be replaced by the manufacturer, its maintenance department or professionals in similar departments; If the fuse, heating system and other components are damaged or can't work normally, it also needs professional replacement.
- Please don't use the steam cleaner with wet hands or bare feet.
- It is forbidden to immerse wires, plugs or appliances in water or other liquids to avoid the danger of electric shock.
- Please don't pull the wire when unplugging, and don't use the wire as a handle.
- It is forbidden to run this product in the area with explosion danger.
- It is forbidden to put anything into the steam nozzle. If the steam nozzle is blocked, stop using it.
- It is forbidden to put your hands or feet near the nozzle of the steam cleaner to avoid burns.
- Please don't use it on or near toxic materials, because steam or dust may cause harm to health.
- As long as the steam starts to release, it is impossible to separate the accessories.
- When separating accessories, hot water may drip out. Please cool the product before proceeding.
- Please properly handle the packaging materials, plug sheath and other small items of this product to keep it away from the baby, so as to avoid accidents caused by eating by mistake.
- At the beginning of use, there may be a slight smell until the product reaches a stable heat. When not in use, place the product on a hard, flat, stable and dry surface.
- In order to maintain the performance of the steam cleaner, we suggest that you regularly remove the blockage caused by dust, fluff and hair.
- After use, press the steam button before storage to ensure that the remaining steam is discharged.
- It is recommended to use pure water without adding any detergent.
- Please be sure to hold and hold the handle position of the host by hand during use to prevent the host from falling during use.


## 二、Product parameter

Model No.	: GSC380
Material	: ABS
Rated Power	: 1200W
Rated Voltage	: 220-240V
Rated Frequency	: 50-60Hz
Water Tank Capacity	: 380 ml
Steam Output	: 28 g/min-38 g/min-48 g/min
Steam Ready Time	: 20 Sec
Continuous Steam	: 13 min-10 min-8 min
Temperature	: 120-130°C
Protection	: Class I
Power Cord	: UK Plug 3 m
Product Weight	: 1.4 kg
Product Dimensions	: 202*85*235 mm*235 mm

## 三、Electrical schematic diagram

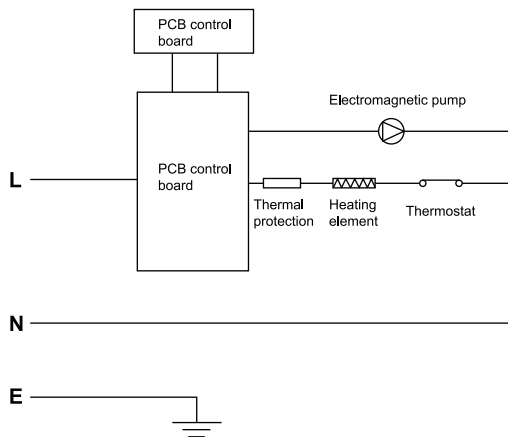


## 四、Product accessories

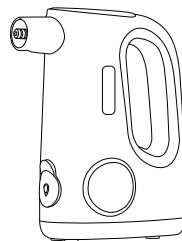 

Host machine

### Optional accessories

 

① Extension tube



② Straight nozzle



③ Steam adapter



④ Curved nozzle



⑤ Small brush



⑥ Big brush



⑦ Slot brush



⑧ Scraping head



⑨ Water cup




⑩ Glass brush



⑪ Towel set

## 五、Product structure diagram

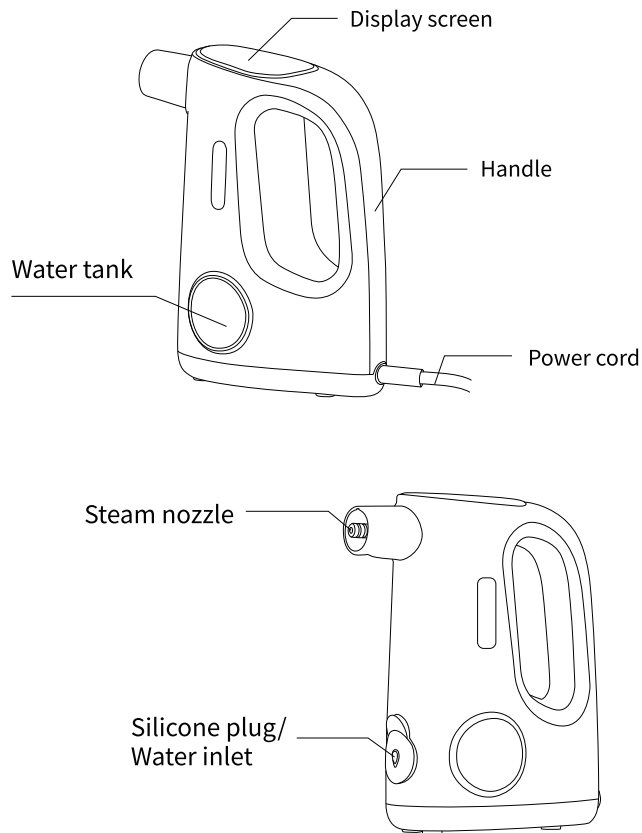 


## 六、Instructions

### First debugging


1. Before the first use, please confirm whether the products and accessories are intact.
2. When the steam cleaner is used for the first time, it needs a short start-up time. At first, the steam sprayed is very irregular and humid, and even a few drops of water may overflow. The amount of steam sprayed is increasing, reaching the maximum at the latest about one minute.
 
### Installation and separation of accessories

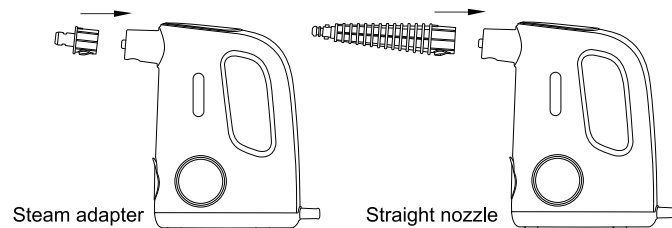


Warning: When installing the long pipe, the steam adapter should be installed.

 
\* For installation and display only, accessories are optional.

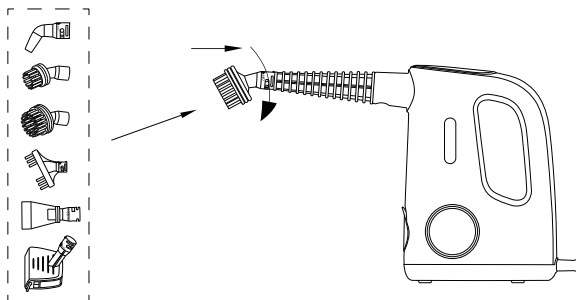

 
Warning: during use, the nozzle and local peripheral surface are hot to prevent scalding.

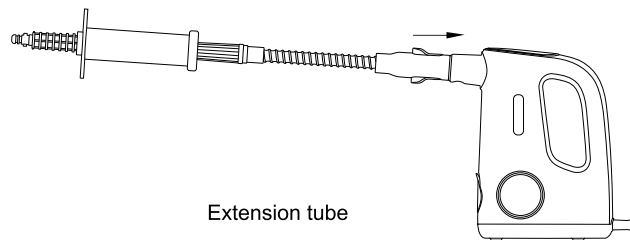

Extension tube

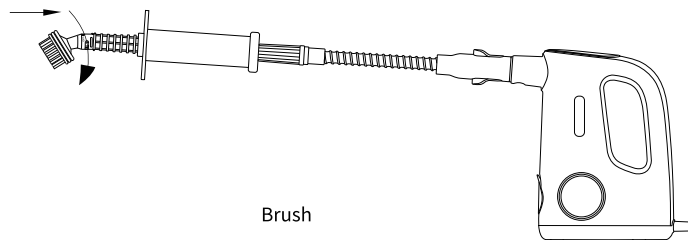 

Brush

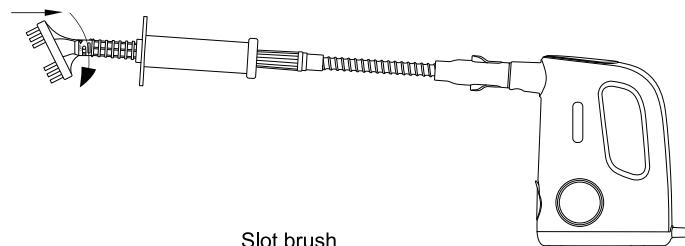 

Slot brush


\* Insert the open end of the selected accessory into the steam nozzle or extension pipe, and lock it by turning it clockwise, otherwise it will be unlocked.

#### Note:

 - Before using the steam cleaner on any surface or textile, we recommend that you do it in a separate area.
- Test to ensure that high temperature steam will not cause damage or hidden danger to materials.
- Do not release steam against the edges of the bonded laminate, as the edges may loosen.
- Do not use this product to clean unsealed wood or parquet floors.
- Do not use this product to clean the surface of paint or plastic layer to avoid damage.
- Steam will damage the sealing point of window frame, and at low temperature, it will lead to the tension on the surface of window glass, which will lead to the glass broke.
- Do not release steam at the sealing point on the window frame.
- Before any disassembly or maintenance, please make sure that the equipment is turned off and the power supply is unplugged.
- When separating accessories, hot water may drip out. Please cool the product before proceeding.
- As long as the steam starts to release, it is not allowed to disassemble the fittings.


## Add water

1. Open the water tank plug and rotate the water tank plug by a certain angle so that the water injection port is completely exposed.
2. The water injection port is upward, and a suitable water container is used to aim at the water inlet of the water tank and pour a proper amount of water.
3. Close the water tank plug to restore the initial state.

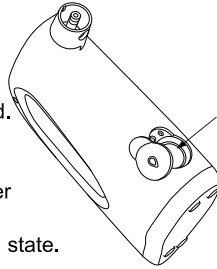

## Function declaration

 1. Plug in the power supply, enter the standby state, and the child lock indicator flashes.
2. Press and hold the child lock key for 3 seconds to unlock. After unlocking, the child lock will change from flashing to constant light.
3. Press the "power button" to start the machine.
4. Press the steam key to adjust the steam size, and the first gear displays green light, the second gear displays blue light and the third gear displays red light. All three gears are preheated for 20 seconds, and then steam comes out. The fourth gear is neutral, and the three steam indicator lights go out, and the cycle is repeated.
5. Press the power button and return to the child lock button. It takes 3 seconds to start the machine.
6. The display screen shows the steam quantity.

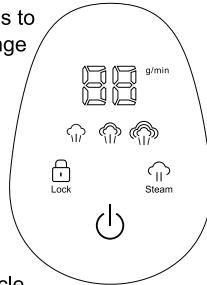

## 七、Fault analysis and elimination

### The product does not spray steam.

- ① Confirm whether the power supply is connected;
- ② Check whether the power supply and steam button are in the open position;
- ③ Check the water level in the water tank;
- ④ Ask professionals to check and repair.

### The product is blocked by scale.

Ask professionals to check and repair.

### The indicator light is not on.

- ① Confirm whether the power supply is connected;
- ② Ask a professional to check the maintenance.

**Not: cut off the power supply and unplug the power supply before troubleshooting.**

## 八、Cleaning and maintenance

- ① Before cleaning, please make sure that the product is turned off and the power supply is unplugged, and make sure that the product and accessories are cooled.
- ② After using the product, please empty the remaining water in the water tank and store the product in a dry place.
- ③ Please ensure that the equipment and accessories are completely dry before storage.
- ④ After the product is cooled, the hot steam will turn into steam. Some water vapor will accumulate on the extended steam hose and become water droplets, which is a normal phenomenon, so it must be completely dried.
- ⑤ Wash the cloth cover thoroughly with mild cleaning agent, and let it dry thoroughly before further use or storage.
- ⑥ Keep products and accessories out of the reach of children.
- ⑦ Do not use hard or sharp objects to clean products or other parts to avoid damage.
- ⑧ Clean the machine and other accessories with a soft wet cloth, and then dry the product with a dry soft cloth.
- ⑨ Pet-name ruby If the product is not used for a long time, you can disassemble the product according to the disassembly procedure.